







INSTRUCTIONS
MANUAL DE INSTRUCCIONES

# DIGITAL VIDEO CAMERA VIDEOCÁMARA DIGITAL

**GR-DA30U** 



### Dear Customer.

Thank you for purchasing this digital video camera. Before use, please read the safety information and precautions contained in pages 2 – 4 to ensure safe use of this product.

### Estimado cliente:

Gracias por comprar esta videocámara digital. Antes de usarla, lea la información de seguridad y las precauciones contenidas en las páginas 2 – 4 para garantizar un uso seguro de este producto.

### For Customer Use:

Enter below the Model No. and Serial No. which is located on the bottom of the camcorder. Retain this information for future reference

### Model No.

Serial No.



## **Read This First!**

 Before recording important video, be sure to make a trial recording.

Play back your trial recording to make sure the video and audio have been recorded properly.

We recommend
 cleaning your video
 heads before use.
If you haven't used
 your camcorder for
 awhile, the heads
 may be dirty. We



recommend periodically cleaning the video heads with a cleaning cassette (optional).

- Be sure to store your cassette tapes and camcorder in the proper environment.
   Video heads can become dirty more easily if your cassette tapes and camcorder are stored in a dusty area. Cassette tapes should be removed from the camcorder and stored in cassette cases. Store the camcorder in a bag or other container.
- Use SP (Standard Play) mode for important video recordings.

LP (Long Play) mode lets you record 50% more video than SP (Standard Play) mode, but you may experience mosaic-like noise during playback depending on the tape characteristics and the usage environment. So, for important recordings, we recommend using SP mode.

- For safety and reliability.
   It is recommended only genuine JVC batteries and accessories are used in this camcorder.
- This product includes patented and other proprietary technology and will operate only with JVC Data Battery. Use the JVC BN-VF808U/VF815U/VF823U battery packs. Using generic non-JVC batteries can cause damage to the internal charging circuitry.
- Remember that this camcorder is not compatible with other digital video formats.
- It is recommended that you use JVC brand cassette tapes.

Your camcorder is compatible with all brands of commercially available cassette tapes complying with the MiniDV standard, but JVC brand cassette tapes are designed and optimized to maximize the performance of your camcorder.

 Remember that this camcorder is intended for private consumer use only.

Any commercial use without proper permission is prohibited. (Even if you record an event such as a show, performance or exhibition for personal enjoyment, it is strongly recommended that you obtain permission beforehand.)

- . DO NOT leave the unit
  - in place of over 50°C (122°F)
  - in place where humidity is extremely low (below 35%) or extremely high (80%).
  - in direct sunlight.
  - in a closed car in summer.
  - near a heater.
- The LCD monitor is made with highprecision technology. However, black spots or bright spots of light (red, green or blue) may appear constantly on the LCD monitor. These spots are not recorded on the tape. This is not due to any defect of the unit. (Effective dots: more than 99.99%)
- Do not leave the battery pack attached when the camcorder is not in use and check the unit regularly whether it is working or not.

Also read "CAUTIONS" on pages 33 - 35.

### **About Batteries**

DANGER! Do not attempt to take the batteries apart, or expose them to flame or excessive heat, as it may cause a fire or explosion.

WARNING! Do not allow the battery or its terminals to come in contact with metals, as this can result in a short circuit and possibly start a fire.

To deactivate the demonstration, set "DEMO MODE" to "OFF". (\$\sigma\$ 19, 22)

## **Safety Precautions**



## CAUTION RISK OF ELECTRIC SHOCK



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

### **CAUTIONS:**

- This camcorder is designed to be used with NTSC-type color television signals. It cannot be used for playback with a television of a different standard. However, live recording and LCD monitor playback are possible anywhere.
- This product includes patented and other proprietary technology and will operate only with JVC Data Battery. Use the JVC BN-VF808U/VF815U/VF823U battery packs and, to recharge them or to supply power to the camcorder from an AC outlet, use the provided multi-voltage AC Adapter. (An appropriate conversion adapter may be necessary to accommodate different designs of AC outlets in different countries.)

This product contains a CR Coin Cell Lithium Battery which contains Perchlorate Material - special handling may apply.

See <u>www.dtsc.ca.gov/hazardouswaste/</u> perchlorate

### **NOTES:**

- The rating plate (serial number plate) and safety caution are on the bottom and/or the back of the main unit.
- The rating information and safety caution of the AC Adapter are on its upper and lower sides.

When the equipment is installed in a cabinet or on a shelf, make sure that it has sufficient space on all sides to allow for ventilation (10 cm (3-15/16") or more on both sides, on top and at the rear).

Do not block the ventilation holes.

(If the ventilation holes are blocked by a newspaper, or cloth etc. the heat may not be able to get out.)

No naked flame sources, such as lighted candles, should be placed on the apparatus. When discarding batteries, environmental problems must be considered and the local rules or laws governing the disposal of these batteries must be followed strictly.

The apparatus shall not be exposed to dripping or splashing.

Do not use this equipment in a bathroom or places with water.

Also do not place any containers filled with water or liquids (such as cosmetics or medicines, flower vases, potted plants, cups etc.) on too of this unit.

(If water or liquid is allowed to enter this equipment, fire or electric shock may be caused.)

Do not point the lens directly into the sun. This can cause eye injuries, as well as lead to the malfunctioning of internal circuitry. There is also a risk of fire or electric shock.

#### **CAUTION!**

The following notes concern possible physical damage to the camcorder and to the user. When carrying, be sure to always securely attach and use the provided strap. Carrying or holding the camcorder by the LCD monitor can result in dropping the unit, or in a malfunction. Take care not to get your finger caught in the cassette holder cover. Do not let children operate the camcorder, as they are particularly susceptible to this type of injury. Do not use a tripod on unsteady or unlevel

### **CAUTION!**

damage to the camcorder.

Connecting cables (Audio/Video, S-Video, etc.) to the camcorder and leaving it on top of the TV is not recommended, as tripping on the cables will cause the camcorder to fall, resulting in damage.

surfaces. It could tip over, causing serious

### **WARNING:**

Batteries shall not be exposed to excessive heat such as direct sunshine, fire or the like.

### **CAUTION:**

The mains plug shall remain readily operable.

### **IMPORTANT SAFETY INSTRUCTIONS**

- 1 Read these instructions
- Keep these instructions.
- 3. Heed all warnings.
- Follow all instructions.
- 5. Do not use this apparatus near water.
- 6. Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Only use attachments/accessories specified by the manufacturer.
- 10. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tipoyer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- 12. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

| Getting Started 6                       | Advanced Features 19                       |
|---|--|
| Accessories 6                           | Menus for detailed adjustment19            |
| Attach the Lens Cap6                    | Changing The Menu Settings19               |
| Attach the Core Filter6                 | Recording Menus20                          |
| Attach the Shoulder Strap7              | Playback Menus22                           |
| Grip Adjustment7                        |  |
| Tripod Mounting7                        | Features for recording24                   |
| Index 8                                 | Manual Focus24                             |
| LCD Monitor Indications10               | Exposure Control24                         |
| Power11                                 | Iris Lock25                                |
| Language Settings12                     | Backlight Compensation25                   |
| Date/Time Settings12                    | Spot Exposure Control25                    |
| Brightness Adjustment Of The Display 13 | White Balance Adjustment26                 |
| Loading/Unloading A Cassette13          | Manual White Balance Adjustment26          |
| 16:9 Wide Mode13                        | Wipe Or Fader Effects27                    |
|   | Program AE, Effects And Shutter Effects 27 |
| Recording & Playback 14                 | Editing28                                  |
| Basic Recording14                       | Dubbing To A VCR28                         |
| Tape Remaining Time14                   | Dubbing To Or From A Video Unit Equipped   |
| Quick Review14                          | With A DV Connector (Digital Dubbing)29    |
| Zoom15                                  | Connection To A Personal Computer30        |
| Recording From The Middle Of A Tape 15  |  |
| Time Code15                             | References 31                              |
| Normal Playback16                       | Troubleshooting31                          |
| Still Playback16                        | Cautions                                   |
| Variable Shuttle Search17               | User Maintenance35                         |
| Blank Search                            | Specifications                             |
| Connections To A TV Or VCR18            | Terms                                      |
|   | 1611119                                    |

## **Regarding This Manual**

## Control lever (□ 9)

There are two kinds of operation using the control lever.

|   | Operation       |                 | To select                     |
|---|-----------------|-----------------|-------------------------------|
| ^ | <b>▶/II</b>     | FOCUS           | Move the control lever up.    |
| ~ |                 | ≥.              | Move the control lever down.  |
| > | <b>&gt;&gt;</b> | 16:9            | Move the control lever right. |
| < | 44              | QUICK<br>REVIEW | Move the control lever left.  |

left/right to select:



1 Move the control lever towards up/down/ 2 Press down the control lever to select **SET**. SET

## **Accessories**



10



AC Adapter AP-V14U or AP-V18U



or



Audio/Video Cable (ø3.5 mini-plug to RCA plug)



Battery Pack



Shoulder Strap



Lens Cap



Core Filter for Cables
A: Audio/Video Cable
B: AC Adapter

### Note:

Make sure to use the provided cables for connections. Do not use any other cables.


## **Attach the Lens Cap**

To protect the lens, attach the provided lens cap to the camcorder as shown in the illustration.







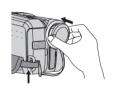


Place here during recording.

## **Attach the Core Filter**

Attach the core filter to the cable. The core filter reduces interference.



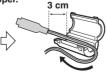








Wind once (Audio/Video Cable) Wind twice (AC Adapter)

Peel off the pad and thread the end of the strap through the evelet.

Thread the strap through the buckle, adjust its length, and use the strap guide to fix it in place.


Position the buckle near the eyelet and reattach the pad.

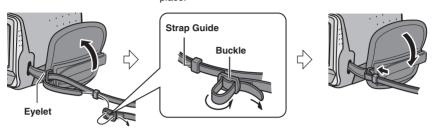

## **Grip Adjustment**

Open the pad and make grip adjustments.


· Before making the adjustment, remove any security tags that may be attached to the velcro.

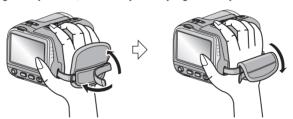


## **Tripod Mounting**

To attach the camcorder to a tripod, align the direction stud and screw to the mounting socket and stud hole on the camcorder. Then tighten the screw clockwise.

• Some tripods are not equipped with studs.

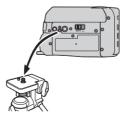

## Index

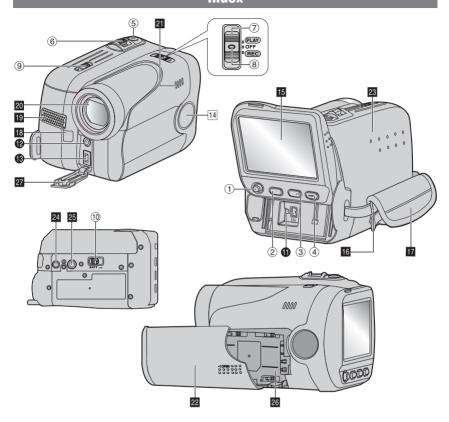

## **How to adjust the LCD Monitor**



Slide the LCD monitor in the most convenient position. It can slide 30° (15° downward, 15° upward)

### Note:

Colored bright spots may appear all over the LCD monitor. However, this is not a malfunction.

### Controls

- 1 Control Lever
  - [QUICK REVIEW] (F 14)
  - > : Right/Fast-Forward (▶▶) (\$\square 16)/
  - 16:9 Wide Screen Button [16:9] (5 13)/
  - ^: Up/Play/Pause (▶/II) (□ 16)/
  - Manual Focus [FOCUS] (F 24)
  - ✓: Down/Stop (■) (□ 16)/Backlight Compensation [3] (☐ 25)/Spot Exposure (25)
  - Press down: SET
- ② Menu Button [MENU] (F 19)
- 3 Auto Button [AUTO] (F 9)
- 4 Data Battery Button [DATA] (F 12)
- ⑤ Recording Start/Stop Button [START/STOP] (c 14)
- ⑥ Zoom Lever [T/W] (□ 15)/ Speaker Volume Control [VOL. +, -] (127 16)
- 7 Power Switch [PLAY, OFF, REC]
- ® Lock Button
- EJECT] (13)
- 10 Battery Release Button [BATT.] (127 11)

### **Connectors**

The connector is located beneath the LCD monitor.

- Digital Video Connector [DV IN/OUT] (i.LINK\*) (F 29, 30)
  - \* i.LINK refers to the IEEE1394-1995 industry specification and extensions thereof. The i logo is used for products compliant with the i.LINK standard.

The connectors are located beneath the cover.

- B DC Input Connector [DC] (
   □ 11)

### Indicator

14 POWER/CHARGE "("DV)" Lamp (17 11)

## Other parts

- 15 LCD Monitor (127 8)
- 16 Shoulder Strap Eyelet (57)
- ☐ Grip Strap (□ 7)
- 18 Camera Sensor (Be careful not to cover this area, a sensor necessary for shooting is built-in here)
- 19 Stereo Microphone
- 20 Lens
- 21 Speaker (127 16)
- 22 Battery Cover (127 11)
- 23 Cassette Holder Cover (127 13)
- 24 Stud Hole (car 7)
- 25 Tripod Mounting (127)
- 26 Battery Pack Mount (127 11)
- 27 Connector Cover

### **Power Switch Position**

Set the power switch while pressing down the lock button.



### PLAY:

To play back a recording on the tape.

### OFF:

To switch off the camcorder.

### REC:

To perform recording on the tape.

### **Auto/Manual Mode**


Press AUTO button repeatedly to switch to auto/manual recording mode. When manual mode is selected, the indicator "M" appears on the LCD monitor.

### Auto Mode : A

You can record using no special effects or manual adjustments.


### Manual Mode: M

Recording is possible by setting various functions manually.

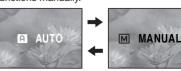

## **LCD Monitor Indications**

## **During Video Recording**

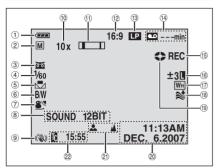

- Battery Remaining Power Indicator
- 2 Operation Mode (5 9)

A: Auto Mode

M: Manual Mode

- ③ in : Night-Alive Indicator (128) ★A: Gain Up Mode (


  □ 20)
- 4 Shutter Speed (5 28)
- (5) White Balance Indicator (127 26)
- 6 Selected Effect Indicator (528)
- ⑦ Selected Program AE Indicator (□ 27)
- SOUND 12BIT/16BIT: Sound Mode Indicator (21) (Appears for approx. 5 seconds after turning on the camcorder.)
- 9 Digital Image Stabilizer ("DIS") (\$\siz\$ 20) (only ( indicator is displayed)
- (I) Approximate Zoom Ratio (I) 15)
- 1 Zoom Indicator (F 15)
- Selected Wide Mode Indicator ( 13) (only 16:9 indicator is displayed)
- ® Recording Speed Mode (SP/LP) (\$\sigma\$ 21) (only LP indicator is displayed)
- ( Tape Remaining Time ( 14)
- (5) REC: (Appears during recording.) (127 14)
- ( 25) Spot Exposure Control Indicator : Backlight Compensation Indicator ( 25)
  - ±: Exposure Adjustment Indicator (24)
  - ■: Iris Lock Indicator (

    25)
- ① Selected Wipe/Fader Effect Indicator (527)
- 18 Wind Cut Indicator (5 20)
- <sup>19</sup> Tape Running Indicator (Rotates while tape is running.)

- @ Date/Time (\$\siz\$ 21)
- ② Manual Focus Adjustment Indicator (

  ② 24)
- 2 Time Code (21)

## **During Video Playback**

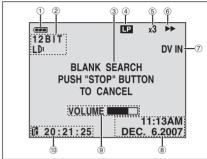

- Battery Remaining Power Indicator
- ② Sound Mode Indicator (x 23)
- 3 Blank Search Indicator (57 17, 23)
- 4 Tape Speed (SP/LP) (c 23) (only LP indicator is displayed)
- 5 Variable Search Speed Indicator: x-10, x-3, x3 and x10 (1 17)
- ⑥ ▶ : Playback
  - ►► : Fast-Forward/Shuttle Search
  - ◄ : Rewind/Shuttle Search
  - II : Pause
- 7 DV IN: DV Input Indicator (129, 30)
- ® Date/Time (□ 23)
- 9 VOLUME: Volume Level Indicator (127 16)
- 10 Time Code (127 23)

## Power

## **Charging The Battery Pack**

illustrated below.

- Set the Power Switch to "OFF" ( 9).
- 2 Open the battery cover. Press "< OPEN" and slide the battery cover off the camcorder in the direction as




3 Attach the battery pack. With the "△" (arrow) on the battery pack pointing at the correct direction, insert the battery pack until it locks in place.

· Re-attach the battery cover. (For BN-VF808U only)



Connect the AC adapter.

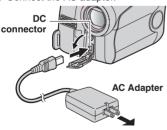

To AC Outlet (110V to 240V)

- blinks to indicate charging has
- When the lamp goes out, charging is finished. Unplug the AC adapter from the AC outlet and disconnect the AC adapter from the camcorder.

## To detach the battery pack

Slide and hold battery release button BATT. (\$\sigma\$ 9), then remove the battery pack.

### Charging/recording time (approx.)

| Battery pack            | Required charging time | Maximum<br>Continuous<br>Recording<br>Time |
|-------------------------|------------------------|--|
| BN-VF808U<br>(Provided) | 1hr. 30 min.           | 1 hr. 55 min.                              |
| BN-VF815U               | 2 hrs. 40 min.         | 3 hrs. 45 min.                             |
| BN-VF823U               | 3 hrs. 50 min.         | 5 hrs. 40 min.                             |

### Notes:

- If a fully charged battery pack is attached to the unit. " lamp will blink for approx. 10 seconds before it turns off.
- Since the AC Adapter processes electricity internally, it becomes warm during use. Be sure to use it only in well-ventilated areas.
- After 5 minutes have elapsed in Record-Standby mode with the cassette inserted and no operation is performed, the camcorder will automatically turn off its power supplied from the AC adapter. In this case, the battery charge starts if the battery is attached to the camcorder.
- Please do not pull or bend the AC adapter plug and cable. This may damage the AC adapter.

## **Using The Battery Pack**

Perform steps 2-8 in "Charging The Battery" Pack".

### Notes:

- Recording time is reduced significantly under the following conditions:
  - Zoom or Record-Standby mode is engaged repeatedly.
  - The playback mode is engaged repeatedly.
- · Before extended use, it is recommended that you prepare enough battery packs to cover 3 times the planned shooting time.


#### Attention:

Before detaching the power source, make sure that the camcorder's power is turned off. Failure to do so can result in a camcorder malfunction.

## **Data Battery System**

You can check the remaining battery power and the recordable time.

- Set the Power Switch to "REC" or "PLAY" (F 9).
- 2 Press **DATA**, and the battery status screen appears.

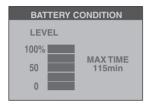

- Press DATA again to return to the normal screen.
- Data battery status cannot be displayed during playback or while recording is in progress.
- If "COMMUNICATION ERROR" appears instead of the battery status even though you tried to press DATA several times, there may be a problem with your battery. In such a case, consult your nearest JVC dealer.

## **Using AC Power**

Perform step 4 in "Charging The Battery Pack" (car 11).

## **Language Settings**

The language on the display can be changed (car 22).





- ${rac{1}{10}}$  Set the Power Switch to "REC" or "PLAY" (F 9).
  - If set to "REC", the recording mode should be set to "M" (5 9).
- Press MENU.
- Select "SYSTEM", press SET or >.
- Select "LANGUAGE", press SET or >.
- $\mathfrak{G}$  Select the desired language, press **SET** or ١.
- (A) Press MENU.

Press < whenever you want to return to the previous menu screen

## Date/Time Settings



**CLOCK ADJ** MONTH. DATE. YEAR 12h JAN. 3. 2007 2: 10 AM


The date/time is recorded onto the tape at all times, but its display can be turned on or off (21.23).

Perform steps 1 - 2 in "Language Settings" (car 12).

- Select "DISPLAY", press SET or >.
- Select "CLOCK ADJ.", press SET or >.
- 3 Select the desired date display format, press SET or >.
  - Repeat this step to input time display format (Select from "24h" or "12h"), month, date, year, hour and minutes.
- Press MENU.

Press < whenever you want to return to the previous menu screen/setting.

## **Brightness Adjustment Of** The Display

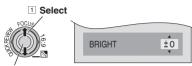

2 SET

Perform steps 1 - 2 in "Language Settings"

- Select "DISPLAY", press SET or >.
- Select "BRIGHT", press SET or >.
- Select the appropriate brightness, press SET or >.
- A Press MENU.

Press < whenever you want to return to the previous menu screen.

## Loading/Unloading A Cassette

The camcorder needs to be powered up to load or eiect a cassette.

- Ill Slide and hold **OPEN/EJECT** in the direction of the arrow, then pull the cassette holder cover open until it locks.
- Insert or remove a tape and press "PUSH" to close cassette holder.
  - · Be sure to press only the section labeled "PUSH" to close the cassette holder; touching other parts may cause your finger to get caught in the cassette holder, resulting in injury or product damage.
  - Once the cassette holder is closed it. recedes automatically. Wait until it recedes completely before closing the cassette holder cover
  - · When the battery pack's charge is low, you may not be able to close the cassette holder cover. Do not apply force. Replace the battery pack with a fully charged one or use AC power before continuing.

Make sure the window



3 Close the cassette holder cover firmly until it locks into place.

### Notes:

- If you wait a few seconds and the cassette holder does not open, close the cassette holder cover and try again. If the cassette holder still does not open, turn the camcorder off then on again.
- If the tape does not load properly, open the cassette holder cover fully and remove the cassette. A few minutes later, insert it again.
- When the camcorder is suddenly moved from a cold place to a warm environment, wait a short time before opening the cassette holder cover.


## 16:9 Wide Mode

You can record videos at 4:3 size and 16:9 size. By default, the camera is set to record videos at the 4:3 size.

Set the Power Switch to "REC" (\$\sigma\$ 9).

Each press 16:9 switches the screen size.



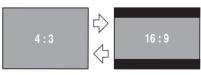

#### Note:

If you record videos in 16:9 size, the image may appear to be slightly horizontally stretched when playing back on TV with the 4:3 screen. ( <math> 21, 23 )

## **Basic Recording**

Before continuing, perform the procedures listed below:

- Power (\$\sigma\$ 11).
- Loading A Cassette ( 13).
- Remove the lens cap (\$\sigma\$6).
- Select videos at 4:3 size or 16:9 (wide) size (c 13).



Set the Power Switch to "REC" ( 9).

Press START/STOP button to start recording, "REC" appears on the display while recording is in progress. To stop recording, press START/STOP again.

### Approximate recording time

| Tone    | Recording mode |          |
|---------|----------------|----------|
| Tape    | SP             | LP       |
| 30 min. | 30 min.        | 45 min.  |
| 60 min. | 60 min.        | 90 min.  |
| 80 min. | 80 min.        | 120 min. |

#### Notes:

- · If the Record-Standby mode continues for 5 minutes and no operation is performed, the camcorder's power shuts off automatically.
- When a blank portion is left between recorded scenes on the tape, the time code is interrupted and errors may occur when editing the tape. To avoid this, refer to "Recording From The Middle Of A Tape" (\$\sigma\$ 15).
- To record in LP (Long Play) mode, a 21.

### TAPE!

Appears if a tape is not loaded when the Recording Start/Stop Button is pressed while the Power Switch is set to "REC"

### **⊗** USE CLEANING CASSETTE

Appears if dirt is detected on the heads during recording. Use an optional cleaning cassette (car 2).

## **Tape Remaining Time**

Approximate tape remaining time appears on the display. "-- min" means the camcorder is calculating the remaining time. When the remaining time reaches 2 minutes, the indication starts blinking.



 The time required to calculate and display the remaining tape length, and the accuracy of the calculation, may vary according to the type of tape used.

### **Ouick Review**


Enables you to check the end of the last recording. Press QUICK REVIEW during the Recording-Standby mode.



 Tape is rewound for about several seconds and played back automatically, then pauses in the Recording-Standby mode for the next shot.

- Distortion may occur at start of playback. This is normal.
- · Slide the Zoom lever repeatedly to change the sound to on/off

### Zoom

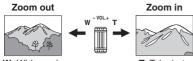


W: Wide angle

T: Telephoto

- You can zoom in up to 30X by using the optical zoom.
- Zoom magnification over 30X is done through digital image processing, and is therefore called digital zoom. Digital zooming is possible up to 800X. Set (ZOOM) to [60X] or [800X] (12 20).

### Optical zoom (up to 30X)

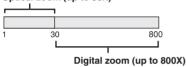

### Notes:


- Macro shooting is possible as close as approx. 5 cm (2") to the subject when the zoom lever is set all the way to "W".
- When you zoom into a subject close to the lens, the camera may automatically zoom out depending on the distance to the subject. In this case, set "TELE MACRO" to "ON" ( 20).

## **Recording From The Middle Of A Tape**

- 1 Play back a tape or use Blank Search (17) to find the spot at which you want to start recording, then engage the Still Playback mode (57 16).
- 2 Set the Power Switch to "REC" (\$\sigma\$ 9), then start recording.

## **Time Code**

During recording, a time code is recorded on the tape. This code is to confirm the location of the recorded scene on the tape during playback.

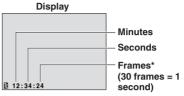


\* Frames are not displayed during recording.

If recording starts from a blank portion, the time code begins counting from "00:00:00" (minute:second:frame). If recording starts from the end of a previously recorded scene, the time code continues from the last time code number. If during recording a blank portion is left partway through the tape, the time code is interrupted. When recording is resumed. the time code starts counting up again from "00:00:00". This means the camcorder may record the same time codes as those existing in a previously recorded scene. To prevent this, perform Recording From The Middle Of A Tape (15) in the following cases:

- · When shooting again after playing back a recorded tape.
- When power shuts off during shooting.
- When a tape is removed and re-inserted during shooting.
- When shooting using a partially recorded
- · When shooting on a blank portion located partway through the tape.
- · When shooting again after shooting a scene then opening/closing the cassette holder cover.

- · The time code cannot be reset.
- · During fast-forwarding and rewinding, the time code indication does not move smoothly.
- The time code is displayed only when "TIME CODE" is set to "ON". (c 23)

## Normal Playback

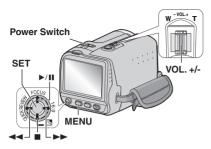

1 Load a cassette ( 13).

Set the Power Switch to "PLAY" (\$\sigma 9\$).





- The above screen (referring to the control lever (5) will be displayed for approx. 3 seconds on the LCD Monitor.
- To start playback, press ►/ II.
- To stop playback, press ■.
  - ▶► to fast-forward the tape.
  - Press SET to display the guide operation screen

### To control the speaker volume

Slide the Zoom Lever (VOL. +/-) towards "+" to turn up the volume, or towards "-" to turn down the volume.

#### Notes:

- · The playback picture can be viewed in the LCD monitor or on a connected TV (27 18).
- If Stop mode continues for 5 minutes when power is supplied from a battery, the camcorder shuts off automatically.
- When a cable is connected to the AV connector, the sound is not heard from the speaker.

### HDV 🚥

Appears when pictures recorded in the HDV format are detected. The pictures in the HDV format cannot be played back with this camcorder

## Still Playback

Pauses during video playback.

- 1 Press ►/II during playback.
- 2 To resume normal playback, press ►/II again.
  - If still playback continues for more than about 3 minutes, the camcorder's Stop mode is automatically engaged.

### Variable Shuttle Search

Allows variable-speed search in either direction during video playback.

1 During playback, press ▶▶ once or twice for forward search, or ◀◀ once or twice for reverse search.

| 44   |     | <b>&gt;&gt;</b> |     |
|------|-----|-----------------|-----|
| x-10 | x-3 | х3              | x10 |

- 2 To resume normal playback, press ►/ II.
  - During playback, press and hold ►► or ◄<. The search continues as long as you</p> hold the button. Once you release the button. normal playback resumes.
  - · A slight mosaic effect appears on the display during Shuttle Search. This is not a malfunction

### Attention:

During Shuttle Search. parts of the picture may not be clearly visible, particularly on the left side of the screen



During Shuttle Search, parts of the picture may not be clearly visible across the screen.




### **Blank Search**

Helps you find where you should start recording in the middle of a tape to avoid time code interruption (c 15).

- Set the power switch to "PLAY" (\$\sigma 9\$).
- 2 Press MENU.
- 3 Select "TAPE", press SET or >.
- Select "BLANK SEARCH", press SET or >.
- 5 Select "EXECUTE", press SET or >.
- The "BLANK SEARCH" indication appears and the camcorder automatically starts reverse or forward search, then stops at the spot which is about 3 seconds of tape before the beginning of the detected blank portion.
- To cancel Blank Search, press ■.

- · Before starting Blank Search, if the current position is at a blank portion, the camcorder searches in the reverse direction. If the current position is at a recorded portion, the camcorder searches in the forward direction.
- If the beginning or end of the tape is reached. during Blank Search, the camcorder stops automatically.
- · A blank portion which is shorter than 5 seconds of tape may not be detected.
- The detected blank portion may be located between recorded scenes. Before you start recording, make sure there is no recorded scene after the blank portion.

## Connections To A TV Or VCR

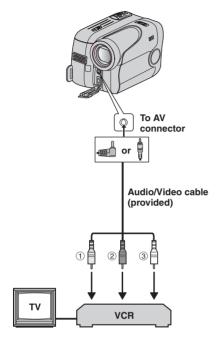

- 1) Yellow to VIDEO IN (Connect when your TV/VCR has only A/V input connectors).
- 2 Red to AUDIO R IN
- 3 White to AUDIO L IN

- Make sure all units are turned off.
- ${m \mathcal{Q}}$  Connect the camcorder to a TV or VCR as shown in the illustration. If using a VCR, go to step 3.
  - If not, go to step 4
- 3 Connect the VCR output to the TV input, referring to your VCR's instruction manual. I Turn on the camcorder, the VCR and the
- 5 Set the VCR to its AUX input mode, and
- set the TV to its VIDEO mode. ( Start playback on the camcorder ( 16).
  - Please set "16:9 OUTPUT" of Playback Menus so that the image may suit your TV (16:9 TV or 4:3 TV) (21, 23).


### To choose whether or not the following displays appear on the connected TV

- · Date/Time Set "DATE/TIME" to "ON" or "OFF" (21).
- · Time Code Set "TIME CODE" to "ON" or "OFF" (21).
- On Screen Set "ON SCREEN" to "OFF", "LCD" or "LCD/TV" (1 21).

- · It is recommended to use the AC Adapter as the power supply instead of the battery pack. (car 11)
- To monitor the picture and sound from the camcorder without inserting a tape, set the camcorder's Power Switch to "REC", then set your TV to the appropriate input mode.
- Make sure you adjust the TV sound volume to its minimum level to avoid a sudden burst of sound when the camcorder is turned on.
- Conversion lens and AV Cable may not be used at the same time depending on the type of conversion lens you are using.
- It is recommended to use JVC conversion lens. Some conversion lens may not be compatible with this camcorder.

## **Changing The Menu Settings**

This camcorder is equipped with an easy-touse, on-screen menu system that simplifies many of the more detailed camcorder settings ( $\mathbb{Z}$  19 – 23).

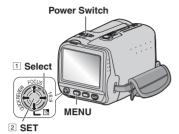

- For Video Recording Menu:
  - Set the Power Switch to "REC" (\$\sigma\$ 9).
  - Set the recording mode to "M" ( 9).

### For Video Playback Menu:

Set the Power Switch to "PLAY" ( 9).

2 Press MENU. The Menu Screen appears.

### Screen for Video Recording Menu

### Screen for Video Playback Menu




Select the desired function, press **SET** or **>**.

The selected function menu appears.

Example: FUNCTION menu.

### **Current Setting**

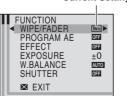

Select the desired selection, press SET or >.

Example: WIPE/FADER menu.



- Select the desired setting, press SET or >. Selection is completed.
- Press MENU. The Menu Screen closes.
- Press < whenever you want to cancel or return to the previous menu screen.
- Repeat the procedure if you wish to set other function menus.

## **Recording Menus**

The FUNCTION and CAMERA menu settings can be changed only when the Power Switch is set to "REC".

|          | Menus   | Settings: [] = Factory-preset  |  |
|----------|---|--|--|
|          | WIPE/FADER  | (127 27), "Wipe or Fader Effects".   |  |
| Z        | PROGRAM AE  | (127, 28), "Program AE, Effects And Shutter Effects".  |  |
| ΙĔ       | EFFECT  | (127, 28), "Program AE, Effects And Shutter Effects".  |  |
| FUNCTION | EXPOSURE  | (127 24), "Exposure Control".  |  |
| 显        | W. BALANCE  | (127 26), "White Balance Adjustment".  |  |
|          | SHUTTER   | (127, 28), "Program AE, Effects And Shutter Effects".  |  |
| ı        | ZOOM  | <ul> <li>[30X]: When set to "30X" while using digital zoom, the zoom magnification will reset to 30X since digital zoom will be disengaged.</li> <li>60X: Allows you to use the Digital Zoom. By digitally processing and magnifying images, zooming is possible from 30X (the optical zoom limit), to a maximum of 60X digital magnification.</li> <li>800X: Allows you to use the Digital Zoom. By digitally processing and magnifying images, zooming is possible from 30X (the optical zoom limit), to a maximum of 800X digital magnification.</li> </ul> |  |
|          | TELE MACRO  | [OFF]: Disables the function.  ON: When the distance to the subject is less than 1 m (3.3 ft), set "TELE MACRO" to "ON". You can shoot a subject as large as possible at a distance of approx. 40 cm (1.4 ft). Depending on the zoom position, the lens may go out of focus.   |  |
| CAMERA   | OFF (W): Disables the function. (DIS disable icon "(W)" a [ON]: To compensate for unstable images caused by cashake, particularly at high magnification.  Notes:  Accurate stabilization may not be possible if hand shake is or depending on the shooting condition.  Switch off this mode when recording with the camcorder or DIS cannot be activated when "NIGHT" in "PROGRAM AE" |  |  |
|          | GAIN UP   | "STROBE" in "EFFECT" is selected.  OFF: Allows you to shoot dark scenes with no picture brightness adjustment.  [AGC]: The overall appearance may be grainy, but the image is bright.  AUTO: The shutter speed is automatically adjusted. Shooting  a subject in low or poor lighting at slow shutter speed provides a brighter image than in the AGC mode, but the subject's movements are not smooth or natural. The overall appearance may be grainy. While the shutter speed is being automatically adjusted, "→ ★A" is displayed.                         |  |
|          | WIND CUT  | [OFF]: Disengages the function. ON: Helps cut down on noise created by wind. The "≵" indicator appears. The quality of the sound will change. This is normal.  |  |

|  | Menus    | Settings: [ ] = Factory-preset  |  |
|--|----------|---|--|
|  | REC MODE | [SP]*: To record in the SP (Standard Play) mode LP: Long Play—more economical, providing 1.5 times the recording time.  *SP indicator does not appear on the screen.  |  |
| TAPE   |          | Notes: • If the recording mode is switched, the playback picture will be blurred at the switching point. • During playback of a tape recorded on another camcorder, blocks of noise may appear or there may be momentary pauses in the sound. |  |
| SOUND MODE [12BIT]: Enables video recording of stereo sound channels. (Equivalent to the 32 kHz models).  16BIT: Enables video recording of stereo sound or st |          | <b>16BIT:</b> Enables video recording of stereo sound on two separate channels. (Equivalent to the 48 kHz mode of previous  |  |

The "DISPLAY" settings (except "CLOCK ADJ.", "16:9 OUTPUT" and "BRIGHT") are effective only for shooting.

|                           | Menus       | Settings: [] = Factory-preset  |  |  |
|---------------------------|-------------|--|--|--|
|                           | ON SCREEN   | LCD: Keeps the camcorder's display (except the date, time and time code) from appearing on the connected TV screen.  [LCD/TV]: Makes the camcorder's display appear on screen when the camcorder is connected to a TV. |  |  |
|                           | DATE/TIME   | [OFF]: The date/time does not appear. ON: The date/time is always displayed.   |  |  |
| ≽                         | CLOCK ADJ.  | ☐ 12, "Date/Time Settings".  |  |  |
| ON: Time code is displaye |             | connected TV. Frame numbers are not displayed during   |  |  |
|                           | 16:9 OUTPUT | To enable your tv to display images in 16:9 wide mode, set the tv screen size correctly.  [4:3 TV]: For TV with an aspect ratio of 4:3.  16:9 TV: For TV with an aspect ratio of 16:9.                                 |  |  |
|                           | BRIGHT      | 13, "Brightness Adjustment Of The Display".  |  |  |

## 22 EN Menus for detailed adjustment

The "SYSTEM" functions which are set when the Power Switch is set to "REC" are also applied when the Power Switch is set to "PLAY".

|   | Menus     | Settings: [] = Factory-preset  |  |
|---|-----------|--|--|
|   | LANGUAGE  | [ENGLISH] / FRANCAIS / ESPAÑOL / PORTUGUÊS The language setting can be changed. (27 12)  |  |
|   | MELODY    | OFF: Disengages the function.  [ON]: A melody sounds when any operation is performed.  |  |
| SYSTEM  | DEMO MODE | <ul> <li>[ON]: A melody sounds when any operation is performed.</li> <li>OFF: Automatic demonstration will not take place.</li> <li>[ON]: Demonstrates certain functions such as Wipe/Fader and Effects, etc., and can be used to confirm how these function operate. Demonstration starts in the following cases:</li> <li>When the Menu Screen is closed after "DEMO MODE" is turned "ON".</li> <li>With "DEMO MODE" set to "ON", if there is no operation for abou 3 minutes after the Power Switch is set to "REC".</li> <li>Performing any operation during the demonstration stops the demonstration temporarily. If no operation will resume.</li> <li>Note:</li> </ul> |  |
| CAM RESET [CANCEL]: Does not reset all settings to the factor |           | If a cassette is in the camcorder, the demonstration cannot be turned on.  [CANCEL]: Does not reset all settings to the factory-preset.  EXECUTE: Resets all settings to the factory-preset.   |  |

## **Playback Menus**

The settings on the next page (127 23) are effective only for video playback except "REC MODE". The parameters (except "SOUND L/R" and "NARRATION" settings) are the same as in the description on page 21.

### SOUND L/R and NARRATION

During tape playback, the camcorder detects the sound mode in which the recording was made, and plays the sound back. Select the sound to accompany your playback picture.

|      | Menus        | Settings: [ ] = Factory-preset   |  |
|------|--------------|--|--|
|      | REC MODE     |  |  |
| TAPE | NARRATION    | * SP indicator does not appear on the screen.  Although it is not possible to perform audio dubbing with this camcorder, you can hear sound from an audio-dubbed tape during playback using this function.  [OFF]: Original sound is output on both "L" and "R" channels in stereo.  ON: Dubbed sound is output on both "L" and "R" channels in stereo.  MIX: Original and dubbed sounds are combined and output in stereo on both "L" and "R" channels. |  |
|      | SOUND L/R    | [STEREO]: Sound is output on both "L" and "R" channels in stereo.  SOUND L: Sound from the "L" channel is output.  SOUND R: Sound from the "R" channel is output.  |  |
|      | BLANK SEARCH | CANCEL / [EXECUTE]  ### 17. "Blank Search".  |  |

Each setting (except "OFF" in "ON SCREEN", "DATE/TIME" and "TIME CODE") is linked with "DISPLAY", which appears when the Power Switch is set to "REC".

The parameters (except "OFF" in "ON SCREEN" setting) are the same as in the description on ☞ 21.

|  | Menus       | Settings: [] = Factory-preset                          |  |
|--|-------------|--|--|
| ON SCREEN OFF / [LCD] / LCD/TV   |             | • •  |  |
|  |             | When set to "OFF", the camcorder's display disappears. |  |
|  | DATE/TIME   | [OFF] / ON   |  |
| ĕ∣   | CLOCK ADJ.  | 12, "Date/Time Settings"                               |  |
| 뎣  | TIME CODE   | [OFF] / ON   |  |
| TIME CODE [OFF] / ON  15, "Time Code"                                  |             | ☐ 15, "Time Code"                                      |  |
|  | 16:9 OUTPUT | [4:3 TV] / 16:9 TV                                     |  |
| ■ 21, "16:9 OUTPUT"  BRIGHT ■ 13, "Brightness Adjustment Of The Disple |             | ☞ 21, "16:9 OUTPUT"                                    |  |
|  |             | ☐ 13, "Brightness Adjustment Of The Display"           |  |

### SYSTEM

Each setting (except "DEMO MODE") is linked with "SYSTEM", which appears when the Power Switch is set to "REC".

The parameters are the same as in the description on 22.

## **Manual Focus**

The camcorder's Full Range AF system offers continuous shooting ability from close-up (as close as approx. 5 cm (2") to the subject) to infinity. However, correct focus may not be obtained depending on the shooting condition. In this case, use the manual focus mode.





Manual focus indicator

- Set the Power Switch to "REC" (59).
- Set the recording mode to "M" (

  9).
- Press FOCUS. The manual focus indicator appears.
- Press 
   or 
   to focus on a subject.
  - When the focus level cannot be adjusted. any further or closer. "A" or "A" will blink.
- Press SET. Focus adjustment is complete.

### To reset to Auto Focus Press FOCUS twice.

### Manual focus is recommended in situations listed below.

- · When two subjects overlap in the same scene.
- When illumination is low.\*
- · When the subject has no contrast (difference in brightness and darkness), such as a flat, one-color wall, or a clear, blue skv.\*
- · When a dark object is barely visible in the I CD monitor.\*
- · When the scene contains minute patterns or identical patterns that are regularly repeated.
- When the scene is affected by sunbeams or light reflecting off the surface of a body of water.
- · When shooting a scene with a high-contrast background.
- The following low-contrast warnings appear blinking: A. ◀. ▶ and ♣.

## **Exposure Control**

Manual exposure control is recommended in the following situations:

- · When shooting using reverse lighting or when the background is too bright.
- When shooting on a reflective natural background such as at the beach or when skiina.
- · When the background is overly dark or the subject is bright.

### 1 Select





- 2 SET
- $\mathfrak{I}$  Set the Power Switch to "**REC**" ( $\mathfrak{I}
  \mathfrak{F}$  9).
- Set the recording mode to "M" (\$\sigma\$ 9).
- R Press MENU
- Select "FUNCTION", press SET or >.
- Select "EXPOSURE", press SET or >.
- 3 Select the appropriate exposure, press SET or >.
  - To brighten the image, press ^. To darken the image, press ∨. (maximum +/-6)
- 🏿 Press MENU.

- · If the adjustment does not cause any visible change in brightness, set "GAIN UP" to "AUTO" (car 20).
- You cannot use the manual exposure control at the same time when "PROGRAM AF" is set to "SPOTLIGHT" or "SNOW" (27), or with the backlight compensation.

## **Iris Lock**

Like the pupil of the human eve, the iris contracts in well-lit environments to keep too much light from entering, and dilates in dim environments to allow in more light. Use this function in the following situations:

- · When shooting a moving subject.
- · When the distance to the subject changes (so its size in the LCD monitor changes). such as when the subject is backing away.
- · When shooting on a reflective natural background such as at the beach or when skiina.
- · When shooting objects under a spotlight.
- When zooming.
- Perform steps 1 5 in "Exposure Control"
- 2 Adjust zoom so that the subject fills the LCD monitor, then press and hold SET or > for over 2 seconds. The "■" indication appears.
- Press **SET** or >. The iris is locked.
- Press MENU.

## **Backlight Compensation**

Backlight compensation brightens the subject auickly.

With simple operation, backlight compensation feature brightens the dark subject portion by increasing the exposure.



- Set the Power Switch to "REC" (\$\sigma\$ 9).
- Set the recording mode to "M" (12 9).
- 3 Press so that the Backlight Compensation indicator "

  "appears."

### To cancel Backlight Compensation Press twice so that the "" indicator disappears.

### Note:

Using Backlight Compensation may cause the light around the subject to become too bright and the subject to become white.

## Spot Exposure Control

Selection of a spot metering area enables more precise exposure compensation.

- Set the Power Switch to "REC" (59).
- Set the recording mode to "M" (\$\sigma\$ 9).
- Press 
   twice so that the Spot Exposure Control indicator " appears.
  - A spot metering area frame appears at the center of the LCD monitor.
- Press SFT
  - Spot Exposure Control is engaged.
  - · Exposure is adjusted to make the brightness of the selected area most appropriate.

### To lock the iris

After step  $\mathfrak{G}$ , press and hold **SET** over 2 seconds. The "L" indication appears and the iris is locked.

To cancel Spot Exposure Control Press nonce so that the "" indicator disappears.

- · Depending on the shooting location and condition, optimum result may not be attained.
- "STROBE" in "EFFECT" cannot be used with Spot Exposure Control.

## White Balance Adiustment

The white balance refers to the correctness of color reproduction under various lighting. If the white balance is correct, all other colors will be accurately reproduced.

The white balance is usually adjusted automatically. However, more advanced camcorder operators control this function manually to achieve a more professional color/tint reproduction.

- Set the Power Switch to "REC" (\$\sigma\$ 9).
- Set the recording mode to "M" (\$\sigma\$ 9).
- Set "W. BALANCE" to the desired mode (c 20).
  - · The selected mode indicator except "AUTO" appears.

### W. BALANCE

### [AUTO]:

White balance is adjusted automatically.

### MWB №:

Adjust the white balance manually when shooting under various types of lighting. (c 26, "Manual White Balance Adjustment")

### FINE ::

Outdoors on a sunny day.

### CLOUD 4:

Outdoors on a cloudy day.


### HALOGEN 余:

A video light or similar type of lighting is used.

[] = Factory-preset

## **Manual White Balance** Adiustment

Adjust the white balance manually when shooting under various types of lighting.

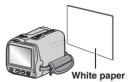

- Set the Power Switch to "REC" (\$\sigma\$ 9).
- ${\mathcal Q}$  Set the recording mode to "M" ( ${\mathbb Z}$  9).
- $\mathfrak{B}$  Hold a sheet of plain white paper in front of the subject. Adjust zoom or position yourself so that the white paper fills the screen
- A Select "MWB" in "W. BALANCE" menu (127 20), then press and hold SET or > until begins blinking.
  - When the setting is completed, ₺ stops blinkina.
- Press **SET** or > to engage the setting.
- Press **MENU**. The Menu Screen closes and the Manual White Balance indicator is displayed.

- In step 3 it may be difficult to focus on the white paper. In such a case, adjust focus manually (a 24).
- · Because the color temperature is different depending on the light source, use this function for a more natural result.
- · Once you adjust white balance manually, the setting is retained even if the power is turned off or the battery removed.
- White Balance cannot be activated simultaneously with "TWILIGHT" in "PROGRAM AE" ( 27).
- · White Balance cannot be activated if the "SEPIA" or "MONOTONE" mode is activated.

## **Wipe Or Fader Effects**

These effects let you make pro-style scene transitions. Use them to spice up the transition from one scene to the next.

Wipe or Fader works when video recording is started or stopped.

- Set the Power Switch to "REC" (59).
- Set the recording mode to "M" (2 9).
- Set "WIPE/FADER" in "FUNCTION" Menu (r 20).
- Press the Recording Start/Stop Button to activate the Fade-in/out or Wipe-in/out.

You can extend the length of a Wipe or Fader by pressing and holding the Recording Start/Stop Button

### WIPE/FADER

### [OFF]:

Disables the function

### WHITE WH.

Fade in or out with a white screen.

### BI ACK BK

Fade in or out with a black screen.

### SLIDE IT:

Wipe in from right to left, or wipe out from left to right.

### SCROLL :

The scene wipes in from the bottom to the top of a black screen, or wipes out from top to bottom, leaving a black screen.

[] = Factory-preset

## Program AE, Effects And Shutter Effects

- Set the Power Switch to "REC" (\$\sigma\$ 9).
- 2 Set the recording mode to "M". ( $\square$  9).
- Set "EFFECT". "PROGRAM AE" or "SHUTTER" in "FUNCTION" Menu ( 20).
  - · The selected effect will be shown for approx. 2 seconds before the camcorder returns to the menu screen

### Notes:

- · Shutter Effects cannot be used during "NIGHT"
- · When a subject is too bright or reflective. a vertical streak may appear (smear phenomenon). Smear phenomenon tends to occur when "SPORTS" or any mode of "SHUTTER 1/500 - 1/4000" is selected

### **PROGRAM AE**

### [OFF]:

Disables the function.

### SPORTS %:

### (Variable Shutter Speed: 1/250 - 1/4000):

This setting allows fast-moving images to be captured one frame at a time, for vivid. stable slow-motion playback. The faster the shutter speed, the darker the picture becomes. Use the shutter function under good lighting conditions.

### SNOW 87:

Compensates for subjects that may otherwise appear too dark when shooting in extremely bright surroundings such as in the snow.

### SPOTLIGHT ::

Compensates for subjects that may otherwise appear too bright when shooting under extremely strong direct lighting such as spotlights.

### TWILIGHT \*\*:

Makes evening scenes look more natural. White Balance (526) is automatically set to "AUTO". When Twilight is chosen, the camcorder automatically adjusts the focus from approx. 10 m (32ft) to infinity. From less than 10 m. adjust the focus manually.

## 28 EN Features for recording

### NIGHT :

Makes dark subjects or areas even brighter than they would be under good natural lighting. Although the recorded image is not grainy, it may look as if it is strobing due to the slow shutter speed. During Night-Alive, it may be difficult to bring the camcorder into focus. To prevent this, use of a tripod is recommended.

[] = Factory-preset

### **EFFECT**

### [OFF]:

Disables the function.

### SEPIA :

Recorded scenes have a brownish tint like old photos.

### MONOTONE B/W:

Like classic black and white films, your footage is shot in B/W.

### CLASSIC ₩:

Gives recorded scenes a strobe effect.

### STROBE 3:

Your recording looks like a series of consecutive snapshots.

### MIRROR 9R:

Creates a mirror image on the left half of the screen, juxtaposed to the normal image on the other half.

[] = Factory-preset

### **SHUTTER**

### [OFF]:

Disables the function.

### 1/60 SHUTTER 1/60:

The shutter speed is fixed at 1/60th of a second. Black bands that usually appear when shooting a TV screen become narrower.

### 1/100 SHUTTER 1/100:

The shutter speed is fixed at 1/100th of a second. The flickering that occurs when shooting under a fluorescent light or mercury-vapour lamp is reduced.

### SHUTTER 1/500/SHUTTER 1/4000:

(Refer to "PROGRAM AE" - "SPORTS **%**" mode)

[] = Factory-preset

### **Editing**

## **Dubbing To A VCR**

### To use this camcorder as a player

- Following the illustration, IF 18, "Connections To A TV Or VCR", connect the camcorder and the VCR's input connectors.
- 2 Perform steps 1 0 (= 18).
- 3 At the point you want to start dubbing, start recording on the VCR. (Refer to the VCR's instruction manual.)
- To stop dubbing, stop recording on the VCR, then stop playback on the camcorder.

# To choose whether or not the following displays appear on the connected TV.


- Date/Time Set "DATE/TIME" to "ON" or "OFF" (\$\sigma 21).
- Time Code Set "TIME CODE" to "ON" or "OFF" (\$\sigma 21).
- On Screen Set "ON SCREEN" to "OFF", "LCD" or "LCD/TV" (\$\sqrt{2}\$1).

#### Note:

It is recommended to use the AC Adapter as the power supply instead of the battery pack (\$\to\$ 11).

## **Dubbing To Or From A Video** Unit Equipped With A DV **Connector (Digital Dubbing)**

It is also possible to copy recorded scenes from the camcorder onto another video unit equipped with a DV connector. Since a digital signal is sent, there is little, if any, image or sound deterioration.

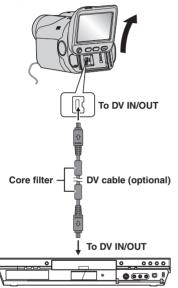

Video unit equipped with DV connector

## To use this camcorder as a player

- Make sure all units are turned off.
- Connect this camcorder to a video unit equipped with a DV input connector using a DV cable as shown in the illustration.
- Start playback on the camcorder (127 16).
- At the point you want to start dubbing, start recording on the video unit. (Refer to the video unit's instruction manual.)
- To stop dubbing, stop recording on the video unit, then stop playback on this camcorder.

#### Notes:

- It is recommended to use the AC Adapter as the power supply instead of the battery pack (p 11).
- If a blank portion or disturbed image is played back on the player during dubbing, the dubbing may stop so that an unusual image is not dubbed
- Even though the DV cable is connected correctly, sometimes the image may not appear in step  $\mathcal{A}$  If this occurs, turn off the power and make connections again.
- When using a DV cable, be sure to use the optional JVC VC-VDV204U or VC-VDV206U DV cable

### To use this camcorder as a recorder

- $\mathfrak{I}$  Make sure all units are turned off.
- ${\mathcal A}$  Connect this camcorder to a video unit equipped with a DV output connector using a DV cable as shown in the illustration.
- Set the camcorder's Power Switch to "PLAY".
- Set "REC MODE" to "SP" or "LP" (c 23).
- Start playback on the player.
- (f) Press the Recording Start/Stop Button to engage the Record-Pause mode.
  - The "DV IN" indication appears on the
- $\mathbb{Z}$  At the point you want to start dubbing, press the Recording Start/Stop Button to start dubbing. The \$\indication rotates.
- Press the Recording Start/Stop Button again to stop dubbing. The \ indication stops rotating.
- Press to return to the normal playback mode.


#### Note:

Digital Dubbing is performed in the sound mode recorded on the original tape, regardless of the current "SOUND MODE" setting ( 21).

### COPY PROTECTED

Appears if dubbing of copyguarded signals is attempted while this camcorder is being used as a recorder.

## **Connection To A Personal** Computer

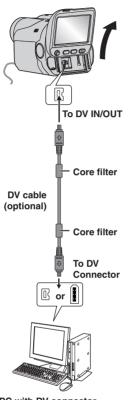

PC with DV connector

When connecting the camcorder to a PC using a DV cable, make sure to follow the procedure below. Connecting the cable incorrectly may cause malfunctions to the camcorder and/or the PC.

- Connect the DV cable first to the PC, and then to the camcorder.
- · Connect the DV cable (plugs) correctly according to the shape of the DV connector.

It is also possible to transfer moving images to a PC with a DV connector by using the software equipped with the PC or commercially available software. If you are using a Windows® XP, you can use Windows® Messenger to conduct video conferences over the Internet, using a camcorder. For details, refer to the help for the Windows® Messenger.

- It is recommended to use the AC Adapter as the power supply instead of the battery pack (p 11).
- When using a DV cable, be sure to use the optional JVC VC-VDV206U or VC-VDV204U DV cable depending on the type of DV connector (4 or 6 pins) on the PC.
- The date/time information cannot be captured into the PC.
- · Refer to the instruction manuals of the PC and
- The system may not work properly depending on the PC or capture board you are using.
- · If, after connecting a DV cable to the camcorder and it doesn't work, restart the camcorder.
- Microsoft® and Windows® are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries

If, after following the steps in the chart below, the problem still exists, please consult your nearest JVC dealer.

| Problem   | Possible Cause  | Remedy   |
|---|---|--|
| Recording cannot be performed.  | <ul> <li>The tape's erase protection tab is set to "SAVE".</li> <li>"TAPE END" appears.</li> <li>The cassette holder cover is open.</li> </ul>                | → Set the tape's erase protection tab to "REC" (□ 13).  → Replace with new cassette (□ 13).  → Close the cassette holder cover.  |
| When shooting a subject illuminated by bright light, vertical lines appear.                               | This is not a malfunction.  |  |
| When the screen is under direct sunlight during shooting, the screen becomes red or black for an instant. | This is not a malfunction.  |  |
| The focus does not adjust automatically.  | Focus is set to the Manual mode.     The lens is dirty or covered with condensation.  | <ul> <li>→Set Focus to the Auto mode (x̄ 24).</li> <li>→Clean the lens and check the focus again (x̄ 24).</li> </ul>   |
| The image looks like the shutter speed is too slow.   | When shooting in the dark, the<br>unit becomes highly sensitive to<br>light when "GAIN UP" is set to<br>"AUTO".   | →If you want the lighting to look more natural, set "GAIN UP" to "AGC" or "OFF" (27 20).   |
| Images on the LCD monitor appear dark or whitish.   | In places subject to low<br>temperature, images become<br>dark due to the characteristics<br>of the LCD monitor. This is not a<br>malfunction.                | →Adjust the brightness and angle of the LCD monitor (□ 8, 13).   |
| Picture does not appear on the LCD monitor.   | The LCD monitor's brightness<br>setting is too dark.  | →Adjust the brightness of the LCD monitor (□ 13).  |
| Aspect ratio is strange.  |   | →If the aspect ratio of the video you are playing is strange, change the setting in "16:9 OUTPUT" (  ### 21, 23).  |
| No power is supplied.   | The power is not connected properly. The battery pack is not attached firmly. The battery is dead.  | →Connect the AC Adapter securely. (□ 11) →Detach the battery pack once again and re-attach it firmly. (□ 11) →Replace the dead battery with a fully charged one. (□ 11)                          |
| The POWER/CHARGE lamp on the camcorder does not light during charging.                                    | <ul> <li>Charging is difficult in places<br/>subject to extremely high/low<br/>temperatures.</li> <li>The battery pack is not attached<br/>firmly.</li> </ul> | →To protect the battery, it is recommended to charge it in places with a temperature of 10°C to 35°C (50°F to 95°F). (□ 33) → Detach the battery pack once again and re-attach it firmly. (□ 11) |

| Problem  | Possible Cause  | Remedy  |
|--|---|---|
| The tape is moving, but there is no picture.   | Your TV has AV input terminals, but is not set to its VIDEO mode.      The cassette holder cover is open. | →Set the TV to the mode or channel appropriate for video playback.  (□ 18) →Close the cassette holder cover.  (□ 13)        |
| Blocks of noise appear<br>during playback, or<br>there is no playback<br>picture and the screen<br>becomes blue. |   | →Clean the video heads with an optional cleaning cassette.  (□ 2)   |
| Data battery status does not appear.   | The AC Adapter is connected to the camcorder. The camcorder turned off automatically.                     | <ul> <li>→Disconnect the AC adapter from<br/>the camcorder.</li> <li>→Turn the camcorder off, then on<br/>again.</li> </ul> |

| Warning Indication   | Meaning / Remedy   |  |
|--|--|--|
| High  Exhausted  | Displays the battery remaining power.     As the battery power comes close to nil, the battery remaining power indicator blinks. When the battery power is exhausted, power turns off automatically. |  |
| SET TO MANUAL<br>MODE  | Appears when you attempt to change "Menu Settings", "Backlight Compensation" or "Manual Focus" while in AUTO mode ⚠. (மு.)   |  |
| TAPE END   | Appears when the tape ends during recording or playback.   |  |
| LENS CAP   | Appears for 5 seconds after power is turned on if the lens cap is attached or when it is dark.   |  |
| SET DATE/TIME!   | Appears when the date/time is not set. (IF 12). The built-in clock battery has run out and the previously set date/time has been erased. Consult your nearest JVC dealer for replacement.            |  |
| <b>©</b>   | Appears if a tape is loaded while the Power Switch is set to "REC".     Blinks when no tape is loaded.   |  |
| CHECK TAPE'S<br>ERASE PROTECTION<br>TAB                                | Appears when the erase protection tab is set to "SAVE" while the Power Switch is set to "REC".   |  |
| UNIT IN SAFEGUARD<br>MODE REMOVE AND<br>REATTACH BATTERY<br>OR DC PLUG | Error indications 01, 02 or 06.     Remedy: Remove and reattach the power supply or battery.*  |  |
| UNIT IN SAFEGUARD<br>MODE EJECT AND<br>REINSERT TAPE                   | Error indications 03 or 04.     Remedy: Eject the cassette and reinsert.*  |  |

<sup>\*</sup> The camcorder turns off automatically. Re-check if the indication clears. When it does, you can resume using the camcorder. If the indication remains, consult your nearest JVC dealer.

## **AC** Adapter

## When using the AC Adapter in areas other than the USA

The provided AC Adapter features automatic voltage selection in the AC range from 110 V to 240 V

### **USING HOUSEHOLD AC PLUG ADAPTER**

In case of connecting the unit's power cord to an AC wall outlet other than American National Standard C73 series type use an AC plug adapter, called a "Siemens Plug", as shown. For this AC plug adapter, consult your nearest JVC dealer.



## **Battery Packs**

The supplied battery pack is a lithium-ion battery. Before using the supplied battery pack or an

supplied battery pack or an optional battery pack, be sure to read the following cautions:

- · To avoid hazards
- ... do not burn.
- ... do not short-circuit the terminals. When transporting, make sure the provided battery cap is attached to the battery. If the battery cap is misplaced, carry the battery in a plastic bag.
- ... do not modify or disassemble.
- ... do not expose the battery to temperatures exceeding 60°C (140°F), as this may cause the battery to overheat, explode or catch fire.
- ... use only specified chargers.
- . To prevent damage and prolong service life
- ... do not subject to unnecessary shock.
- ... charge in an environment where temperatures are within the tolerances shown in the chart below. This is a chemical reaction type battery cooler temperatures impede chemical reaction, while warmer temperatures can prevent complete charging.
- ... store in a cool, dry place. Extended exposure to high temperatures will increase natural discharge and shorten service life.
- ... fully charge and then fully discharge the battery every 6 months when storing the battery pack over a long period time.

... remove from charger or powered unit when not in use, as some machines use current even when switched off.

### The Benefits Of Lithium-Ion Batteries

Lithium-ion battery packs are small but have a large power capacity. However, when one is exposed to cold temperatures (below 10°C/50°F), its usage time becomes shorter and it may cease to function. If this happens, place the battery pack in your pocket or other warm, protected place for a short time, then re-attach it to the camcorder

### Notes:

 It is normal for the battery pack to be warm after charging, or after use.

Temperature Range Specifications Charging: 10°C to 35°C (50°F to 95°F) Operation: 0°C to 40°C (32°F to 104°F) Storage: –20°C to 50°C (–4°F to 122°F)

- The lower the temperature, the longer recharging takes.
- Charging times are for a fully discharged battery pack.

### **Cassettes**

To properly use and store your cassettes, be sure to read the following cautions:

- During use
- ... make sure the cassette bears the Mini DV mark.
- ... be aware that recording onto prerecorded tapes automatically erases the previously recorded video and audio signals.
- ... make sure the cassette is positioned properly when inserting.
- ... do not load and unload the cassette repeatedly without allowing the tape to run at all. This slackens the tape and can result in damage.
- ... do not open the front tape cover. This exposes the tape to fingerprints and dust.
- Store cassettes
- ... away from heaters or other heat sources.
- ... out of direct sunlight.
- ... where they won't be subject to unnecessary shock or vibration.
- ... where they won't be exposed to strong magnetic fields (such as those generated by motors, transformers or magnets).
- ... vertically, in their original cases.

### **LCD** Monitor

- To prevent damage to the LCD monitor, DO NOT
- ... push it strongly or apply any shocks.
- · To prolong service life
- ... avoid rubbing it with coarse cloth.

### **Main Unit**

- · For safety, DO NOT
- ... open the camcorder's chassis.
- ... disassemble or modify the unit.
- ... short-circuit the terminals of the battery pack. Keep it away from metallic objects when not in use.
- ... allow inflammables, water or metallic objects to enter the unit.
- ... remove the battery pack or disconnect the power supply while the power is on.
- ... leave the battery pack attached when the camcorder is not in use.

### · Avoid using the unit

- ... in places subject to excessive humidity or dust.
- ... in places subject to soot or steam such as near a cooking stove.
- ... in places subject to excessive shock or vibration.
- ... near appliances generating strong magnetic or electric fields (speakers, broadcasting antennas, etc.).
- ... in places subject to extremely high (over 40°C or 104°F) or extremely low (under 0°C or 32°F) temperatures.

### DO NOT leave the unit

- ... in places of over 50°C (122°F).
- ... in places where humidity is extremely low (below 35%) or extremely high (above 80%).
- ... in direct sunlight.
- ... in a closed car in summer.
- ... near a heater.

### To protect the unit, DO NOT

- ... allow it to become wet.
- ... drop the unit or strike it against hard objects.
- ... subject it to shock or excessive vibration during transportation.
- ... keep the lens directed at extremely bright objects for long periods.
- ... expose the lens to direct sunlight.
- ... carry it by holding the LCD monitor.
- ... swing it excessively when using the hand strap or the grip.
- ... swing the soft camera case excessively when the camcorder is inside it.

 Dirty heads can cause the following problems:



- ... No picture during playback.
- ... Blocks of noise appear during playback.
- ... During recording or playback, the Head Clog Warning indicator "A" appears.
- ... Recording cannot be performed properly.

In such cases, use an optional cleaning cassette. Insert it and play back. If the cassette is used more than once consecutively, damage to the video heads may result. After the camcorder plays back for about 20 seconds, it stops automatically. Also refer to the cleaning cassette's instructions. If, after using the cleaning cassette, the problems still exist, consult your nearest JVC dealer

Mechanical moving parts used to move the video heads and video tape tend to become dirty and worn out over time. In order to maintain a clear picture at all times, periodic check-ups are recommended after using the unit for about 1,000 hours. For periodic check-ups please consult your nearest JVC dealer.

### About moisture condensation

- You have observed that pouring a cold liquid into a glass will cause drops of water to form on the glass' outer surface. This same phenomenon occurs on the head drum of a camcorder when it is moved from a cool place to a warm place, after heating a cold room, under extremely humid conditions or in a place directly subjected to the cool air from an air conditioner.
- Moisture on the head drum can cause severe damage to the video tape, and can lead to internal damage to the camcorder itself.

## CONDENSATION, OPERATION PAUSED PLEASE WAIT

Appears if condensation occurs. When this indication is displayed, wait more than 1 hour until condensation disappears.

### Serious malfunctioning

If malfunctioning occurs, stop using the unit immediately and consult your local JVC dealer.

The camcorder is a microcomputercontrolled device. External noise and interference (from a TV. a radio, etc.) might prevent it from functioning properly. In such cases, first disconnect its power supply unit (battery pack, AC Adapter, etc.) and wait a few minutes and then re-connect it and proceed as usual from the beginning.

Changes or modifications not approved by JVC could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/ TV technician for help.

## Cleaning The Camcorder

Before cleaning, turn off the camcorder and remove the battery pack and AC Adapter.

### To clean the exterior

Wipe gently with a soft cloth. Put the cloth in diluted mild soap and wring it well to wipe off heavy dirt. Then wipe again with a dry cloth.

### To clean the LCD monitor

Wipe gently with a soft cloth. Be careful not to damage the monitor.

### To clean the lens

Blow it with a blower brush, then wipe gently with lens cleaning paper.

### Notes:

- · Avoid using strong cleaning agents such as benzine or alcohol.
- Cleaning should be done only after the battery pack has been removed or other power units have been disconnected.
- · Mold may form if the lens is left dirty.
- · When using a cleaner or chemically treated cloth refer to the cautions of each product.

### **Declaration of Conformity**

Model Number : GR-DA30U

Trade Name : JVC

: JVC AMERICAS Responsible party

CORP

Address : 1700 Valley Road

Wayne, N. J. 07470

Telephone Number: 973-317-5000 This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

## Camcorder

### **For General**

### Power supply

DC 11 V (Using AC Adapter) DC 7.2 V (Using battery pack)

### Power consumption

Approx. 2.6 W

### Dimensions (W x H x D)

71 mm x 77 mm x 117 mm (2.8" x 3" x 4.6")

### Weight

Approx. 385 a (0.84 lbs) (without battery. cassette and lens cap)

Approx. 455 g (1.0 lbs) (incl. battery, cassette and lens cap)

### Operating temperature

0°C to 40°C (32°F to 104°F)

### Operating humidity

35% to 80%

### Storage temperature

-20°C to 50°C (-4°F to 122°F)

### **Pickup**

1/6" CCD

#### Lens

F2.0 to 4.1. f = 2.3 mm to 69 mm. 30:1 power zoom lens

### Filter diameter

ø27 mm

### I CD monitor

2.4" diagonally measured, LCD panel/TFT active matrix system

### Speaker

Monaural

## **For Digital Video Camera**

### **Format**

DV format (SD mode)

### Signal format

NTSC standard

### Recording/Playback format

Video: Digital component recording Audio: PCM digital recording, 32 kHz 4channel (12-BIT), 48 kHz 2-channel (16-BIT)

### Cassette

Mini DV cassette

### Tape speed

SP: 18.8 mm/s. LP: 12.5 mm/s

### Maximum recording time (using 80 min. cassette)

SP: 80 min., LP: 120 min.

## **For Connectors**

### ΔV

Video output: 1.0 V (p-p), 75 Ω, analog Audio output: 300 mV (rms), 1 k $\Omega$ , analog, stereo

### DΛ

Input/output: 4-pin, IEEE1394 compliant

## **AC** Adapter

### Power requirement


AC 110 V to 240 V~. 50 Hz/60 Hz

### Output

DC 11 V \_\_\_\_, 1 A

Specifications shown are for SP mode unless otherwise indicated E & O.E. Design and specifications subject to change without notice.

Troubleshooting ......31

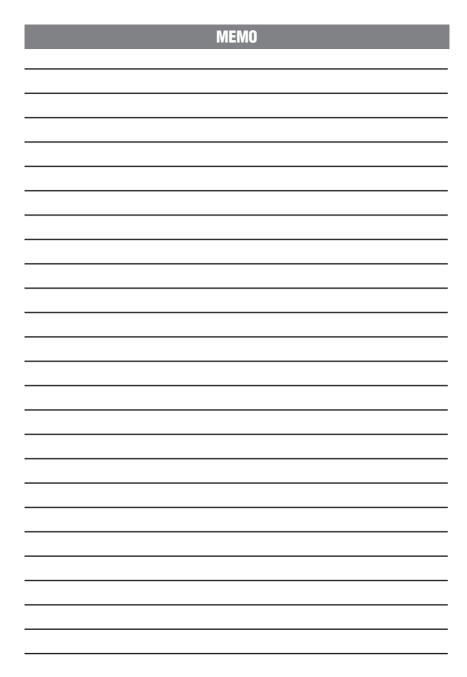

# **JVC**