



12 INCH OSCILLATING METAL TABLE FAN

OWNER'S MANUAL
Model # FT1-30-44



PLEASE READ AND SAVE THESE INSTRUCTIONS

12 INCH OSCILLATING METAL TABLE FAN

Thank you for choosing a Soleus Air fan. This owner's manual will provide you with valuable information necessary for the proper care and maintenance of your new product. Please take a few moments to thoroughly read the instructions and familiarize yourself with all the operational aspects of your new fan.

For your own records, please attach a copy of your sales receipt to this manual. Also, write the store name/location, date purchased, and serial number below:

Store Name: _____

Location: _____

Date Purchased: _____

Serial Number (located on back of unit): _____

WARNINGS

When using this electric unit, basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury, including the following:

- 1) Read all instructions before using this unit.
- 2) Confirm that the voltage of the fan corresponds to the main voltage.
- 3) Never insert your fingers, pencils, or other objects through the fan grille during operation.
- 4) The fan should be used on a stable and level surface. Do not operate without the grille being properly in place.
- 5) Do not expose the fan to excessive heat or humidity. This could cause damage to the electrical components.
- 6) Do not immerse in any type of liquid. Do not use near water.
- 7) The fan should be kept out of the reach of children. Close supervision is necessary when the fan is used by or near children or disabled people.
- 8) Do not operate this or any appliance with a damaged cord, if the unit malfunctions or if it has been dropped or damaged in any manner. Connect to properly polarized outlets only.
- 9) Do not run the cord over carpeting or other heat insulators. Do not cover the cord. Keep the cord away from high traffic areas, and do not submerge in water.


- 10) We do not recommend the use of an extension cord. It could overheat and cause a fire hazard.
- 11) Unplug the fan before cleaning or making repairs. NOTE: If for any reason this unit requires service, return appliance to manufacturer or a similarly qualified service agent to ensure safety.
- 12) To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
- 13) To disconnect, grip plug and pull from wall outlet. Never pull on the cord to unplug.
- 14) For indoor use only.

<p>(A) Grounding Pin Three-slot Grounded Outlet</p> <p>(B) Grounding Pin ADAPTER Grounding Tab Mounting Screw Two-slot Grounded Outlet</p>	<p>WARNING</p> <p>This fan has a grounded three pronged plug intended to fit into a three slot outlet. (A) An adapter is available for connecting three pronged plugs into two slot outlets. (B) When doing so, the green grounding tab extending from the adapter must be fastened under the wall plate's mounting screw. The adapter should not be used if a three-slot outlet is available.</p> <p>DO NOT DEFEAT THE SAFETY PURPOSE OF THE GROUNDED PLUG.</p>
--------------------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Technical Specifications

Voltage Rating	120V, 60Hz
Power Consumption	35W
Unit Size	13 in. (W) x 10 in. (D) x 16 in. (H)
Unit Weight	6.7 lbs

Product Diagram

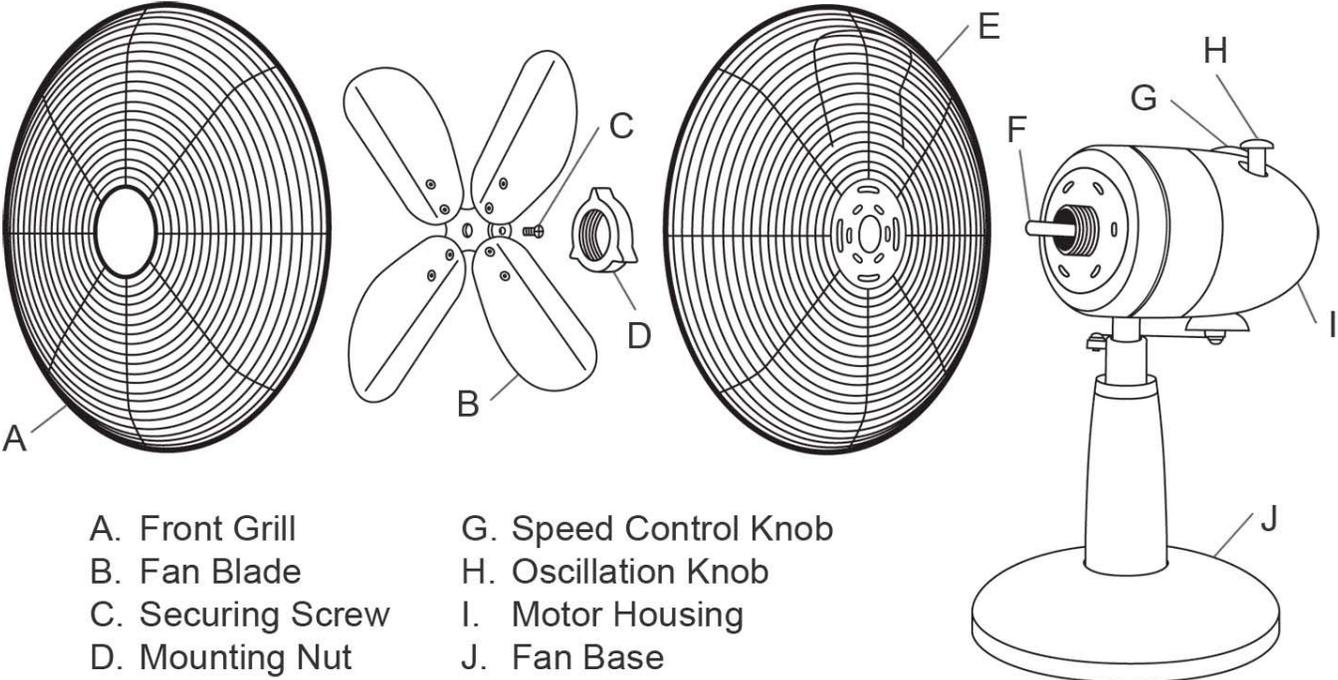

- A. Front Grill
- B. Fan Blade
- C. Securing Screw
- D. Mounting Nut
- E. Rear Grill
- F. Motor Shaft

- G. Speed Control Knob
- H. Oscillation Knob
- I. Motor Housing
- J. Fan Base


Assembly Instructions

Estimated assembly time: Approximately 5 minutes


Tools required: Phillips screwdriver (not included)




- 1) Remove the fan and packaging materials from the box.
- 2) Remove the mounting nut from the motor shaft.

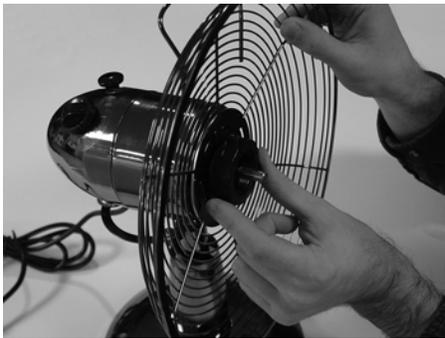

- 3) Position the back grille over the motor shaft, aligning the holes in the back grille with the two knobs that protrude from the motor. Make sure the handle is at the top.
- 4) Secure the back grille by screwing on the mounting nut. Turn clockwise and tighten firmly.

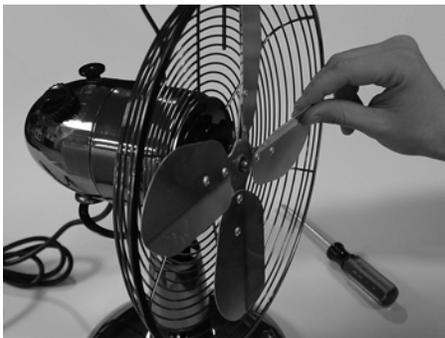

- 5) Slide the fan blade onto the mounting shaft with the shaft sleeve facing the motor. Align securing screw with flat groove in the motor shaft and tighten with Phillips screwdriver.

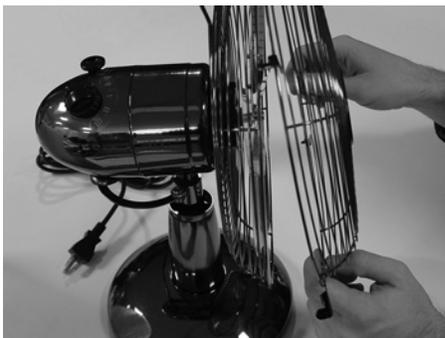

- 6) Position front grille so logo is horizontal. Secure the top tab to the back grille. Snap the four remaining metal clips to complete the assembly.

Operating Instructions

- 1) Set the fan on a stable, level surface.
- 2) Confirm that the Speed Control Knob is set to "O" (off). Plug the cord into a standard outlet.
- 3) Adjust to the desired speed setting:
O: Off
I: Low Speed
II: Medium Speed
III: High Speed
- 4) The fan can operate in oscillation or stationary mode. Press the Oscillation Knob down to activate the oscillation mode. To stop oscillation, pull control knob up.
- 5) To adjust the tilt of the fan head, grasp the fan motor housing and gently push forward or backward. The fan head adjusts into three positions.
- 6) Unplug the fan when not in use.

Maintenance

- 1) Set the switch to off and unplug the unit.
- 2) Clean using a damp cloth and a mild detergent, if necessary. Make certain all detergent residue is removed.
- 3) Never use abrasive cleaning agents or solvents. This may cause damage or deterioration to the surface of the unit.
- 4) Do not immerse the fan in any form of liquid. Do not allow water to drip on or into the fan motor housing.

Storage

When not in use, store the fan in a cool, dry location. To prevent dust and dirt build-up, use the old packaging to repack the unit.

Troubleshooting

If the fan will not operate:

- 1) Confirm that the fan switch is not in the off position.
- 2) Make sure the electricity to the main fuse is working. For troubleshooting assistance, contact customer service at (888) 876-5387.

WARRANTY

One Year Limited Warranty

Soleus International Inc. warrants the accompanying Soleus Air FT1-30-44 to be free from defects in material and workmanship for the applications specified in its operation instruction for a period of ONE (1) year from the date of original retail purchase in the United States.

If the unit exhibits a defect in normal use, Soleus International, Inc. will, at its option, either repair or replace it, free of charge within a reasonable time after the unit is returned during the warranty period.

As a condition to any warranty service obligation, the consumer must present this Warranty Certificate along with a copy of the original purchase invoice.

This Warranty Does Not Cover

- 1) Damage, accidental or otherwise, to the unit while in the possession of a consumer not caused by a defect in material or workmanship.
- 2) Damage caused by consumer misuse, tampering, or failure to follow the care and special handling provisions in the instructions.
- 3) Damage to the finish of the case, or other appearance parts caused by wear.
- 4) Damage caused by repairs or alterations of the unit by anyone other than those authorized by Soleus International Inc.
- 5) Freight and Insurance cost for the warranty service.

ALL WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY ARE LIMITED TO A ONE-YEAR DURATION OF THIS EXPRESS LIMITED WARRANTY. **SOLEUS INTERNATIONAL, INC.** DISCLAIMS ANY LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES AND IN NO EVENT SHALL SOLEUS INTERNATIONAL INC'S LIABILITY EXCEED THE RETAIL VALUE OF THE UNIT FOR BREACH OF ANY WRITTEN OR IMPLIED WARRANTY WITH RESPECT TO THIS UNIT.

This warranty covers only new products purchased from our authorized dealers or retailers. It does not cover used, salvaged, or refurbished products.

As some states do not allow the limitation or exclusion of incidental or consequential damages, or do not allow limitation on implied warranties, the above limitations and exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

For Warranty, Technical Support, Customer Service, Missing or Defective Parts, before returning to your retailer, please call (888) 876-5387.

Or Write To:

Soleus International Inc.
9451 Telstar Ave.
El Monte, CA 91731 USA
www.soleusair.com