

JVC

DIGITAL VIDEO CAMERA


GR-DV3000

Please visit our Homepage on the World Wide Web and answer our Consumer Survey (in English only):

<http://www.jvc-victor.co.jp/english/index-e.html>

For Accessories:

<http://www.jvc-victor.co.jp/english/accessory/>

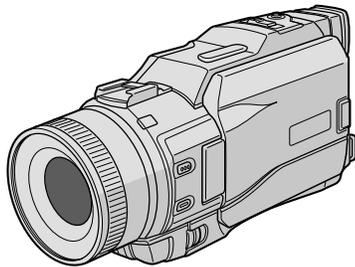

Mini **DV** PAL
DSC
DIGITAL
STILL CAMERA

INSTRUCTIONS

ENGLISH

CONTENTS

AUTOMATIC DEMONSTRATION 7

GETTING STARTED 8 – 17

BASIC RECORDING 18 – 24

Recording On Tape 18

Recording On Memory Card 21

Recording On Tape And Memory Card 22

BASIC PLAYBACK 25 – 27

Playback From Tape 25

Playback From Memory Card 26

**USING MENUS FOR
DETAILED ADJUSTMENT** 28 – 33

ADVANCED FEATURES 34 – 53

CONNECTIONS 54 – 57

Basic Connections 54

Advanced Connections 56

DUBBING 58 – 61

Dubbing To A VCR 58

Dubbing From A VCR 59

Dubbing To Or From A Video Unit
Equipped With A DV Connector 60

Dubbing Still Images Recorded
On A Tape To A Memory Card 61

**USING THE REMOTE
CONTROL UNIT** 62 – 73

Slow-Motion Playback, Frame-By-Frame
Playback and Playback Zoom 64

Playback Special Effects 65

Random Assemble Editing 66

For More Accurate Editing 70

Insert Editing 71

Audio Dubbing 72

TROUBLESHOOTING 74 – 79

USER MAINTENANCE 80

INDEX 81 – 88

Jack Box 81

Controls, Connectors And Indicators 82

Indications 84


CAUTIONS 89 – 91

TERMS 92 – 93

SPECIFICATIONS 94 – 95

LYT0940-001A

EN

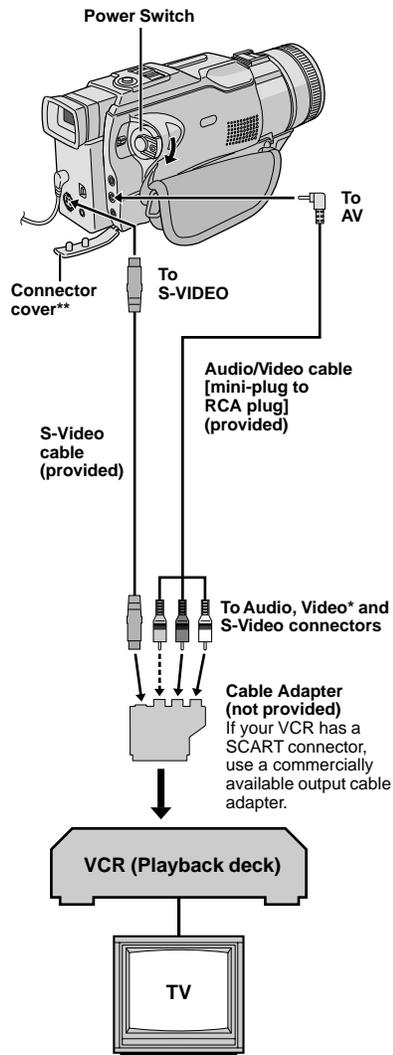

* Connect when an S-Video cable is not used.

** When connecting the cables, open this cover.

Dubbing From A VCR

[To Use This Camcorder As A Recorder]

- 1** Make sure all units are turned off, then connect the camcorder and the VCR as shown in the illustration. Also refer to pg. 54 and 55.
- 2** Set "SOUND MODE" to "12 BIT" or "16 BIT" and "REC MODE" to "SP" or "LP" in the Menu Screen depending on your preference (pg. 32).
- 3** Set the camcorder's Power Switch to "PLAY" while pressing down the Lock Button located on the switch. Turn on the VCR's power and insert the appropriate cassettes in the camcorder and the VCR.
- 4** Set "S/AV INPUT" to "ON" in the Menu Screen to engage the analogue input mode (pg. 32).
- 5** Press the Recording Start/Stop Button on the camcorder to engage the Record-Pause mode. "AV.IN" appears on the screen.
- 6** Engage the VCR's Play mode, then engage the Still Playback mode when you have found a spot just before the edit-in point.
- 7** Press the Recording Start/Stop Button on the camcorder to engage the Record mode. ⏪ rotates on the screen. Engage the VCR's Play mode.
- 8** To stop dubbing, press the Recording Start/Stop Button on the camcorder so that ⏪ stops rotating, then engage the VCR's Stop mode.
- 9** Repeat steps 6 through 8 for additional editing.
- 10** Set "S/AV INPUT" back to "OFF" in the Menu Screen to disengage the analogue input mode (pg. 32).

NOTES:

- To use an output cable adapter (commercially available), refer to its instructions.
- It is recommended to use the AC Power Adapter/Charger as the power supply instead of the battery pack (pg. 9).
- Analogue signals can be converted to digital signals with this procedure.
- It is also possible to dub from another camcorder.