 


COBY®

 
PORTABLE CD PLAYER

CX-CD314

USER GUIDE

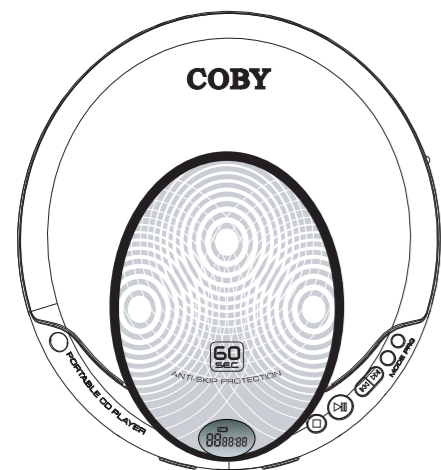


NAME OF PARTS

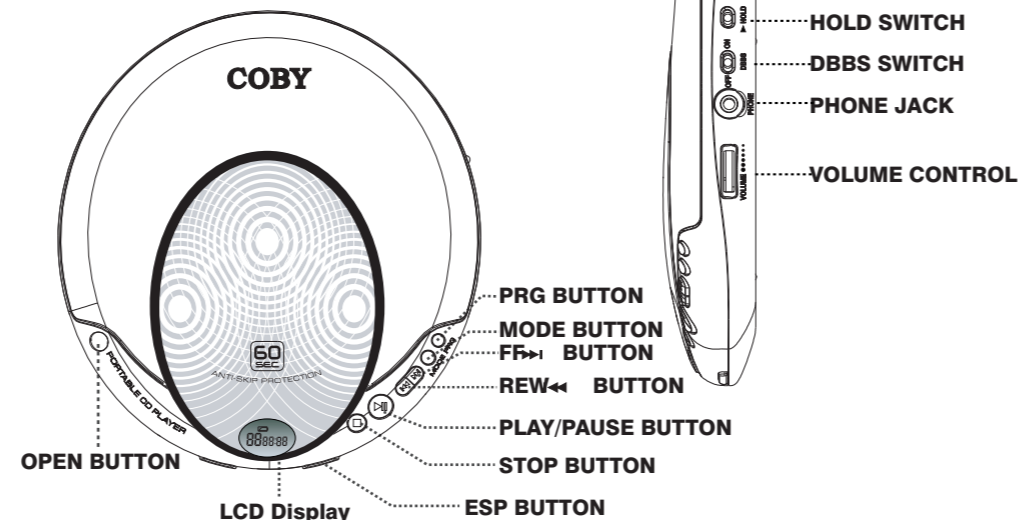

BATTERY OPERATION (BATTERIES NOT INCLUDED)

 Your unit operates on two(2)AA size alkaline batteries. Open the CD cover and insert the batteries in the battery compartment following the polarity diagram located inside.

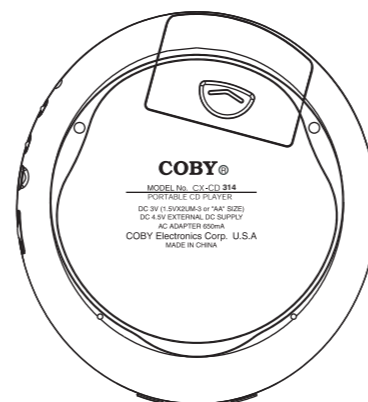

CAUTION

 
Hearing experts advise against the constant use of personal stereos played at high volume. Constant high volume use can lead to hearing loss. If you experience ringing in the ears or hearing loss, discontinue use and seek medical advice.

HANDLING DISCS

To remove the disc from its storage case, press down on the center of the case and lift the disc out. Hold it carefully by the edges as shown below.



- Insert the disc into the unit with the label of the disc facing UP.
- Gently wipe the disc using a soft cloth from the center to the outer direction to remove dust, fingerprints or any other particles on the disc surface. Never use chemicals, such as record sprays, anti-static sprays, benzene or thinners to clean the CD. These chemicals can damage the disc surface permanently.
- To avoid serious scratches on CD, keep them in the cases after each use. Scratches can cause the laser pick-up skip in the future play.
- Do not place stickers or write anything on the disc.



MAINTENANCE AND CARE

- Read the instruction manual before operating this unit.
- Do not expose the unit to high temperature or humidity. Use dampened soft cloth to clean the unit. Do not use strong detergent or solvent to clean the unit.
- Consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment

DBBS FUNCTION

DBBS FUNCTION

The Dynamic Bass Boost System(DBBS) enhances the low frequency(Bass) response of the output. Set the Volume to low listening level and set DBBS switch to ON.

Note: Some CD'S with DBBS may exceed the bass response capacity and can cause distortion. To avoid this, do not play DBBS in high volume. Playing DBBS in high volume may cause damage to the headphone and more importantly, to your hearing.

SPECIFICATIONS

CD Play Section

Frequency Response.....20 ~ 20,000Hz
 Wow and Flutter.....Below Measurable Limits
 Sampling Rate.....8 times over sampling
 D/A Converter.....1-Bit

General

Maximum Output (Stereo Headphone...15mW+15mW(32ohm)

Power Supply

DC.....3V with 2 size "AA" Batteries

Dimension.....5.1"x 1.1"x 5.9"(WHD)

IMPORTANT

The CD mechanism and the sensitive circuitry may cause interference to a radio tuner nearby. Do not operate this unit while operating other radio devices.

Danger This product utilizes invisible laser radiation. Avoid direct exposure to the beam.



Caution Use of controls, adjustments or procedures not listed in this manual may result in hazardous radiation exposure.

CONCERNING COMPACT DISCS

Only compact discs identified with this mark can be used with this player.



OPERATION MANUAL

POWER ON — AUTO PLAY

(1) Press PLAY/PAUSE (▶||) button to turn the power on.

(2) LCD screen will display "60 SEC"

and then change to " -- " Once the player is powered it goes to the anti-shock mode automatically and the anti-shock symbol "⚡" appears on the screen. Press ESP button to quit the anti-shock mode and anti-shock symbol disappears.



(3) LCD screen will display "dISC" if CD is not in the unit.



(4) LCD screen will display "Er" if the unit cannot read CD track data.



(5) When CD track data has been read, LCD screen will display the last track number with the total play time.



(6) Unit will start play from track No.1 automatically.



STOP

- Press STOP (■) button to stop play, and the last track Number will display.



PAUSE

- Press PLAY/PAUSE (▶||) button to pause on/off alternately. Time display will flash on pause mode.



PLAYING MODES

LISTEN TO DESIRED TRACK

- (1) Press FF (▶▶) (or REW (◀◀)) button to set the desired track#. Press PLAY/PAUSE button to play. Press FF (▶▶) (or REW (◀◀)) button to change the track # during the play mode.



- (2) During play, press REW (◀◀) button to play previous track.



- (3) During pause mode, press FF (▶▶) (or REW (◀◀)) button to play the next track (or previous track). The unit will keep in pause mode and time display will flash.



MOVE TO THE DESIRED SPOT

During play, press and hold FF (▶▶) (or REW (◀◀)) button to fast forward (or fast reverse) the current track.



REPEAT ONE TRACK

- (1) Press MODE button once to repeat current track.
- (2) Repeat one indicator appears.



REPEAT ALL TRACKS

- (1) Press MODE button twice to repeat all tracks.
- (2) Repeat all indicator appears.



INTRO FUNCTION

The player will play each track for a few seconds.

- (1) Press MODE button the third time, INTRO indicator appears flashing.
- (2) Press PLAY/PAUSE button to start INTRO play and INTRO indicator turns still.



RANDOM FUNCTION

The player will start playback in an random order.

- (1) Press MODE button the fourth time, RAND indicator appears flashing.
- (2) Press PLAY/PAUSE button to start RANDOM play. RAND indicator turns still.



NOTE: To quit REPEAT/INTRO/RAN mode, just keep pressing MODE button till function indicator disappears from the screen.

PROGRAM PLAY

1. Press PROG button, the screen is read as:
2. Press FF/REW button to get the desired track.
3. Press PROG to confirm, 01 turns to 02. It is ready to make next selection.
4. Repeat the above steps to edit up to 20 tracks. Press PROG button to check program list.
5. Press PLAY/PAUSE button to start playback.
6. To stop program playback, press STOP button.
7. To erase memory, open the CD door or cut off power.

NOTE: Repeat/Intro function works also under the program play mode.

LOW BATTERY DETECTION

- (1) ⚡ is displayed when the battery voltage reaches low.



- (2) When the voltage is too low, the unit will automatically turn off.

ANTI SHOCK PLAY

Press ESP button to prevent disruption or stopping of the CD player for 60 seconds. LCD will show an anti-shock symbol "⚡".