American DJ @ |

User Instructions

QUATRO IITM

Thank you for purchasing this American DJ® product. For your convenience this lighting effect has been lamped and is ready to be used, there is no assembly required. Please read the following instructions before installing or using your new unit.

Operating Instructions:

The Quatro II™ is a gobo-spot chase projector, and is sound active. Lights will react to the beat of the music. It has an adjustment knob to adjusts sound activation sensitivity, Sold with 4 standard gobos.

To focus the image; loosen the nob on the lens case and pull the lens tube until the image is in focus on the surface it is being projected on.

To replace lamps or gobos; remove the two small screws holding the face plate and remove the face. Change the gobo if desired or remove the support ring that holds down the lamp. Remove and replace lamp and reassemble unit.

For service, contact your *American DJ*^m dealer.

Choose from our list of optional gobo patterns to give the look you want!

HALOGEN LAMP WARNING!

This fixture is fitted with halogen lamps which are highly susceptible to damage if improperly handled. Never touch lamp with bare fingers as the oil from your hands will shorten lamp life. Also, never move fixture until lamp has had ample time to cool. Remember, lamps are not covered under warranty conditions.



Model: Quatro II ™

SPECIFICATIONS:

Lamp: 4 x 12V 50W ZB-EXN

Power: 110V/60Hz

Colors: Red, Blue, Green, &

Yellow

Optics: High Quality Glass

Lens

Ventilation: Convection Working Position: Any

Weight: 6lbs.

Size:15 1/2" x 7 1/2 " x 5 3/4"

Caution! Always disconnect from main power before replacing lamps or servicing unit. Remember to always replace with same lamps and fuses.