

# CheckMate® V

## Model RT-U50-25S

### Universal Remote Control



## Programming & Operating Instructions

To have a clearer idea of the features and capabilities of your remote control, take a moment to carefully read these instructions. Save for future reference.

### 1. Introduction

Your Checkmate® V, Model RT-U50, universal remote control is simple to program, easy to use, and can operate up to five (5) electronic devices, which include:

<b>CABLE</b>	Cable set-top terminals
<b>TV</b>	Televisions
<b>VCR</b>	VCR
<b>DVD</b>	DVD
<b>AUDIO</b>	Receivers, amplifiers, CD players

Before you can use your remote control, it must be programmed (set-up) to operate the above devices.

### 2. Before Getting Started

Some of the special features on your remote control are:

#### Point and Press® Programming

Lets you program your TV, VCR, DVD and AUDIO devices without using codes. For more information, see Sections 5 and 14.

#### SmartKeys™

Program multiple button presses on the [CABLE] and [TV] buttons. For more information, see Section 9.

#### Mode Lock™

Your model RT-U50 remote comes "locked" in its cable operating mode. To operate more functions on your TV, VCR, DVD or AUDIO devices, see Section 11.

#### [DEVICE] Button

The [DEVICE] button operates only when Mode Lock™ feature is unlocked. When [DEVICE] is pressed, one of the power buttons will light up indicating the current device being operated. While the current mode power button is illuminated, press a non-illuminated power button to operate a different device.

#### [VCR / DVD / VOD] Button

Press and hold to "toggle" the transport (Play, Stop, Rew...) buttons between Cable (Video-On-Demand), VCR or DVD functions.

#### Memory Guard®

Eliminates reprogramming after battery changes.

#### Time Out

Shuts remote off if any button is pressed and held for 45 seconds. This extends battery life in the event the remote becomes lodged under or between heavy objects.

#### Reset

Lets you reset your remote to its original default settings. For more information, see Section 12.

### 3. Installing / Replacing Batteries

Install two (2) new AAA alkaline batteries. Properly match the "+" / "-" ends of the batteries with the diagram in the battery compartment.

Low Battery Indication - when the batteries become low and need to be replaced, the [CABLE], [TV], [VCR], [DVD], [AUDIO] buttons will not illuminate normally, or at all, during operation. When this happens, install two (2) new AAA alkaline batteries to restore normal operation to the remote control.

Your remote control has Memory Guard™, which eliminates reprogramming after battery changes.

### 4. Programming Cable Set-Top Terminal

Your CheckMate® V remote is pre-programmed to operate a UEC digital set-top terminal.

To operate a different cable set-top terminal, look up the brand and model in the Cable Setup Code list. If you are not sure of your brand and model, contact your cable operator.

1. Press [SELECT] then [MUTE] together until the power / mode buttons illuminate in slow-rotation (i.e. CABLE → TV → VCR → DVD → AUDIO → CABLE).
2. From the Cable Setup Code list, locate the 3-digit code for your brand / model and enter it on the keypad of the remote control. The cable set-top terminal will turn off.
3. Then, press [SELECT] to lock in the code. The power / mode buttons will blink 3-times and go out.

#### Cable Setup Codes

UEC	001
Motorola	
DCT, CFT2200	001
CFT2100, CFT2000	002
Jerrold	
DL4, DP(V), DQN(V), DPBB	003

Scientific Atlanta	
Explorer®	004
Explorer® (#, *)	010
Explorer® (Blue Ridge)	011
Explorer (WorldGate™)	012
8600X	005
8600	006
Pace	
510 Digital	004
HD Digital	010
Pioneer	
Voyager™	004
BA-V1000, BA-V2000	007
Tocom	
5503VIP, 5507, 5508	008
Zenith	
MM 2500	009
Digital	013

## 5. Programming TV, VCR, DVD, AUDIO Devices

### Code Entry Programming

- Turn on all the electronic devices (TV, VCR, DVD, AUDIO) you want to program the remote to operate.
- Press [SELECT] then [MUTE] together until the power / mode buttons illuminate in slow-rotation (i.e. CABLE → TV → VCR → DVD → AUDIO → CABLE...).
- To program your TV, locate the 3-digit code for your brand in the TV Setup Code list and enter it on the keypad of the remote control. Entry of the correct code will cause your TV to turn off. If multiple codes are listed for your brand, you may have to enter different codes until your TV turns off.
  - As soon as you have entered a 3-digit code that turns your TV off, press [MUTE].
    - If the TV turns back on, press [SELECT] to lock in the code. The power / mode buttons will blink 3-times and go out.

Or

  - If the TV does not turn back on, enter a different 3-digit setup code until your TV turns back on. Then press [SELECT] to lock in the code. The power / mode buttons will blink 3-times and go out.

- To program your VCR or DVD, refer to the [VCR or DVD Setup Code lists](#) and repeat steps 2 and 3 above.
- To program your AUDIO equipment, refer to the [AUDIO Setup Code list](#) and repeat steps 2 and 3 above.

### Point and Press® Programming

This method allows you to program the remote control without using codes. Instead, the remote control automatically finds the correct command that you select in a variety of codes until you find the code that operates your device. You then lock in the correct code as described below.

The following instructions describe how to program your remote control using the [CH ▲] or [CH ▼] buttons ("Power" function during programming). You may also program your remote control using other buttons / functions as described in Section 14. When using this method, there are several important points to remember:

- The order in which you program your electronic devices is not important.
- There may be several codes that turn your electronic devices on / off (or perform other functions). Once you lock-in a code, be sure to check the available functions for that device (i.e. TV - Vol ▲/▼, Mute, TV Input, VCR - Play, Stop..., DVD - Play, Stop..., AUDIO - Vol ▲/▼, Mute) to see if they are operating.
- While the remote is searching for the correct setup code(s) for your electronic devices, it is possible that other (previously programmed) devices may turn on / off (or perform other functions). If this occurs, continue pressing the [CH ▲] or [CH ▼] buttons (or the buttons described in Section 14) until you find the correct code for the device you are programming.
- It may take several minutes for the remote to find the correct code that turns your device off (or performs another selected function). During this time, the power / mode buttons will illuminate in fast-rotation (i.e. CABLE → TV → VCR → DVD → AUDIO → CABLE...).

### Programming your electronic devices using the [Ch ▲] or [Ch ▼] buttons ("Power" function during programming)...

- Turn on all the electronic devices (TV, VCR, DVD, AUDIO) you want to program the remote to operate.
- Press [SELECT] then [MUTE] together until the power / mode buttons illuminate in slow-rotation (i.e. CABLE → TV → VCR → DVD → AUDIO → CABLE...).
- Press and hold the [CH ▲] button until one device turns off. While you are pressing the [CH ▲] button, the power /

mode buttons will illuminate in fast-rotation. As soon as one device turns off, release the [CH ▲] button.

- Press [MUTE]. If the device that turned off...
    - Turns back on, press [SELECT] to lock in this code. The power / mode buttons will blink 3-times and go out.

Or

  - Does not turn back on, press [CH ▼] one step at a time until that device turns back on. Each time you press the [CH ▼] button, the power / mode buttons will illuminate once in reverse fast-rotation (AUDIO → DVD → VCR → TV → CABLE).
- Once you have found a code that turns the device on / off, press [SELECT] to lock in this code. The power / mode buttons will blink 3-times and go out.
- Repeat steps 2 to 4 above for each of the remaining electronic devices you wish to program the remote to operate.

## 6. Programming TV / VCR Combinations

- First, turn on your TV / VCR combination device and install a VHS tape.
- Next, program your remote to operate the TV functions.

Using the Code Entry Programming method described in Section 5, find a TV Setup Code that operates the TV functions (power, Vol, ▲/▼, Mute) of your TV / VCR unit.

- Last, program your remote to operate the VCR functions.

Using the Code Entry Programming method described in Section 5, enter, lock and test each 3-digit VCR Setup Code for your brand until a code is found that operates the transport functions (play, stop, rew, fwd, pause, rec) of your TV / VCR unit.

## 7. Programming Your TV / DVD or TV / VCR / DVD Combination

- First, turn on your TV / DVD combination device and install a DVD.
- Next, program your remote to operate the TV functions.

Using the Code Entry Programming method described in Section 5, find a TV Setup Code that operates the TV functions (Power, Vol ▲/▼, Mute) of your TV / DVD unit.

3. Last, program your remote to operate the DVD functions.

Using the Code Entry Programming method described in Section 5, enter, lock and test each 3-digit DVD Setup Code for your brand until a code is found that operates the transport functions (PLAY, STOP, REW, FWD, PAUSE, REC) of your TV / DVD unit.

Before you can test for the correct DVD setup code, you must first press and hold the [VCR / DVD / VOD] button until the [DVD] button illuminates.

4. If you have a TV / VCR / DVD combination unit, you would then program your remote to operate the VCR functions.

Using the Code Entry Programming method described in Section 5, enter, lock and test each 3-digit VCR Setup Code for your brand until a code is found that operates the VCR transport functions (PLAY, STOP, REW, FWD, PAUSE, REC) of your TV / DVD / VCR unit.

Before you can test for the correct VCR setup code, you must first press and hold the [VCR / DVD / VOD] button until the [VCR] button illuminates.

**TV Setup Codes**

Admiral	026	054	211				
Adventura	047						
Aiwa	214						
Akai	053						
Amark	023	215					
Amstrad	157						
Anam	217	218	219	220	221	222	223
Apex	030	038	427				
AOC	053						
Audiovox	220						
Belcor	073						
Bell & Howell	211						
Broksonic	165	167					
Brokwood	073						
Candle	068	091					
Centurion	095	107	108				
Citizen	068	091	211	233			
Concerto	073	095					
Contec	147						
Coronado	023						
Craig	223						
Crown	023						
Curtis Mathes	016	054	107	108	211		
	213						
Daewoo	051	068	073	095	158		
	159	189	191	194	196		
	197	198	200	202	204		
	205	206	207	209			
Daytron	073	095	107	108			

Dumont	073						
Electro Home	073	095					
Elektra	353						
Emerson	016	023	053	064	103		
	139	158	159	164	165		
	166	167	168	169	392		
	400	401	402	408	415		
Envision	073	095					
Fisher	355	356					
Funai	047						
GE	015	018	042	044	049		
	054	055	068	073	090		
	095	101	102	103	389		
	390	396	403	406	407		
Gibraltar	023	048	053	068	073		
	090	095	107	108	233		
	360						
Goldstar (LG)	023	053	068	073	090		
	107	108	233	360	361		
Grundig	233						
Hall Mark	073	095					
Hitachi	023	068	095	096	097		
	098	099	100				
Inkel	364						
JC Penney	039	053	068	073	092		
	095	102	355				
JVC	104	105	106	396	397		
	410						
Kawasho	073	095					
KMC	023						
KTV	023	053	233	366			
Kurazai	211	213					
LG (Goldstar)	023	053	068	073	090		
	107	108	233	360	361		
Lodgenet	211	213					
Logik	211	213					
Luxman	068	073	095				
LXI	024	026	157				
Magnavox (Philips)	023	068	071	073	072	089	
	090	091	093	134	385		
	387	397	404				
Majestic	211	213					
Marantz	053	107	108	109			
Megatron	215						
Memorex	090	211	213	355	388		
	405						
MGA/Mitsubishi	053	068	073	090	095		
	107	109	110	216	384		
	394	395	398	399			
Montgomery Ward	022	023	026	053	071		
	072	108	211	213			
NEC	028	068	090	108	200		
Orion	019	159	160	161	162		
	163	382					
Panasonic	042	043	044	045	046		

Philco	023	053	068	071	072		
	091						
Philips(Magnavox)	023	068	071	073	089		
	090	091	093	134	385		
	387	397	404				
Pilot	073	094	233				
Pioneer	111	144	383				
Portland	023	068					
ProScan	055	070					
Proton	090	371	372				
Pulsar	073						
Quasar	044						
Radio Shack	073						
Realistic	022	166	168				
RCA	042	052	053	054	055		
	069	070					
Sampo	090	108					
Samsung	015	016	017	023	031		
	090	107	108	134	147		
	151	153	386	411			
Sanyo	353	355	356	376	377		
Scott	090	108	168				
Sears	023	031	038	039	068		
	353	355	356				
Sharp	016	022	023	024	025		
	026	027	028	029	393		
	395	409					
Signature 2000	023	026	108	211	213		
Sony	014	020	021				
Soundesign	091						
Squareview	157						
Supre-Macy	380						
Sylvania	068	071	072	090	091		
	093	107	108	157	158		
Symphonic	047	157					
Tatung	044						
Techwood	068						
Teknika	023	068	072	091	168		
	213						
Telerent	023	213					
Tera	381						
Tevion	065	414					
TMK	068	090					
Toshiba	030	031	038	039			
Totevision	233						
Universal	068	102					
Vidtech	068						
Wards	068	090					
White Westinghouse	211	408					
XR-1000	213						
Yamaha	068						
York	090	108					
Zenith	047	048	049	050	051		
	391	405	406				

**VCR Setup Codes**

Admiral	066	075			
Adventura					
Aiwa	132				
Akai	269	275	336	351	352
	354				
Audio Dynamics	243	291			
Bell & Howell	357				
Broksonic	333	337	358	359	
Canon	086	362			
Citizen	033	172	247	331	
Colortyme	291				
Craig	172	363			
Curtis Mathes	086	112	247	291	
Daewoo	033	343	344	345	346
	347				
Daytron	345	365			
DBX	243	291			
Dynatech	132				
Emerson	033	086	132	326	327
	331	332	333	334	335
	336	337	338	339	340
	341	342			
Fisher	035	081	357	363	
Funai	132				
GE	086	172	174		
Go Video	348	349	350		
Goldstar (LG)	247	331			
Harman Kardon	291				
Hitachi	078	132			
Instant Replay	086				
JC Penney	078	086	172	238	291
JCL	086				
JVC	120	128	243	247	250
	253				
Kenwood	120	132	238	243	247
LG (Goldstar)	247	331			
Lloyd	132				
Logik	367				
LXI	132	331			
Magnavox (Philips)	086	132	183		
Marantz	086	172	183	238	247
	291				
Marta	331				
Matsui	368				
Memorex	132	238	331	363	369
	370				
Mitsubishi	255	258			
MTC	132	172			
Montgomery Ward	066	170	173	373	
Multi Tech	132	172	367		
NEC	120	238	243	291	374
	375				
Orion	322	326	327	328	329
	330				
Panasonic	112	117			

Pentax	078				
Philco	086	132	183		
Philips (Magnavox)	086	132	183		
Pioneer	078	120	263		
Portland	345				
ProScan	170	174			
Quartz	238	378			
Quasar	112				
RCA	078	132	141	170	172
	173	174			
Realistic	066	132	238	363	
Samsung	269	271	275	276	278
Sansui	120	367	379		
Sanyo	238	346	357	363	
Scott	033	332	367		
Sears	035	078	238	331	363
Sharp	066	075			
Shintom	367				
Signature 2000	066	170	173	373	
Sony	056	058	060		
Soundesign	132				
Sylvania	086	132	141	183	184
	322	324			
Symphonic	132				
Tandy	132	238			
Tashiko	331				
Tatung	243				
Teac	132	243			
Technics	086				
Teknika	132	331	359		
Thomas	132				
TMK	338				
Toshiba	033	035	078	081	
Totevision	172	331			
Unitech	172				
Vector Research	291				
Video Concepts	132	291			
Wards	066	132	172	247	331
XR-1000	367				
Yamaha	132	243	291		
Zenith	058	120	122	128	132

#### DVD Setup Codes

Apex Digital	193	227			
B144	146				
Denon	201	203			
DVD-Video	199				
ECA	156				
GE	150	152	156	175	
Goldstar (LG)	129	133	135	179	260
Gradiente	212	234			
Harmon Kardon	256	259			
Hitachi	149				
JVC	177	179			

Kenwood	228				
KLH	248	252			
LG (Goldstar)	129	133	135	179	260
Magnavox	138	143	146		
Marantz	270				
Mitsubishi	181	185			
NAD	246				
Onkyo	085	244			
Panasonic	115	118	121	124	
Pioneer	125	187	188		
Proceed	236				
Samsung	192	224	225		
Sharp	034	076	077	079	
Sony	040	059	061		
Thomson	156	237			
Toshiba	082	085	087	113	
Yamaha	121	124	210		
Zenith	129	133	135		

#### Audio Setup Codes

#### Compact Disc

ADC	318				
Akai	249	261			
Aiwa	176				
Carver	176				
Crown	154				
Denon	273				
Fisher	230	274			
Goldstar (LG)	308				
Harman Kardon	315				
JVC	297				
Kenwood	131	176	274	289	299
Krol	176				
LG (Goldstar)	308				
Magnavox (Philips)	037	084	119	296	
Mission	176				
Mitsubishi	245	249			
NAD	182	231	290		
Nakamichi	264	319			
NEC	235				
NSM	176				
Onkyo	300				
Panasonic	184	266			
Philips (Magnavox)	037	084	119	296	
Pioneer	116	127			
Quasar	184				
Radio Shack	186	190	266	279	289
RCA	295				
Sanyo	230	309			
SAE	176				
Scott	186				
Sharp	288	289			
Sony	067	292	293		
Soundesign	148	242	311	320	
STS	318				

Sylvania	084		
Teac	186		
Technics	184	208	317
Toshiba	290		
Yamaha	280		

### Receiver / Amplifier

Adcom	325		
Aiwa	301		
Akai	142		
Bose	302		
Carver	155	180	
Denon	262	307	
Everquest	136		
Fisher	063	180	
Fosgate Audionics	305		
Goldstar (LG)	036		
Harman Kardon	130	257	305 306
Hitachi	240		
Jensen	140		
JVC	114	241	
Kenwood	063	277	
LG (Goldstar)	036		
Luxman	281		
Magnavox	080		
Marantz	282	283	284 285
NAD	286		
Onkyo	126	171	304
Optimus	142	229	321
Panasonic	032	074	
Parasound	323		
Philips (Magnavox)	080		
Pioneer	123	137	251 298
Quasar	032		
Radio Shack	229	267	
Realistic	226	268	
Rotel	310		
Sansui	283		
Sanyo	195		
Scott	272		
Sharp	294		
Sherwood	229	267	
Sony	041	057	232 287
Soundesign	083	088	239 265
SSI	313		
Taekwang	142		
Teac	314	316	
Technics	032		
Wards	063		
Victor	114	241	
Yamaha	145	254	303
Zenith	036	083	088 239 265

controlled through your TV (except AUDIO volume which defaults to the AUDIO device).

The volume control options in each mode of the remote are:

CABLE	TV (default), Cable or Audio.
TV	TV (default), Cable or Audio.
VIDEO	TV (default), Cable or Audio.
DVD	TV (default), Cable or Audio.
AUDIO	Audio (default), Cable or TV.

### To control volume / mute through your cable set-top terminal in the remote's **Cable** mode...

1. Press [CABLE], then [SELECT] together - hold both buttons down until the [CABLE] button lights up.
2. Press [VOL ▲], then [CABLE] for cable volume. The [CABLE] button will blink and go out.

To return volume control back to your TV, repeat step 1. above, then press [VOL ▲], then [TV] in step 2.

## 9. Your Remote's SmartKeys™

Your remote has two (2) SmartKeys™ - [CABLE] and [TV], that operate in its cable mode. Each SmartKey™ can be programmed to transmit multiple functions.

### Programming and using the **[CABLE]** SmartKey™

The [CABLE] button normally turns on / off your cable set-top terminal. To program the [CABLE] button to transmit multiple pre-programmed functions, follow the steps below:

1. Press [DEVICE], then [CABLE] to select the cable mode of your remote.
2. Press [CABLE], then [MENU] together - hold both buttons down until the [CABLE] button lights up.
3. Press the option number below for the desired functions:

Option	Pre-Programmed to turn on...
[1]	Cable & TV - tune TV to Ch 3
[2]	Cable & TV - tune TV to Ch 2
[3]	Cable & TV - tune TV to Ch 4
[4]	Cable, TV & VCR - tune TV to Ch 3
[5]	Cable, TV & VCR - tune TV to Ch 2
[6]	Cable, TV & VCR - tune TV to Ch 4
[7]	Cable, TV, VCR & AUDIO - tune TV to Ch 3
[8]	Cable, TV, VCR & AUDIO - tune TV to Ch 2
[9]	Cable, TV, VCR & AUDIO - tune TV to Ch 4

## 8. Programming Volume Control

When you first program your remote, volume / mute are

[A]	Cable, TV, VCR, AUDIO & DVD - tunes TV to Ch 3
[B]	Cable, TV, VCR, AUDIO & DVD - tunes TV to Ch 2
[C]	Cable, TV, VCR, AUDIO & DVD - tunes TV to Ch 4
[0]	Cable box only (default)

4. The [CABLE] button will blink and go out, storing the selected option.

### Programming and using the **[TV]** SmartKey™

The [TV] button normally turns on / off your TV. To program the [TV] button to transmit multiple pre-programmed functions, follow the steps below:

1. Press [DEVICE], then [CABLE] to select the cable mode of your remote.
2. Press [TV], then [MENU] together - hold both buttons down until the [TV] button lights up.
3. Press the option number below for the desired functions:

Option	Pre-programmed to turn on...
[1]	TV - tune TV to Ch 3
[2]	TV - tune TV to Ch 2
[3]	TV - tune TV to Ch 4
[0]	TV only (default)

4. The [TV] button will blink and go out, storing the selected option.

**Remember:** When using any SmartKey™ to transmit a series of functions, be sure to keep your remote aimed at the devices to ensure all functions are received in their entirety.

## 10. Code Number Read Back

To identify the 3-digit setup codes stored under the Point and Press® programming method, follow these steps:

### To identify the TV setup code...

1. Press [TV], then [SELECT] together - hold both buttons down until [TV] illuminates.
2. Press [INFO]. The [TV] button will "blink back" the code numbers, with a 1-second interval between each digit of the code.

Example: For code "035", the remote will blink 10 times, then 3 times, then 5 times.

To identify the 3-digit VCR code, press [VCR], then [SELECT] in step 1, then press [INFO].

To identify the 3-digit DVD code, press [DVD], then [SELECT] in step 1, then press [INFO].

To identify the 3-digit AUDIO code, press [AUDIO], then [SELECT] in step 1, then press [INFO].

## 11. Mode Lock™

Your RT-U50 remote comes locked in its cable operating mode. While locked in its cable mode, it can control all cable set-top operations, as well as power on your TV, VCR, DVD and AUDIO devices.

**To operate more functions on your TV, VCR, DVD and AUDIO devices, you can unlock the remote as follows:**

1. Press [CABLE], then [MUTE] together - hold both buttons down until the [CABLE] button lights up.
2. Press [9, 9, 9]. The [CABLE] button will blink and go out.

**To lock your remote back in its cable operating mode...**

1. Press [CABLE], then [MUTE] together - hold both buttons down until the [CABLE] button lights up.
2. Press [0, 0, 0]. The [CABLE] button will blink and go out.

## 12. Resetting Your Remote Control

To reset your remote to its factory default settings...

1. Press [CABLE], then [SELECT] together - hold both buttons down until the [CABLE] button lights up.
2. Press [MENU], then [MENU] again.
3. [CABLE] button will blink and go out.

## 13. [TV / VCR INPUT] Button

This button changes the input source of your electronic devices. In the remote's Cable mode, this operates a Cable function on set-top boxes so equipped. In the remote's TV mode, this button changes the Input Source (Input 1, Input 2...) on your TV. In the remote's VCR mode, this button changes the Input Source (TV / VCR) on your VCR.

You can program this button so that in the remote's cable

mode, [TV / VCR INPUT] will operate the Input source on your TV, or the TV / VCR function on your VCR, eliminating the need to change modes on the remote.

**To program [TV / VCR INPUT] to operate your TV Input function in the remote's cable mode...**

1. Press [TV / VCR INPUT], then [SELECT] together until the [CABLE] power / mode button illuminates.
2. Press [TV]. The [CABLE] button will blink and go out.

**Note:** You can also press [VCR] in step 2 above to operate the TV / VCR function on your VCR. Or press [CABLE] to return to the normal Cable function on set-top terminals so equipped.

## 14. Additional Programming Information Troubleshooting, Terms

### Additional Programming Information

1. The power / mode buttons will illuminate in slow-rotation (i.e. CABLE → TV → VCR → DVD → AUDIO → CABLE...) while the remote is in a programming mode. In the absence of a keypress entry, the power / mode buttons will stop illuminating after 45-seconds and the remote will exit the programming mode.
2. When programming the remote control using the [CH▲] or [CH▼] buttons (Power function) in the Point and Press® Programming method, you may find a code that turns a device off but not back on. If this happens...
  - a. The correct code has not been found as you may have a code that operates some but not all of the functions of your device. Continue pressing [CH▲] until your device turns on.

OR

- b. You may have gone past the correct matching code. Try pressing [CH▼] one press at a time until you find a code that turns your device back on.
3. When using the Point and Press® Programming method, you can also program your remote using buttons other than the [CH▲] or [CH▼] as described in Section 5 as follows:

- a. [VOL▲] – to “go forward” through the codes using the “VOL▲” function on your devices.
- b. [VOL▼] – to “go back” through the codes using the “VOL▼” function on your devices.

**Note:** When you find the correct code, the volume of the device being programmed will increase or decrease.

c. [▲] - to “go forward” through the codes using the “Ch ▲” function on your devices.

d. [▼] - to “go back” through the codes using the “Ch ▼” function on your devices.

**Note:** When you find the correct code, the channel of the device being programmed will increase or decrease.

e. [▶] - to “go forward” through the codes using the “Fast Forward” function on your devices.

f. [▲] - to “go back” through the codes using the “Rewind” function on your devices.

**Note:** When you find the correct code, the fast-forward or rewind function of the device being programmed will be performed. To simplify programming using these buttons, insert a VHS tape or DVD in the device being programmed.

You can also program your remote using the other available functions as follows:

- a. Press [SELECT] then [MUTE] together until the power / mode buttons illuminate in slow-rotation (i.e. CABLE → TV → VCR → DVD → AUDIO → CABLE...).
  - b. In this order, carefully press [0], [0], [0], [CH▲] and [VOL▲]. The power / mode buttons illuminate in slow-rotation (i.e. CABLE → TV → VCR → DVD → AUDIO → CABLE...).
  - c. You can now program your remote using the [CH▲/▼], [Vol▲/▼],[FFWD], [REW], [PLAY], [STOP], [REC], [PAUSE], [LAST], [FAV], [0] - [9] buttons. When you find the correct code, the function associated with the selected button will be performed.
4. Your remote is equipped with 2 programming labels on the back of its case.
    - a. Point and Press® Programming - This will help you quickly program the remote without using codes.
    - b. Mode-Lock™ - Your model RT-U50 comes “locked” in its cable-operating mode. To operate more functions on your TV, VCR, DVD and AUDIO devices, you can unlock your remote using the simple instructions on the back of your remote or refer to Section 10.

### Troubleshooting / Tips

1. If the same button is pressed and held for 45-seconds, your remote control will turn itself off automatically. This extends the battery life should the remote become lodged

under or between heavy objects, for example sofa cushions.

2. If you have a TV that's operated by remote control, it is recommended that you plug it directly into a wall outlet instead of the cable set-top terminal.
3. If you have any questions concerning the brand, model or operation of your cable set-top terminal, contact your cable operator.
4. If the [DEVICE] button is not operating, the remote is in its locked mode. To set the remote to its unlocked mode, see Section 10.

sequence (i.e. CABLE → TV → VCR → DVD → AUDIO → CABLE...) repeated every 1 second. Slow-rotation illumination occurs when the remote is in the programming mode, waiting for the next entry on the keypad of the remote.

TV Output Channel - The channel your TV needs to be set on for proper Cable reception (most often TV channel 3, but may be TV channel 2 or 4). If you have any questions concerning your TV output channel, contact your cable operator. Or, with your cable set-top terminal turned on, try setting your TV to channel 2, 3 or 4 to obtain a clear picture.

Transport Functions - These are the [Stop], [Play], [Fwd], [Rew], [Pause] and [REC] buttons. In the remote control's Cable mode, these buttons operate your Cable set-top features. However, by using the VCR / VOD / DVD toggle button, they can be set to operate the same functions on your VCR or DVD player.

Video Devices - VCR or DVD players.

Rev. 09/2003  
© 2003, CONTEC CORPORATION

CheckMate® and Point and Press® are registered trademarks of Contec Corporation

Explorer® is a registered trademark of Scientific-Atlanta, Inc.

Voyager™ is a trademark of Pioneer New Media Technologies, Inc.

U.S. Patent # 6,507,306

## Frequently Used Terms

Audio Devices - Audio receivers, amplifiers, CD players that you can program your remote to operate.

Default Setting – How your remote is set when you receive it from your cable operator.

Electronic Components / Devices - The various electronic devices the remote is designed to operate. These include cable set-top terminals, TVs, VCRs, DVDs, receivers, amplifiers and CD players.

Fast-Rotation - The power / mode buttons will illuminate in a fast sequence (i.e. CABLE → TV → VCR → DVD → AUDIO → CABLE...) repeated every 1/3 second. Fast-rotation occurs when the remote is receiving keypresses to program it to your electronic devices.


Mode - The device the remote is set to operate (ex. Cable, TV, VCR, DVD, AUDIO). See Section 10 for locking and unlocking the mode of the remote control.

Program (Setup) – The process of teaching your remote control to operate your electronic devices.

Slow-Rotation - The power / mode buttons illuminate in a slow

## DEVICE

In "unlocked" mode setting illuminates device being operated. Press [DEVICE], then CABLE, TV, VCR, DVD, AUDIO to change device being operated

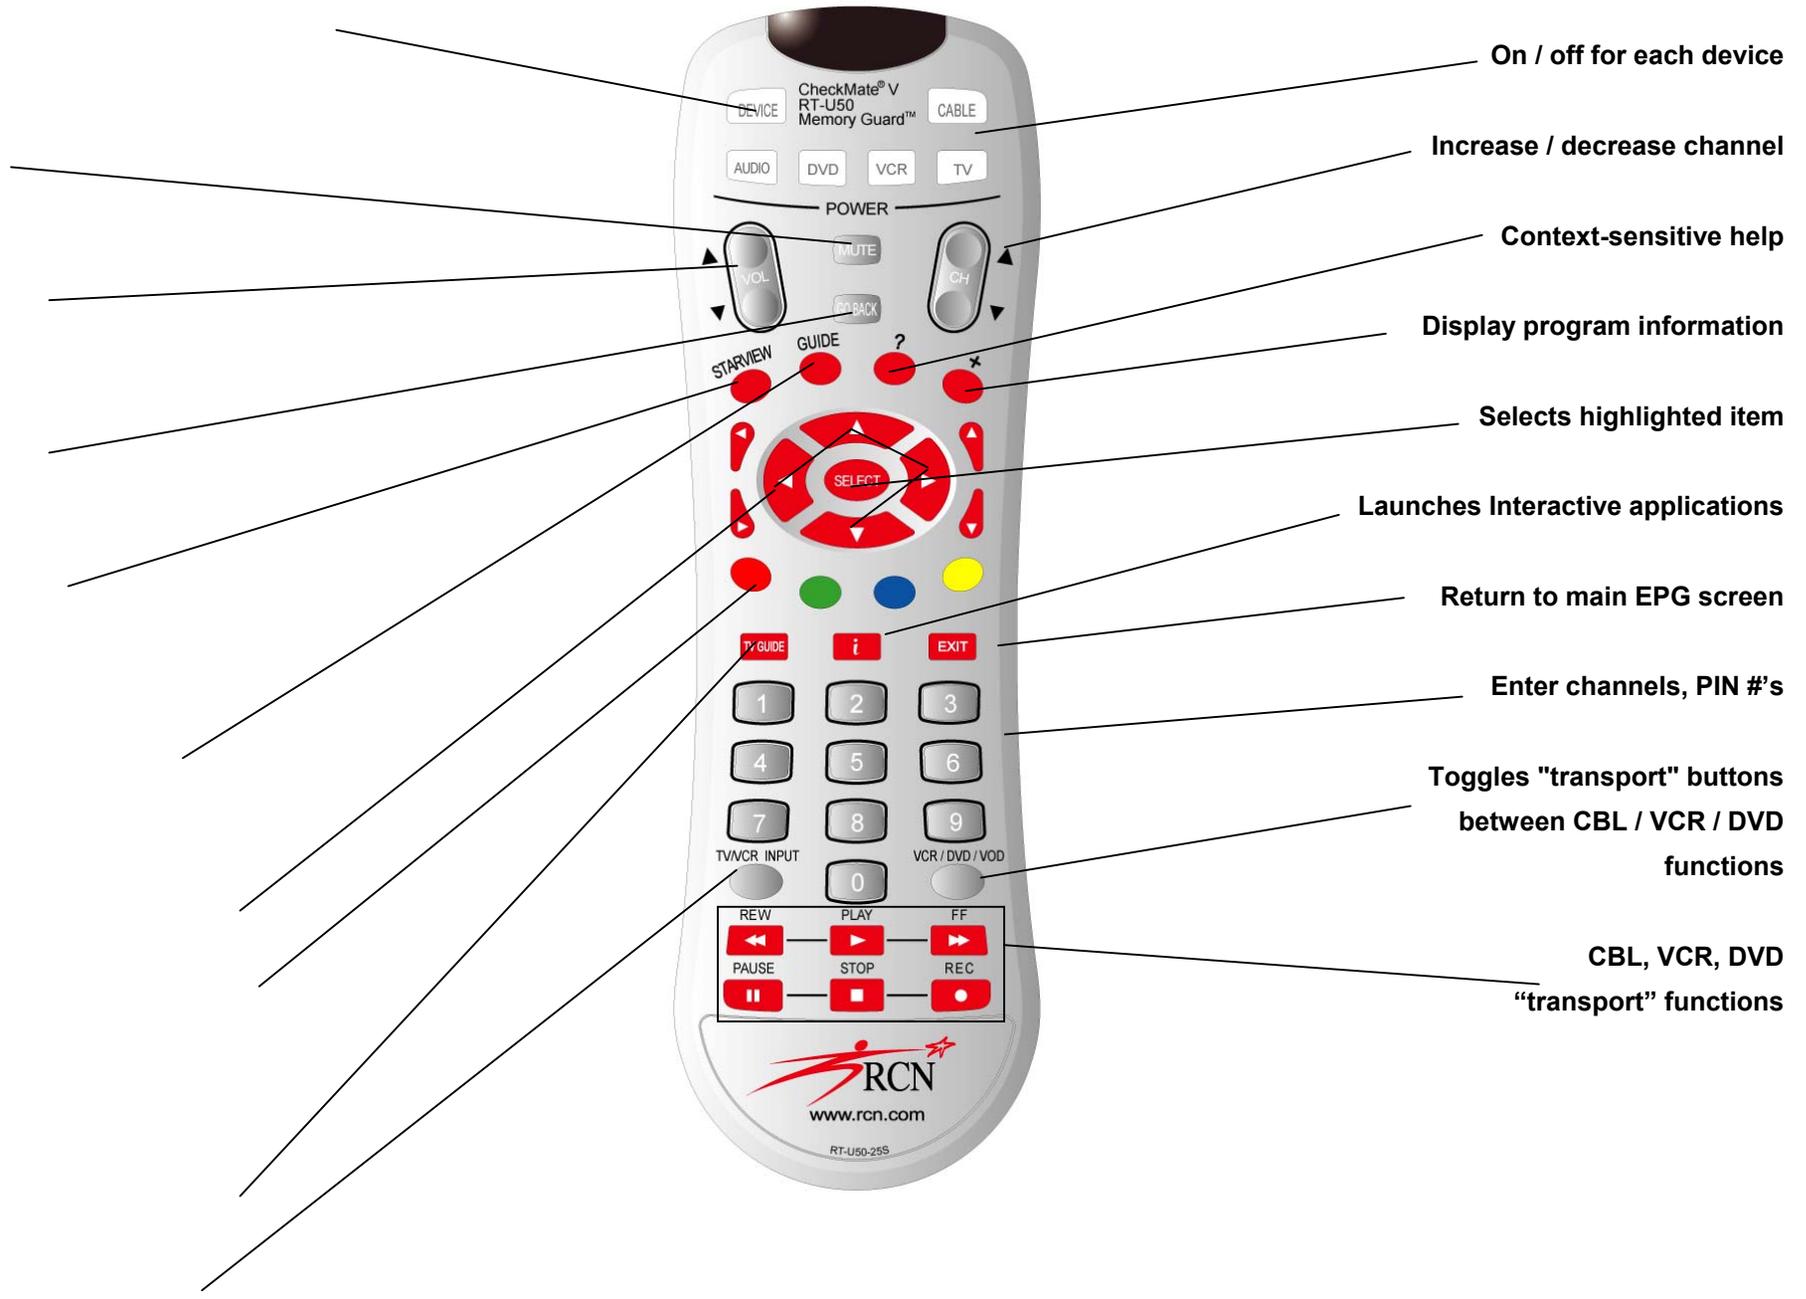

CheckMate® V  
RT-U50  
Memory Guard™

DEVICE CABLE

AUDIO DVD VCR TV

POWER

VOL MUTE CH

BACK

STARVIEW GUIDE ?

SELECT

TV GUIDE i EXIT

1 2 3

4 5 6

7 8 9

TV/VCR INPUT 0 VCR / DVD / VOD

REW PLAY FF  
PAUSE STOP REC

RCN  
www.rcn.com

RT-U50-25S

On / off for each device

Increase / decrease channel

Context-sensitive help

Display program information

Selects highlighted item

Launches Interactive applications

Return to main EPG screen

Enter channels, PIN #'s

Toggles "transport" buttons  
between CBL / VCR / DVD  
functions

CBL, VCR, DVD  
"transport" functions