
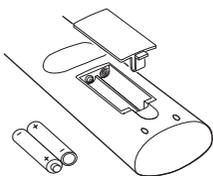


# TOSHIBA

## Simple at-a-glance reference of your remote control

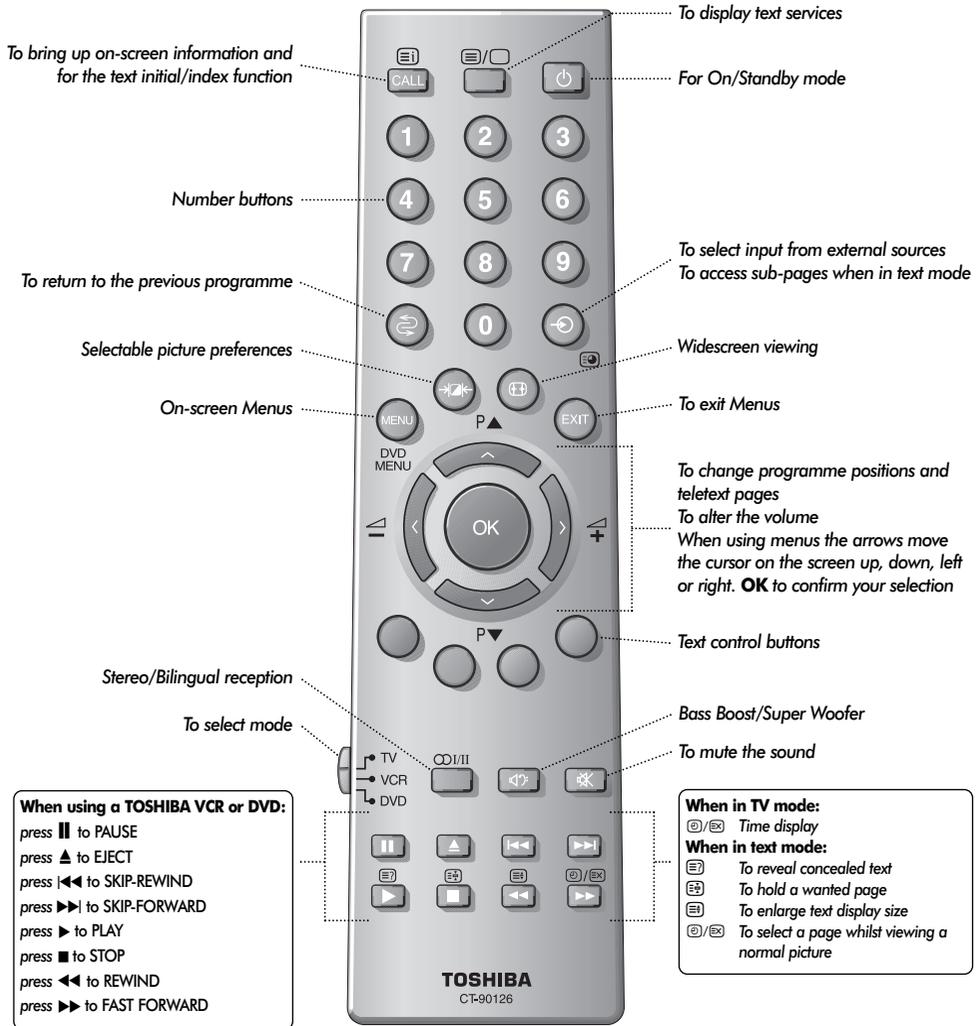

Remove the back cover to insert the batteries, make sure they are inserted the right way round.

Suitable battery types for this remote are:  
AAA, IEC R03 1.5V.




Printed on recycled paper.  
100% Chlorine free.

# TOSHIBA

## Auto Tune – LCD WL58 Series

- 1 Plug the aerial directly into the AERIAL INPUT on the television set. Ensure all other products are in standby before continuing.
- 2 Connect the television to the mains, the red LED will light up. The **Quick Setup** screen will appear, this may take a few moments. If the screen does not appear press the standby button on the remote control.
- 3 Using **<** or **>** select your language and press **OK**, then using **<** or **>** select your country and press **OK**.
- 4 To start **Auto tuning** press **OK**.

 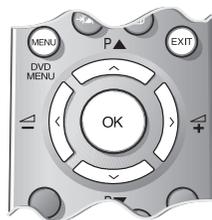


The search will begin for all available stations. The slide bar will move along the line as the search progresses.

***You must allow the television to complete the search.***



When the search is complete the TV will automatically return to programme position 1 and the **Programme sorting** screen will appear.



- 5 Press **EXIT**. Auto tuning is now complete. To select programmes press the number buttons.

In some areas of the UK duplicate TV stations are received, simply re-order using the Programme Sorting feature. For details of this and further operations plus equipment connections please refer to the TV Owner's Manual.