 


## EXPLANATION OF GRAPHIC SYMBOLS:

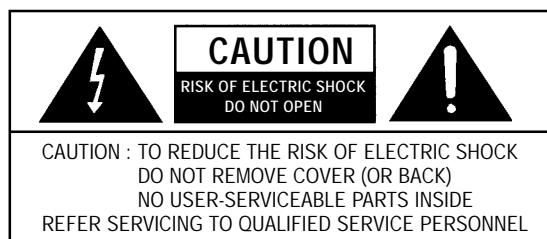

The lightning flash with the arrowhead within a triangle is intended to alert tell the user that parts inside the product are capable of producing an electric shock .

 


The exclamation point within a triangle is intended to alert the user that important operating and servicing instructions are being provided.

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

 


## **REMIRS** REMOTE CONTROL IR DISTRIBUTION BOX

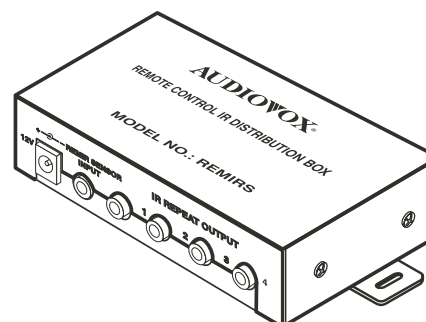

## OPERATING INSTRUCTION

FRONT VIEW

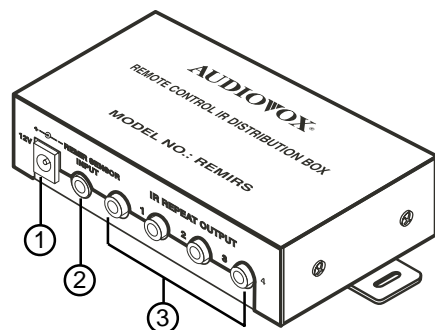

ITEM	FUNCTION
1	DC INPUT
2	REMIR SENSOR INPUT
3	REPEAT INFRARED SIGNAL OUTPUT

### Operation Instruction

1. Plug the DC Power cord into the REMIRS DC input jack (1).
2. Connect the DC power cord's other end to DC 12V and ground. (Black for "-" and Red for "+").
3. Insert the REMIR Sensor cable to the REMIR Sensor input jack (2).

4. Insert the IR Repeater cables into the **IR REPEATER OUTPUT** jack. Connect the other end of the cables to the desired sources (VCP, DVD, etc.)

