

FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



This Home Theater has earned the ENERGY STAR.

Ventilation

You must adequately ventilate the product. Make sure there is adequate space around the unit to provide proper air flow for ventilation. See diagram.

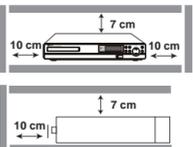

This product complies with DHHS Rules 21 CFR Subchapter J. Applicable at the date of manufacture.

For your safety

The AC power plug is polarized (one blade is wider than the other) and only fits into AC power outlets one way. If the plug won't go into the outlet completely, turn the plug over and try to insert it the other way. If it still won't fit, contact a qualified electrician to change the outlet, or use a different one. Do not attempt to bypass this safety feature.



Removing the power plug is the only way to completely remove power from your product. Make sure the power plug remains easily accessible.

Note:

This DVD player is designed and manufactured to respond to the Region Management Information. If the Region number of a DVD disc does not correspond to the Region number of this DVD player, this player cannot play the disc. The Region number for this DVD player is Region 1.

FCC Information



**WARNING:** TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

**CAUTION:** USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

**CAUTION:** DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE.

**WARNING:** MAINS PLUG IS USED AS DISCONNECT DEVICE AND IT SHOULD REMAIN READILY OPERABLE DURING INTENDED USE. IN ORDER TO DISCONNECT THE MAINS PLUG FROM MAINS COMPLETELY, THE MAINS PLUG SHOULD BE DISCONNECTED FROM THE MAINS SOCKET OUTLET COMPLETELY.

Service information

This product should be serviced only by those specially trained in appropriate servicing techniques.

Main plug is used as the disconnect device, it shall remain operable and should not be obstructed during intended use. To be completely disconnected the apparatus from supply mains, the main plug of the apparatus shall be disconnected from the mains socket outlet completely.

Caution

Invisible laser radiation when open. Avoid exposure to beam. Class 1 laser product. This system must be opened only by qualified technicians to prevent accidents caused by the laser beam.

THE LIGHTNING FLASH AND ARROWHEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF 'DANGEROUS VOLTAGE' INSIDE THE PRODUCT.

THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT.

**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

DVD copy protection

In accordance with the DVD standard, your DVD player is equipped with a Copy Protection system, which can be switched on and off by the DVD disc itself, in order to make any recording of the relevant DVD disc onto a videotape of very poor picture quality, or even impossible. This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home use only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Important Information

Important battery information

- Do not mix different types of batteries or new and old batteries. Do not use rechargeable batteries.
- In order to avoid any risk of explosion, observe the polarities indicated inside the battery compartment. Replace only with the type of batteries specified. Do not dispose of them in a fire or recharge them.
- If you are not using the remote control for a long period of time, remove the batteries.

Please respect the environment and prevailing regulations. Before you dispose of batteries or accumulators, ask your dealer whether they are subject to special recycling and if they will accept them for disposal.

Illustrations contained in this document are for representation only.



CAUTION

- This product utilizes a laser. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure. Do not open covers and do not repair yourself. Refer servicing to qualified personnel.
- To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. No objects filled with liquids, such as vases, should be placed on the apparatus.



This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la class B est conforme à la norme du NMB-003 du Canada

WARNING

- To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. No objects filled with liquids, such as vases, should be placed on the apparatus.

Important Safety Instructions

Please read and save for future reference

 
Some of the following information may not apply to your particular product; however, as with any electronic product, precautions should be observed during handling and use.

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Only use attachments/accessories specified by the manufacturer.



Portable Cart Warning

- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped



It is important to read this instruction book prior to using your new product for the first time.

Important Safety Instructions

Additional safety information


- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Always leave sufficient space around the product for ventilation. Do not place product in or on a bed, rug, in a bookcase or cabinet that may prevent air flow through vent openings.
- Do not place lighted candles, cigarettes, cigars, etc. on the product.
- Connect power cord only to AC power source as marked on the product.
- Care should be taken so that objects do not fall into the product.
- Do not attempt to disassemble the cabinet. This product does not contain customer serviceable components.

If your product operates on batteries, adhere to the following precautions:

- Any battery may leak electrolyte if mixed with a different battery type, if inserted incorrectly, or if all batteries are not replaced at the same time.
- Any battery may leak electrolyte or explode if disposed of in fire or an attempt is made to charge a battery not intended to be recharged.
- Discard leaky batteries immediately. Leaking batteries can cause skin burns or other personal injury. When discarding batteries, be sure to dispose of them in the proper manner, according to your state/provincial and local regulations.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like

Connections and Setup

Accessories provided

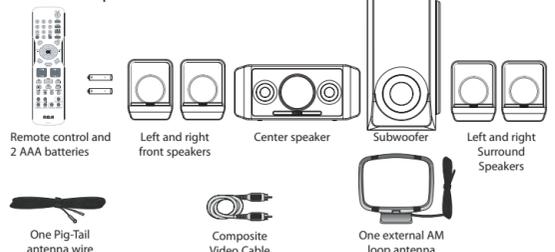

Things to consider before you connect

- Ensure that the mains supply in your house complies with that indicated on the identification sticker located on the back of your unit.
- Install your unit horizontally, away from any source of heat (fireplace) or appliances creating strong magnetic or electric fields. The components of this unit are sensitive to heat. The maximum ambient temperature should not exceed 35°C/95°F.
- Leave enough space around the unit to allow adequate ventilation: 10 cm/4 inches on either side and above the top, and 5 cm/2 inches at the rear.

- The humidity of the room should not exceed 75%. If you have to use the unit outdoors, do not expose it to rain or splashing water. The apparatus should not be exposed to dripping or splashing and no objects filled with liquids, such as vases, should be placed on the apparatus.
- Moving the unit from a cold place to a warm one can cause condensation on some components inside the unit. Let the condensation disappear on its own before turning the unit on again.
- Before moving the unit, make sure the disc tray is empty.

Connections and Setup


Better surround placement

Location  
If possible, place surround speakers to either side of the listening area, not behind it.

Height  
If space permits, install surround speakers 2-3 feet above viewers. This helps to minimize localization effects.

Aiming  
Aim surround speakers straight across the room, not down at viewers, to help create a more open, spacious surround sound field.

No adjacent walls  
Surround speakers can go on stands facing each other to approximate sidewall mounting (A), or to the sides or rear of the viewing area, aimed upwards; they can go right on the floor, or preferably, a few feet off the floor such as on end tables (B).

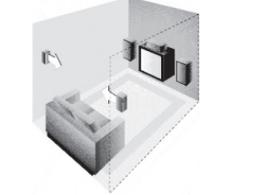


Test tone/Channel balance

Channel balance  
Your receiver is equipped with a test signal generator for balancing the channels. As the signal "travels" from channel to channel, adjust the level controls until each channel plays at the same loudness level. Level adjustment and surround channel level expectation  
Even though you adjust the surround channel to be as loud as the others on the test signal, on actual program material the surround channel is adjust the surround level; program producers use surround for subtle atmospherics and ambience, and only rarely for special effects.

Alternative Surround Placement

Rear wall  
If rear wall mounting is the only choice, aim the speakers at each other (A), towards the front (B) or towards the sidewalls (C, D). Experiment with placement until sounds seem to surround you, rather than come from behind you.


Overview of Controls : Front panel controls

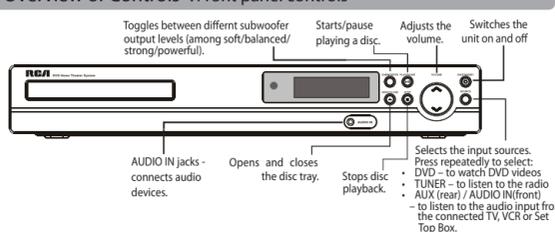

Connections and Setup

- Where the mains plug or an appliance coupler is used as a disconnect device, the disconnect device shall remain readily operable.
- Other important use and cleaning information at the end of the booklet.


Connecting the antennas

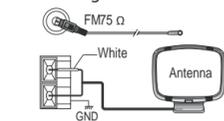

The AM and FM antennas connect to the AM and FM terminals on the system's back panel. They must be hooked up in order to receive clear reception.

- AM Loop Antenna
- Uncoil the AM Antenna wire.
  - Press down on the Antennas tab to open the terminal.
  - Make sure the white wire on the AM loop antenna is inserted into the AM loop terminal and the other wire is inserted into the ground loop terminal.

Connecting to your TV (VIDEO)

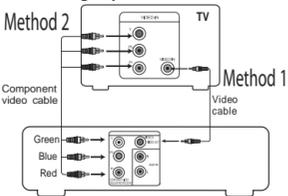


- Method 1
- Composite video jack (yellow)
  - The basic video jack is color-coded yellow.
  - Video cable (yellow) is supplied for the connection for good picture quality.
  - Connect the video OUT jack on the receiver to the IN jack on your TV so the video content goes from the receiver to the screen.

- Method 2  
Component video jacks (Pr, Pb, Y)
- The component video jacks are color-coded green, blue and red.
  - Additional component video cables (not supplied) are required to provide best picture quality. They are usually color-coded green, blue and red.
  - Connect the component video OUT jacks on the receiver to the component video IN jacks on your TV so the video content goes from the receiver to the screen.


- If your television is a high definition television, use the unit's progressive scan output to get the highest possible video resolution. Set the Progressive Scan option in the Video menu to On.
- If one of the devices is not working, check that all the cables have been inserted properly into the jacks.
- If your component has only one input for audio (mono), connect it to the left (white L/Mono) audio jack on the TV and don't connect the right audio part of the cable.

Connecting to your TV (via HDMI input)

HDMI stands for High Definition Multimedia Interface. HDMI transfers digital audio and uncompressed digital video on a single cable. Press the HDMI button on the remote control to change output signals as follows: 480p, 720p, 1080i and 1080p.

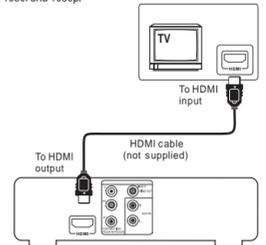

Overview of Controls

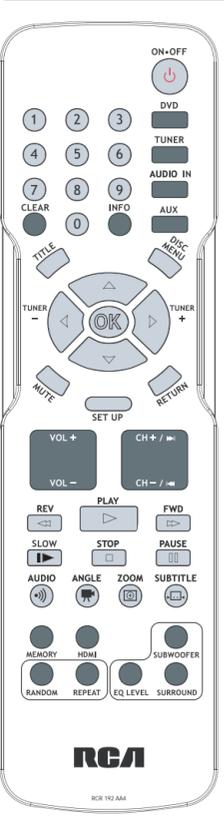

Remote functions in DVD/CD mode


- ON-OFF - Switches the unit on and off
- DVD - Selects the DVD mode
- TUNER - Selects the TUNER and selects between FM/AM
- AUDIO IN - Selects the FRONT AUDIO IN mode
- AUX - Selects the Auxiliary input (for listening to audio input from connected TV, VCR or SetTop Box)
- 0-9 - Number entry.
- CLEAR - Quits the current setting manually from the TV screen without saving change.
- INFO - Accesses the Info menu
- TITLE - Accesses the title menu of DVD discs
- DISC MENU - Accesses the disc menu during playback.
- OK - Confirms your selection.
- A V <> - To navigate through the menus. The left and right arrows also tune the radio frequency in the tuner mode.
- MUTE - Mutes and restores the sound.
- SETUP - Enters Setup menu
- RETURN - In DVD mode, returns to the previous menu.
- VOL +/- - Adjusts the sound volume.
- CH +/- - Directly accesses the next or previous chapter (DVD) or track (CD). Selects programmed stations in TUNER mode
- REV - Starts reverse accelerated play
- PLAY - Starts playing a disc
- FWD - Starts forward accelerated play
- SLOW - Select SLOW motion function.
- STOP - Stops playback.
- PAUSE - Freezes frame, accesses frame advance
- AUDIO - Accesses the audio function
- ANGLE - Accesses the camera angle function for DVD disc
- ZOOM - Accesses the Zoom function
- SUBTITLE - Selects the subtitle languages or turns subtitle off (if available)
- HDMI - Changes video output signals (480p, 720p, 1080i or 1080p)
- SUBWOOFER - Selects among subwoofer output levels (soft/balance/strong/powerful).

Connections and Setup

- Notes:
- Refer to the owner's manual of the connected TV as well
  - When using HDMI cable, do not connect to other analog video outputs.

Connecting AUDIO from external sources such as TV (Aux-In)

Using AUX jack  
Connect the AUX jacks from the unit to the AUDIO OUT jacks on VCR, TV, Set Top Box or other component.

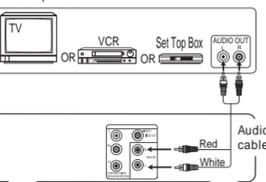


Using AUDIO IN jacks

- Connect the Ø3.5mm AUDIO IN jacks on the front panel of the unit to the headphone output on mp3 players.
- Notes:
- Ø3.5mm to Ø3.5mm audio cables (not included) are required.
  - Press either SOURCE on the main unit or AUDIO IN on the remote control to select AUDIO IN mode.
  - To listen to the audio input from the connected component, press SOURCE on the main unit or AUDIO IN on the remote control to select the AUDIO IN mode.

Suggest using Ø3.5mm AUDIO IN jack for mp3 player and AUX IN jacks for auxiliary equipment such as DVD, VCR or PC.

Connecting the speakers

Speaker wires are color-coded to match the terminals. Connect the speaker wire from the back of each speaker to the corresponding color terminal at the back of the unit. Press down the tab to open the terminal and insert the wire. Release the tab to lock wire in the terminal.

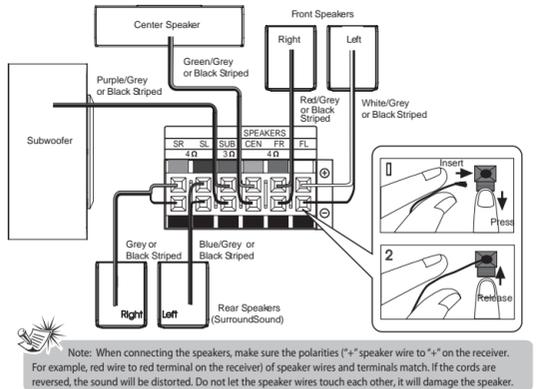

Note: When connecting the speakers, make sure the polarities ("+" speaker wire to "+" on the receiver. For example, red wire to red terminal on the receiver) of speaker wires and terminals match. If the cords are reversed, the sound will be distorted. Do not let the speaker wires touch each other, it will damage the speaker.

Overview of Controls

- RANDOM - Turns on/off random playback on CDDA/wma/jpeg discs.
- REPEAT - Accesses the repeat function.
- EQ. LEVEL - Toggles channels for different channel level settings. Adjusts the value using VOL +/-.
- SURROUND - Changes the Surround sound setting. In DVD mode, press the button to select between Dolby Digital and Stereo modes (Dolby ProLogic is available if the input is Dolby 2ch). In the AUX IN / AUDIO IN mode (analog input), press the button to select between Dolby ProLogic and STEREO modes. (Refer to details on Dolby Digital and Dolby ProLogic.)
- Remote control functions in tuner mode
- TUNER - Selects the TUNER and switch between FM/AM
- VOL +/- - Adjusts the sound volume.
- MUTE - Mutes and Restores the sound.
- TUNER +/- - Tunes down and up the radio frequencies
- MEMORY - Stores a station
- CH +/- - Selects programmed stations
- AUDIO - Selects between Stereo and Mono mode for Tuner (FM)

Using remote control to navigate through the on-screen menus

Use A V <> on the remote control to navigate through the on-screen displays (the DVD player's menu, the Info Display that appears during playback, or a screen menu).

Use A V <> on the remote to move through on-screen menus in the direction of the arrow button (e.g., to move right, press >). The arrow buttons are used to highlight an option. Once highlighted, press OK to select the option that is highlighted.

Playing Discs - Basic Functions

- Compatible discs
- DVD, DVD-R, DVD-RW, DVD+R, DVD+RW
  - CD, CD-R, CD-RW

- Compatible formats
- DVD, JPEG
  - CD, WMA

Regional coding

Your unit has been designed to process regional management information stored on DVD discs. The regional code for your unit is 1. Discs that have a different regional code will not play.

Operating the DVD receiver

- Turn on your television set.
- Press ON-OFF on the remote or ON/STANDBY located on the unit's front panel. Press DVD on the remote control.

- Press < on the front panel to open the disc tray.
- Place a disc onto the disc tray with the label side up.
- Press > again to close the disc tray.

Playback

- Switch the unit and the TV set on.
- After loading a disc, playback starts automatically, or the disc menu appears. If the disc menu appears, select the PLAY option to begin playback.
  - Press STOP to stop playback.

Accelerated play  
While the disc is playing, press REVERSE or FORWARD one or more times to vary the speed and direction of the accelerated play. Press PLAY to resume normal playback.

Pause  
While the disc is playing, press PAUSE once for freeze frame. Press PLAY to resume normal playback.

- Frame advance
- Press PAUSE twice. "Step" is displayed.
  - Each time you press PAUSE button, the picture advances one frame.
  - Press PLAY to resume normal playback.

Basic playback operations

- Variable slow motion
- Press SLOW button on the remote in play mode.
  - Each time the SLOW button is pressed, the speed of slow-motion playback changes in the following sequence:




- Press PLAY to resume normal playback.
- Changing chapter/track  
While the disc is playing, press the CH +/- button to go immediately to the next or previous chapter, or to the next or previous track.

Zoom

- While a disc is playing, press ZOOM until you reach the zoom size you want. The ZOOM button toggles through 2x, 3x, 4x and then zooms out to 1/2x, 1/3x and 1/4x, then returns to normal playback.
- Move from one area to another (pan) using the arrow buttons.
- To turn ZOOM off, press ZOOM until you get to the ZOOM OFF option.

Types of menus

- Disc menu - The appearance and contents of this menu varies according to the type of disc you have inserted. It is separate from the Setup menu.
- Info menu - The unit's Info menu appears at the top of the screen while the disc is playing. Press INFO on the remote to switch the Info menu on or off.
- Setup menu - Press SETUP to access this menu.

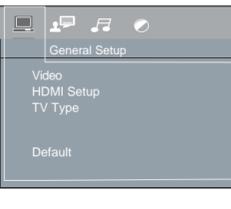


- Notes:
- When you press STOP, the unit stores the point where playback was interrupted. If you press PLAY again, playback resumes from this point. To stop playback completely or to start again from the beginning, press STOP twice. If the unit is left in STOP mode for more than 5 minutes without any user interaction, a screen saver is activated. At the end of 30 minutes without any user interaction, the unit switches off automatically.

The Info Menu

- Press INFO on the remote while a disc is playing to display the info menu. The first banner shows title, chapter, and time display information.
- Press INFO again for audio language, subtitles, and camera angle.
- Press INFO a third time for play mode, bookmark and sleep timer.
- Use the right/left arrow buttons on the remote to select an option.
- Use the up/down buttons to scroll through the options


Note:  
INVALID KEY will be displayed if the function you select is not available.

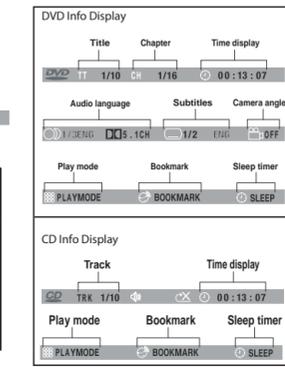

## The Info Menu

### Title/chapter (DVD)/track (audio CD)

 To directly access a title, chapter (DVD) or a track (audio CD), press INFO, press OK. Select the Title(TT), Track(TRK) or Chapter(CH) icon and enter a number directly with the numeric buttons. Press OK again to confirm.



### Time display

To access the Time Display, press INFO on the remote. Press the up/down buttons repeatedly to display: DVD: Chapter elapsed time, Chapter remaining time, Title elapsed time and Title remaining time.

Audio CD: Track elapsed time, track remaining time, disc elapsed time, disc remaining time.

To directly access a location on the disc which does not correspond to the start of a title or chapter, press INFO once and press OK, highlight the Time Display icon using the arrow buttons, then enter a time with the number buttons (hh:mm:ss) and press OK.



### Audio (DVD)

Some discs have several audio tracks used for different languages or different audio formats.

To change the language or audio format during playback:

- Press the INFO button twice.
- Use the left/right arrow buttons to select the Audio icon, or press the AUDIO button on the remote control.
- To change a language or an audio format with the up/down arrow buttons.

This option is only available if the disc offers dialog languages or audio formats. When you change the dialog language using the Info menu, it only changes the dialog language of the disc being played. When you eject the disc and switch off the unit, the language will revert to the one you selected in the Language Setup menu.

### Subtitles (DVD)

Subtitles are turned off by default. Turn on Subtitles as follows:
1. While the disc is playing, press INFO twice, then select the Subtitles icon using the left/right arrow buttons.
2. Select a language using the up/down arrow buttons.
3. To turn subtitles off, select the Off option or press SUBTITLE on the remote.

When you change the language of the subtitles using the Info menu, it only applies to the disc currently being played. When you eject the disc and switch off the unit, the subtitles will default to the subtitle language you selected in the Languages menu.


This function may not be available on all discs.

## WMA Files and jpeg Files

During the slide show you can use the left/right button to rotate the picture, the

up arrow button to rotate the image vertically, the down arrow button to rotate the image horizontally. Use the ZOOM button to magnify the picture. Use the CH- button to go back to the previous picture or the CH+ button to go to the next one, and the STOP button to interrupt the slide show and display the disc's contents.

- Press INFO to display the Info menu during playback.mp3/WMA file: with the disc playing, press INFO two times and select the Play Mode icon using the left/right arrow buttons. Press the up/down arrow button to select a play mode (Standard, Random, Program, Repeat Folder, Repeat Disc and Repeat Track), and press OK.
- When the unit has played all the files, the music or slide show stops and the disc's contents are displayed again.
- Press STOP to end playback.

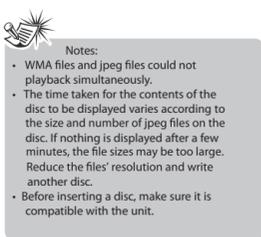


## The Setup Menu

There are four options in the main setup menu: General Setup, Language Setup, Audio Setup and Video Setup.

Press SETUP to bring up the main menu. Select one of the menu icons across the top of the screen using the left/right arrow buttons. The menu's options are displayed on the left side of the screen. Press the right arrow button to move to the option's choices on the right. Press SETUP if you want to exit setup.

### General Setup

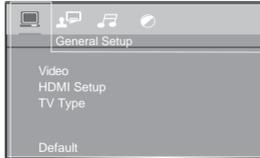

### Video

Progressive Function provides high quality pictures with less flickering. Turn on Progressive Scan if you used the Component Video jacks of the unit to connect a TV or monitor compatible with a progressive scan signal.

Select P-Scan YpBPr and press OK to activate Progressive Scan.

### HDMI Setup

This lets you select the resolution of the player's output according to the connected

- Supported HD JPEG mode: 480p, 720p, 1080i and 1080p.

### TV Type

 
 
 
 
Depending on the format of the DVD disc, you can choose the picture format (aspect ratio) best suited to the format of your TV screen:

- 4:3 PS: reproduces a 4:3 picture without distortion
- 4:3 LB: gives best reproduction of pictures recorded in this format (i.e. with horizontal bands at the top and bottom of the screen) or in 16:9.
- 16:9 (widescreen): reproduces 16:9 format films in full on a 16x9 screen.

## Additional Information

### Compatible Formats

In order to ensure playback, discs must conform with DVD or CD standards. This unit may not play some recordings or files due to differences in recording formats, software used and disc types.



CD-Rs written during a multisession recording can be played, provided that the session has ended before the disc is played (depending on the write software).

However, depending on the condition of the CD-writer, computer and the disc used, you may find that not all discs will play. When taking a CD-R disc, it is normal for the unit to take up to 60 seconds to recognize the disc before starting to play.

If the disc is not recognized after a period of 120 seconds, remove the disc, and insert it again

- Do not use its full capacity.
- CD-Rs should be preferably used instead of CD-RWs (rewritable CDs) as, in certain cases, CD-RW playback may be faulty.
- Use reliable, good-quality CD write software.
- Close all other applications on the computer to ensure reliable CD-R disc recording.

CD-R and CD-RW discs containing audio files in mp3 format. For CD-R WMA discs, please follow all the recommendations for CD-R, along with the comments below:

- Your mp3 files should be ISO 9660 or JOLIET format. ISO 9660 format and Joliet WMA files are compatible with Microsoft's DOS and Windows, as well as with Apple Mac.
- WMA filenames should not exceed 8 characters, and should end with the ".wma" extension. General name format: Title.wma
- When composing your title, use 10 characters or less, no spaces, and avoid the use of special characters including ( , / , \ = , + ).
- The total number of files on a disc should be less than 400.
- Use a decompression transfer rate of at least 128 kB/sec (kilobytes/second) when recording WMA files. Sound quality with WMA files basically depends on the rate of compression/ decompression you choose. Obtaining audio CD quality sound requires an analog/digital sampling rate, that is conversion to WMA format, of at least 128 kB/sec. Choosing higher rates, such as 192 kB/sec or more, only rarely produces even better sound quality. Conversely, files with sampling rates below 128 kB/sec will not play properly.

## The Info Menu

### Camera angle (DVD)

Some discs offer different camera angles for specific scenes.

- To change the camera angle, press the ANGLE button on the remote or press the INFO button twice and select the Camera angle icon with the left/right buttons.
- Choose the angle with the up/down arrow buttons.

If the disc was recorded using a single camera angle, this function is not available.

### Play mode (all discs except WMA/jpeg)

- While the disc is playing, press the INFO button twice for CD and three times for DVD.
- Select the Play Mode icon using the left/right arrow buttons.
- Use the up/down arrow buttons to select an option.

- DVD play modes: standard, program, A-B repeat, title repeat, chapter repeat. Program play mode is only available if a program list has been created (see below). Repeat mode is only available with discs that display elapsed time and remaining time. To repeat a sequence between points A and B, choose the A-B repeat option, and then follow the instructions for entering the two points.
- Audio CD play modes: standard, introscan, random, program, repeat A-B, repeat disc, repeat track.

- To stop repeat playback, select the Play Mode icon and use the up/down arrow buttons to choose the Standard option.

## The Setup Menu

### Default

This option allows you to return the unit's settings to the original factory settings. Any changes you have made to the unit's settings will be reverted back to the original settings

### IMPORTANT!

Once Progressive Scan has been activated, an image will only be visible on a progressive scan TV or monitor. If you choose this option and you don't have a progressive scan TV or monitor, you may get a picture with incorrect color or no color

### Language Setup

With this menu, you can set the language for unit menus, dialog, subtitles and the disc menus.

If you chose "English" during initial set-up, any menus generated by the disc are in English, and so is the language of the dialogs (if this language is available on the disc).



- Select the Language Setup icon in the main menu using the left/right arrow buttons.
- Select one of the options using the up/down arrow buttons.
- Press the right arrow button to move to the language choices.
- Use the up/down arrow buttons to highlight the language of your choice and press OK.

### Player Menu

Select the language of player menus and press OK.

### Audio

Select the dialog language using up/down arrow buttons and press OK.


To change the Audio language during playback, press INFO twice for DVD and use the left/right arrow buttons to highlight the Audio icon.

Press the up/down arrow buttons or AUDIO on the remote control to select audio language.

## Additional Information

- Do not record copyright-protected mp3 files. "Securized" files are encrypted and code protected to prevent illegal copying.

jpeg files
CD-R and CD-RW with jpeg files. Certain jpeg files, including progressive jpeg files, cannot be read by this unit.

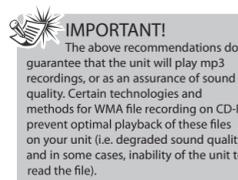

The total number of files and folders on the disc should be less than 650. Make sure that files have the ".jpg" extension. Files without the ".jpg" extension will not be able to be read by the unit --- even though the files are shown as jpeg images on your computer.

WMA files
CD-R and CD-RW discs containing audio files in WMA (Windows Media Audio) format. Please follow all the recommendations for CD-R above.

### Creating a Program List for Program Play Mode (Audio CDs and DVD discs)

To use program play mode, you must first create a program list.

- To create a program list, press the INFO button twice for CD and three times for DVD. Highlight the Play Mode option and press the up arrow to select the Program option.
- Press OK. The Program screen is displayed.
- The first spot in the list is highlighted. Use the number buttons on the remote to enter a track number. As for DVD discs: T stands for Title while C stands for Chapter. As for Audio CDs: T stands for Track.
- Use the arrow buttons to move to the next spot in the list. Enter the next track number.
- Continue entering tracks until you have completed your list.
- Highlight the Play option at the bottom of the screen and press OK or press PLAY to start playback. The program list will play in the order you programmed it.

### Creating a program List for program play mode (WMA CDs)

To use program play mode with a WMA disc, you must first create a program list. You can program up to 16 songs.

- To create a program list, press the INFO button twice. Highlight the Play Mode option and press the down arrow to select the Program option.
- Press OK. The Program screen is displayed.
- The F stands for Folder, and the T stands for Track. Highlight the space below the Folder indicator (F) and use the number buttons to enter the desired folder number.
- Use the arrow buttons to move to the space beneath the Track indicator (T). Use the number buttons to enter the track number.
- Repeat steps 3 and 4 until you have completed your list.
- Highlight the Play option at the bottom of the screen and press OK or press PLAY to start playback. The program list will play in the order you programmed it.

### Subtitles


Select the subtitle language using up/down arrow buttons and press OK.

To change the language of the subtitles during playback, press INFO twice for DVD and use the left/right arrow buttons to highlight the Subtitle icon. Press the up/down arrow buttons or the SUBTITLE button on the remote to select a subtitle language.

### Disc Menu

To change the language of the disc menus, select the language using the up/down arrow buttons and press OK.

The language you select will only be displayed if the disc is programmed with that language.

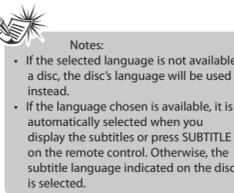

### Audio Setup

You can adapt your unit to other equipment and access specific functions with the Audio Setup menu.

- Select the Audio Setup icon in the main menu using the left/right arrow buttons.
- Select an option using the up/down arrow buttons. Press the right arrow to move to the option's choices.



Slide Time
The Slide Time option lets you select the amount of time a picture is displayed in a slide show. The choices are 5 seconds, 10 seconds, or 15 seconds.

## The Info Menu

To stop program play, press STOP or select Standard from the Play Mode option in the INFO display.

If you want to cancel the list, repeat steps 1 and 2 to select CLEAR and press OK.

### Sleep

- Press INFO twice for CD and three times for DVD. Select Sleep icon with the left/right arrow buttons.
- Select one of the available options using the OK button : Off, 30, 60, 90 or 120 minutes.



 
### Introscan (CD)

This option plays the first ten seconds of each track on a CD.

- Press the INFO button twice, then select the Playmode icon with the left/right arrow buttons.
- Press the up/down arrow buttons to select the INTRO option and press OK to start IntroScan.
- Press STOP to stop Introscan, and press PLAY to resume normal playback.

### Bookmark (DVD and audio CD)

- Press INFO twice for CD and three times for DVD. Select the Bookmark icon with the left/right buttons, and press OK. A menu is displayed with five bookmarks.
- The first bookmark space is highlighted. Press OK to set the bookmark. The book mark is saved and is indicated by the number 1. You can set up to five bookmarks on a disc.
- To start playback from a bookmark, press the PLAY button on the remote.
- To delete a bookmark, highlight it and press CLEAR.



## The Setup Menu

### Night Mode

You can use this function to control the different sound levels via dynamic compression. It improves the quality of the sound track at a low volume, and quiets the loudest sounds. You can choose between Quiet, Moderate or Off.

### Distance

Basic settings have been preset for the speakers included with your unit. However, to suit the acoustic conditions in your listening room and to make the sound more effective, you may need to delay the signal coming from some of the speakers. Channel delay compensates for center or surround speakers that are closer to the listening position than the front speakers.

- Highlight a distance option using the up/down arrow buttons.
  - Center (CT Distance)
  - Surround (SL/SR Distance)
- Press the right arrow button to move to the default distance.
- Press the up/down arrow buttons to adjust the distance.

### Test Tone

This function is used to test the speaker setting. A short noise comes successively from each speaker.

### Video Setup

- Select the Video icon in the main menu using the left/right arrow buttons.
- Select a menu option using the up/down arrow buttons and press OK.



Slide Time
The Slide Time option lets you select the amount of time a picture is displayed in a slide show. The choices are 5 seconds, 10 seconds, or 15 seconds.

## Additional Information

### Technical Specifications:

#### Amplifier Section:

RMS Output Power: Dolby Digital Mode with 10% Total Harmonic Distortion
Rear Channels: 32 Watts/channel (1kHz, 40)
Front and Center Channel: 32 Watts per channel (1kHz, 40)
Subwoofer Channel: 40 Watts (100Hz, 30)
Total RMS Output Power, Dolby Digital mode: 200 Watts

Muting Attenuation: 70 dB
Frequency Response: 200Hz ~ 20KHz/3dB, 1KHz ref.
Subwoofer Frequency Response: 20Hz ~ 200Hz/-3dB, 100Hz ref.
Signal to Noise Ratio: 70 dB (Dolby Digital)

You can use this mode with any stereo program source (such as VCR/TV) to enjoy multi-channel sound experience.

Dolby Digital
The Dolby Digital mode lets you enjoy full digital surround from software processed in the Dolby Digital format. Dolby Digital provides better sound quality and a more powerful presence than conventional Dolby Surround. This unit is equipped with Dolby Digital 5.1-channel so that you can enjoy enhanced full digital surround sound.

Different from Dolby Pro Logic: in that only four channels (Front Left, Front Right, Centre and Rear ) are used, the new system provides stereo separation of the rear speakers (Rear-Right, Rear-Left ). Adding the to the 5 channels the subwoofer channel for bass sounds (counted as 0.1 channel) results in 5.1 channels (or 6 Channels) that bring you the most sophisticated Dolby Digital sound enjoyment.

During a period of one year from the effective warranty date, **AVC** will provide, when needed, service labor to repair a manufacturing defect at its designated Service Center. To obtain warranty service in the United States, you must first call our Customer Support Center at **1-800-506-5746 or 1-877-252-6873**, during the hours listed in the box on the right. The determination of service will be made by **AVC** Customer Support. **PLEASE DONOT RETURN YOUR UNIT TO AVC WITHOUT PRIOR AUTHORIZATION.** New or remanufactured replacements for defective parts or products will be used for repairs by **AVC** at its designated Service Center for one year from the effective warranty date. Such replacement parts or products are warranted for an additional one year from the date of repair or replacement. The Customer will be required to ship the unit to the Service Center indicated at the time Customer Support is contacted to make the necessary repairs. The customer is responsible for all transportation charges to the service facility.

**Packaging and Shipping Instruction**
When you send the product to the **AVC** service facility you must use the original carton box and packing material or an equivalent as designated by **AVC**

## Radio

The unit has a built-in tuner that allows for FM radio function. The AM loop antenna allows for AM radio function.

### Manual tuning

- Connect the FM antenna and the AM loop antenna at the back of the unit. Rotate the AM loop for better reception.
- Press TUNER.
- Tune a station by pressing TUNER+/- repeatedly until the desired station is found. Alternatively, you can press and hold the same buttons down for about one second to activate the automatic search function. In this mode the unit will automatically tune frequencies until it finds a station.
- Repeat step 3 to tune to another radio station.
- Press TUNER to toggle between FM and AM.

### Storing radio stations

The unit can store up to 30 radio stations in its memory. You can enter every single radio station yourself or the unit can store all available radio stations automatically in ascending order.

### Automatic preset programming

- Press TUNER to enter the Tuner mode.
- Press and hold TUNER for two seconds to start automatic preset programming.
- Radio frequencies will be browsed and radio stations stored automatically. When all the available radio stations are stored or all 30 memory locations are full, the auto preset programming function will stop.

### Manual preset

- Tune to a radio station (see "Manual tuning" for details).
- Press MEMORY. While the Program Preset number is still flashing, input your desired preset number using the numeric buttons, then press MEMORY to store it.

### Retrieving preset stations

- Press TUNER to enter the Tuner mode.
- Press CH +/- to search up or down for the preset stations or directly press the numeric buttons.

## Additional Information

### Troubleshooting

The unit does not switch on.

- Make sure it is plugged in.
- Press the ON-OFF button on the remote control or the ON/STANDBY button on the front of the unit.

The device switches off spontaneously.

- The devices switches off automatically when it is in STOP mode for more than 30 minutes without any user intervention. Switch it on again.
- It might be impossible to read the disc.
- Insert the disc with the printed side facing up.
- Check that the disc can actually be played by this device .
- Check that the disc's regional code matches the unit's regional code. This unit's regional code is 1 .
- Clean the disc.

There is no picture.

- Check you have switched on the TV set.
- Check the connections
- Select the AV input assigned to the unit on the TV.
- Replace the HDMI cable with a better one. Bad HDMI cable can cause data lost.
- Press HDMI key on remote handset several times to toggle among different HD OUTPUT.

The picture is of poor quality (with snow or lines).

- Check the connections
- There is no sound or the sound is of poor quality.
- Check the connections
- Make sure the speakers are connected.
- Make sure the MUTE function is not on.

No surround sound.

- Check the speaker configuration in the Setup menu (See Positioning speaker or Audio Setup).

## Radio



TV, VCR or Set Top Box can be connected to AUX input jacks at the back of the unit or AUX IN at the front panel so that sound from the auxiliary component comes into the unit and out through the speakers.

Refer to "Connecting to external audio sources " for details on connecting the auxiliary components to the unit.

## Selecting AUDIO IN/AUX IN mode

Press either SOURCE on the main unit or AUX / AUDIO IN on the remote control to select AUX IN or AUDIO IN mode

### Sound output in Aux-In mode

- You may change the surround setting by pressing SURROUND to select between Dolby Prologic and Stereo modes.
- If the auxiliary audio signal is mono, there is no output from speakers in either Dolby Prologic or Stereo mode.

### Connecting auxiliary components

Press either SOURCE on the main unit or AUX / AUDIO IN on the remote control to select AUX IN or AUDIO IN mode

3. Select a folder using the up/down arrow buttons on the remote, then press the left arrow button to move to the music/picture icons at the bottom of the screen. Use the left/right arrow buttons to select either music or picture mode.

4. Press the up arrow button to move to the file list on the right side of the screen. Use the up/down arrow buttons to select a file. Press OK or PLAY to start playback.

5. WMA file: the unit begins playing the selected file, then all the files and subfolders contained in the same folder. The unit then plays the contents of the folders at the same level as the folder containing the file selected at the start.

6. jpeg file: the unit starts the slide show with the jpeg file you have selected, then displays all the jpeg files in the same folder, then all the jpeg files in the subfolders located in the same folder. You can set the amount of time a picture remains on the screen in the General Setup menu.

7. This unit is for domestic use only and must not be used for industrial purposes.

8. Total or partial copying of recordings protected by copyright legislation, without the explicit permission of the holder of the rights, contravenes current legislation. Copying or downloading music files for sale or any other business purpose constitutes or could constitute a violation of copyright law.

9. Cleaning

10. Use a soft, dry, clean cloth. Regularly dust the vents at the back or sides.

11. Using solvents, abrasive or alcohol-based products risks damaging the unit.

12. If an object or liquid enters inside the unit, unplug it immediately and have it checked by an authorized servicer or service center.

13. Handling and caring for discs

14. Handle your discs with care. Hold the disc with your fingers at the edges or through the hole.

15. Insert the disc with the label facing up (for a single-sided disc).

16. Place the disc properly into the tray in the allotted holder.

17. Use a soft cloth to clean discs if necessary, always wiping from the centre to the edge.

18. Always put discs back in their cases after use and store in a vertical position.

19. Do not close the tray with two discs in it or with a disc not sitting correctly in the holder.

20. Do not play cracked, chipped or warped discs nor try to repair them with adhesive tape or glue.

21. Do not write on a disc.

22. Do not move the unit when a disc is being played.

23. Do not scratch discs or store them in places exposed to direct sunlight, high humidity or high temperatures.

24. Do not use aerosol cleaners, benzene, anti-static liquids or any other solvent for cleaning discs. When cleaning, wipe gently with a soft damp (water only) cloth from the centre to the edge