

Universal Remote Control

TV VCR SAT

SBC RU 430

Instructions for Use

Mode d'emploi

Bedienungsanleitung

Gebruiksaanwijzing

Instrucciones de manejo

Manual de utilização

Istruzioni per l'uso

Οδηγίες χρήσεως

Bruksanvisning

Brugsanvisning

Bruksanvisning

Käyttöohje

Code list



Let's make things better.



PHILIPS


You just made a great choice by buying this Philips universal remote control! It takes the place of as many as three separate remote controls and can operate the most-used functions of almost any brand of TV, VCR, satellite tuner and cable decoder.

Best of all, it's quick to setup and easy to use! Here's how...

AT A GLANCE

Once you've installed the batteries, this remote is ready to work with any Philips TV, VCR or satellite tuner. Simply press the mode selector as indicated below - for the Philips device you wish to operate, and press  to test. For other brands of equipment, it needs to be set up first-see **Getting Started**.

Choose TV, VCR, SAT. The remote has 3 operating modes: TV, VCR, and satellite tuner (SAT). The green indicator LEDs show which mode you're in. To switch between modes, press  once to activate, then press it again to advance to the next mode.

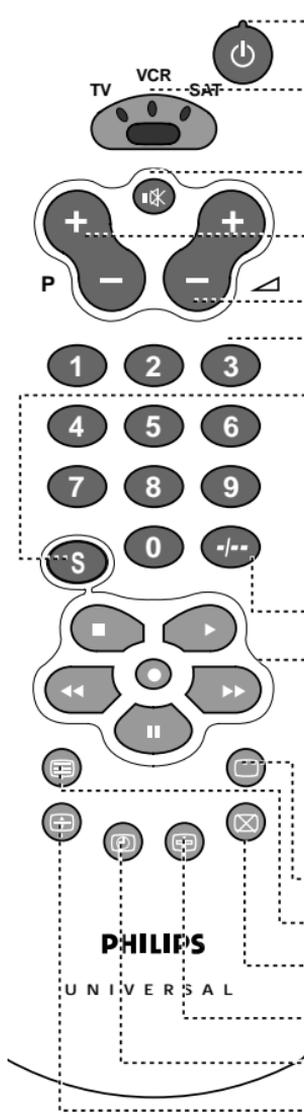

Power switches TV/VCR/SAT on and off

Mode Selector selects whether you are operating the TV, VCR, SAT

Mute switches TV sound on and off

Channel Up/Down changes to next/previous channel

Volume Up/Down controls TV volume

Keypad for direct channel selection and other functions

Shift: hold this key while pressing other keys to access additional functions (if available on your equipment).
 For instance: - Shift - P+ : brightness+/menu up
 - Shift - P- : brightness-/menu down
 - Shift - vol+ : colour+/menu right
 - Shift - vol- : colour-/menu left
 Try the other shift keys on your equipment to discover which functions are available

1/2 Digits switches between one and two-digit channel selection and display

for TV FastText

red		for VCR
green		Rewind
yellow		Stop
blue		Play
		Forward
		Pause
		Record

Teletext Off switches Teletext off

Teletext On switches Teletext on

Teletext Cancel toggles between normal and teletext screen


Teletext Hold keeps the current Teletext page on screen

Teletext Time switches Clock on and off

Teletext Enlarge enlarges the Teletext display

Try it out! The easiest way to find out how your new remote works, is to try pressing the keys and see what happens - don't worry, you won't damage anything! Most of the keys work just like on your original remote control. Of course, if your TV or VCR does not offer a specific function, pressing that key will have no effect.

DON'T FORGET THE BATTERIES!

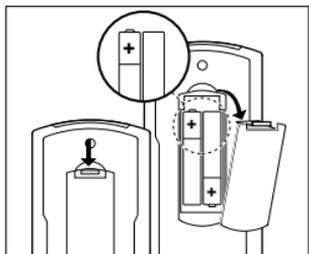

You'll need two 1.5V batteries, type R03, UM4 or AAA only. Put them in like this.

Remember to replace the batteries at least once a year. Don't leave the batteries out for longer than one hour, otherwise you will need to set the remote up again.

GETTING STARTED

This remote is ready to work with any Philips TV, VCR or satellite tuner. For other brands of equipment, it needs to be set up first. That only takes a couple of seconds, thanks to Philips' Simple System Setup!

Before you start, make sure you're in the right mode for the equipment you're setting up (TV, VCR, or SAT). The green indicator LEDs show which mode is selected. To switch between modes, press  once to activate, then press it again to advance to the next mode. Also, make sure the equipment is switched on. Sit right in front of it.

If you know the brand of your equipment, look at the code list at the back of this booklet, and find the first 3-digit code for your equipment.

- ① Press and hold  and  at the same time until the green LED lights up. (Release the keys, the green LED should stay on)
- ② Enter the 3-digit code using the keypad. The green LED blinks twice.

That's it! Now, press a few keys on the remote to check that the equipment responds correctly. If it doesn't, try again using the next code in the list. In the rare instance that none of the codes work, follow the instructions in the next section.

Tip: Make a note of the code inside the battery case, and in the back of this booklet in case you ever need to setup again.

If you don't know the brand of your equipment or if you can not find it in the codelist, setup still won't take long. Philips' patented Handsfree autosearch tests all the codes one after another and finds the right one for you! The search time averages about 90 seconds. (Maximum search time is 5 minutes for TV; 2 minutes for VCR and 4 minutes for SAT.)

Make sure the TV, VCR etc. is switched on. If it's a VCR, insert a tape and start playback. You will know when the correct code has been found because the equipment will switch off or the VCR will stop playback.

- ① Press and hold  and  at the same time until the green LED lights up.
- ② Press  to start the search. Each time the green LED blinks, another code is sent. When the right code is found, the equipment switches off (the VCR will stop playing).

- ③ Immediately press  to stop the search.

If you missed the correct code because the search went too far, switch the equipment back on, then press  (down) to send the previous code again. Press  (down) repeatedly until the equipment switches off again.

- ④ Once you've found the correct code, press  to lock it in memory. The green LED blinks twice.

That's it! Now, switch the equipment manually on again, then press a few keys on the remote to check that the equipment responds correctly. In the rare instance that it doesn't, try again from step 1 to find a better code.

Note that code! To save time if you ever need to setup again, make a note of the correct code inside the battery case and in the back of this booklet. In case you have forgotten to note the code you can still 'read out' the code from the remote. Here's how:

- ① Make sure you've selected the right mode (with ). Then press and release  and  at the same time; the green LED lights up.
- ② Press . The green LED goes out.
- ③ Press  and count the number of times the green LED blinks. This is the first digit of the 3-digit code. (No blinks means the digit is zero.)
Press  and count the number of blinks for the second digit.
Press  and count the number of blinks for the third digit.

ADVANCED TIPS AND TRICKS

TO CHANGE SAT MODE TO CONTROL A SECOND TV

The SAT mode on this remote is used to control additional equipment. It is factory preset to control a satellite receiver, but you can change it to control a second TV, for example.

Before you start, press  to select SAT, and make sure the second TV is switched on.

- ① Press and hold  and  at the same time -for about 3 seconds- until the green LED lights up.
- ② On the keypad, enter 992.
- ③ Press  to select TV mode, then press any key except  once more. That's it!

Don't forget you now need to setup the remote to operate this second TV - see **Getting started**.

TO CONTROL THE SECOND TV'S VOLUME

If you have installed a second TV under SAT mode, you can also control that TV's volume when you are in VCR mode.

Before you start, press  to select VCR.

- ① Press and hold  and  at the same time until the green LED lights up (about 3 seconds).

- ② On the keypad, enter 993.
- ③ Press  to select SAT.
- ④ Press any key (except ). That's it!

Now, when you're in VCR mode,  (up/down) control the volume of the second (SAT) TV.

NEED HELP?

If you have questions about your remote or if you are missing certain functions on your remote, call our free-phone helpline!

Before you call, please read the manual carefully. Most questions will clear themselves. If you don't find an answer to your questions, make a note of your equipment in the table below - this makes it easier for the operators to help you quickly. Look for model numbers in the equipment instruction manual, or on the back of the equipment. Be in front of the equipment, this way our operators can help you verify the functionality of your remote.

In the UK. call 0800 968 118. In Ireland, call 1 800 553 136.

The model number of your Philips universal remote control is:

SBC RU430

Date of purchase:

___/___/___

Day/month/year

Equipment	Brand	Model nr.	Used code
TV			
VCR			
SAT			

As you add new components to your home entertainment system, Philips again offers a universal remote control that will fit your new needs. Look for below unique full range of universal remote controls from Philips at a retailer near you.

- RU 110* : Universal easy TV zapper
- RU 410* : 1 in 1 Universal TV Remote with digits and TXT
- RU 422* : 2 in 1 Universal Remote Control for TV and VCR
- RU 440* : 4 in 1 Universal Remote Control for TV, VCR, SAT/Cable and AUX for audio
- RU 455* : 4 in 1 Universal Remote Control for TV, VCR, SAT/Cable and AUX for second device
- RU 460* : 6 in 1 Universal Remote Control- Pre-programmed and Learnable

Another very nice product from Philips is the Philips SBC LI510 Remote Control Extender Set, the wireless extension of your infra-red (IR) remote control! This system allows you to operate every IR driven equipment (i.e. Sat-receivers, VCRs or Hi-Fi-sets) from anywhere in or around the house.

- A**
- Acura036
 - Admiral114, 190
 - Adyson244
 - AGB543
 - Akai235, 388
 - Akura245, 396
 - Alba064, 245, 398, 036, 262
 - Allorga321
 - Amplivision244, 427
 - Amstrad398, 036, 381,
.....389, 396, 439, 460, 543
 - Anitech036
 - Arcam243, 244
 - ASA114
 - Asuka245
 - Atlantic233
 - Audiosonic064, 136
 - Autovox233, 114, 363
- B**
- Baird370, 584
 - Bang & Olufsen114
 - Barco407
 - Basic Line245, 036
 - Baur064, 037, 092,
.....376, 388, 532, 539, 562
 - Beko397, 513
 - Beon064
 - Binatone244
 - Blaupunkt218, 222, 227,
.....354, 355, 562
 - Blue Sky245
 - Blue Star309
 - Bondstec274
 - Boots244
 - BPL309
 - Brandt136, 223, 360, 362
 - Brionvega114
 - Britannia243
 - Bruns114
 - BSR321
 - BTC245
 - Bush064, 245, 401, 398,
.....321, 036, 309, 376, 382, 546
- C**
- Cascade036
 - Cathay064
 - Centurion064
 - Century114
 - CGE274, 333
 - Cimline036
 - Clarivox064
 - Clatronic397, 274
 - Clayton412
 - Condor397, 347
 - Contec243, 036
 - Continental Edison223, 360, 426
 - Crosley114
 - Crown064, 397, 445, 036, 606
 - Crystal458
 - CS Electronics243
 - CTC274
 - Cybertron245
- D**
- Daewoo064, 401, 036, 526
 - Dainichi245, 242
 - Dansai064
 - Dayton036
 - De Graaf235, 575
 - Decca064, 099, 543
 - Dixi064, 036
 - Doric033
 - Dual363, 379, 546
 - Dual Tec244
 - Dumont097, 114
- E**
- Elbe286
 - Elin064, 575
 - Elite245, 347
 - Elta036
 - Emerson114, 388
 - Erres064, 039
 - Europhon543
 - Expert233
- F**
- Ferguson064, 136, 220,
.....265, 314, 362, 370
 - Fidelity243, 220, 388
 - Finlandia235, 373, 386
 - Finlux064, 099, 097,
.....114, 132, 373, 438, 543
 - Firstline243, 244, 321,
.....036, 348, 274
 - Fisher397, 244, 235, 330
 - Flint482
 - Forgestone220
 - Formenti064, 347, 092, 114
 - Frontech291, 458, 475, 190, 274
 - Fujitsu099, 233

Funai.....321, 291, 330

G

GEC.....064, 244, 099, 543, 584

Geloso.....036

Genexxa.....245, 190

GoldStar.....064, 244, 136, 317

Goodmans.....064, 244, 401, 398,
.....099, 262, 344, 370, 526

Gorenje.....397

GPM.....245

Graetz.....190, 388, 584

Granada.....064, 244, 099, 235,
.....366, 386, 543

Grandin.....309

Grundig.....097, 218, 222, 514, 562

H

Hanseatic.....064, 347, 388

Hantarex.....543

HCM.....036, 309, 439

Hinari.....064, 245, 036

Hisawa.....309, 482, 427

Hitachi.....244, 136, 071,
.....132, 190, 223, 252,
.....333, 376, 575, 584

Huanyu.....243, 401

Hypson.....064, 309, 291

I

ICE.....244, 291, 398

Imperial.....397, 445, 274

Indiana.....064

Ingelen.....190, 584

Inno Hit.....099, 543

Interfunk.....064, 190, 274,
.....388, 539, 584

Intervision.....244, 291, 129

Isukai.....245

ITS.....398

ITT.....034, 190, 388, 575, 584

J

JVC.....398, 080, 121

K

Kaisui.....243, 244, 245, 036, 309

Kapsch.....233, 190, 584

Kathrein.....583

Kendo.....064, 262, 389

Kingsley.....243

Kneissel.....286, 462

Korpel.....064

Korting.....114

Koyoda.....036

L

Leyco.....064, 321, 099, 291

Liesenk & Tter.....064

Loewe.....114, 539

Luma.....233

Luxor.....376, 388

M

M Electronic.....064, 244, 401,
.....036, 136, 132, 190,
.....314, 373, 507

Magnadyne.....129, 114, 274, 543

Magnafon.....129, 543

Manesth.....244, 347, 291, 262

Marantz.....064

Marelli.....114

Mark.....064

Matsui.....064, 244, 398,
.....321, 036, 099, 062, 038,
.....235, 262, 381, 382, 470,
.....514, 543, 606

Mediator.....064, 039

Memorex.....036

Memphis.....364

Metz.....114, 394, 562

Minerva.....097, 514, 562

Minoka.....396, 439

Mitsubishi.....034, 114, 135,
.....177, 381, 539, 562

Mivar.....243, 317, 318, 319, 543

MTC.....376, 539

Multitech.....243, 036, 129

N

Neckermann.....064, 114, 218,
.....376, 532, 583

NEI.....064, 458, 364

Nikkai.....064, 243, 245,
.....099, 291, 062, 364

Nobliko.....129

Nokia.....388, 507, 575

Nordmende.....136, 223, 314, 370

O

Oceanic.....190, 242, 388

Onwa.....460

Orion.....064, 321, 347,
.....348, 262, 382, 543

- Osaki244, 245, 099, 291, 439
 Oso.....245
 Osume099, 184
 Otake.....344
 Otto Versand064, 244, 347,
037, 218, 370, 376,
532, 539, 562, 583
- P**
 Palladium397
 Panama.....244, 291
 Panasonic277, 153, 190,
253, 394, 584
 Pathe Cinema243, 347, 265
 Pathe Marconi.....223, 360
 Pausa.....036
 Perdio347
 Philco.....114, 274
 Philips064, 401, 033, 034,
039, 040, 114, 220,
320, 350, 359, 583
 Phoenix.....114
 Phonola064, 039, 040, 114, 320
 Pioneer.....136, 190, 314
 Prandoni Prince.....543
 Profex.....036, 388
 Proline348
 Protech064, 244, 445, 036,
291, 129, 458, 274, 364
 Pye034, 039
- Q**
 Quelle064, 037, 038, 097,
227, 333, 354, 355,
388, 532, 539, 562
- R**
 R-Line064
 Radiola.....064, 039, 350
 Radiomarelli114, 543
 RBM.....097
 Rediffusion.....388
 Revox.....064
 Rex233, 291, 190, 286
 RFT.....114
 Roadstar245, 036, 291
- S**
 Saba136, 114, 190, 223,
314, 362, 370, 584
 Saccs265
 Saisho.....036, 291, 458, 038,
262, 381, 543
 Salora190, 376, 386, 388, 575
 Sambers129, 543
 Samsung.....064, 397, 244, 036,
291, 117, 317, 515, 583
 Sandra243
 Sanyo099, 038, 184, 235, 366
 SBR.....064, 033, 034,
039, 040, 220
 Schaub Lorenz388, 584
 Schneider064, 245, 398, 040,
274, 330, 350, 363, 379, 421
 SEG244, 291
 SEI.....321, 129, 114,
 Sei-Sinudyne.....037, 543
 Seleco.....233, 190, 286, 389, 438
 Sentra062
 Sharp.....120
 Shorai321
 Siarem129, 114, 543
 Siemens.....064, 184, 218, 222,
227, 354, 355, 562
 Singer114
 Sinudyne321, 129, 114, 262
 Solavox190
 Sonitron.....235
 Sonoko064, 036
 Sonolor.....190, 235, 242
 Sontec064
 Sony037, 038, 532
 Soundwave064, 445
 Standard244, 245, 036
 Stern.....233, 190, 286
 Sunkai321, 348, 382
 Susumu245
 Sysline064
- T**
 Tandy.....244, 245, 099, 190
 Tashiko244, 386
 Tatung064, 244, 099, 543
 Tec244, 274
 Technema347
 Technics277
 Teleavia360, 370
 Telefunken136, 289, 333,
362, 370, 498, 525
 Telemeister347
 Teletech036
 Teleton.....244, 233, 376
 Tensai245, 321, 347, 344

Texet	243, 245
Thomson	136, 223, 314, 360,370, 376, 426
Thorn	064, 099, 062, 220,388, 526, 532, 539, 562, 580
Thorn-Ferguson	370
Tomashi	309
Toshiba	062, 097, 270, 580
Triumph	270, 543

U

Uher	233, 347, 330
Ultravox	129
Universum	064, 397, 291, 132,373, 448, 519, 562

V

Vestel	064
Videosat	274
Visa	036, 190, 584
Vision	347
Voxson	114, 190

W

Waltham	244
Watson	064, 347
Watt Radio	129
Wega	114
White Westinghouse	064, 243, 347

Y

Yoko	064, 244, 291, 458
------------	--------------------

Z

Zanussi	233
---------------	-----

English

Français

Español

Deutsch

Nederlands

Italiano

Português

Svenska

Suomi

Dansk

Ελληνικά

Norsk

A

Aiwa027, 334, 375, 379
 Akai342, 133, 068, 080
 Akiba099
 Alba099, 047, 305, 236, 342, 379
 Ambassador047
 Amstrad027, 359
 Anitech099
 ASA064, 108
 Asuka064

B

Baird027, 068, 131, 134
 Basic Line099, 047, 305
 Blaupunkt061, 222, 030, 033,
181, 189, 253, 254, 430
 Brandt347, 214, 348
 Brandt Electronic068
 Bush099, 305, 236, 379

C

Catron047
 CGE027
 Cimline099
 Clatronic047
 Combitech379
 Condor047
 Crown099, 047, 305

D

Daewoo047, 305
 Dansai099
 De Graaf069, 193
 Decca027, 108
 Dual068
 Dumont027, 108, 131

E

Elcatech099
 ESC305, 26
 7

F

Ferguson347, 068, 134, 348
 Fidelity027
 Finlandia108, 131
 Finlux027, 108, 069, 131
 Firstline099, 064, 236, 072, 070
 Fisher073, 074, 081, 131
 Frontech047
 Funai027

G

GEC108
 General047
 GoldHand099
 GoldStar064, 252
 Goodmans ...099,027,047,064,305,430
 Graetz068, 131, 267
 Granada108, 073, 131
 Grandin099, 027, 064
 Grundig099, 108, 061, 374, 253,
222, 030, 033, 034, 234, 376, 430

H

Hanseatic064
 HCM099
 Hinari099, 031, 267, 379
 Hitachi027, 031, 069, 068,
193, 262, 267
 Hypson099

I

Imperial027
 Ingersol031
 Interfunk108
 ITT133, 073, 411, 068, 131, 267
 ITV064, 305

J

JVC094, 411, 035, 068, 233, 234

K

Kaisui099
 Kendo236, 133
 Kenwood068
 Korpel099

L

Lenco305
 Leyco099
 Loewe064, 031, 108, 033
 Logik031, 267
 Luxo133, 075, 073, 070, 131

M

M Electronic027
 Manesth099, 072
 Marantz108, 030, 033
 Matsui ...236, 031, 063, 115, 375, 379
 Memorex027, 064, 073, 131
 Memphis099
 Metz ...374,222,030,033,189,254,486

English
 Français
 Español
 Deutsch
 Nederlands
 Italiano
 Português
 Svenska
 Suomi
 Dansk
 Ελληνικά
 Norsk

Minerva.....	222, 033	Samsung.....	459, 267
Mitsubishi.....	108, 094, 070	Sansui.....	094, 068
Multitech.....	099, 027	Sanyo.....	073, 131
Murphy.....	027	Saville.....	379
N			
NEC.....	094, 065, 068	SBR.....	108, 173
Neckermann.....	108	Schaub Lorenz.....	027, 068, 131
Nesco.....	099	Schneider.....	099, 027, 108
Nokia.....	133, 075, 073, 068, 131, 267	SEG.....	349, 267
Nordmende.....	411, 347, 068, 324, 348	SEI.....	031, 108
O			
Oceanic.....	027, 068	Seleco.....	068
Okano.....	342, 375	Sentra.....	047
Orion.....	236, 031, 063, 115, 375, 379	Sharp.....	075
Osaki.....	099, 027, 064	Shintom.....	099, 131
Otto Versand.....	108	Shorai.....	031
P			
Palladium.....	099, 064, 033, 068	Siemens.....	064, 108, 222, 030, 033, 131, 173
Panasonic.....	253, 189, 254, 486	Silva.....	064
Pathe Cinema.....	063	Singer.....	072
Pathe Marconi.....	068	Sinudyne.....	031, 108
Pentax.....	069	Solavox.....	047
Perdio.....	027	Sontec.....	064
Philco.....	065	Sony.....	059, 060, 061, 038
Philips.....	108, 411, 173, 430, 494, 510	Sunkai.....	375
Phonola.....	108	Sunstar.....	027
Pioneer.....	108, 094, 262	Suntronic.....	027
Portland.....	047	T	
Profex.....	349	Tashiko.....	027
Profitronic.....	267	Tatung.....	027, 108, 068
Proline.....	027	Tec.....	047
Pye.....	108	Technics.....	253, 189
Q			
Quartz.....	073	Teleavia.....	068
Quelle.....	108	Telefunken.....	347, 411, 068, 214, 348
R			
Radiola.....	108	Tenosal.....	099
Rex.....	411, 068	Tensai.....	349, 027
RFT.....	430	Thomson.....	347, 411, 068
Roadstar.....	099, 064, 305, 267	Thorn.....	063, 068, 131
S			
Saba.....	347, 411, 068, 233, 234, 324, 348	Toshiba.....	108, 072, 411, 068, 070
Saisho.....	236, 031, 063, 115	Towada.....	349
Salora.....	133, 073, 070	U	
		Uher.....	267
		Universum.....	027, 064, 108, 133, 222, 033, 267
		Y	
		Yamishi.....	099
		Yokan.....	099
		Yoko.....	047, 267

A		Gooding	598
Akai	542	Goodmans	216
Alba	482, 448, 389, 640, 542	Grundig	598, 200, 216, 355, 490, 777
Aldes	315		
Amstrad			
	107, 279, 372, 488, 536, 716		
Ankaro	396, 315, 247		
Anttron	448, 210		
Aristona	064		
Armstrong	270		
AST	378		
Astra	135, 566		
Astro	547, 200		
Axis	396		
B			
Beko	216		
Best	396		
Blaupunkt	200		
Boca	270, 540		
BT	695, 542		
Bush	094		
C			
Cambridg.....	371, 542		
Channel Master	389		
Chaparral	243		
CNT	547		
Commlink	315		
Connexions	423		
Conrad	634		
Crown	270		
D			
DDC	389		
DNT	423, 227		
E			
Echostar	423		
Elta	543		
Emanon	448		
F			
Ferguson	210, 094, 216, 363		
Fidelity	279		
Finlux	482, 135, 371, 424		
Freecom	448, 761		
Fuba	448, 396, 423, 736		
G			
G-Sat	210		
Galaxis	315		
H			
Hinari	210		
Hirschmann	529, 200, 600, 424, 699		
Hitachi	482		
Houston	695		
Huth	270, 315, 247		
I			
Intervision.....	619		
IRTE	636		
ITT	13		
J			
JVC	542		
K			
Kathrein	200, 227, 119, 469, 507, 531, 649, 685		
Kreiselmeyer	200		
Kyostar	448		
L			
La Sat	547, 540, 491, 634		
Lenco	448		
Lennox	619		
Lupus	396		
Luxor	600, 135		
M			
Manhattan	482, 619, 547		
Marantz	227		
Maspro	119, 355, 363		
Matsui	371, 598		
Mediamarkt	270		
Micro Technology.....	566		
Minerva	598		
Mintec	605		
Morgan's	270, 540		
Multistar	491		
N			
NEC	205		
Neusat	719		
Newhaus	247		
Nikko	387, 740		
Nokia	482, 600, 135, 355, 424		
Nordmende	389		

English

Français

Español

Deutsch

Nederlands

Italiano

Português

Svenska

Suomi

Dansk

Ελληνικά

Norsk

O

Orbitech528
Oxford.....371

P

Pace482, 210, 094, 355, 363, 818
Palladium 598
Palsat528
Panda482
Philips482, 227, 319, 355, 490, 609
Phonotrend315, 619, 815
Promax.....482
Prosat315

Q

Quadral389, 655

R

Radiola227
Radix423
RFT315, 247, 227, 568

S

Saba547, 363, 736, 761
Sabre482
Salora135
SAT 378, 488, 543
Satec210, 355
SatPartner
.....448, 547, 529, 719, 736, 761
Schwaiger210, 531
Seemann.....423, 605, 653
SEG448, 396, 566
Siemens200
Skymaster315, 655
Sony731
Sunstar540

T

Tantec482, 363
TechniSat289, 528, 568, 575
Telefunken.....448
Teleka.....270, 640, 699
Thomson482
Tonna695
Triad378

U

Universum598, 200

V

Ventana227
Vortec448
Vtech.....378

W

Wisi482, 423, 200, 378, 665

Z

Zehnder547

SETUP CODES FOR CABLE

B

British Telecom132

D

Decsat.....450

F

Filmnet470

France Telecom.....478

J

Jerold.....030, 303

M

M.N.E.T470

MNet.....470

P

PVP Stereo Visual Matrix.....030

S

Salora409

Scientific Atlanta035, 304

T

Tele+1.....470

U

United Cable.....030

W

Westminster.....132