






**Thank you** for buying a Philips video recorder. This video recorder is one of the most sophisticated and easy-to-use video recorders (VCR) on the market. Please take the time to read this operating manual before using your video recorder. It contains important information and notes regarding operation. The video recorder should **not be turned on immediately after transportation** from a cold to a hot area or vice versa, or in conditions of extreme humidity. Wait at least **three hours** after transporting the device. The video recorder needs this time in order to become acclimatised to its new environment (temperature, air humidity, etc.).









This video recorder is used for the recording and playback of VHS videocassettes. Cassettes with the VHS-C label (VHS cassettes for camcorders) may only be used with a suitable adapter.

**We hope you enjoy your new video recorder.**

### Important notes regarding operation

-  **Danger: High voltage!**  
**Do not remove the top cover as there is a risk of an electrical shock!**
-  The video recorder does not contain any components that can be repaired by the customer. Please leave all maintenance work for qualified personnel.
-  As soon as the video recorder is connected to the power supply, there are some components that are in constant operation. To switch off the video recorder completely you must disconnect it from the power supply.
-  Make sure that air can circulate freely through the ventilation slots on the video recorder. Do not place the device on an unsteady base.
-  Make sure that no objects or liquids enter the video recorder. Do not place vases or the like on the video recorder. If liquid is spilt into it, immediately disconnect the video recorder from the power supply and call After-sales Service for advice.

-  Do not place any combustible objects on the device (candles, etc.).
-  Make sure that children do not place any foreign objects within the openings or ventilation slots.
-  These operating instructions have been printed on non-polluting paper.
-  Deposit old batteries at the appropriate collection points.
-  Please make use of the facilities available in your country for disposing of the packaging of the video recorder in a way that helps to protect the environment.
-  This electronic device contains many materials that can be recycled. Please enquire about the possibilities for recycling your old device.

So that you can identify your machine for service questions or in the event of theft, enter the serial number here. The serial number (PROD.NO.) is printed on the type plate fixed at the back of the device.

MODELNO.	VR130/39
PROD. NO.	.....

This product complies with the requirements of Directive 73/23/EEC +89/336/EEC +93/68 EEC.

### Specifications

**Voltage:** 220-240V/50Hz  
**Power consumption :** 20W  
**Power consumption (Standby):** less than 4W (PWR. in the display switched off)  
**Rewind time:** approx. 260 seconds (cassette E-180)  
**Dimensions in cm (WxDxH):** 36.0x22.6x9.2  
**Number of video heads :** 2  
**Recording/playback time:** 3 hours (SP) (cassette E-180)

### Supplied accessories




- Operating instructions
- Remote control and batteries
- Aerial Cable
- Scart Cable

*Let's make things better.*



**PHILIPS**

# 1. Description of controls

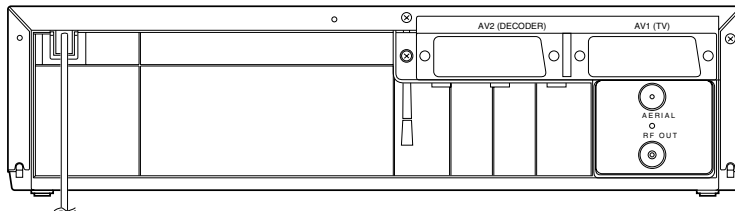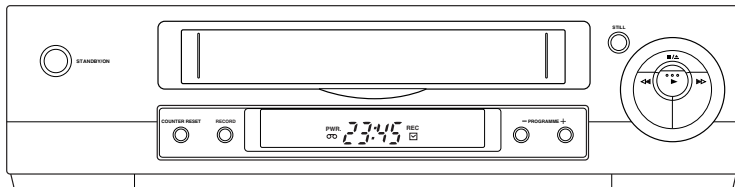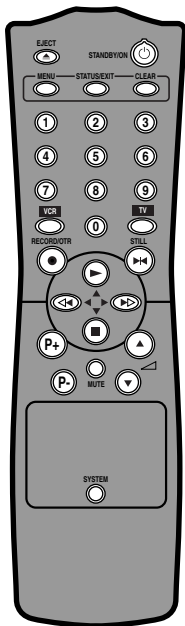

## Buttons for VCR feature only

- VCR** To operate the VCR with the remote control.
- EJECT** To eject the cassette.
- CLEAR** To delete last entry/Clear programmed recording (TIMER).
- RECORD/OTR** To record the TV channel selected at this moment or press repeatedly to start a One-Touch Recording.
- STILL** To stop the tape (still picture).
- P+** **P-** To select the programme number. During normal playback, press to adjust the tracking.
- SYSTEM** To change the video (colour) system.
- MENU** To call up main menu of VCR.
- When tape playback is stopped, press to fast forward the tape at high speed. During playback, press to fast forward the tape while the picture stay on the screen. To store or confirm entry in the menu.

- When tape playback is stopped, press to rewind the tape at high speed. During playback, press to rewind the tape while the picture stay on the screen. To return the cursor in the menu.
- To play a tape, select an item in the menu of VCR.
- To stop the tape, select an item in the menu of VCR.

## Buttons with TV feature

- TV** To call up additional TV functions.
- STANDBY/ON** To switch VCR or Philips TV on or off, interrupt menu function.
- STATUS/EXIT** To access or remove the VCR's on-screen status display. To exit on-screen menus. Or, to access or remove a status display or menu of Philips TV.
- 0..9** Press to select channels at VCR or Philips TV.
- MUTE** To eliminate the TV's sound. Press again to restore the volume.
- To adjust the TV's volume.

Press VCR button before pressing VCR feature button; press TV button before pressing TV feature button if you have a PHILIPS TVs.  
You can use this remote control to operate some function of PHILIPS TVs.

## Front of the device

**STANDBY/ON** To switch off or on, interrupt a function.

**PROGRAMME+** **PROGRAMME-** To select the programme number. During normal playback, press to adjust the tracking.

**RECORD** To record the TV channel selected at this moments.

**▶▶** When tape playback is stopped, press to fast forward the tape at high speed. During playback, press to fast forward the tape while the picture stay on the screen.

**◀◀** When tape playback is stopped, press to rewind the tape at high speed. During playback, press to rewind the tape while the picture stay on the screen.

**▶** To play a tape.

**■/▲** To stop the tape and eject the cassette.

**STILL** To stop the tape (still picture).

**COUNTER RESET** To reset the counter.

## Back of the set

**AV2(DECODER)** To connect a satellite receiver, decoder, video recorder, etc.

**AV1(TV)** To connect the TV set (programme number).

**AERIAL** To connect the aerial cable.

**RF OUT** To connect the TV set.

## 2. Important notes for operation

### Navigation in the screen menu

You can check/change many functions and settings of your video recorder via the on-screen menu. The individual functions are selected via the remote control, as follows:

**Call up the menu:** with **MENU**.


**To select:** with **▶▶** **▼■**.

**To enter or change your selection:** with the number buttons **0..9** or with **▶▶** **▼■**.

**To save or confirm:** with **▶▶**.


**To cancel:** with **CLEAR**.

**To end:** with **STATUS/EXIT**.

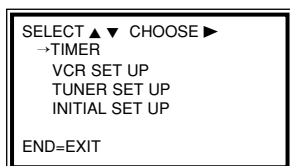

### The symbols on your video recorder display

 These symbols can light up on your video recorder display:



**PWR.** When you keep your video recorder on.

**00** When you have put a cassette in the video recorder.

**00:00** Display of programme number of the TV channel / time / RF channel.

**REC** When you record.

**☑** When you have programmed a recording.

### Switching on

You can switch on the video recorder with the **STANDBY/ON** button.

### Automatic switch-off

If the video recorder is not used for several minutes, it switches itself off automatically. This function can be deactivated (e.g. if you want to use the video recorder as a TV receiver). For more information, please read the section 'Automatic switch-off' in chapter 'Other functions'.

### Time in the display

If you have switched the video recorder off with **STANDBY/ON**, the time will show in the display, e.g. '18:00'.

If the clock has not been set, ' --:-- ' will appear.

### Power consumption

The video recorder should always be connected to the mains so as not to affect the use of the TV or programmed recordings.

Your video recorder uses less than 4W.

 
### Power outage/no power

Channel information remains saved for up to 10 year, the time and timer information is saved for up to 1 minute.

# 3. Connecting the video recorder

## Preparing the remote control for operation

The remote control and its batteries are packed separately in the original video recorder packaging. You must install the batteries in the remote control before use.



1. Take the remote control and the enclosed batteries (2 batteries).
2. Open the remote control's battery compartment and place the batteries in it as shown in the picture and close the battery compartment. The remote control is now ready to use. Its range is approximately 5 metres.

## Connecting your video recorder to the TV set

The necessary cable connections must be made before you can record or playback TV programmes using your video recorder. We recommend that you use a scart cable to connect your TV and video recorder.

 


### What is a scart cable?



The scart or Euro AV cable serves as the universal connector for picture, sound and control signals. With this type of connection, there is practically no loss of quality during the picture or sound transfer.

## Connecting with a scart cable


Have the following cables ready:  
an aerial cable (1, supplied), a scart cable (2, supplied).



 1. Remove the aerial cable plug from your TV set. Insert it into the AERIAL at the back of the video recorder.
2. Insert one end of the supplied aerial cable into the RF OUT at the back of the video recorder and the other end into the aerial input socket at the back of the TV set.

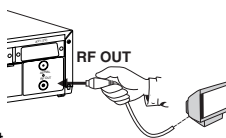

 3. Plug one end of a scart cable into the scart socket AV1(TV) at the back of the video recorder and the other end into the suitable scart socket on your TV reserved for the video recorder operation (see your TV's operating instructions).
4. Switch on the TV.
5. Insert AC cable into the wall socket.




### My TV has several scart sockets. Which one should I use?

Select that scart socket which is suited for the video output as well as for the video input.

### My TV offers me a selection menu for the scart socket.

Select 'TV' as a connection source of this scart socket.

6. If the connection was properly made and your TV was automatically switched to the programme number for the scart socket, you will see the following picture:

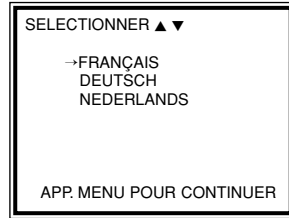

Then, read the paragraph 'Preparation for use' in the chapter 'Installing your video recorder'.


### My screen is empty

Many TVs are switched to the programme number for the scart socket by way of a control signal sent through the scart cable.

If the TV does not automatically switch to the scart socket programme number, manually change to the corresponding programme number on your TV (see your TV's operating instructions).

## Connecting additional devices

You can connect additional devices such as decoders, satellite receivers, camcorders, etc. to the socket AV2(DECODER).

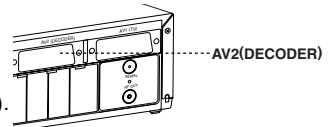

# 4. Installing your video recorder

## Preparation for use

This chapter shows you how to prepare the video recorder use. The video recorder automatically seeks out and stores all available TV channels.

1. Select the desired language for the on-screen menu by pressing .

### 'Aim' correctly

In the following sections, you require the remote control for the first time. When using, always aim the front of the remote control at the video recorder and not at the TV.

### Connecting additional devices

After you have connected additional devices (satellite receiver, etc.) through the aerial cable, switch them on. The automatic channel search will recognise them and save them.


2. Press .

### What is an on-screen menu?

The multi-language on-screen menu takes the mystery out of using your new video recorder. All settings and/or functions are displayed on your TV screen in the corresponding language.

3. Confirm with .

The automatic TV channel search starts.

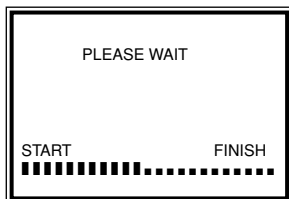


### The video recorder does not find any TV channels during the search

\* Select channel 1 on the TV. Can you see the saved TV channel on the TV?

If not, check the cable connection of the aerial (aerial socket), video recorder, TV.

\* The video recorder searches the entire frequency range in order to find and save the largest possible number of TV channels. It is possible that the TV channels in your country are broadcast in a higher frequency range. As soon as this range is reached during the search, the video recorder will find the TV channels.

4. 'TIME' and 'DATE' will appear on the TV screen.

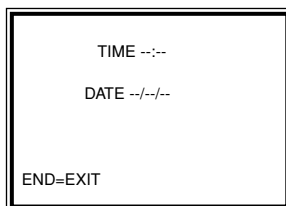

5. Check 'TIME'. If required, please change the time with the number buttons .
6. Check if the displayed settings for 'DAY', 'MONTH' and 'YEAR' are correct.
7. When all information is correct, save by pressing .

### Satellite receiver

If you are connecting a satellite receiver, please read the section 'Using the satellite receiver'.

### Decoder


If you are connecting a decoder, you must install it as described in the next section.

The preparation for use is now complete.

## Decoder allocation

Some TV channels transmit encoded TV signals which can only be viewed with a purchased or rented decoder without disturbances. You can connect such a decoder to this video recorder. The following function will automatically activate the connected decoder for the desired TV channel.

1. Switch the TV on. If applicable, select the programme number for the video recorder operation.
2. Use or to select the TV channel which you would like to allocate the decoder to.
3. Press . The main menu will appear.
4. Use to select 'TUNER SET UP'.  
Then press .
5. Use to select 'MANUAL TUNING'.  
Then press .
6. Use to select 'DECODER'.

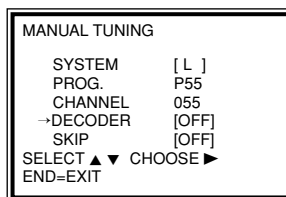

7. Use **[▶▶]** to select 'ON'

(Decoder switched on).

8. To end, press **[STATUS/EXIT]**.

#### How can I switch off the decoder?

Use **[▶▶]** to select 'OFF' (Decoder switched off).

The decoder has now been allocated to this TV channel.

### Manual TV channel search

In some cases it can occur that all of the TV channels are not found and saved during the first installation. In this case, the missing or coded TV channels must be searched for and stored manually.

1. Switch on the TV set. If required, select the programme number for the video recorder.

2. Press **[MENU]**.

The main menu will appear.


3. Use **[▶] [▼]** to select 'TUNER SET UP'.

Then press **[▶▶]**.

4. Use **[▶] [▼]** to select 'MANUAL TUNING'.

Then press **[▶▶]**.

5. Select 'SYSTEM' with **[▶] [▼]**.

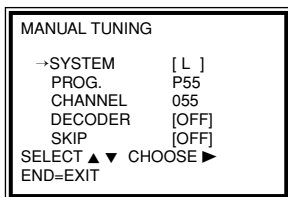

6. Select 'L' or 'BG' with **[▶▶]**.

7. Select 'PROG.' with **[▶] [▼]**. Then press **[▶▶]**.

8. With **[▶] [▼]** or **[0..9]**, select the desired programme number that you want to use for the TV channel, e.g. 'P01'. Then press **[▶▶]**.

#### What is a special channel?

TV channels are transmitted in certain pre-defined frequency ranges. These ranges are divided into channels.

A specific frequency/channel is assigned to each TV station.

Certain frequency ranges are specified as special channels (hyperband channels).

9. Select 'CHANNEL' with **[▶] [▼]**, and confirm with **[▶▶]**. Then enter the desired channel with **[0..9]**.

If you set 'SKIP' on, you can skip the channels when you press **[P+] [P-]**.

#### I don't know the channels for my TV stations

In this case, press **[▶] [▼]** in 'CHANNEL' to start the automatic channel search. A changing channel number will appear on the TV screen. Continue the automatic search until you have found the desired TV channel.

10. Save the TV channel with **[▶▶]**.

11. To search for other TV channels, begin again at step 5.

12. To end, press **[STATUS/EXIT]**.

### Using the satellite receiver

Satellite channels from a satellite receiver (connected to the scart socket AV2(DECODER)) are received on the video recorder on programme number 'AV2' with 0.0.2.

You should select the satellite channels to be received by the satellite receiver directly on the receiver itself.

### Automatic Tuning


During installation, all available TV channels are searched for and saved. If the channel assignments of your cable or satellite TV provider change or if you are re-installing the video recorder, e.g. after moving house, you can start this procedure again. This will replace the TV channels already saved with the new ones.

1. Switch on the TV. If required, select the programme number for the video recorder.

2. Press **[MENU]**. The main menu will appear.

3. Select 'TUNER SET UP' with **[▶] [▼]** and confirm with **[▶▶]**.

4. Select 'AUTO TUNING' with **[▶] [▼]** and confirm with **[▶▶]**.

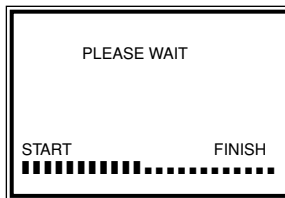

5. The automatic TV channel search starts. This allows the video recorder to save all available TV channels. This procedure may take several minutes.

6. When the TV channel search is complete, 'COMPLETED' will briefly appear on the TV screen.


---

## Sorting and clearing TV channels manually

---

After you have performed the automatic channel search you may not agree with the sequence in which the individual TV channels have been allocated to the programme positions (programme numbers) of the video recorder. You can use this function to individually sort the TV channels already saved or to delete unwanted TV channels or those with poor reception.

1. Switch on the TV set. If required, select the programme number for the video recorder.
2. Press **[MENU]**. The main menu will appear.
3. Select 'TUNER SET UP' with **[▲▶]** **[▼■]** and confirm with **[▶▶]**.
4. Select 'MOVE' with **[▲▶]** **[▼■]**, and confirm with **[▶▶]**.

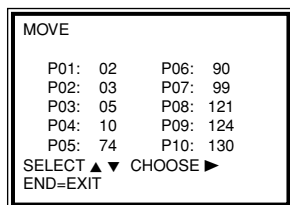

5. With **[▲▶]** **[▼■]**, select the saved TV channel that you want to change.
6. Confirm with **[▶▶]**.
7. Move the selected channel with **[▲▶]** **[▼■]** to the programme number you want to assign.
8. Confirm with **[▶▶]**.
9. To assign other TV channels to a programme number, repeat steps 5 to 8.
10. Confirm the assignment of the TV channel with MOVE menu.
11. To exit the MOVE menu, press **[STATUS/EXIT]**.


---

## Setting the language

---

You have the option of setting one of the displayed languages for the on-screen menu (OSD).

1. Switch on the TV. If required, select the programme number for the video recorder.
2. Press **[MENU]**. The main menu will appear.
3. Select 'INITIAL SET UP' with **[▲▶]** **[▼■]** and confirm with **[▶▶]**.
4. Select 'LANGUAGE' with **[▲▶]** **[▼■]** and confirm with **[▶▶]**.

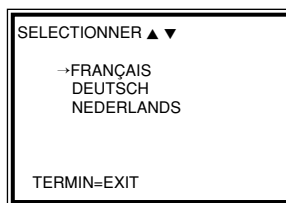

5. Select the desired language with **[▲▶]** **[▼■]**.
6. To end, press **[STATUS/EXIT]**.


---

## Setting the clock

---

If the display shows an incorrect time or ' --:-- ', the time and date must be reset manually.

1. Switch on the TV. If required, select the programme number for the video recorder.
2. Press **[MENU]**. The main menu will appear.
3. Select 'INITIAL SET UP' with **[▲▶]** **[▼■]** and confirm with **[▶▶]**.
4. Select 'CLOCK' with **[▲▶]** **[▼■]** and confirm with **[▶▶]**.

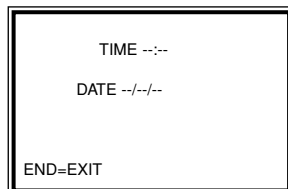


5. Check the time in 'TIME'. If required, please change the time with **[0.9]**.
6. Check 'DAY', 'MONTH' and 'YEAR' in the same way.
7. To end, press **[STATUS/EXIT]**.

# 5. Playback

## Playing cassettes

You can use this video recorder to play back recorded VHS videocassettes. You can operate the video recorder using the remote control or the buttons on the front of the video recorder. Your video recorder can only record and play standard VHS cassettes.




1. Put a cassette into the cassette slot. The cassette is inserted automatically. '00' will appear on the display.
2. Press  to view the tape.

### DIGITAL STUDIO PICTURE CONTROL

Philips has developed a system which produces the best possible playback quality. For old and often-used video cassettes, this system reduces interference. For new or high quality cassettes, it emphasises the details.

#### Picture/ sound quality is poor

When playing rental videos or older, poorer quality cassettes, it may not be possible to completely filter out picture and sound interference. This is not a fault in your machine. Read the section 'Manual tracking'.

3. To stop the playback, press  or  on the video recorder.
4. To eject the cassette, press  when the video recorder stops the playback.

### Automatic switch-off of special functions

Many functions (e.g. pause, still picture) switch themselves off automatically after a short time in order to protect the cassette and to save energy.

### Do I need to change the playback speed when playing back LP recordings?

During playback, the correct speed will automatically be selected. For more information, please read the section 'Selecting the recording speed (SP or LP)' in the chapter 'Manual recording'.

## Playing back NTSC cassettes

Cassettes that have been recorded in the NTSC standard (for example, American cassettes) can be played back using this video recorder. However, this only works on PAL-television sets that are suitable for a picture frequency of 60Hz.

## Displaying current tape position

The following information is displayed on the screen: e.g.: 0:02:45 shows the counter in hours, minutes and seconds.

SP/LP: will show the recorded speed of your cassette

### How can I set the counter to '0:00:00'?

You can set the counter to '0:00:00' with

.

When you put a cassette in the video recorder, the counter will automatically reset to '0:00:00'.




### The counter does not move

This occurs when there are no recordings on a portion of a tape. This is not a fault in your video recorder.




### The screen shows '-0:01:20'

If you rewind a cassette from the tape position '0:00:00', the counter will show for instance, '-0:01:20' (the cassette was rewound to 1 minute and 20 seconds before '0:00:00').

## Searching for a tape position with picture (scanning)

1. While a cassette is playing, press  (reverse) or  (forward) one or more times.
2. Press  to resume playback.

## Still picture





1. During playback, press  to stop the tape and display a still picture.
  2. Press  to resume playback.
- Scanning and still interferes with the picture quality. The sound is switched off. This is not a fault in your video recorder.
- You may want to press  repeatedly to reduce the noise of the still picture.



---

## Searching for tape position without picture (forward wind and rewind)



 

---



1. Stop the tape with .
2. Press  (reverse) or  (forward).
3. To stop the tape, press .





---

## Manual Tracking

---

To manually adjust the tracking during playback, press   or  .

 Tracking will return to Automatic Tracking Adjustment when you press , insert a tape, or press .

To remove vertical jitter in a Still picture, press   or  .

## 6. Manual recording

---

### General information

---

Use **'Manual Recording'** to make a spontaneous recording (for example, a programme currently being shown).

If you want to start and stop a recording manually, read the section **'Recording without automatic switch-off'**.

If you want to start a recording manually but have it stopped automatically, read the section **'Recording with automatic switch-off'**. (e.g. not to record to the end of the tape)

---

### Recording without automatic switch-off

---

1. Insert a cassette.
  2. Use **[P+]** **[P-]** to select the programme number you want to record, for example, 'P01'.
  3. To start recording, press **[RECORD/OTR ●]**.
  4. Stop recording with **[▼■]**.
- 

### Recording with automatic switch-off (OTR One-Touch-Recording)

---

1. Insert a cassette.
  2. Use **[P+]** **[P-]** to select the programme number you want to record.
  3. Press **[RECORD/OTR ●]**.
  4. Each time you press **[RECORD/OTR ●]** you will add 30 minutes to the recording time.
- 

### Preventing accidental erasing of cassettes

---

All cassettes (except for rental and store cassettes) have a security tab on the back of the cassette.

To prevent recording over important recordings (erasing), you can remove this security tab.

If you later decide to record on a protected cassette, simply cover the hole with adhesive tape or slide the tab to the right.

---

### Lining up recordings (assemble cut)

---

When you add a further recording to a cassette, which already has a recording on it, a short blank (flicker) can appear between the old and the new recording or the picture itself can flicker. To help reduce these from occurring, proceed as follows:

1. Find the tape position of the old recording where you want to insert the new recording.
2. Look at the last minute of the old recording (playback).
3. Press **[STILL ▶◀]** at the tape position where the new recording is to go and press **[RECORD/OTR ●]**.
4. Now start recording as usual by pressing **[RECORD/OTR ●]** on the remote control.
5. Stop recording with **[▼■]**.

# 7. Programming a recording (TIMER)

## General information


Use a TIMER programming to automatically start and stop a recording at a later time or date. The video recorder will switch to the right programme number and begin recording at the correct time. With this video recorder, you can pre-programme up to eight recordings within a period of one year. To make a programmed recording, your video recorder needs to know:

- \* the date you want to make the recording
- \* the programme number of the TV channel
- \* the start and stop time of the recording

This information is saved in a 'TIMER' block

## Programming a recording

1. Switch on the TV. If required, select the programme number for the video recorder.
2. Press **[MENU]**. The main menu will appear.
3. Select 'TIMER' with **[▶▶]** **[▼■]**. Then press **[▶▶▶]**.
4. Select ONCE, DAILY, or WEEKLY recording with **[▶▶]** **[▼■]**. Then press **[▶▶▶]**.

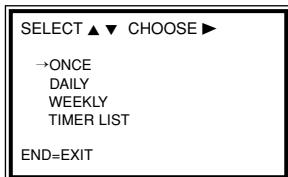

### Selecting once/daily/weekly recordings

Use **[▶▶]** **[▼■]** to select from the following options:

- 'ONCE': Recording once
- 'DAILY': Repeated daily recordings from Monday to Friday
- 'WEEKLY.': Repeated weekly recordings (every week on the same day)

If any of the TIMER blocks are in use, 'FULL' will appear on the TV screen.

5. Select TIMER block with **[0..9]**.
6. With **[0..9]** buttons you can enter 'START' (start time), 'STOP' (end time), 'PROG.' (programme number) and 'DATE'.


### Programme numbers of the 'AV1' and 'AV2' scart socket

You can also programme recordings from external sources via scart socket AV1 (TV) or AV2 (DECODER).

7. When all inputs are correct, press **[STATUS/EXIT]**. The programming information is stored in a TIMER block.
8. Insert a cassette with an intact security tab (unprotected).
9. Switch off with **[STANDBY/ON ⓪]**.  
The programmed recording will only function when the video recorder is switched off with **[STANDBY/ON ⓪]**.

## How to check, or delete a programmed recording (TIMER)

1. Switch on the TV. If required, select the programme number for the video recorder.
2. Press **[MENU]**. The main menu will appear.
3. Select 'TIMER' with **[▶▶]** **[▼■]**. Then press **[▶▶▶]**.
4. Select 'TIMER LIST' with **[▶▶]** **[▼■]**, and confirm with **[▶▶▶]**.

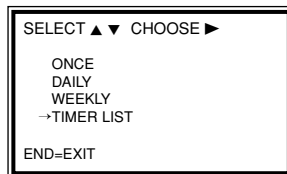


5. Select timer block with **[▶▶▶]**.
6. To cancel the recording, press **[CLEAR]**.
7. To end, press **[STATUS/EXIT]**.
8. Switch off with **[STANDBY/ON ⓪]**.

---

## How to change a programmed recording (TIMER)

---

1. Switch on the TV. If required, select the programme number for the video recorder.
2. Press **MENU**. The main menu will appear.
3. Select 'TIMER' with **▲▶** **▼■**. Then press **▶▶**.
4. Select ONCE, DAILY, or WEEKLY recording with **▲▶** **▼■**. Then press **▶▶**.
5. Select a TIMER block with **0..9**. (The flashing number indicates an empty TIMER block.)

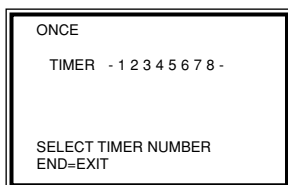

6. Press **CLEAR** to delete information and input correct information with **▲▶** **▼■** or **0..9**.
7. To end, press **STATUS/EXIT**.
8. Switch off with **STANDBY/ON**.

---

## Problems and solutions for programmed recordings

---

### Error message: 'E' will flash in the video recorder display

- No cassette was inserted. Insert a cassette and switch off the video recorder using **STANDBY/ON**.
- A cassette was inserted with the security tab removed.

Undo the erase protection (chapter 'Manual Recording', section 'Preventing accidental erasing of cassettes') or insert a different cassette.

### Cassette is ejected during recording

- The end of the tape was reached during recording.

### The video recorder does not react

- While a programmed recording is being made, you cannot operate your video recorder manually. If you want to cancel the programmed recording, press **■/▲**.
- The end of the tape was reached during recording.

# 8. Other Functions

## Changing the video (colour) system

If you playback recordings made on other video recorders or you want to record from external sources (via the scart socket), the automatic video (colour) system switch-over may lead to colour distortion.

You can switch off the automatic TV system switch-over as follows.

### Video (colour) systems

Other countries, other video (colour) systems: In central Europe transmissions are broadcast in the PAL system (Phase Alternation Line) standard. France uses SECAM (Séquentiel à mémoire). In some countries (USA and Japan), TV viewers receive their programmes as an NTSC signal (National Television System Committee).

1. Press **[SYSTEM]** on the remote control to select the TV (colour) system with the least disruptions before you start recording or during playback.

Each pressing **[SYSTEM]**, the display will change cyclically; AUTO, PAL, SECAM, ME-SECAM.



2. After 5 seconds, the display will be disappeared.

### How can I change back to 'Automatic Switch-over'?


Even if you change the programme number, the video (colour) system for recording will keep the setting.

If you eject the cassette, the video (colour) system for playback will switch itself back to 'AUTO' (automatic switchover).

## Switching the status display off or on

Along with the on screen menu, the status display also displays information on the current operating status (counter, playback, recording, TV channel, etc.) on the TV screen. You can switch off the information about the operating status so that the status display is not recorded when copying videocassettes.

1. Switch on the TV set. If required, select the programme number for the video recorder.
2. Press **[MENU]**. The main menu will appear.
3. Select 'VCR SET UP' with **[▶]** **[▼]** and confirm with **[▶▶]**.

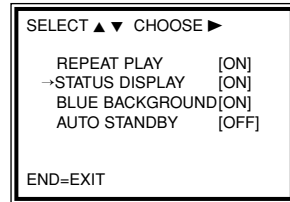

4. Select 'STATUS DISPLAY' with **[▶]** **[▼]**.
5. Select 'ON' or 'OFF' with **[▶▶]**.

### Which settings can I choose?

'ON': Shows the status display for a few seconds only.

'OFF': Switches off the status display.

6. To end, press **[STATUS/EXIT]**.


---

## Continuous playback

---

This function can be used to play a cassette over and over again. When the end of the cassette is reached, the video recorder will rewind and start from the beginning again. This function is activated or deactivated as follows.

1. Press **[MENU]**. The main menu will appear.
2. Select line 'VCR SET UP' using **[▲▶]** **[▼■]** and confirm with **[▶▶]**.

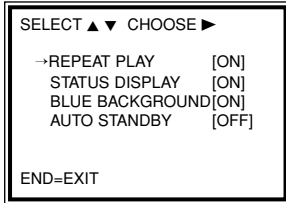

3. Select 'REPEAT PLAY' using **[▲▶]** **[▼■]**.
4. Select function 'ON' with **[▶▶]**.

If you select 'OFF', continuous playback will be switched off.

5. To end, press **[STATUS/EXIT]**.
6. Insert a cassette.
7. Start the continuous playback with **[▲▶]**.


---

## Blue Background on or off

---

If you want the TV screen to be solid blue when a weak signal is received, set BLUE BACKGROUND to 'ON'. The screen will be blue and the sound will be muted. Or, if you want to receive the weak signal, set BLUE BACKGROUND to 'OFF'.

1. Switch on the TV. If required, select the programme number for the video recorder.
2. Press **[MENU]**. The main menu will appear.
3. Select 'VCR SET UP' using **[▲▶]** **[▼■]** and confirm with **[▶▶]**.
4. Select 'BLUE BACKGROUND' using **[▲▶]** **[▼■]** and confirm with **[▶▶]**.

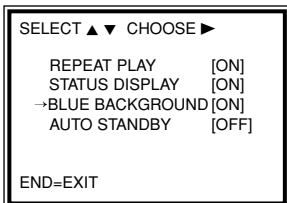

5. Select 'OFF' (no blue background) or 'ON' (blue background on) with **[▶▶]**. If you select 'OFF', the menu display will disappear.

6. To end, press **[STATUS/EXIT]**.


---

## Automatic switch-off

---

If you haven't used the video recorder for a few minutes in certain modes (e.g.: STOP), it will switch to standby automatically. You can cancel this function to use the video recorder as a television receiver.

1. Switch on the TV. If required, select the programme number for the video recorder.
2. Press **[MENU]**. The main menu will appear.
3. Select 'VCR SET UP' using **[▲▶]** **[▼■]** and confirm with **[▶▶]**.
4. Select 'AUTO STANDBY' using **[▲▶]** **[▼■]**.

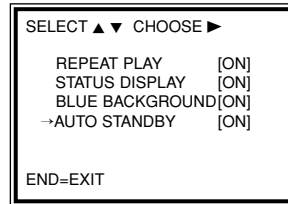

5. Select 'OFF' (no automatic switch-off) or 'ON' (automatic switch-off) with **[▶▶]**.
6. To end, press **[STATUS/EXIT]**.

## 9. Before you call an engineer

If, contrary to expectation, you have any problems using this video recorder, it may be caused by the following reasons.

### **Your video recorder does not respond to any button being pressed:**

- \* There is no power supply: check the power supply.
  - \* A programmed recording is currently being made: if desired, cancel the programmed recording. Please see the section 'How to check or delete a programmed recording' in chapter 'Programming a recording'
  - \* There is a technical problem: disconnect from the mains power supply for 60 seconds, then connect again.
- If this doesn't help, you could reset your video recorder to the default factory settings.

### **Resetting devices to default factory settings**

#### **\* Attention:**

All the information stored (TV channels, time and date, TIMER) will be cleared.

1. Switch off this video recorder with **STANDBY/ON**.
2. Press and hold **RECORD** and **PROGRAMME+** for 2 seconds or more at the same time.

### **Cassette is jammed in the video recorder:**

- \* Don't use force. Pull out the mains plug for a moment.

### **Remote control does not work:**

- \* Remote control not pointed toward the video recorder: point it at the video recorder.
- \* There is a technical problem: Take out the batteries, wait for 10 seconds and place them back.
- \* Batteries have run out: change the batteries.

### **No picture when you play a cassette:**

- \* There is no recording on the cassette: change the cassette.
- \* You have selected the wrong programme number on the TV for playing cassette: on the TV, select the correct programme number for the video recorder.
- \* The cable connecting the TV set and the video recorder has come loose: check the cable.

### **Poor picture quality when you play a cassette:**

- \* Your TV set is not properly adjusted.
- \* The cassette is badly worn or of poor quality: use new cassette.
- \* Tracking is not properly adjusted: turn to section 'Manual Tracking'.

### **No recording possible:**

- \* The TV channel you want to record is not stored or you selected the wrong programme number: check TV channels stored.
- \* A cassette was inserted that does not have the security tab (cannot be used to record): Insert a cassette with an intact security tab or change cassette. For more information, please see the section 'Preventing accidental erasing of cassettes' in chapter 'Manual Recording'.

### **There is picture or sound interference on TV reception:**

- \* Turn to chapter 'Installing your video recorder' and read 'Setting the RF out channel'.
- \* Have your aerial checked.

You can also call the **customer service centre** in your country.

The telephone numbers can be found on the back of this instruction manual. Have the model number (MODEL NO) and the production number (PROD.NO.) of your video recorder ready.

**PHILIPS NORGE AS**  
Sandstuveien 70,  
PO Box 1, Manglerud  
N-0612 Oslo  
**NORWAY**  
Phone: 2274 8250

**PHILIPS AUSTRIA GMBH**  
Triesterstrasse 64  
1101 Wien  
**AUSTRIA**  
Tel: 0810 001 203

**PHILIPS PORTUGUESA, S.A.**  
Consumer Information Centre  
Rua Dr. António Loureiro Borge, nr. 5  
Arquiparque, Miraflares  
P-2795 L-A-VEHLA  
**PORTUGAL**  
Phone: 021-4163063

**OY PHILIPS AB**  
Sinikalliontie 3,  
02630 Espoo  
**FINLAND**  
puh. 09 615 80 250

**PHILIPS INFO CENTER**  
Alexanderstrasse 1  
20099 Hamburg  
**GERMANY**  
Tel: 0180-53 56 767

**PHILIPS CE, The Philips Centre,**  
420 - 430 London Road,  
Croydon, Surrey  
CR9 3 QR  
**UNITED KINGDOM**  
Phone: 0208-665-6350

**PHILIPS KUNDTJÄNST**  
Kottbygatan 7,  
Akalla,  
16485 Stockholm  
**SWEDEN**  
Phone: 08-598 52 250

**SERVICE CONSOMMATEURS PHILIPS**  
BP 0101  
75622 Paris Cédex 13  
**FRANCE**  
Phone: 0825-889 789

**PHILIPS KUNDECENTER**  
Frederikskaj 6,  
DK-1780 Copenhagen V  
**DENMARK**  
Tlf: 8088 2814

**PHILIPS POLSKA**  
AL. Jerozolimskie 195B  
02-222 Warszawa  
**POLSKA**  
TEL.: (022)-571-0-571

**PHILIPS ELECTRONICS IRELAND LIMITED**  
Consumer Information Centre  
Newstead, Clonskeagh  
**DUBLIN 14**  
Phone: 01-7640292

**PHILIPS REPRESENTATION OFFICE**  
Ul. Usacheva 35a  
119048 MOSCOW  
**RUSSIA**  
Phone: 095-937 9300

**INFOLINKA PHILIPS**  
Safrankova 1  
150 00 Praha 5  
**CZECH REPUBLIC**  
Tel.: (02)-330 99 330

**PHILIPS CONSUMER ELECTRONICS**  
Servizio Consumatori  
Via Casati 23  
20052 Monza - Milano  
**ITALY**  
Phone: 800 820026

**PHILIPS INFO CENTER**  
Fegistrasse 5  
8957 Spreitenbach  
**SUISSE**  
Tel.: 0844-800 544

**PHILIPS Iberia, S.A.**  
C/Martinez Villergas, 49  
28027 MADRID  
**SPAIN**  
Phone: 902-11 33 84

**PHILIPS MAGYARORSZÁG KFT.**  
Fehérvári út 84/a.  
Budapest 1119  
**HUNGARY**  
Phone: (01)-382-1700

**PHILIPS CUSTOMER CARE CENTER**  
Twee Stationsstraat 80/  
80 Rue des Deux Gares  
1070 BRUSSEL/BRUXELLES  
**BELGIUM (for BENELUX)**  
Tel: 070-222303

ΦΙΛΙΠΣ ΕΛΛΑΣ ΑΕΒΕ  
25ΗΣ ΜΑΡΤΙΟΥ 15  
177 78 ΤΑΥΡΟΣ  
ΑΘΗΝΑ  
Τηλ. 00800 3122 1280

**PHILIPS CONSUMENTENLIJN**  
t.a.v. betreffende afdeling  
Postbus 102 5600 AC Eindhoven  
**NETHERLANDS**  
Phone: 0900-8406

**www.philips.com**  
**www.philips.se**