

GPS/Plotter/Sounder GP-1600F Operator's Guide

The purpose of this operator's guide is to provide the basic operating procedures for this equipment. For detailed information, refer to the operator's manual.

Selecting video sounder display

Press SNDR key.

Basic operation of video sounder

• Automatic operation

AUTO: Select CRUISE or FISH mode.

Manual operation

AUTO → ▼ to select "Manual" → ▼ to select item → set value by Arrow keys → ESC

Items: • Gain • Range • Shift

Adjusting video sounder picture

MENU \rightarrow 6 \rightarrow select item and set value by Arrow keys \rightarrow ESC

Items: CLUTTER, ADVANCE, NOISE LIMITER, DEPTH ALERT, TEMP GRAPH, BRIGHT ECHO, ZOOM

Fish and bottom Alarms

MENU → $\boxed{5}$ → $\boxed{\lor}$ to select fish or bottom alarm (2nd page) → $\boxed{\lor}$ to turn on the alarm → $\boxed{\lor}$ → enter alarm range → $\boxed{\lor}$ ENT → $\boxed{\lor}$ ESC

Changing video sounder settings

MENU \rightarrow 0 \rightarrow 3 \rightarrow ▼ to select item \rightarrow ◀ or ▶ to change setting \rightarrow ENT \rightarrow ESC

Items: • Expansion markers

- rs TVG
- Echo level correction
- Bottom-lock range
- ES-stop

Selecting plotter display

Press PLTR key.

Shifting the display

• Centering own ship:

CURS to turn off cursor → CNTR

• Centering a location:

CURS to turn on cursor → select location by cursor → CNTR

• Scrolling the display:

curs to turn off cursor → Arrow keys

Changing track recording interval

MENU → 2 → select "PLOT INTVL" and "TIME", "DIST" or "AUTO" by Arrow keys → (enter value) → ENT → ESC

Entering a mark

EVENT

(Mark is entered at cursor location or at own ship's position. Either mode is selected on the PLTR SETUP menu: (MENU) (0) (2).

Mark attributes

• Shape / size / tone / line type:

MENU → 2 → select item/attribute by

Arrow keys → ESC



Entering waypoints

• Mode selection:

$$\boxed{\mathsf{WPT}} \to \boxed{\mathsf{MENU}} \to \blacktriangle \text{ or } \blacktriangledown \to \boxed{\mathsf{ENT}}$$

• Through waypoint list:

• By cursor:

WPT → move cursor → ENT → ENT

(or
$$\nabla$$
 → select a mark → ENT → enter

comment → select "ENTER" → ENT →

ENT)

Setting destination

GOTO
$$\rightarrow$$
 \blacktriangle or \blacktriangledown \rightarrow ENT

• Mode selection:

GOTO
$$\rightarrow$$
 MENU \rightarrow \blacktriangle or \blacktriangledown \rightarrow ENT

• Canceling waypoint navigation:

$$\boxed{ \texttt{GOTO} \rightarrow \boxed{\texttt{CLR}} \rightarrow \boxed{\texttt{ENT}} \rightarrow \boxed{\texttt{ESC}} \text{ twice} }$$

Entering routes (max. 20 routes)

MENU → 4 → ▲ or ▼ (select empty route) → ENT twice → select waypoint no. by Arrow keys → ENT → select other waypoints in order they are to be navigated → ESC to quit route list → ESC twice

Following a route

• Mode selection :

GOTO → MENU →
$$\blacktriangle$$
 or \blacktriangledown (Route List or Route Plot) → ESC twice

• By cursor-created route :

GOTO → place cursor → ENT → move cursor → ENT (twice) →
$$\blacktriangle$$
 or \blacktriangledown to select route no. → ENT

• By route list:

GOTO
$$\rightarrow$$
 ▲ or \bigvee → TONE (Forward or reverse) \rightarrow ENT

Canceling route navigation

GOTO
$$\rightarrow$$
 CLR to cancel \rightarrow ENT \rightarrow ESC twice

Setting alarms

MENU →
$$\boxed{5}$$
 → select alarm by Arrow keys and set range → \boxed{ENT} → \boxed{ESC}

Changing waypoint mark size

"S" displays waypoint mark by "X".

Entering MOB mark

Press WOB over 3 seconds.

The MOB position is selected as destination point automatically.

