


## **DVP508 Document Camera**

### **User Manual**

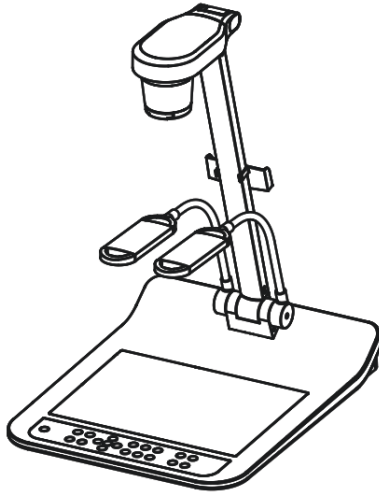

#### **[Important]**

To download the updated quick start guide, multilingual manuals, software, and drivers, please visit Dukane's website at **[www.dukane.com/av](http://www.dukane.com/av)**

# Contents

<b>Copyright Information</b> .....	<b>3</b>
<b>Chapter 1 Precautions</b> .....	<b>4</b>
Safety Precautions .....	5
FCC Warning .....	5
EN55022 (CE Radiation) Warning .....	5
<b>Chapter 2 Package Content</b> .....	<b>6</b>
<b>Chapter 3 Product Overview</b> .....	<b>7</b>
3.1 Relative Operation Position .....	7
<b>Chapter 4 Installation and Connections</b> .....	<b>8</b>
4.1 System Diagram .....	8
4.2 Connecting to a Projector or Monitor.....	9
4.3 Connecting to a Computer and Use Dukane Software or an Interactive Whiteboard (IWB) .....	9
4.4 Connecting to a Projector, 2 PCs, and a Monitor at the Same Time	10
4.5 Connecting to a TV .....	10
4.6 Connecting to DVD and display DVD images .....	11
4.7 Connecting to an HDTV .....	12
4.8 Connecting to a Computer with RS232 .....	12
4.9 Connecting to Audio Input and Output .....	13
4.10 Installing application software.....	13
<b>Chapter 5 Start Using</b> .....	<b>14</b>
<b>Chapter 6 DIP Switch Settings</b> .....	<b>15</b>
6.1 Connecting to a projector or monitor .....	15
6.2 Connecting to a TV/DVD .....	16
<b>Chapter 7 Control Panel/Remote Control and Setting Menu</b> .....	<b>17</b>
7.1 Functions of control panel and remote control .....	17
7.2 Setting Menu .....	19
<b>Chapter 8 Descriptions of major functions</b> .....	<b>22</b>

8.1	I would like to automatically adjust the image to have best brightness and focusing performance (Auto tune).....	22
8.2	I would like to set the image source of VGA OUT2 .....	22
8.3	I would like to switch image sources .....	22
8.4	I would like to make text clearer and photos more colorful .....	23
8.5	I would like to zoom in /out of images .....	23
8.6	I would like to use the auto focus .....	23
8.7	I would like to adjust the brightness .....	23
8.8	I would like to turn on / off the lamp.....	23
8.9	I would like to capture images .....	24
8.10	I would like to view captured images.....	24
8.11	I would like to delete captured images .....	25
8.12	I would like to automatically delete the captured images whenever it is turned off (Auto Erase) .....	25
8.13	I would like to record motion images (Record).....	25
8.14	I would like to switch a part of the live image (PAN) .....	26
8.15	I would like to play the slides (Slide Show) .....	26
8.16	I would like to view the X-ray film .....	27
8.17	I would like to compare images (PBP) .....	27
8.18	I would like to resume the factory default setting (Factory Reset) ...	28
8.19	I would like to reduce the image noise (Projector Type) .....	28
8.20	I would like to control projector. ....	29
8.21	Using a SD card .....	31
8.22	Computer-related functions .....	32
<b>Chapter 9 Connecting to Microscope .....</b>		<b>38</b>
<b>Chapter 10 Packing the Machine .....</b>		<b>40</b>
<b>Chapter 11 Troubleshooting.....</b>		<b>41</b>
<b>Attachment 1 .....</b>		<b>43</b>

# Copyright Information

---

Copyrights © Dukane Audio Visual Products. All rights reserved.

Copying, reproducing or transmitting this file is not allowed if a license is not provided by Dukane Audio Visual Products unless copying this file is for the purpose of backup after purchasing this product.

In order to keep improving the product, Dukane. hereby reserves the right to make changes to product specifications without prior notice. The information in this file is subject to change without prior notice.

To fully explain or describe how this product should be used, this manual may refer to names of other products or companies, nevertheless without any intention of infringement.

Disclaimer of warranties: Dukane Audio Visual Products is neither responsible for any possible technological, editorial errors or omissions, nor responsible for any incidental or related damages arising from providing this file, using, or operating this product.

DUKANE CORP AV SERVICE DEPT  
2900 Dukane Drive  
St Charles, IL 60174  
800-676-2487  
Fax 630-584-5156  
avservice@dukane.com  
<http://www.dukane.com/av/service/>

# Chapter 1 Precautions

---

Always follow these safety instructions when setting up and using the Document Camera:

1. Do not place Document Camera in tilted position.
2. Do not place the Document Camera on an unstable trolley, stand or table.
3. Do not use the Document Camera near water or source of heat.
4. Use attachments only as recommended.
5. Use the type of power source indicated on the Document Camera. If you are not sure of the type of power available, consult your dealer or local electricity company for advice.
6. Place the Document Camera on a place that it can be unplugged easily.
7. Always take the following precautions when handling the plug. Failure to do so may result in sparks or fire:
  - Ensure the plug is free of dust before inserting it into a socket.
  - Ensure that the plug is inserted into the socket securely.
8. Do not overload wall sockets, extensions leads or multi-way plug boards as this may cause fire or electric shock.
9. Do not place the Document Camera where the cord can be stepped on as this may result in fraying or damage to the lead or the plug.
10. Unplug the projector from the wall socket before cleaning. Use a damp cloth for cleaning. Do not use liquid or aerosol cleaners.
11. Do not block the slots and openings in the projector case. They provide ventilation and prevent the Document Camera from overheating. Do not place the Document Camera on a sofa, rug or other soft surface or in a built-in installation unless proper ventilation is provided.
12. Never push objects of any kind through cabinet slots. Never allow liquid of any kind to spill into the Document Camera.
13. Except as specifically instructed in this User Manual, do not attempt to operate this product by yourself. Opening or removing covers may expose you to dangerous voltages and other hazards. Refer all servicing to licensed service personnel.
14. Unplug the Document Camera during thunderstorms or if it is not going to be used for an extended period, do not place the Document Camera or remote control on top of heat-emitting equipment or heated objects such as a car and etc.
15. Unplug the Document Camera from the wall outlet and refer serving to licensed service personnel when the following situations happen:
  - If the power cable or plug becomes damaged or frayed.
  - If liquid is spilled into it or the Document Camera has been exposed to rain or water.





**<Note>: Using an incorrect battery type in the remote control may result in breakdown. Follow your country's instructions on how to dispose of used batteries.**

## ■ Safety Precautions

**Warning: To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.**

This Document Camera has a 3-wire AC line Plug. This is a safety feature to ensure that the plug will fit into the power outlet. Do not try to disable this safety feature.

If the Document Camera will not be used for a long period of time unplug it from the power outlet.

	<table border="1"><tr><td>Note</td></tr><tr><td><b>RISK OF ELECTRIC SHOCK</b></td></tr></table>	Note	<b>RISK OF ELECTRIC SHOCK</b>	
Note				
<b>RISK OF ELECTRIC SHOCK</b>				
Note: To reduce the risk of electric shock. Do not remove cover (or back). No user-serviceable parts inside. Refer servicing to licensed service Personnel.				
	This symbol indicates that this equipment may contain dangerous voltage which could cause electric shock.		This symbol indicates that there are important operating and maintenance instructions in this User Manual with this unit.	

## ■ FCC Warning

This equipment has been tested and found to comply with the limits for a Class A or B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

## ■ EN55022 (CE Radiation) Warning

This product is intended for use in a commercial, industrial, or educational environment. It is not intended for residential use.

This is a Class A product. In a domestic environment it may cause radio interference, in which case the user may be required to take adequate measures. The typical use is in a conference room, meeting room or auditorium.

# Chapter 2 Package Content

DVP508



Quick Start Guide




Download and Safety  
Instruction



C-Video Cable




Power Adapter

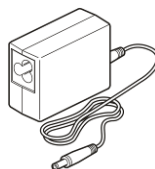

VGA Cable



 USB Cable



Audio cable



Power Cord



Appearance may vary with  
country/region

 
Remote Control




Microscope Adapter



Remote Control Holder




# Chapter 3 Product Overview

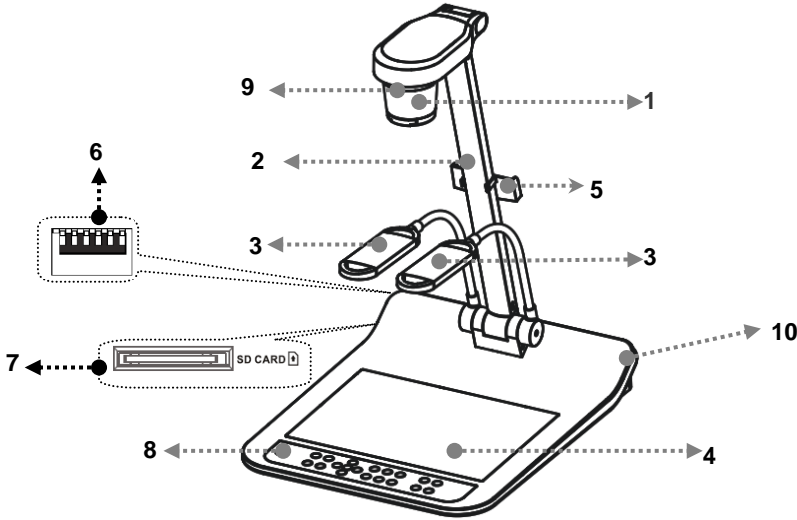

- |                                      |                        |
|--------------------------------------|------------------------|
| 1. Lens                              | 2. Camera arm          |
| 3. Auxiliary floodlight and lamp arm | 4. Backlight           |
| 5. Remote Control Holder             | 6. DIP Switch Settings |
| 7. SD card slot                      | 8. Control Panel       |
| 9. Remote sensor                     | 10. Input/output port  |


## 3.1 Relative Operation Position

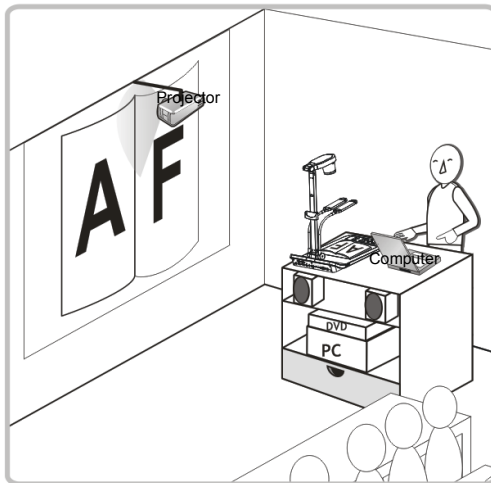




# Chapter 4 Installation and Connections


## 4.1 System Diagram

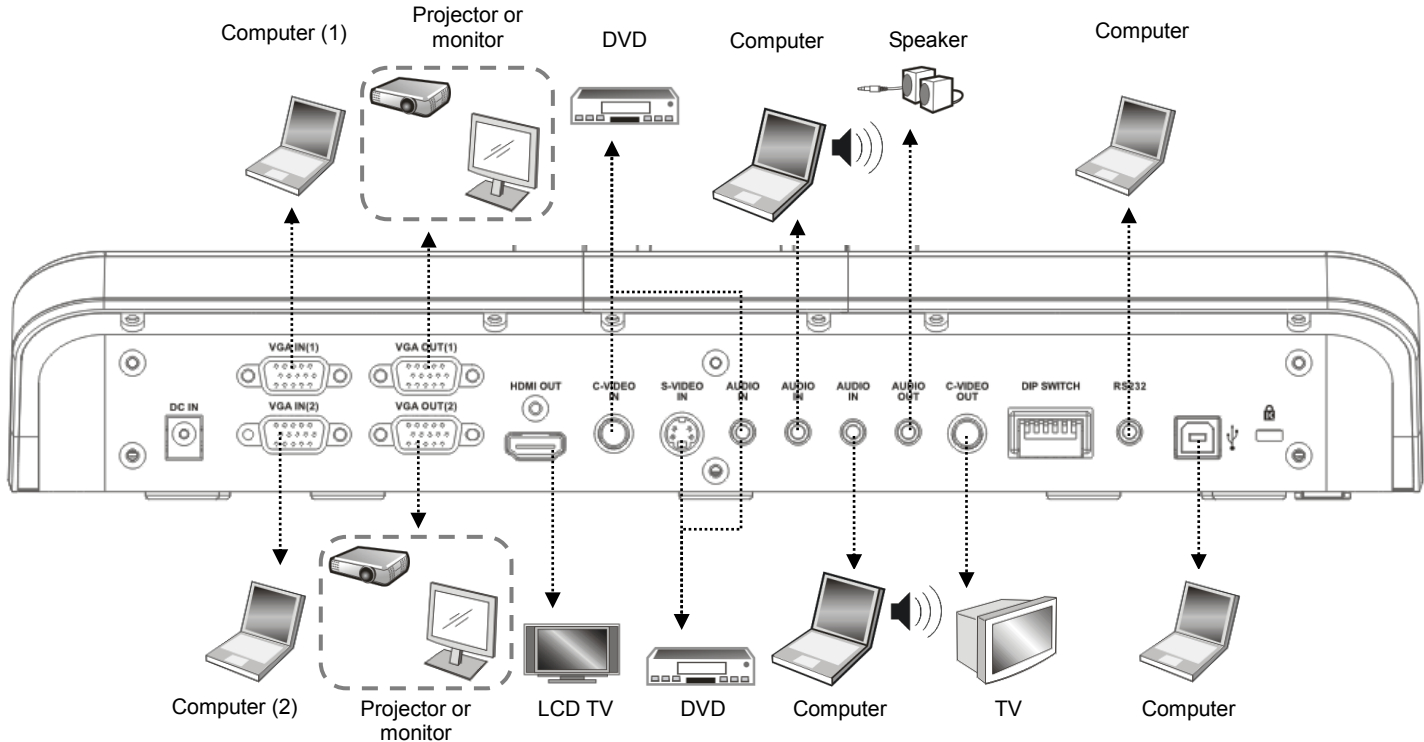

## 4.2 Connecting to a Projector or Monitor

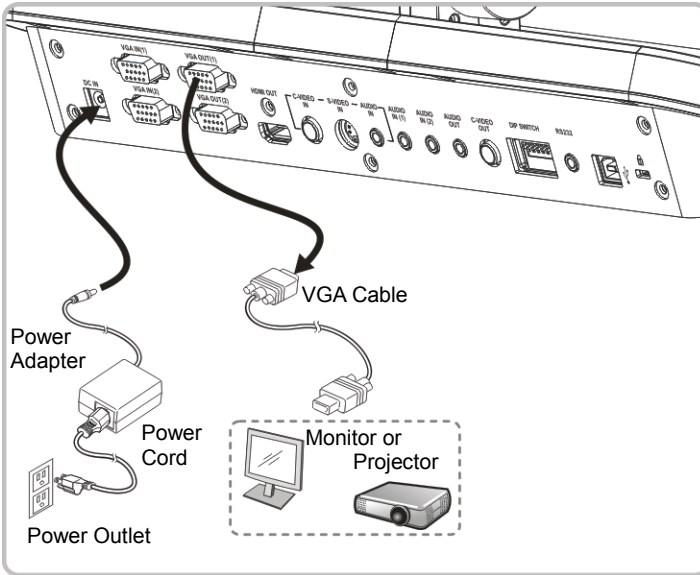



## 4.3 Connecting to a Computer and Use Dukane Software or an Interactive Whiteboard (IWB)

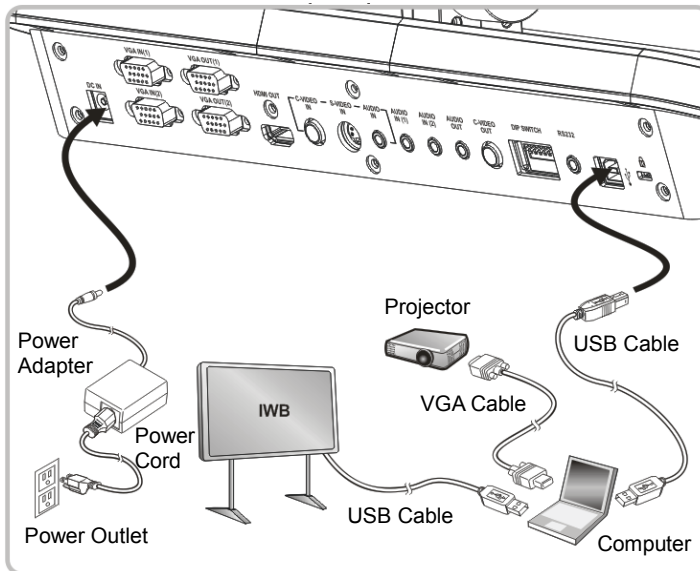


- Drivers and software can be downloaded from the Dukanes website.

## 4.4 Connecting to a Projector, 2 PCs, and a Monitor at the Same Time

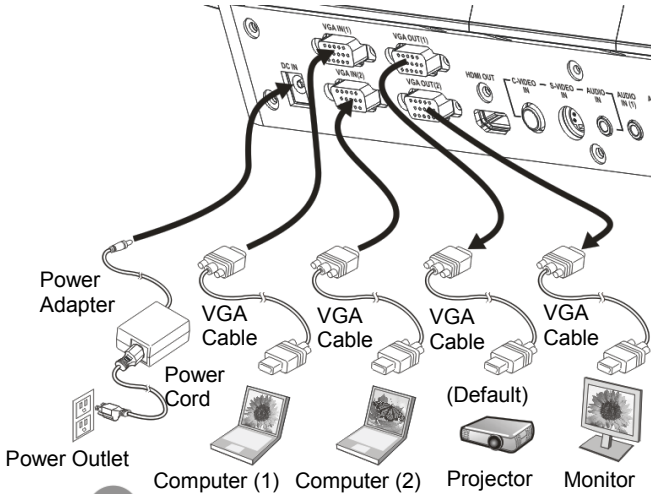

- Press  button to switch the image sources.
- For VGA 1 setting, refer to [8.3 I would like to switch image sources.](#)
- For VGA 2 setting, refer to [8.2 I would like to set the image source of VGA OUT2.](#)


## 4.5 Connecting to a TV

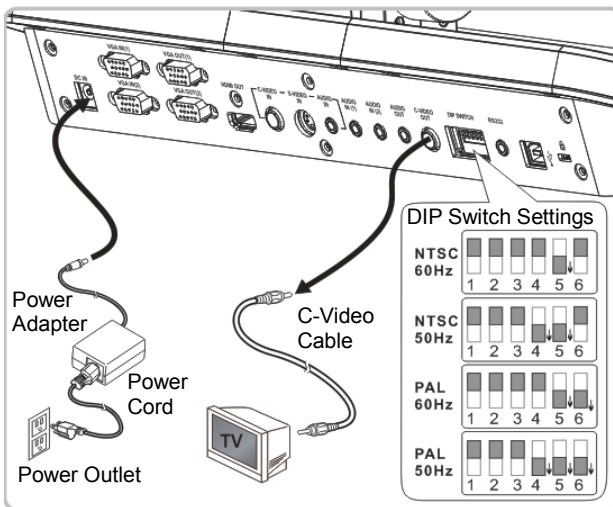


- NTSC: U.S.A., Taiwan, Panama, Philippines, Canada, Chile, Japan, Korea, and Mexico.
- PAL: Countries/regions not listed above.
- Please adjust it to be suitable for the local voltage frequency of 50/60Hz. For the frequency in actual use, please refer to the manual. ([Attachment 1](#))
- You must re-start for DIP switching configuration to take effective.

<Note>: It doesn't support C-Video and VGA simultaneously. Once C-Video is on, VGA OUT is not supported.


## 4.6 Connecting to DVD and display DVD images

- Press  button to switch the image source.
- For VGA 1 setting, refer to [8.3 I would like to switch image sources.](#)
- For VGA 2 setting, refer to [8.2 I would like to set the image source of VGA OUT2.](#)


### 4.6.1 C-Video

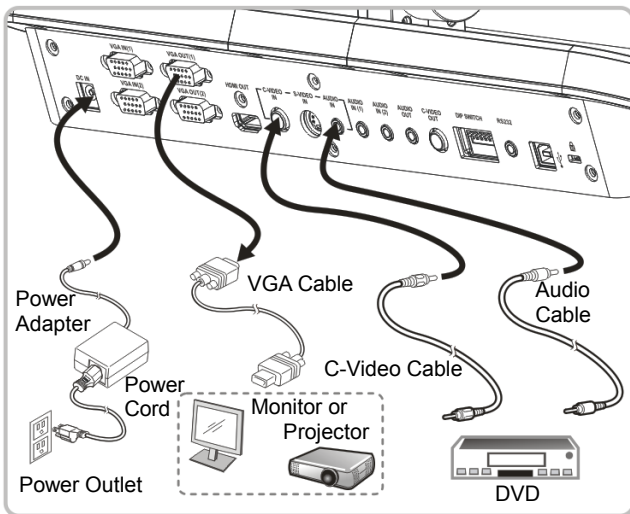


### 4.6.2 S-Video

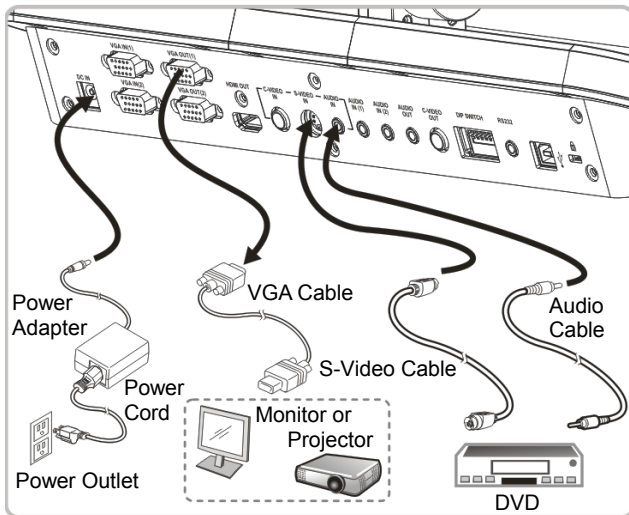

## 4.7 Connecting to an HDTV

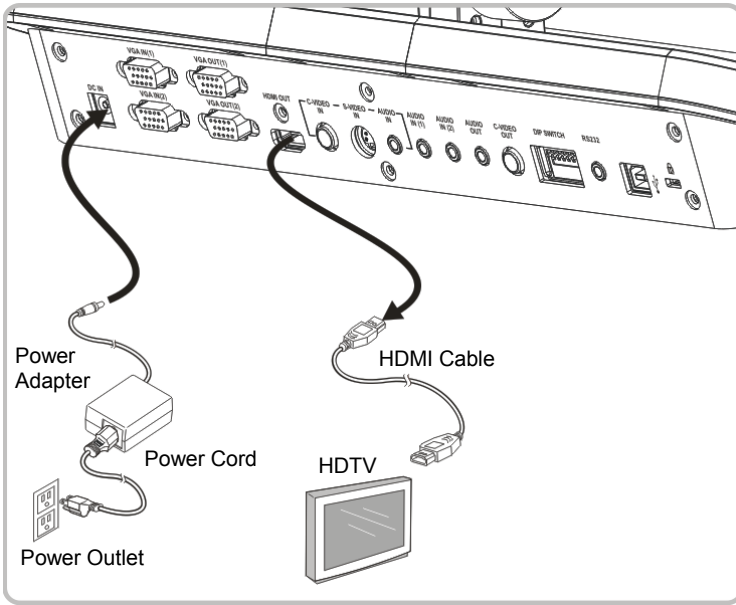


## 4.8 Connecting to a Computer with RS232

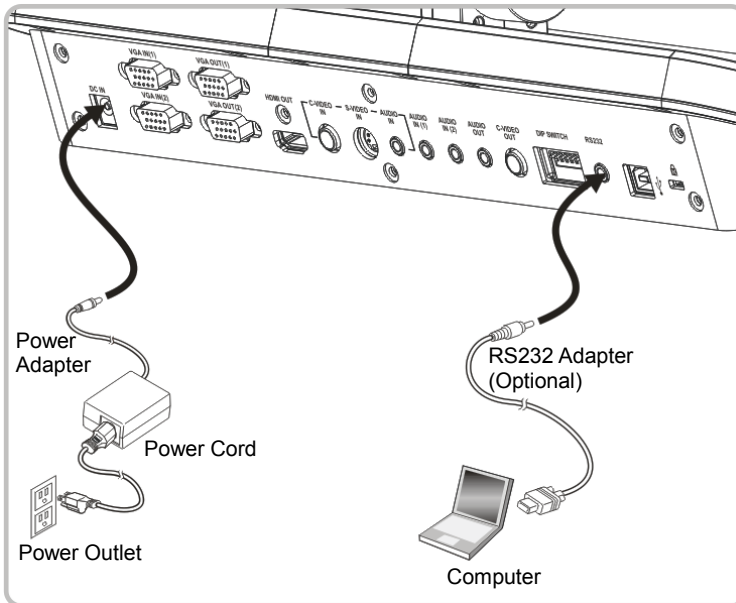

## 4.9 Connecting to Audio Input and Output

<Remark> Audio output is set according to VGA input; if VGA IN has Audio in, preset the output of audio source of VGA IN(1).

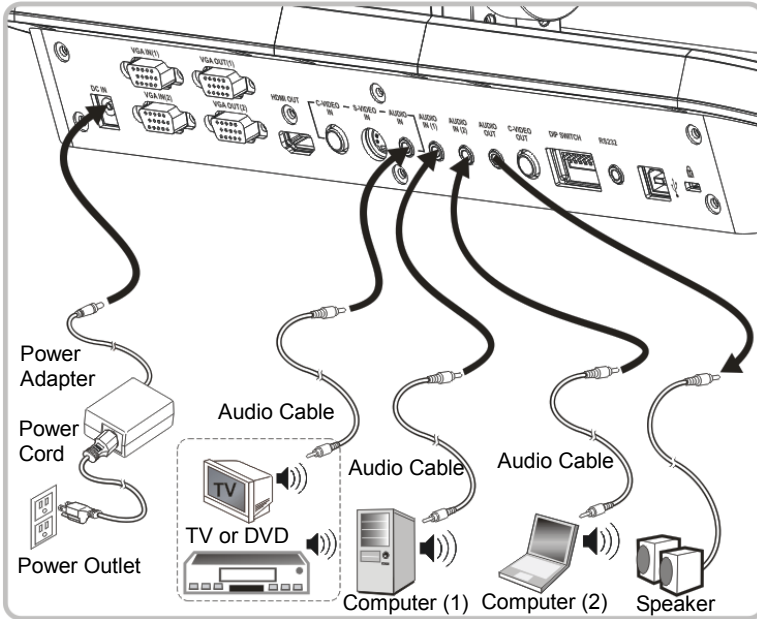

<Remark>: Or connect to an additional amplifier before connecting to the speaker.

## 4.10 Installing application software


After installing the USB driver and application software, you can use the following functions:

- Control the DVP508.
- Capture and record images.
- Annotate the image, highlight important details and save it.
- Support the full screen function.




<Note>: Please refer to Dukanes software user manual for installation steps and software operation.

# Chapter 5 Start Using

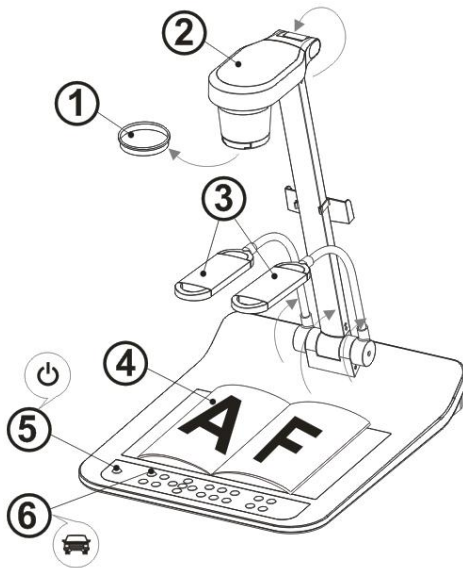---



**<Note>: Please adjust it to be suitable for the local voltage frequency of 50/60Hz. For the frequency in actual use, please refer to the manual. ([Attachment 1](#))**

1. Remove the lens cap.
2. Pull up the camera and the camera arm. The camera should aim at the center of the presenter.
3. Pull up the lamp arm to a proper position.
4. Place an object to be displayed under the camera.
5. Press [POWER]  on the **remote control** or **control panel** to power on.
6. Press [AUTO TUNE]  on the **control panel** to optimize the image.  
You are ready to present.
7. Each time the camera head is moved, press [AF]  on the **remote control** or **control panel** to refocus the lens.

**<Note>: According to your request, you can adjust the camera head slightly to aim at the center of the documents when the anchor of lens was reached.**



- When using the remote control, aim at the receptor on the DVP508, and press the power button.
- Once DVP508 is turned on, the LED on the control panel will flash a few times and stay lit. Please contact your distributor if the LED is not on.

# Chapter 6 DIP Switch Settings


<Note>: You must re-start for DIP switching configuration to take effective.

## 6.1 Connecting to a projector or monitor


### 6.1.1 XGA 60Hz output( default values) XGA 50Hz output

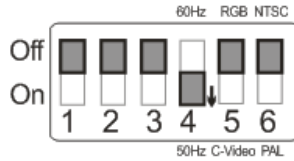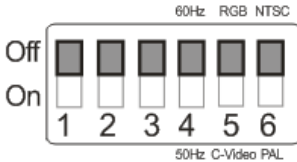


### 6.1.2 SXGA 60Hz output

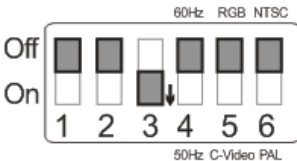


### SXGA 50Hz output

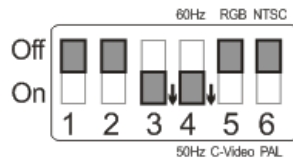


### 6.1.3 720P 60Hz output

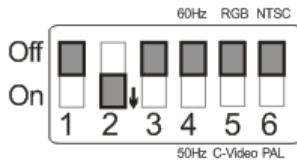


### 720P 50Hz output

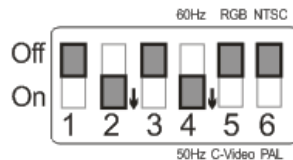

### 6.1.4 Special Mode 60Hz output

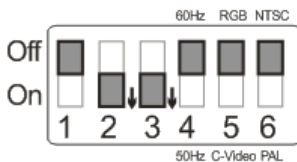


### Special Mode 50Hz output

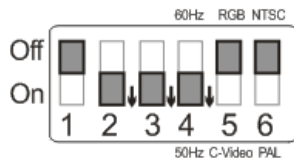




## 6.2 Connecting to a TV/DVD

### 6.2.1 NTSC: America, Taiwan, Panama, Philippines, Canada, Chile, Japan, Korea and Mexico

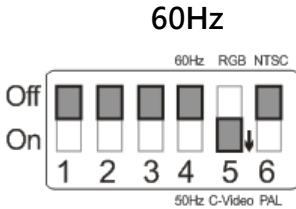

### 6.2.2 PAL: Countries or regions not listed above.

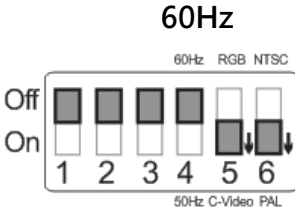


<Remark> It doesn't support C-VIDEO and VGA simultaneously. Once C-VIDEO is on, VGA is not supported.

# Chapter 7 Control Panel/Remote Control and Setting Menu

## 7.1 Functions of control panel and remote control

<Note>: OSD is not available at C-VIDEO mode. [MENU] / [ENTER] / [PLAYBACK] / [ROTATE] / [PAN] / [RECORD] / [CAPTURE] / [DELETE] / [VGA] / [SLIDE SHOW] / [PBP] functions are not available on the machine panel and the remote control.

<Remark> The below functions are listed alphabetically.

Name	Function Descriptions	Operation
	Turn on and off the Document Camera.	Remote control / Control panel
◀, ▶, ▲, ▼	Move up, down, left or right to select the needed function.	Remote control / Control panel
AF	Auto Focus	Control panel
AUTO TUNE	Automatically adjust the image to have the best brightness and focusing performance.	Remote control / Control panel
BRT+/-	Manually adjust the brightness of the image.	Remote control / Control panel
CAPTURE	Capture the image to the SD card (priority) or internal memory.	Remote control / Control panel
DELETE	Delete the image stored in the SD card (priority) or internal memory.	Remote control
ENTER	Enter/Activate functions.	Remote control / Control panel
FREEZE	Freeze the current image to temporarily stay on the screen. Press again to defreeze.	Remote control / Control panel
LAMP	Turn on / off the lamp.	Control panel

<b>MENU</b>	Activate the setting menu function/exit menu.	Remote control / Control panel
<b>PAN</b>	Switch a part of the live image.	Remote control
<b>PBP</b>	Display live images together with captured images.	Remote control
<b>PLAYBACK</b>	Display the list of captured images.	Remote control / Control panel
<b>Projector ON</b>	Turn on the projector.	Control panel
<b>Projector OFF</b>	Turn off the projector.	Control panel
<b>RECORD</b>	Press [Record] to record images to SD card (priority), press [Record] again to stop recording.	Remote control / Control panel
<b>ROTATE</b>	Rotate the image by 0°/90°/180°/270°	Control panel
<b>SLIDE SHOW</b>	Show the photos or videos stored in the SD card (priority) or internal memory in slide mode.	Remote control / Control panel
<b>VGA 1</b>	Switch between different image sources of <b>VGA 1</b> Document Camera/VGA IN(1)/VGA IN(2)/DVD	Remote control / Control panel
<b>VGA 2</b>	Switch between different image sources of <b>VGA 2</b> VGA Out (VGA OUT(1)) / VGA IN(1) / VGA IN(2) <Note> <b>VGA 2</b> button functions only when <b>VGA OUT2</b> is set to <b>(VGA IN)</b> , and for the related setting, refer to <a href="#">8.2 I would like to set the image source of VGA OUT2.</a>	Control panel
<b>ZOOM +/-</b>	Increase or decrease the image size.	Remote control / Control panel

## 7.2 Setting Menu

<Remark> Press [MENU] on the remote control or control panel to enter the setting menu; The bold underlined values in the following table are the defaults.

1 <sup>st</sup> Level Major Items	2 <sup>nd</sup> Level Minor Items	3 <sup>rd</sup> Level Adjustment values	Function Descriptions
Display	Auto Tune	<u>Enter</u>	Adjust the image to the optimal condition.
	Focus	0~ <u>A</u> ~Max	Use the left and right arrow keys to adjust focal length on an object.
	Brightness	0~ <u>A</u> ~Max	Use the left and right arrow keys to adjust brightness.
	Mode	<u>Normal</u> /Slide/Film /Microscope	Use the left and right arrow keys to select the image mode.
	Photo/Text	<u>Photo</u> /Text/Gray	Use the left and right arrow keys to select the image mode.
	Night Vision	On/ <u>Off</u>	Use the left and right arrow keys to select. The night vision mode suits with darker environment.
	Digital Zoom	On/ <u>Off</u>	Use the left and right arrow keys to turn <b>digital zoom</b> on/off.
Storage	Slide Show	<u>Enter</u>	Press [ENTER] to play the photos or videos stored in the SD card (priority) or internal memory.
	Slide Show Effect	1. <u>Off</u> 2. Shutter 3. Right 4. Down 5. Side 6. Open	Use the left and right arrow keys to select the image switch mode.
	Delay	1. 0.5 Sec 2. <u>1 Sec</u> 3. 3 Sec 4. 5 Sec 5. 10 Sec 6. Manual	Use the left and right arrow keys to select the delay time. Select manual mode to switch images manually.
	Image Quality	1. High 2. <u>Medium</u> 3. Low	Use the left and right arrow keys to select the image quality for the captured images and recorded videos.
	Copy To SD Card	<u>Enter</u>	Press [ENTER] to immediately copy the data in Document Camera to the SD card.

	<b>Delete All</b>	Yes/ <u>No</u>	Use the left and right arrow keys to select, and then press [ENTER] to confirm the deletion of photos. Delete the image stored in the SD card (priority) or internal memory.
	<b>Format</b>	Yes/ <u>No</u>	Use the left and right arrow keys to select, and then press [Enter] to format the data stored in the SD card (priority) or internal memory.
	<b>USB Transfer</b>	<u>Camera</u> /Storage device	Use the left and right arrow keys to select the USB transfer mode. 1. Camera: Connecting the DVP508 to view live image. 2. Storage device: connecting to the SD card (priority) or internal memory.
<b>Setting</b>	<b>Capture</b>	1. <u>Single</u> 2. Continuous 3. Disable	Use the left and right arrow keys to select the video capture mode. (Single/Continuous/Disable)
	<b>Capture Time</b>	1. <b>1 hr</b> 2. 2 hr 3. 4 hr 4. 8 hr 5. 24 hr	Use the left and right arrow keys to set the capture time. <Note> It only works when the capture mode is set to [continuous].
	<b>Capture Interval</b>	1. <u>5 Sec</u> 2. 10 Sec 3. 30 Sec 4. 1 Min. 5. 2 Min. 6. 5 Min.	Use the left and right arrow keys to set the capture interval. <Note> It only works when the capture mode is set to [continuous].
	<b>Auto Exposure</b>	<u>On</u> /Off	Regardless of outside environment, the machine will adjust the brightness to the optimal condition. Use the left and right arrow keys to select.
	<b>White Balance</b>	<u>Enter</u>	Regardless of outside light or color, the machine will adjust the color to the optimal condition; Press [Enter] to activate.
	<b>Projector Type</b>	DLP/ <u>LCD</u>	Use the left and right arrow keys to select the projector type and reduce image noise.
	<b>Volume</b>	0~ <u>A</u> ~Max	Use the left and right arrow keys to adjust the volume.

	<b>VGA OUT(2)</b>	<b>VGA IN / <u>VGA Out(1)</u></b>	<p>1. Use the left and right arrow keys to select the images displayed by VGA OUT(2).</p> <p>2. VGA IN: Use the [VGA 2] key on the <b>control panel</b> to select whether the screen images are output from VGA IN(1) or VGA IN(2).</p> <p>VGA Out(1): The image output is the same as the setting of VGA Out(1)</p>
<b>Advanced</b>	<b>Language</b>	<ol style="list-style-type: none"> <li>1. <b>English</b></li> <li>2. 繁體中文</li> <li>3. Deutsch</li> <li>4. Français</li> <li>5. Español</li> <li>6. Русский</li> <li>7. Nederlands</li> <li>8. Suomi</li> <li>9. Polski</li> <li>10. Italiano</li> <li>11. Português</li> <li>12. Svenska</li> <li>13. ČESKY</li> <li>14. 简体中文</li> </ol>	<p><u>English</u> Traditional Chinese German French Spanish Russian Dutch Finnish Polish Italian Portuguese Swedish Czech Simplified Chinese</p> <p>Use the left and right arrow keys in the Language option to select the preferred language.</p>
	<b>Lock Down</b>	On/ <u>Off</u>	<p>Use the left and right arrow keys to turn the lock down function on and off.</p> <p>You can set the password when [On] is selected.</p>
	<b>Auto Erase</b>	On/ <u>Off</u>	<p>Use the left and right arrow keys to turn the auto erase function on and off. When [On] is selected, the saved images will automatically be deleted when the system is turned off.</p>
	<b>Preset Load</b>	Yes/ <u>No</u>	<p>Read the value of the current image mode. Use the left and right arrow keys to select, and then press [ENTER] to confirm.</p>
	<b>Preset Save</b>	Yes/ <u>No</u>	<p>Save the value of the current image mode. Use the left and right arrow keys to select, and then press [ENTER] to confirm.</p>
	<b>Factory Reset</b>	Yes/ <u>No</u>	<p>Use the left and right arrow keys to select, and then immediately press [ENTER] to activate the factory reset.</p>

# Chapter 8 Descriptions of major functions

---

## 8.1 I would like to automatically adjust the image to have best brightness and focusing performance (Auto tune)

1. Press [AUTO TUNE] on the **remote control** or **control panel** to adjust automatically.

## 8.2 I would like to set the image source of VGA OUT2

Press [MENU] on the **remote control** or **control panel** to enter the setting menu

1. Press [▶] or [◀] to the [Setting] menu.
2. Press [▼] to enter [VGA OUT2].
3. Press [◀] or [▶] to select [VGA OUT 1/VGA IN].
4. Press [MENU] to exit.

When **VGA OUT2** is set to **VGA IN**,

1. Press [**VGA 2**] on the **control panel** to switch between the image sources of **VGA IN(1)** and **VGA IN(2)**.

## 8.3 I would like to switch image sources

The default of image source is Live Image. Press [**VGA 1**] on the **remote control** or **control panel** to switch setting and DVP508 will switch among the following five modes in turn:

1. Live images (default)
2. VGA IN(1)
3. VGA IN(2)
4. DVD C-Video
5. DVD S-Video

**<Note> VGA IN mode will start only when it is connected to input equipment.**

## 8.4 I would like to make text clearer and photos more colorful

The default of [PHOTO/TEXT] is PHOTO. Use the **remote control** or the **control panel** to change settings.

- [Photo] (default): for viewing photos or text with photos and will make the photos more colorful.
  - [Text]: for viewing text files and will make the text clearer.
  - [Gray]: for viewing black and white photos and will make the grayscale differentiation more distinct.
1. Press [MENU] to enter the setting menu.
  2. Press [▶] or [◀] to select [Display].
  3. Press [▼] to select [Photo/Text].
  4. Press [◀] or [▶] to select [Photo/Text/Grey] (Refer to [the previous section](#) to make the most appropriate selection).
  5. Press [MENU] to exit.

## 8.5 I would like to zoom in /out of images

1. Press [ZOOM +] on the **remote control** or **control panel** to zoom in.
2. Press [ZOOM -] on the **remote control** or **control panel** to zoom out.

## 8.6 I would like to use the auto focus

1. Press [AF] on the **remote control** or **control panel**.

## 8.7 I would like to adjust the brightness

1. Use the **remote control** or the **control panel** and press [BRT +] to increase the brightness.
2. Use the **remote control** or the **control panel** and press [BRT -] to decrease the brightness.

## 8.8 I would like to turn on / off the lamp

**The default of the lamp is ON. When using the control panel:**

1. Press [Lamp] to switch ON/OFF. (in the sequence of arm lamp/backlight/OFF)



## 8.9 I would like to capture images

### 8.9.1 Setting the quality of captured images

1. Press [MENU] on the **remote control** or **control panel** to enter the setting menu.
2. Press [▶] or [◀] to the [Storage] menu.
3. Press [▼] to find [Image Quality].
4. Press [▶] or [◀] to select among [High/Medium/Low].
5. Press [MENU] to exit.

### 8.9.2 Setting continuous capture

1. Press [MENU] on the **remote control** or **control panel** to enter the setting menu.
2. Press [▶] or [◀] to the [Setting] menu.
3. Press [▼] to find [Capture].
4. Press [▶] or [◀] to select [continuous].
5. Press [▼] to find [Capture Time]; Press [▶] or [◀] to select time settings.
6. Press [▼] to find [Capture Interval]; Press [▶] or [◀] to select time settings.
7. Press [MENU] to exit.

### 8.9.3 Capturing and saving images

1. Press [CAPTURE] on the **remote control** or **control panel**.  
**<Remark> If the capture mode is set to [continuous], press [CAPTURE] to capture images continuously, press [CAPTURE] again to exit.**

## 8.10 I would like to view captured images

**<Note> Images over 8 MB, cannot be played. Whilst playing, the [Rotate] function can be activated to rotate the images.**

1. Press [PLAYBACK] on the **remote control** or **control panel** to display thumbnails of all captured images.
2. Press [▲] or [▼] or [◀] or [▶] to select the thumbnail you want you view.
3. Press [ENTER] for the full-screen display of the image.
4. Press [▶] or [◀] to turn to the previous/next image.
5. Press [MENU] to exit.

## 8.11 I would like to delete captured images

1. Use the remote control and press [PLAYBACK]
2. Press [▲] or [▼] or [◀] or [▶] to select the thumbnail you want you delete.
3. Pressing [DELETE] will open a [Delete File] window.
4. Press [▶] or [◀] to select [Yes] (The default value is No).
5. Press [ENTER] to delete the selected photo.
6. Press [MENU] to exit.

## 8.12 I would like to automatically delete the captured images whenever it is turned off (Auto Erase)

1. Press [MENU] on the **remote control** or **control panel** to enter the setting menu.
2. Press [▶] or [◀] to the [Advanced] menu.
3. Press [▲] or [▼] to [Auto Erase].
4. Press [▶] or [◀] to select [ON].
5. Press [MENU] to exit.
6. It will automatically delete all captured photos when it is turned off.

## 8.13 I would like to record motion images (Record).

### 8.13.1. Setting the image quality

1. Press [MENU] on the **remote control** or **control panel** to enter the setting menu.
2. Press [▶] or [◀] to the [Storage] menu.
3. Press [▼] to find [Image Quality].
4. Press [▶] or [◀] to select among [High/Medium/Low].
5. Press [MENU] to exit.

### 8.13.2. Recording motion images

1. Press [RECORD] on the **remote control** or **control panel** to start recording videos.
2. Press [RECORD] again to stop recording.

**<Remark> Record sounds with the built-in microphone of the control panel.**

### 8.13.3. Playing image

1. Press [PLAYBACK] on the **remote control** or **control panel** to display thumbnails of all videos recorded.
2. Press [▶] or [◀] or [▲] or [▼] to select files to browse.
3. Press [ENTER] for full-screen play.
4. Press [▲] or [▼] to adjust the volume of the video.

**<Note> When motion images are played back, the volume of Audio Out can be controlled by up/ low arrow keys. In any other modes, you are not allowed to control volume using [▲] or [▼] key.**

5. Press [▶] or [◀] to turn to the previous/next video.
6. Press [SOURCE] to exit.

**<Note> Only the files recorded can be played, and when live sound output is not available, additional amplifier can be connected to AUDIO OUT.**

## 8.14 I would like to switch a part of the live image (PAN)

Use **Remote control**:

1. Press [PAN] to enter the image pan mode.
2. Press [▲] or [▼] or [◀] or [▶] to move and view the partial enlarged images.
3. Press [PAN] to exit the partial enlarged mode.

## 8.15 I would like to play the slides (Slide Show)

### 8.15.1 Setting the slide show effect:

1. Press [MENU] on the **remote control** or **control panel** to enter the setting menu.
2. Press [▶] or [◀] to the [Storage] menu.
3. Press [▼] to find the [Slide Show Effect].
4. Press [▶] or [◀] to select image switch mode between [Off / Shutter / Right / Down / Side / Open].
5. Press [MENU] to exit.

## 8.15.2 Setting delay time

1. Press [MENU] on the **remote control** or **control panel** to enter the setting menu.
2. Press [▶] or [◀] to the [Storage] menu.
3. Press [▼] to find [Delay].
4. Press [▶] or [◀] to select image switch mode between [0.5 Sec / 1 Sec / 3 Sec / 5 Sec / 10 Sec / Manual].
5. Press [MENU] to exit.

## 8.15.3 Activating/Stopping the slide show

<Note> Images over 8 MB, cannot be played.

If you use the remote control or the control panel:


1. Press [SLIDE SHOW] to start playing.
2. Press [SLIDE SHOW] again to stop playing.

## 8.16 I would like to view the X-ray film

1. Place an X-ray film to be displayed under the camera.
2. Press [Lamp] button on the control panel to switch on the **Backlight** (in the sequence of arm lamp/backlight/OFF)
3. Press [AUTO TUNE] button to optimize the image.

## 8.17 I would like to compare images (PBP)

This function will compare and contrast a live image with a captured image.

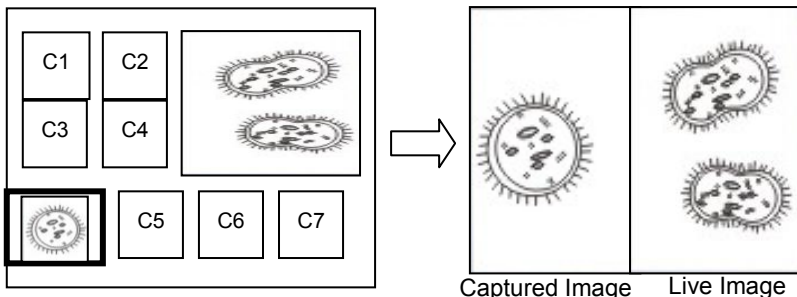

### Use Remote control

1. Press [PBP] to enter the PBP (Picture by Picture) photo selection screen.
2. Press [▲] or [▼] or [◀] or [▶] to select the file to be compared.
3. Press [ENTER] to activate image comparison.
4. Press [▶] or [◀] to move the image left or right.  
<Remark> Press [ENTER] to switch between the captured and live images.

5. Press [PLAYBACK] to return to image thumbnails.
6. Repeat Steps 2 ~ 4.
7. Press [MENU] to exit.

## 8.18 I would like to resume the factory default setting (Factory Reset)

### 8.18.1 Use the OSD menu


1. Press [MENU] on the **remote control** or **control panel** to enter the setting menu.
2. Press [▶] or [◀] to the [Advanced] menu.
3. Press [▼] to the [Factory Reset].
4. Press [▶] or [◀] to select [Yes].
5. Press [ENTER] to activate.

### 8.18.2 Use Compound Key

1. Use the **remote control** or **control panel**, and press [Enter + Auto Tune] simultaneously to restore the initial value.

## 8.19 I would like to reduce the image noise (Projector Type)

1. This function enables Document Camera to automatically clear image noise. The noise is especially obvious when Document Camera is connected to a DLP projector. You can set the DLP projector to improve the image quality.
2. If there is special noise when VGA out is connected, please set DLP option to improve the image quality.

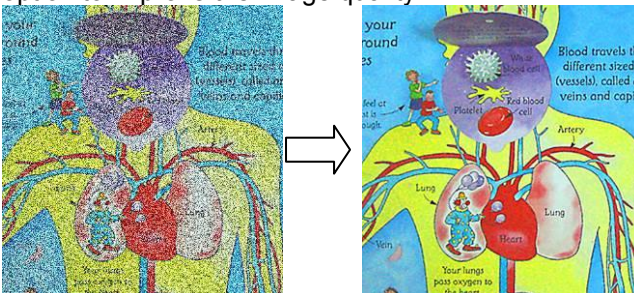

3. Press [MENU] on the **remote control** or **control panel** to enter the setting menu.
4. Press [▶] or [◀] to the [Setting] menu.
5. Press [▼] to enter [Projector Type].
6. Press [▶] or [◀] to select [LCD/DLP].
7. Press [MENU] to exit.





## 8.20 I would like to control projector.

### 8.20.1 Connecting to a computer


Connect DVP508 to a computer, and for connecting method, refer to User Manual [4.8 Connecting to a Computer with RS232](#).

### 8.20.2 Installing application software

- 8.20.2.1 Go to Dukanes website: [www.dukane.com/av](http://www.dukane.com/av) download the software [**Projector Control**] from the download page.
- 8.20.2.2 Extract the file and then click [**Setup.exe**] to install.
- 8.20.2.3 The installation wizard will guide you through the process. Please follow the on-screen instructions and press [**Next**] for the next step.

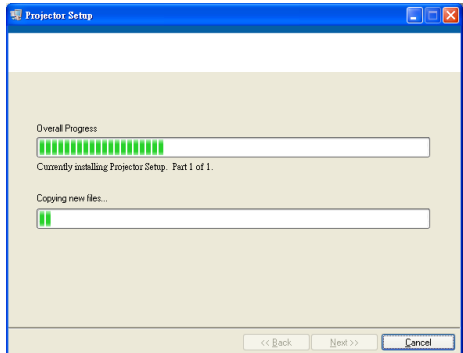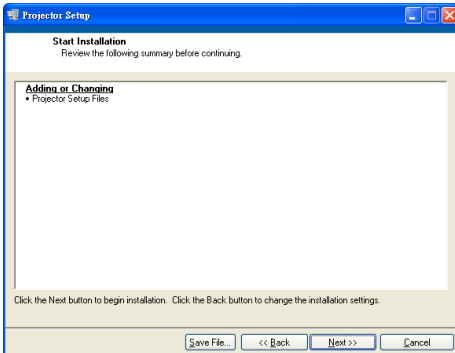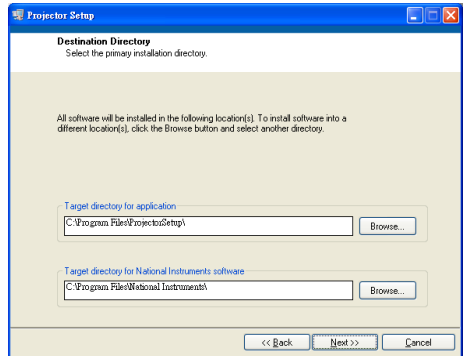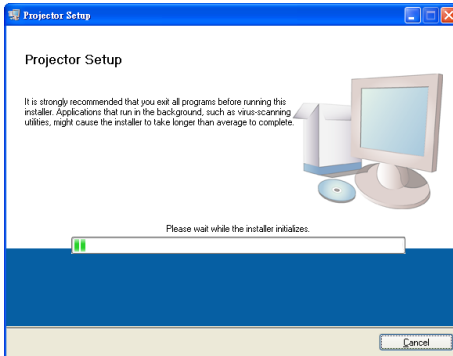

- 8.20.2.4 When the installation is completed, press **[Finish]** to end the installation procedure.

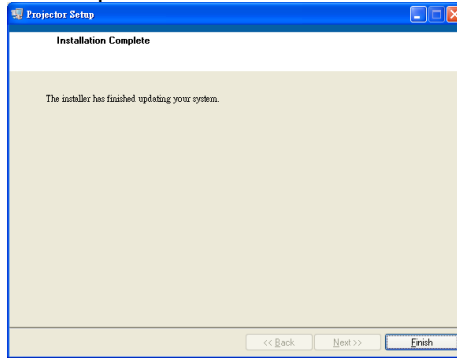


## 8.20.3 Setting procedure

- 8.20.3.1 Click[Start]/[Programs]/[Projector Setup]



- 8.20.3.2 When the procedure is started, a setting window will pop up.

- 8.20.3.3 Press **[CONNECT]** to set up the connection. **[Com Port]** lamp flashing green indicates a successful connection.

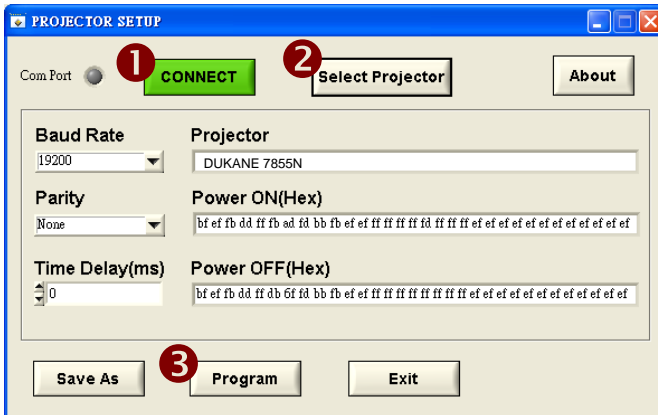


- 8.20.3.4 Press **[Select Projector]** to select the projector type and display information.
- 8.20.3.5 Press **[Program]** to switch DVP508 settings.
- [Note]** If any setting is modified, press **[Save as]** to set up a “\*.txt” file for setting storage.
- 8.20.3.6 When the setting is completed, press **[Exit]** to exit.

## 8.20.4 Connecting to a projector

8.20.4.1 Remove the RS-232 cable from the computer.

8.20.4.2 Connect the RS-232 cable to the RS-232 port on the projector.

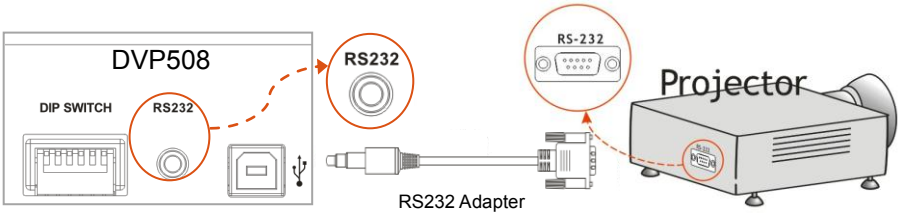

## 8.20.5 Control of projector


8.20.5.1 Press [**Projector ON**] on the **control panel** to turn on the projector.

8.20.5.2 Press [**Projector OFF**] on the **control panel** to turn off the projector.

## 8.21 Using a SD card

### 8.21.1 Deactivate the write protect function (SD Lock)

If the write protect function of the SD card is activated, you will not be able to use the **Capture** function, although you can still read the files in it. Adjust the Lock of the SD card to deactivate the write protect function.

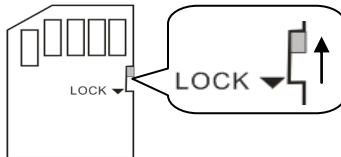

### 8.21.2 Inserting a SD card


8.20.2.1 The screen will display [Copy to SD card] and ask if you would like to copy the files saved in the DVP to a SD card.

➤ Press [▶] or [◀] on the **control panel** to select.





8.20.2.2 The screen will display as follow, once you insert an unformatted SD card:

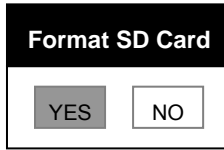

➤ Press [▶] or [◀] on the control panel to select.

<Note> The data previously saved on the SD card will be erased when it is formatting.

### 8.21.3 Ejecting a SD card


<Note> Turn the power off before ejecting the SD card to avoid damaging the SD card.

## 8.22 Computer-related functions

Ensure that the USB cable is connected and the drivers are installed before using the computer-related functions. Refer to [Chapter 4 Installation and Connections](#) in this user manual.

### 8.22.1 I would like to insert a photo in MS-Paint

1. Click [File/From Scanner or Camera] in MS-Paint shown as the bottom left figure.

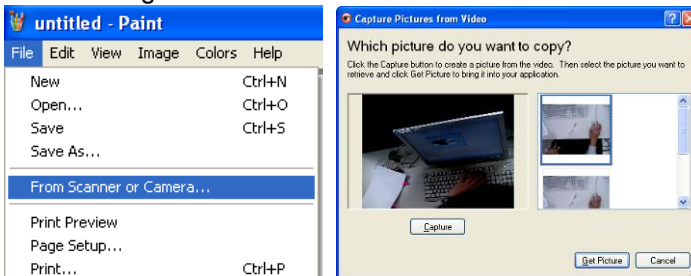


2. Click [Get Picture] will capture the photos of live images and insert the files in use shown as top right figure.

## 8.22.2 I would like to insert a photo in *MS-Word*

<Remark> For Windows Office 2003 or later versions, please use the function with OneNote.

1. Click [Insert / Image / From Scanner or Camera] in *MS-Word*.

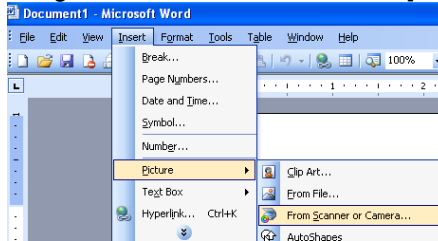

2. Select [Visual Presenter V2] and click [Custom Insert].




3. Click [Get Picture]. It will capture the photo of live image.



## 8.22.3 I would like to change the setting of the DVP508 and then capture a photo in *MS-Word*


1. Click [Insert / Image / From Scanner or Camera] in *MS-Word*.

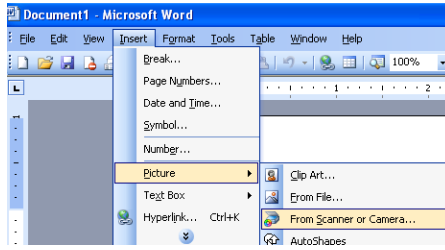

2. Select [Visual Presenter V2 TWAIN] and click [Custom Insert].



3. A window showing a live image (see below) will be displayed:

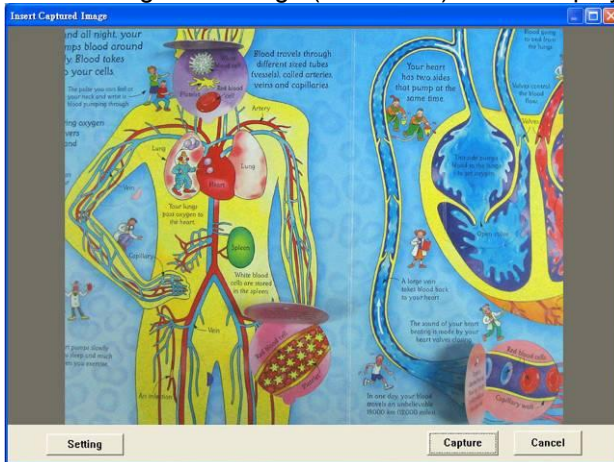


4. Press [Setting] To control the DVP508 via the Camera Settings interface. The operating procedure is the same with the **remote control** and **control panel** of the DVP508. Refer to [User Manual Chapter 7 Control Panel / Remote Control and Setting Menu.](#)
5. Press [Capture] to capture images in **MS-Word**.
6. Press [Cancel] to exit.

## 8.22.4 I would like to set the DVP508 as a webcam for Skype

The DVP508 can be used as a webcam for teleconferencing software such as **Skype** or **MSN**. With Skype as an example, operating instructions are provided below:

1. Open **Skype** and enter [Tools] > [Options].
2. Select [Video Settings] > [webcam] > [Visual Presenter V2] and check Start my video automatically when I am in a call, as shown below.

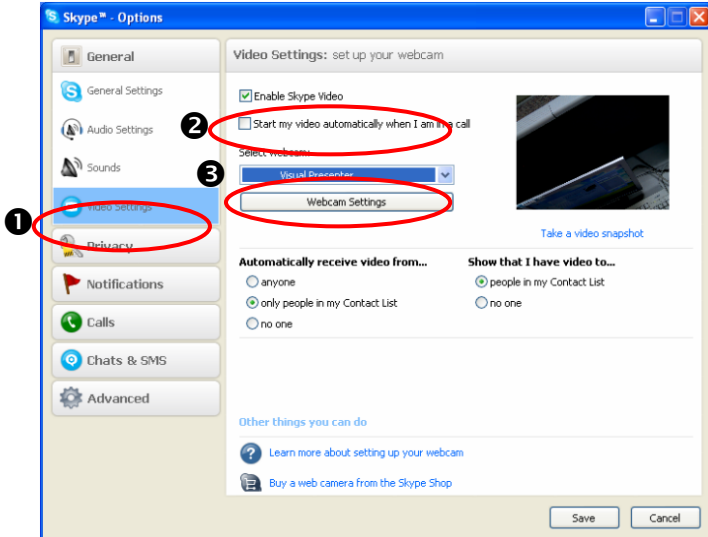


3. Start calling your contact. When both sides are connected, **Skype** will display the video screen.



## 8.22.5 I would like to set the DVP508 as a PC Camera


1. Press [MENU] on the **control panel** or **remote control** to enter the setting menu.
2. Press [▶] or [◀] to the [Storage] menu.
3. Press [▼] to find [USB Transfer].
4. Press [▶] or [◀] to select [Camera].
5. A window will be displayed, showing the [Visual Presenter V2], as shown below.

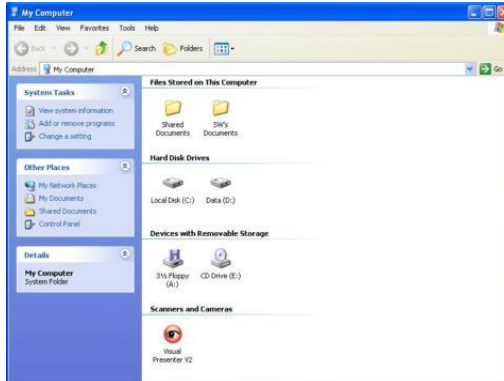

6. Click the [Visual Presenter V2].

## 8.22.6 I would like to set the DVP508 as a Removable Disc

1. Press [MENU] on the **control panel** or **remote control** to enter the setting menu.
2. Press [▶] or [◀] to the [Storage] menu.
3. Press [▼] to find [USB Transfer].
4. Press [▶] or [◀] to select [Storage device].
5. Press [MENU] to exit.
6. A [Removable Disc] will be displayed.

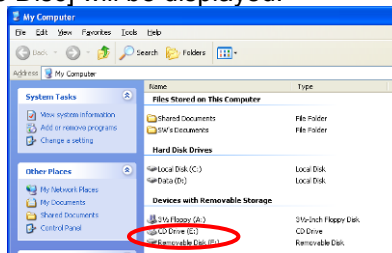

**<Remark> The Removable Disc will select SD card if a SD card has been inserted, but if a SD card has not been inserted, the Removable Disc is internal memory**

**<Note> Doing this will disable the [Capture] function. Suggest you return it to [Camera] mode after using this function. Please follow the [8.21.5 Steps 1 ~ 5](#).**


### **8.22.7 I would like to connect Interactive Whiteboard**

To connect an Interactive Whiteboard, please go to the SD card or Dukanes website ( [www.dukane.com/av](http://www.dukane.com/av) ) to download user manual for a specific brand.


# Chapter 9 Connecting to Microscope

- 1 Mount the **microscope adaptor** (Optional accessory) onto the microscope.  
<Note> Please choose an appropriate microscope adaptor. Microscope adaptor accessories are applicable to eyepieces of Ø28mm, Ø31mm, Ø33mm, and Ø34mm.
- 2 The lens of DVP508 connects with the **microscope adaptor**.

If the eyepiece is Ø33mm or Ø34mm, only one Dukane microscope adaptor is needed.

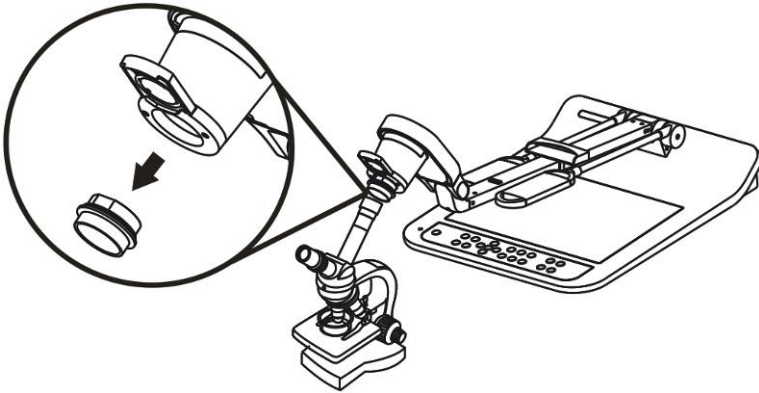

If the eyepiece is Ø28mm or Ø31mm, you need two microscope adaptors. (1. The Dukanes microscope adaptor. 2. The microscope adaptor suitable for the eyepiece size Ø28mm or Ø31mm).

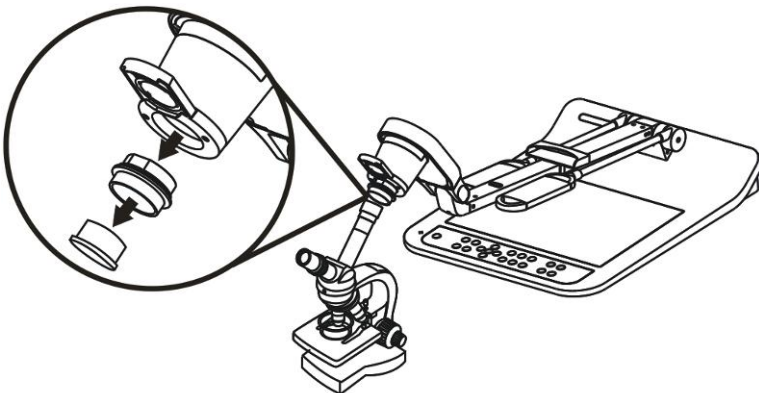

- 3 Select the **[Microscope]** Mode

- 3.1. If you use the **remote control** or the control panel
  - 3.1.1. Press [MENU] to enter the setting menu.
  - 3.1.2. Press [▶] or [◀] to the [Display].
  - 3.1.3. Press [▼] to select [Mode].
  - 3.1.4. Press [▶] or [◀] to the [Microscope].

#### 4 If the image is not clear

- 4.1. Please adjust the focus of microscope.
- 4.2. Please press the **control panel** [AF] button to activate the auto focus.

#### 5 Digital Zoom

- 5.1. If you use the **remote control** or the control panel
  - 5.1.1. Press [MENU] to enter the setting menu.
  - 5.1.2. Press [▶] or [◀] to the [Display].
  - 5.1.3. Press [▼] to select [Digital Zoom].
  - 5.1.4. Press [▶] or [◀] to select [On].
  - 5.1.5. Press [Zoom +] / [Zoom -]

**<Note> Please reset to normal mode after using the microscope, otherwise, you are unable to use zoom in/out function.**



1. Press [MENU] on the **remote control** or **control panel** to enter the setting menu.
2. Press [▶] or [◀] to the [Display].
3. Press [▼] to select [Mode].
4. Press [▶] or [◀] to the [Normal].



# Chapter 10 Packing the Machine


---

1. Put the remote control back to the holder.
2. Fold back the camera head to align with the arm.
3. Turn the two lamp arms and the arm of camera head down and adjust them to be parallel with the platform.
4. Put the lens cap on the camera head.
5. Finally, fold the machine as in the following figure.

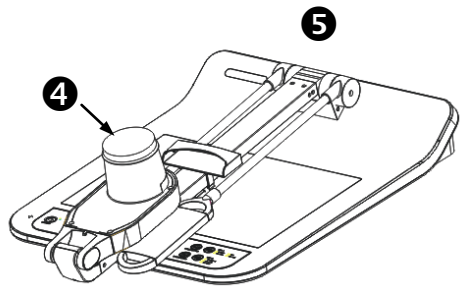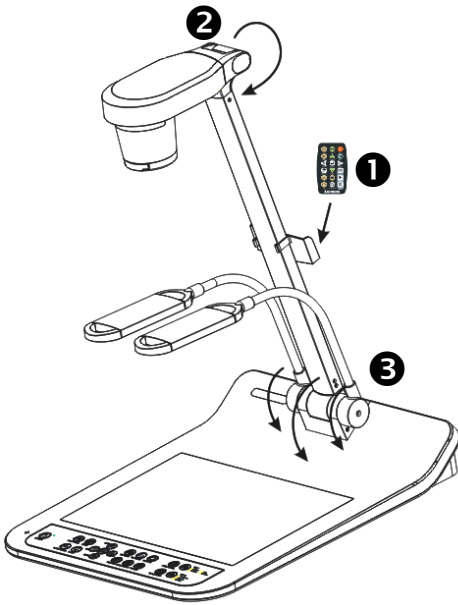

# Chapter 11 Troubleshooting

This chapter describes problems you may encounter while using DVP508. If you have questions, please refer to related chapters and follow all the suggested solutions. If the problem still occurred, please contact our distributors or service center.

No.	Issues	Solutions
1	<b>Boot without power</b>	Make sure you have plugged in the power cord.
2	<b>No image output from the DVP508</b>	<ol style="list-style-type: none"><li>1. Check the power.</li><li>2. Check the connection, Refer to <a href="#">User Manual Chapter 4 Installation and Connections</a></li><li>3. Check the , refer to <a href="#">User Manual Chapter 8 Descriptions of major functions 8.3 I would like to switch image sources.</a></li><li>4. Check the settings for the source of the projector. For the appropriate input selection of the projector, refer to the projectors user manual.</li><li>5. Check if DIP Switch is properly set. Refer to <a href="#">User Manual Chapter 6 DIP Switch Settings</a> for related settings.</li></ol>
3	<b>Unable to focus</b>	Probably the document is too close. Press [Zoom -] on the <b>remote control or control panel</b> . Or pull away the distance between document and lens, then press [AF].
4	<b>The image is incomplete</b>	Check the Auto Image setting of your projector. Please refer to the user manual of the projector.
5	<b>Forget the password for turning on</b>	Please contact your distributor or the service center.
6	<b>Dukanes Document Camera, Dukanes and other applications cannot be used simultaneously</b>	<b>Dukane Document Camera, Dukanes</b> and other applications cannot be executed simultaneously. Please close the currently running applications and then execute the application to be used.
7	<b>When the unit is turned on, the auxiliary floodlight</b>	Please make sure the arm lamp is set to [OFF]. For the switch-on or -off of arm lamp, refer to <a href="#">User Manual Chapter 8 Descriptions of major functions 8.8 I would</a>

	<b>do not light.</b>	<a href="#"><u>like to turn on / off the lamp.</u></a>
<b>8</b>	<b>DVP508 fails to store images or react.</b>	<ol style="list-style-type: none"> <li>1. Please make sure whether the stored data has reached the maximum storage capacity of DVP508 unit or SD card.</li> <li>2. Please make sure if SD card is adjusted to the data protection mode (Lock). Suggest you take out the SD card from DVP508, and then adjust the SD card to the mode of Unlock.</li> <li>3. Please make sure if the Capture function is set to Continuous mode or the time for capture is set to be long. For the related setting, refer to <a href="#"><u>User Manual Chapter 8 Descriptions of major functions 8.9 I would like to capture images.</u></a></li> </ol>
<b>9</b>	<b>The images outputted from DVP508 are too bright, dark or vague.</b>	Press [AUTO TUNE] to automatically adjust to the optimal brightness and focal length.
<b>10</b>	<b>The images outputted are not clear, and the moire appears.</b>	Please refer to the manual ( <a href="#"><u>Attachment 1</u></a> ), confirm the voltage frequency and reset it according to <a href="#"><u>Chapter 6 DIP Switch Settings</u></a>

# Attachment 1

## World voltage & frequency

Region/Country		Frequency	Region/Country		Frequency	Region/Country		Frequency
Chinese	English		Chinese	English		Chinese	English	
阿富汗	Afghanistan	50	大陸	China	50	關島	Guam	60
阿爾及利亞	Algeria	50	哥倫比亞	Colombia	60	石榴島	Grenada	50
安哥拉	Angola	50	剛果	Congo	50	瓜地馬拉	Guatemala	60
安地瓜	Antigua	50	哥斯大黎加	Costa Rica	60	幾內亞	Guinea	50
阿根廷	Argentina	50	古巴	Cuba	60	蓋亞納	Gayana	50
澳洲	Australia	50	塞浦路斯	Cyprus	50	海地	Haiti	60
奧地利	Austria	50	捷克	Czechoslovakia	50	夏威夷	Hawaii	60
亞述爾	Azores	50	達荷美	Dahomey	50	宏都拉斯	Honduras	60
巴哈馬	Bahamas	60	丹麥	Denmark	50	香港	Hong Kong	50
巴林	Bahrain	60	多明尼加	Dominican	60	匈牙利	Hungary	50
孟加拉	Bangladesh	50	杜拜	Dubai	50	冰島	Ice land	50
巴貝多	Babados	50	厄瓜多爾	Ecuador	60	印度	India	50
比利時	Belgium	50	埃及	Egypt	50	印尼	Indonesin	50
百慕達	Bermuda	60	薩爾瓦多	El Salvador	60	伊朗	Iran	50
玻利維亞	Bolivia	50	赤道幾內亞	Equatorial Guinea	50	伊拉克	Iraq	50
波札那	Botswana	50	衣索匹亞	Ethiopia	50	愛爾蘭	Ireland	50
巴西	Brazil	50 60	法羅群島	Faeroe Island	50	曼島	Isle of Man	50
保加利亞	Bulgaria	50	斐濟	Fiji	50	以色列	Israel	50
緬甸	Burma	50	芬蘭	Finland	50	義大利	Italy	50
蒲隆地	Burundi	50	法國	France	50	象牙海岸	Ivory Coast	50
高棉	Cambodia	50	蓋亞那	French Guiana	50	牙買加	Jamaica	50
喀麥隆	Cameroon	50	加彭	Gabon	50	日本	Japan	50 60
加拿大	Canada	60	甘比亞	Gambia	50	約旦	Jordan	50
康那利群島	Canary Island	50	德國	Germany	50	肯亞	Kenya	50
中非共和國	Central Africa Rep.	50	迦納	Ghana	50	韓國	Korea	60
錫蘭	Ceylon	50	直布羅陀	Gibraltar	50	科威特	Kuwait	50
查德	Chad	50	大不列顛	Great Britain	50	黎巴嫩	Lebanon	50
海峽群島	Channel Island	50	希臘	Greece	50	賴索托	Lesotho	50

Region/Country		Frequency	Region/Country		Frequency	Region/Country		Frequency
Chinese	English		Chinese	English		Chinese	English	
智利	Chile	50	格陸蘭	Greenland	50	賴比瑞亞	Liberia	60
利比亞	Libya	50	阿曼	Oman	50	敘利亞	Syria	50
盧森堡	Luxembourg	50	巴基斯坦	Pakistan	50	大溪地	Tahiti	60
澳門	Macao	50	巴拿馬	Panama	60	中華民國	R.O.C. Taiwan	60
馬得拉群島	Madeiral	50	巴拉圭	Paraguay	50	坦尚尼亞	Tanzania	50
馬約卡島	Majorca Island	50	秘魯	Peru	60	泰國	Thailand	50
馬拉加西	Malagasy	50	菲律賓	Philippines	60	多哥共和國	Togo Rep.of	50
馬拉威	Malawi	50	波蘭	Poland	50	東加	Tonga	50
馬來西亞	Malaysia	50	葡萄牙	Portugal	"	千里達	Trinidad	60
馬利	Mali Rep.	50	波多黎各	Puerto Rico	60	他巴哥	Tobago	60
馬爾他	Malta	50	科托	Qatar	50	突尼西亞	Tunisia	50
馬丁尼克島	Martinique	50	羅德西亞	Rhodesia	50	土耳其	Turkey	50
茅里塔尼亞	Mauritania	50	羅馬尼亞	Romania	50	烏干達	Uganda	50
模里西斯	Mauritius	50	盧安達	Rwanda	50	美國	USA.	60
墨西哥	Mexico	60	沙烏地阿拉伯	Saudi Arabia	50 60	蘇聯	USSR	50
摩那哥	Monaco	50	蘇格蘭	Scotland	50	英國	United Kingdom	50
蒙特塞納島	Montserrat	60	塞內加爾	Senegal	50	上伏塔	Upper Volta	50
摩洛哥	Morocco	50	獅子山	Sierra Leone	50	烏拉圭	Uruguay	50
莫桑鼻克	Mozambique	50	新加坡	Singapore	50	委內瑞拉	Venezuela	60
尼泊爾	Nepal	50	索馬利亞	Somalia	50	越南	Viet-Nam	50
荷蘭	Netherlands	50	南非共和國	South Africa Rep.	50	維爾京群島	Virgin Island	60
新蘇格蘭	New Caledonia	50	西班牙	Spain	50	西薩摩亞	Western Samoa	50
紐西蘭	New Zealand	50	斯里蘭卡	Sri Lanka	50	葉門亞丁	Yemen(Aden)	50
尼加拉瓜	Nicaragua	60	蘇丹	Sudan	50	葉門阿拉伯	Yemen(Arab)	50
尼日	Niger	50	蘇利南	Surinam	60	南斯拉夫	Yugoslavia	50
奈及利亞	Nigeria	50	史瓦濟蘭	Swaziland	50	薩伊共和國	Zaire Rep. of	50
挪威	Norway	50	瑞典	Sweden	50	尚比亞	Zambia	50
琉球	Okinawa	60	瑞士	Switzerland	50			