



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY NEX-VG10. You'll find the answers to all your questions on the SONY NEX-VG10 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SONY NEX-VG10
User guide SONY NEX-VG10
Operating instructions SONY NEX-VG10
Instructions for use SONY NEX-VG10
Instruction manual SONY NEX-VG10

SONY

4-257-962-11(1)

Interchangeable Lens
Digital HD Video
Camera Recorder

"Handycam" Handbook

[Table of contents](#)

[Sample images](#)

[Menu](#)

[Index](#)



© 2010 Sony Corporation GB

NEX-VG10/VG10E



[Your user manual](#)
[SONY NEX-VG10](#)

Manual abstract:

Shooting movies as clear as still images (page 6) Shooting when holding the camcorder by hand (page 6) Shooting landscapes (page 6) Shooting clear still images (page 7) If you click on an image, the screen will jump to the page describing the function recommended for shooting that kind of image. Table of contents Sample images Menu Click! Index 5GB Continued r Shooting movies as clear as still images Table of contents 25 Defocusing the background (25) 21 Adjusting the color (21) Sample images 16 Focusing manually (16) 20 In better brightness (20) Menu Shooting when holding the camcorder by hand 32 Preventing camera shake (32) 31 Following a moving subject (31) Index Shooting landscapes 20 The sky in vivid colors (20) 41 Colored leaves (41) 41 Vivid green colors (41) 53 Keeping your shot level (53) 6GB Continued r Shooting clear still images Table of contents 29 In candle light (29) 28 Holding the camera by hand (28) Sample images 36 The same scene with different brightness (36) 44 Scenery with a wide range of brightness (44) Menu 44 Light outdoors shot from a dark interior (44) 34 Capturing the best moment (34) Index 7GB Basic operations Using the operating buttons The control dial and v/V/b/B buttons allow you to use various functions of the camcorder. MENU v/V/b/B Table of contents Sample images FOCUS Menu Control dial When you turn the control dial or press the v/V/b/B buttons following the on-screen display, you can select items and settings. Your selection is determined when you press the control dial. Index The arrow means you can turn the control dial. When options are displayed on the screen, you can browse through them by turning the control dial or press the v/V/b/B buttons. Press the control dial to make your choice. 8GB Continued r The MENU and FOCUS buttons and the control dial have different roles, depending on the screen display. The assigned role (function) of each button is shown on the screen. To use the function shown at the upper right corner of the screen, press the MENU button.

To use the function shown at the center, press the control dial. To use the function shown at the lower right corner of the screen, press the FOCUS button. In this manual, the buttons are indicated by the icon or the function shown on the screen. MENU Table of contents Sample images Control dial FOCUS In this case, the MENU button works as [Menu], and the control dial as [Shoot Mode], and the FOCUS button as [AF/MF Select]. Menu The v/V/b/B buttons are assigned with the functions that will be used frequently.

v: DISP (Display Contents) (page 14) V: (Exposure Comp.) during recording (page 20)/(Image Index) during playback (page 48) b: WB (White Balance) (page 21) B: GAIN (Gain) (page 18) Index 9GB Using functions in the menu Menu Table of contents Sample images You can set up the basic settings for the camcorder as a whole, or execute functions such as recording, playback, or other operations. 1 Press the MENU button. 2 Select the desired item by turning the control dial, or pressing the v/V/b/B buttons, and then press the control dial. 3 Following the instructions on the screen, select the desired item and press the control dial to make your choice.



[Your user manual](#)
[SONY NEX-VG10](#)