

# Handheld Radio Scanner

## Start Here

See the User's Guide for complete instructions.

### Package contents



Scanner



Antenna



Rechargeable Battery Holder



Alkaline Battery Holder



Belt Clip




User's Guide



Quick Start

### ① Install batteries

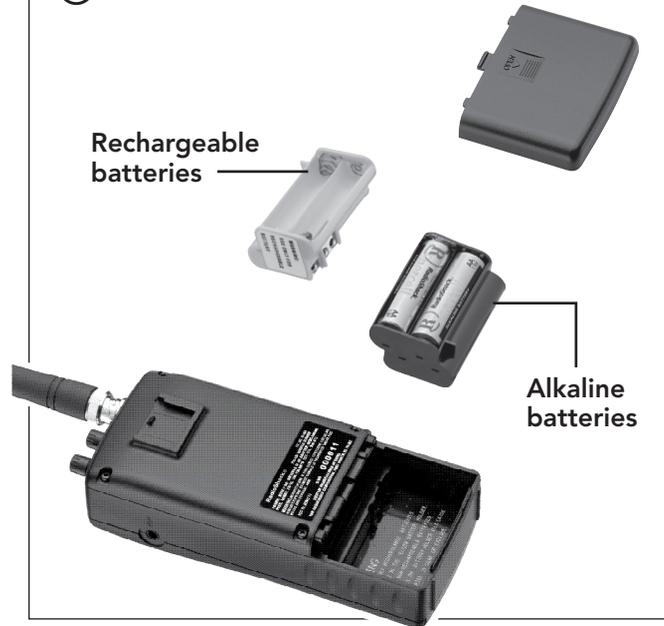

### ② Install antenna



### ③ Find and store frequencies

1. Press . The service search starts in two seconds.
2. Press **ENT** when you find an interesting frequency (not applicable for marine or weather service banks). The bank number and **StorE** appear.
3. If you want to change storage banks, enter the new bank number.
4. Press **ENT** to store the frequency. The channel and frequency flash twice. To cancel the operation, press **TUNE/CLEAR**.

### Program known frequencies

Refer to [www.radioreference.com](http://www.radioreference.com) for a list of frequencies in your area.

1. Press **PGM**. **PGM** appears. Enter the channel number (1–200) where you want to store a frequency, then press **PGM** again.
2. Use the number keys and **•** to enter the frequency.
3. Press **ENT** to store the frequency into the channel.
4. Press **SCAN** to begin scanning stored/programmed frequencies.

