

 


Please read before using this equipment.

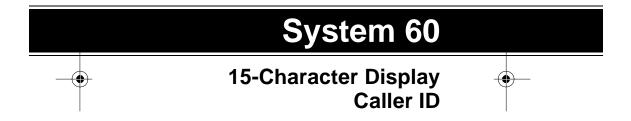

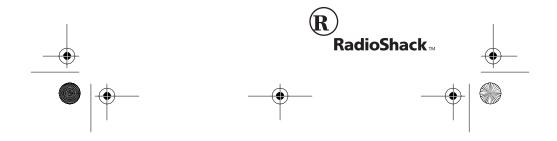



Warning: To prevent fire or shock hazard, do not expose this product to rain or moisture.



CAUTION

RISK OF ELECTRIC SHOCK.
DO NOT OPEN.



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. NO USER-SERVICE-ABLE PARTS INSIDE. REFER SERVIC-ING TO QUALIFIED PERSONNEL.





This symbol is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.



This symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.



 













Your RadioShack Caller ID System 60 is the latest in telephone technology. The system displays the caller's telephone number (and name, if available in your area) and the current date and time, as provided by your local phone company to Caller ID service subscribers.

 
Its features include:



Caller ID Memory — stores and displays up to 10 call records, including phone numbers and names.

 Three-Language Operation — lets you set the system to display informational messages in English, Spanish, or French.





REVIEW s / t **Buttons** — let you easily scroll through all call records in Caller ID memory.

Built-In Clock — displays the current date and time.

15-Character Dot Matrix LCD — makes it easy to see the caller information, or the current date and time when not receiving calls.




Note: You need four AAA batteries (not supplied) to power the System 60.


Important Information:

- To use this system, you must be in an area where Caller ID service is available, and you must subscribe to the service.
- Your Caller ID System 60 displays name only, number only, or both name and number, depending upon the information provided by your phone company.



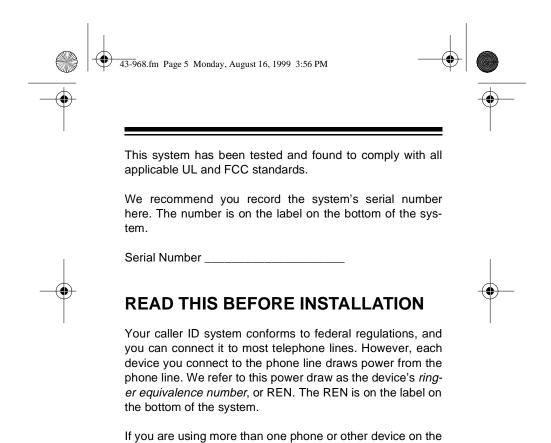

 line, add up all the RENs. If the total is more than five, your phone might not ring. In rural areas, a total REN of three



might impair ringer operation. If ringer operation is impaired, remove a device from the line.

FCC STATEMENT



Your system complies with Part 68 of *FCC Rules*. You must, upon request, provide the FCC Registration Number and the REN to your phone company. These numbers are on the label on the bottom of the system.

 


Note: You must not connect the system to:

- Coin-operated systems
- · Party-line systems
- Most electronic key telephone systems














CONTENTS

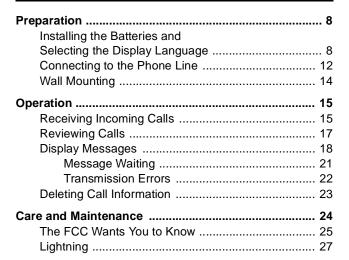





 












INSTALLING THE BATTERIES AND SELECTING THE DISPLAY LANGUAGE

 
Your Caller ID System 60 is powered by four AAA batteries (not supplied). For the longest operation, we recommend alkaline batteries (such as RadioShack Cat. No. 23-558).



Notes:

- When BATTERIES LOW appears on the display, replace the batteries.
- Always remove old or weak batteries. They can leak chemicals which can damage electronic circuits.
- When you replace the batteries, the system loses all call information, but the time is automatically set when the system receives its first phone call.






Follow these steps to install the batteries and select the display language:

 - 1. If connected, disconnect the system from the telephone line.
- 2. Turn over the system so the bottom is facing up.
- 3. Using a Phillips screwdriver, remove the battery compartment's safety locking screw.










4. Open the battery compartment by gently pressing down on the battery door while sliding it in the direction of the arrow.




  
5. Insert four AAA alkaline batteries in the compartment as indicated by the polarity symbols (+ and -) marked inside the compartment.

 


 


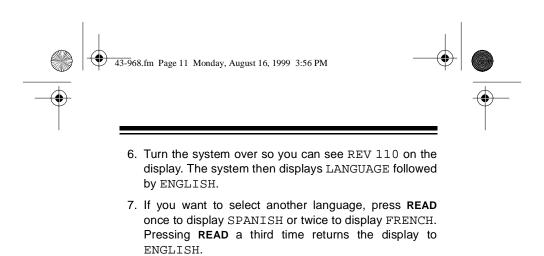









8. Replace the battery door and tighten the safety locking screw.

Notes:

 
- The correct date and time are automatically set when your Caller ID System 60 receives its first call.
- To reset the language, remove the batteries and reinstall them.



CONNECTING TO THE PHONE LINE

The Caller ID System 60 connects to a modular wall jack and your telephone. If your telephone wiring does not have a modular wall jack, you can update the wiring yourself. RadioShack stores sell jacks and adapters necessary to convert older wiring methods to modular wiring. Or, you can have the telephone company update your telephone wiring for you.





Notes:

- The telephone company charges to install the necessary jacks.
- The USOC number of the jack to be installed is RJ11C.

Follow these steps to connect the system to the telephone line.





- Unplug the existing telephone line cord from the telephone and plug it into the LINE jack on your Caller ID System 60.
- 2. Plug one end of the supplied telephone line cord into the System 60's **PHONE** jack.
- 3. Plug the other end of that cord into your telephone.
















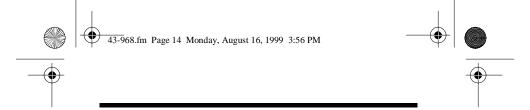

WALL MOUNTING

You can mount the System 60 on a wall using the supplied screws and mounting bracket.





- 1. Select a location near the phone line jack, then use the supplied mounting bracket to mark the two mounting holes on the wall.
- 2. Drill two holes at the marked locations.
- 3. Thread the screws through the bracket into the holes and tighten.
- 4. Slide the System 60 onto the bracket.





 













RECEIVING INCOMING CALLS

Caller ID is a service provided by your telephone company. When Caller ID is activated, the telephone company sends the caller's telephone number (and name, if available) and the call's date and time between the first and second rings. The Caller ID System 60 receives and displays this information for each call and updates the display with the current date and time. The display also indicates if caller information is not available or if the number is blocked by the sender (see "Display Messages" on Page 18).



 If the system has received a call since the last time call records were reviewed, the NEW CALL indicator flashes and the call information appears.










Notes:

 - If you connect a telephone answering machine to the same line as the Caller ID System 60, you must set the answering machine to answer in two or more rings in order to receive the Caller ID information.
- When the system's memory is full, it automatically deletes the oldest call record as a new call comes in.





REVIEWING CALLS

Follow these steps to review call information for the Caller ID records (up to 10) your System 60 can store.

 Press REVIEW's or t, or READ. The system displays XX TOTAL (for example, 02 TOTAL) to show the number of stored call records, and the NEW CALL indicator stops flashing.





2. Repeatedly press **REVIEW** s or t to see the individual call records. The system displays the caller record number, then the name.



 












- 3. To see the entire record (name, phone number, date and time), repeatedly press **READ**.
- To see call information for the previous or the next call, press REVIEW s or t.

Notes:

 
- -END- appears after the last call record.
- The system automatically returns to the current date and time about 20 seconds after you press any button.



DISPLAY MESSAGES

Your Caller ID System 60 is designed to display additional information about the incoming call. All information is displayed in the language you selected when you installed the batteries. This table shows a brief description of the message and how it appears in each language.





Description	English	Spanish	French
Blocked Name: Caller Does Not Allow Name To Be Sent	BLOCKED NAME	NOMB SIN ACCESO	NOM BLOQUE
Blocked Number: Caller Does Not Allow Number To Be Sent	BLOCKED NUMBER	NUM SIN ACCESO	NUMERO BLOQUE
No Caller ID Name Available (sending system does not have that information)	NO CID NAME	NO CID NOMBRE	NOM N/D
No Caller ID Number Available (sending system does not have that information)	NO CID NUMBER	NO CID NUMERO	NUMERO N/D
Received More Than One Call From The Same Phone Number	REPEAT CALL	NUMERO REPETIDO	APPEL REPETE







 













Description	English	Spanish	French
Message Waiting At	MESSAGE	MENSAJE	MESSAGE
The Phone Company	WAITING	ESPERA	ATTEND
Batteries Are Low	BATTERIES	BATERIAS	BATTERIES
	LOW	DESCARGADO	FAIBLES
Error	ERROR	ERROR	ERREUR





 


Message Waiting

If you subscribe to your phone company's message waiting service, your Caller ID System 60 can inform you when the phone company has messages waiting. When the phone company sends a message flag to your phone line, the system displays MESSAGE WAITING and the NEW CALL indicator flashes.

Note: If a message waiting indication comes in while you are on a phone call, the MESSAGE WAITING display does not appear until the next time you receive a call.

 The system's display alternates between MESSAGE WAITING and the incoming call information. The system continues to display MESSAGE WAITING and the NEW CALL indicator keeps flashing until you retrieve the message from the phone company.





Transmission Errors

Your Caller ID System 60 displays ERROR to inform you of an error during the transmission of Caller ID information. A _ appears in the displayed information where the data is lost.

 
Example: The "i" in Smith was lost during transmission.





Note: It is normal for this to happen occasionally. If this happens often, contact your phone company.






DELETING CALL INFORMATION

You can select and delete individual call records or all call records.

Follow these steps to delete a single call record.

 - 1. Press REVIEW s or t until the call record you want to delete appears.
- 2. Press and hold down READ until the call information disappears (about 2 seconds).



Follow these steps to delete all call records.

- 1. Press either **REVIEW** s or t until -END- appears.
- 2. Press and hold down READ until -END- disappears (about 2 seconds). All records are deleted, and the display shows the current date and time.























CARE AND MAINTENANCE

Your RadioShack Caller ID System 60 is an example of superior design and craftsmanship. The following suggestions will help you care for the system so you can enjoy it for

- · Keep the system dry. If it gets wet, wipe it dry immediately. Liquids might contain minerals that can corrode the electronic circuits.
- Handle the system gently and carefully. Dropping it can damage circuit boards and cases and can cause it to work improperly.
- Use and store the system only in normal temperature environments. Temperature extremes can shorten the life of electronic devices and distort or melt plastic parts.
- · Keep the system away from dust and dirt, which can cause premature wear of parts.
- Wipe the system with a damp cloth occasionally to keep it looking new. Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the system.



24
















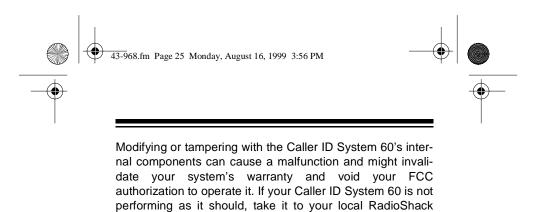



THE FCC WANTS YOU TO KNOW

system until you resolve the problem.

In the unlikely event that your system causes problems on the telephone line, the telephone company can disconnect your service. The telephone company attempts to notify you in advance. If advance notice is not practical, the telephone company notifies you as soon as possible and advises you of your right to file a complaint with the FCC.

store for assistance. If the trouble is affecting the telephone lines, the phone company might ask you to disconnect your

Also, the telephone company can make changes to its lines, equipment, operations, or procedures that could affect the operation of this system. The telephone company notifies



 













you of these changes in advance so you can take the necessary steps to prevent interruption of your telephone service.

 
Your system complies with the limits for a Class B digital device as specified in Part 15 of FCC Rules. These limits provide reasonable protection against radio and TV interference in a residential area. However, your system



- Reorient or relocate the receiving radio or TV antenna.
- Increase the distance between the system and the radio or TV.
- Use outlets on different electrical circuits for the system and the radio or TV.

 Consult your local telephone company or RadioShack store if the problem continues.






LIGHTNING


Your System 60 has built-in protection circuits to reduce the risk of damage from surges in telephone and power line current. These protection circuits meet or exceed the FCC requirements. However, lightning striking the telephone or power lines can damage your system.



 Lightning damage is not common. Nevertheless, if you live in an area that has severe electrical storms, we suggest that you unplug your system during the storms to reduce the possibility of damage.





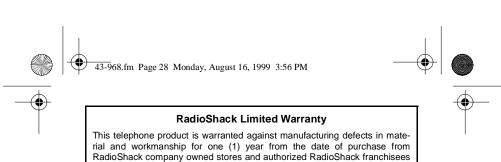

of-purchase date to any RadioShack store. This warranty does not cover damage or failure caused by or attributable to Acts of God, abuse, misuse, improper or abnormal usage, faulty installation, improper maintenance, lightning or other incidence of excess voltage, or any repairs other than those provided by a RadioShack Authorized Service Facility, or transportation costs. RadioShack is not responsible or liable for indirect, special, or consequential damages arising out of or in connection with the use or performance of the product or other damages with respect to loss of property, loss of revenue or profit, or costs of

and dealers. Within this period bring your RadioShack sales slip as proof-

removal, installation or reinstallation. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES ARE LIMITED IN DURA-TION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. Some states do not allow the limitation or exclusion of incidental or consequential damages and some states do not allow limitation or exclusion of implied warranties; therefore, the aforesaid limitation(s) or exclusion(s) may not apply to the purchaser. There will be charges rendered for repairs to the product made after the expiration of the aforesaid one (1) year warranty period.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

We Service What We Sell

RadioShack

