

# Panasonic


Digital Video Camera

Model No.

**NV-DS28A**

**NV-DS38A**

## Operating Instructions

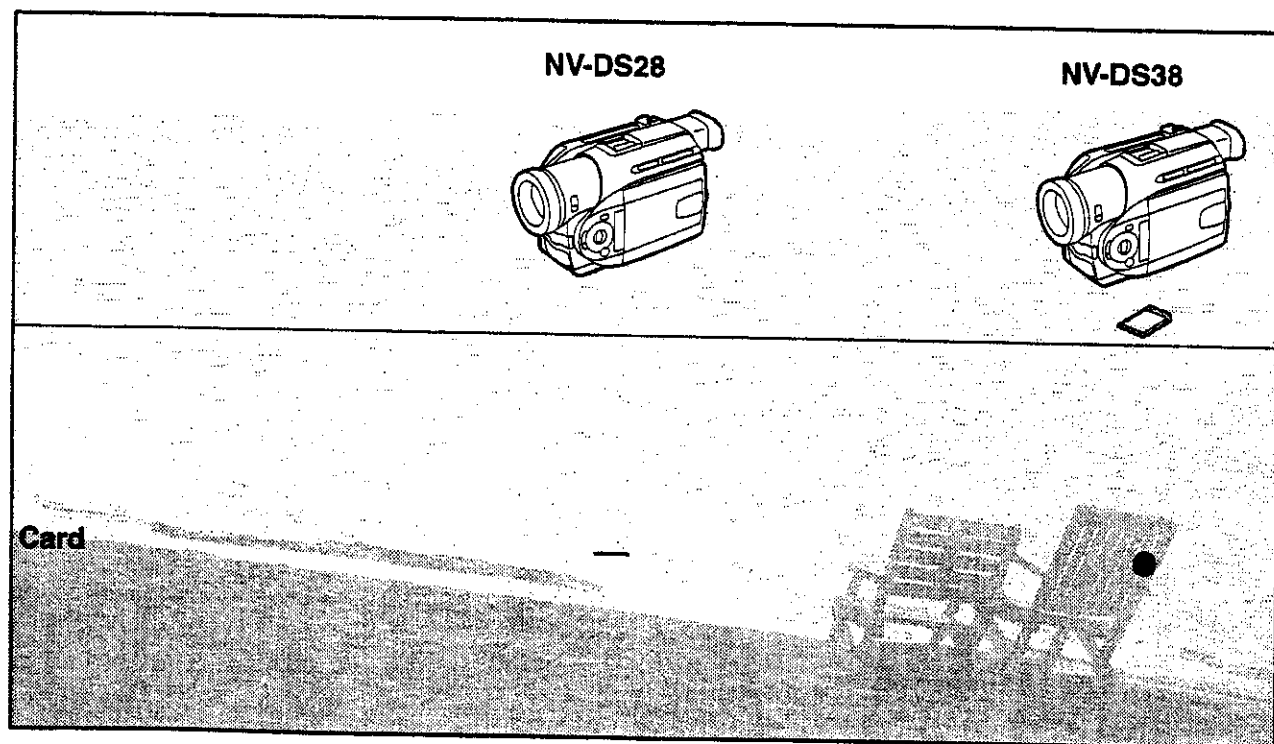

Before use, please read these instructions completely.



## **Before Use**

### **Information for Your Safety**

#### **Movie Camera**

- The rating plate is on the underside of the Movie Camera.

#### **AC Adaptor**

- The rating plate is on the underside of the AC Adaptor.
- As this equipment gets hot during use, operate it in a well-ventilated place; do not install this equipment in a confined space such as a bookcase or similar unit.

#### **Carefully read the Operating Instructions and use the Movie Camera correctly.**

- Injury or material damage resulting from any kind of use that is not in accordance with the operating procedures explained in these Operating Instructions are the sole responsibility of the user.

#### **Operating Instructions**

- These Operating Instructions apply to models NV-DS28 and NV-DS38.
- The illustrations used in these Operating Instructions show model NV-DS38, however, parts of the explanation refer to different models.
- Depending on the model, some functions are not available.

#### **Try out the Movie Camera.**

Be sure to try out the Movie Camera before recording your first important event and check that it records properly and functions correctly.

#### **The manufacturer is not liable for loss of recorded contents.**

The manufacturer shall in no event be liable for the loss of recordings due to malfunction or defect of this Movie Camera, its accessories or cassettes.

#### **Carefully observe copyright laws.**

Recording of pre-recorded tapes or discs or other published or broadcast material for purposes other than your own private use may infringe copyright laws. Even for the purpose of private use, recording of certain material may be restricted.

- SD Logo is a trademark.
- All other company and product names in the operating instructions are trademarks or registered trademarks of their respective corporations.

#### **Still pictures recorded on a MultiMediaCard or SD Memory Card (NV-DS38 only)**

It may not be possible to play back the pictures on this Movie Camera recorded on and created by other equipment or vice versa. For this reason, check the compatibility of the equipment in advance.

#### **Pages for reference**

Pages for reference are indicated with an arrow, for example:

(→ 00)

#### **WARNING**

To reduce the risk of fire or shock hazard and annoying interference, use only the recommended accessories and do not expose this equipment to rain or moisture. Do not remove the cover (or back); there are no user serviceable parts inside. Refer servicing to qualified service personnel.

**IF THE POWER CORD OF THIS EQUIPMENT IS DAMAGED, IT MUST BE REPLACED WITH AN ELECTRICALLY APPROVED POWER CORD.**

# Contents

## Before Use

Information for Your Safety .....	2
Contents .....	3
Standard Accessories .....	4
Optional Accessories .....	4
Getting Started .....	5
Viewing What Has Been Recorded .....	5
Controls and Components .....	6
Remote Controller .....	8
Power Supply .....	10
Charging Time and Available Recording Time .....	10
Lens Cap and Grip Belt .....	11
Attaching the Shoulder Strap .....	11
Inserting a Cassette .....	11
Turning on the Movie Camera and Selecting Modes .....	12
Using the Viewfinder/LCD Monitor .....	12
Using the Menu Screen .....	13
List of Menus .....	14
To Insert a Button-Type Battery into the Body .....	17
Setting Date and Time .....	17
LP Mode .....	17
Audio Recording Mode .....	17

## CAMERA Mode

Recording .....	18
Photoshot .....	19
Zoom In/Out Functions .....	19
Digital Zoom Function .....	20
Image Stabilizer Function .....	20
Fade In/Out Functions .....	20
Cinema Function .....	21
Motion Sensor Function .....	21
0 Lux Night View Function .....	21
Backlight Compensation Function .....	22
Recording in Special Situations .....	22
Wind Noise Reduction Function .....	22
Recording in Natural Colours .....	23
Adjusting White Balance Manually .....	23
Manual Shutter Speed Adjustment .....	24
Manual Iris Adjustment .....	24
Manual Focus Adjustment .....	24
Digital Effect Functions .....	25

## VCR Mode

Playing Back .....	26
Finding a Scene You Want to Play Back .....	26
Slow Motion Playback .....	27
Still Playback/Still Advance Playback .....	27
Finding the End of Recording .....	27
Index Search Functions .....	28
Playback Digital Effect Functions .....	29
Playback Zoom Function .....	29
Playing Back on Your TV .....	30
Audio Dubbing .....	30
Copying on an S-VHS (or a VHS) Cassette .....	31
Recording the Contents of Other Equipment .....	31
Using the DV Cable for Recording .....	32
Using the Automatic Printing Function .....	32
Personal Computer Connection Kit .....	32

## CARD Mode

Using a Card .....	33
Recording on a Card .....	33
Playing Back a Card .....	34
Recording Pictures on a Card to a Tape .....	34
Slide Show .....	35
Editing a Slide Show .....	35
Creating a Title .....	36
Adding a Title .....	36
Protecting the Pictures on a Card .....	37
Deleting the Pictures Recorded on a Card .....	37
Writing Printing Data on a Card .....	37

## Others

Indications .....	38
Warning/Alarm Indications .....	39
Notes and Hints .....	39
Cautions for Use .....	42
Before Requesting Repair (Problems and Solutions) .....	45
Explanation of Terms .....	46
Specifications .....	48
Index .....	49

Before Use

CAMERA

VCR

CARD

Others

## Standard Accessories

Illustrated on the left are accessories supplied with the Movie Camera.


 

- 1) AC Adaptor, DC Input Lead and AC Mains Lead (→ 10)
- 2) Battery Pack (→ 10)
- 3) Remote Controller and Button-Type Battery (→ 8, 9)
- 4) Button-Type Battery for Built-in Clock (→ 17)
- 5) Lens Cap (→ 11)
- 6) AV Cable (→ 30, 31)
- 7) Shoulder Strap (→ 11)
- 8) Digital Video Head Cleaner (→ 44)
- 9) SD Memory Card (NV-DS38 only) (→ 33)
- 10) Personal Computer Connection Kit (→ 32)

## Optional Accessories

- 1) AC Adaptor (VW-AD9A)
- 2) Battery Pack (Lithium/CGR-D08S/CGR-D120/800mAh)
- 3) Battery Pack (Lithium/CGP-D14S/CGP-D210/1400mAh)
- 4) Battery Pack (Lithium/CGR-D16S/CGR-D220/1600mAh)
- 5) Battery Pack (Lithium/CGP-D28S/CGP-D320/2800mAh)
- 6) Battery Pack (Lithium/CGR-D53S/CGR-D815/5300mAh)
- 7) Car Battery Charger (VW-KBD2E)
- 8) Car Adaptor Cord (VW-KA7E)
- 9) Wide Conversion Lens (VW-LW3707ME)
- 10) Tele Conversion Lens (VW-LT3714ME)
- 11) ND Filter (VW-LND37E)
- 12) MC Protector (VW-LMC37E)
- 13) Stereo Zoom Microphone (VW-VMS1E)
- 14) Stereo Microphone (VW-VMS2E)
- 15) Shoe Adaptor (VW-SK11E)
- 16) Tripod (VZ-CT55E)
- 17) Tripod with Remote Controller (VZ-CTR1E)
- 18) Editing Controller (VW-EC1E/VW-EC500E)
- 19) Personal Computer Connection Kit (VW-DTA10A/VW-DTA9E)
- 20) Edit Cable (VW-K5E)
- 21) DV Cable (VW-CD1E)

The following is for the NV-DS38 models only.

- 22) SD Memory Card Application Software (VW-SWA1E)
  - "TitleStudio," software for title creation, and "SD-Jukebox," software for recording music are included. (However, this Movie Camera cannot play back music.)
- 23) MultiMediaCard (VW-MMC8E/VW-MMC16E)
- 24) Floppy Disk Adaptor for MultiMediaCard (VW-MAF1E)
- 25) SD Memory Card (RP-SD016/RP-SD032/RP-SD064)
- 26) PC Card Adaptor for SD Memory Card (BN-SDABPE)
- 27) USB Reader Writer for SD Memory Card (BN-SDCAPE)
  - Some optional accessories may not be available in some countries.

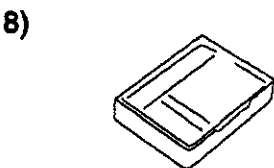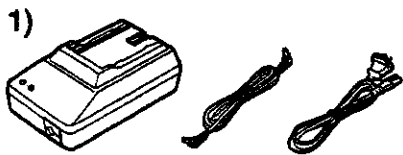

## Getting Started

### 1 Charge the Battery. (→ 10)

- Connect the Battery to the AC Adaptor.
- Connecting the AC Mains Lead. (Charging starts.)
- When the Charge Lamp [CHARGE] goes off, the Battery is fully charged.

### 2 Attach the Charged Battery to the Movie Camera. (→ 10)

### 3 Insert the Cassette. (→ 11)

- Slide the ① Lever to open.
- Insert the Cassette.
- Press the ② Button to close the Cover.

### 4 Turn the Movie Camera on and start recording. (→ 12, 18)

- Set the ③ Switch to [ON]. (The [CAMERA] Lamp lights up.)
- Press the ④ Button. (Recording starts.)
- Press the ④ Button again to pause the recording.








## Viewing What Has Been Recorded

### 5 Switch to the VCR Mode, rewind the tape, and play the tape back. (→ 26)

- Press the ⑤ Button. (The [VCR] Lamp lights up.)
- Press the ⑥ Button. (Rewind the tape.)
- Press the ⑦ Button. (Playback starts.)
- Press the ⑧ Button. (Playback stops.)

### 6 Turn the Movie Camera off. (→ 12)

- Set the ⑨ Switch to [OFF].

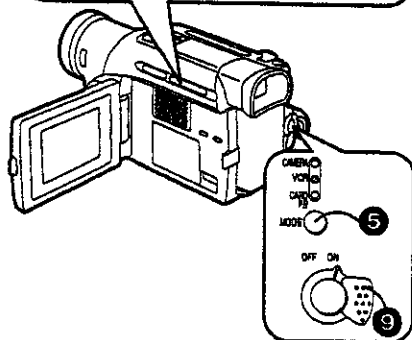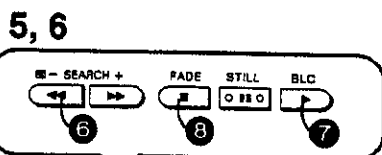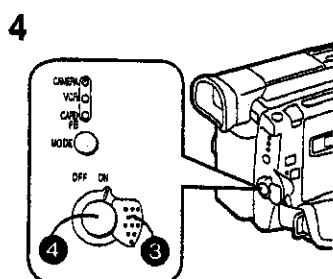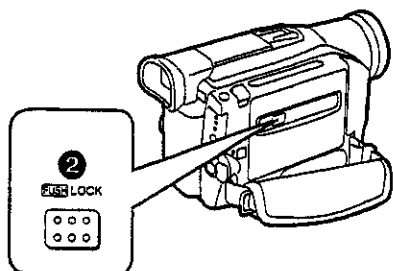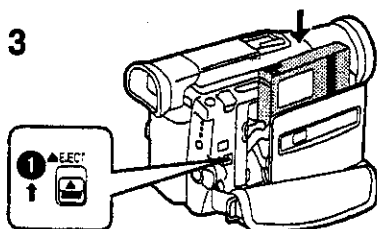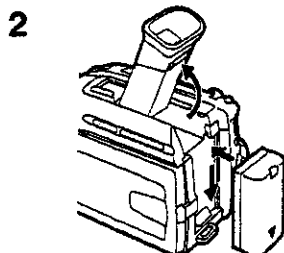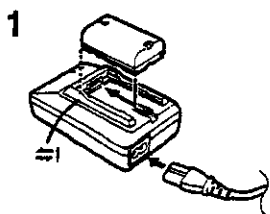

## Controls and Components

- 1) Reverse Search Button [-SEARCH] (→ 18)  
Rewind/Review Button [◀◀] (→ 26)  
Recording Check Button [RE] (→ 18)

- 2) Forward Search Button [SEARCH+] (→ 18)  
Fast Forward/Cue Button [▶▶] (→ 26)

- 3) Fade Button [FADE] (→ 20)  
Stop Button [■] (→ 26, 35)

- 4) Still Button [STILL] (→ 19)  
Pause Button [II] (→ 27, 35)

- 5) Backlight Button [BLC] (→ 22)  
Play Button [▶] (→ 26, 35)

- 6) LCD Monitor Open Button [PUSH OPEN] (→ 12)

- 7) LCD Monitor (→ 12, 45)

• Due to limitations in LCD production technology, there may be some tiny bright or dark spots on the LCD Monitor screen. However, this is not a malfunction and does not affect the recorded picture.

- 8) Speaker (→ 26)

- 9) Card Compartment Cover (NV-DS38 only) (→ 33)

- 10) Card Compartment Open Lever [OPEN] (NV-DS38 only) (→ 33)

- 11) Card Access Lamp (NV-DS38 only) (→ 33)

- 12) Battery Holder

- 13) DC Input Socket [DC IN] (→ 10)

- 14) Card Multi-Picture Button [CARD MULTI] (NV-DS38 only) (→ 36)

- 15) Title Button [TITLE] (NV-DS38 only) (→ 36)

- 16) Battery Eject Button [PUSH] (→ 10)

- 17) Eyepiece Corrector Knob (→ 12)

- 18) Zoom Lever [W/T] (→ 19)

- 19) Viewfinder (→ 12, 45)

• Due to limitations in LCD production technology, there may be some tiny bright or dark spots on the Viewfinder screen. However, this is not a malfunction and does not affect the recorded picture.

- 20) Photoshot Button [PHOTO SHOT] (→ 19, 33, 34, 36)

- 21) Cover of the Button-type Battery's Compartment [BACKUP BATTERY] (→ 17)

- 22) Mode Button [MODE]/Mode Lamps (→ 12, 18, 26, 34)



- 23) Recording Start/Stop Button (→ 18)




- 24) Movie Camera Off/On Switch [OFF/ON] (→ 12, 18, 43)

- 25) Reset Button [RESET] (→ 39)

- 26) Cassette Eject Lever [▲EJECT] (→ 11)

- 27) Tape/Card Photoshot Selector [TAPE/CARD] (NV-DS38 only) (→ 33)

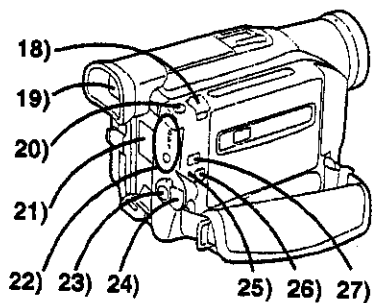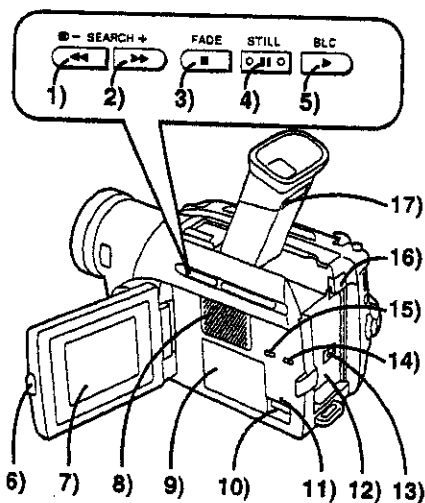

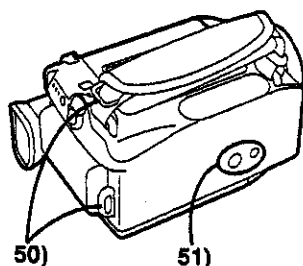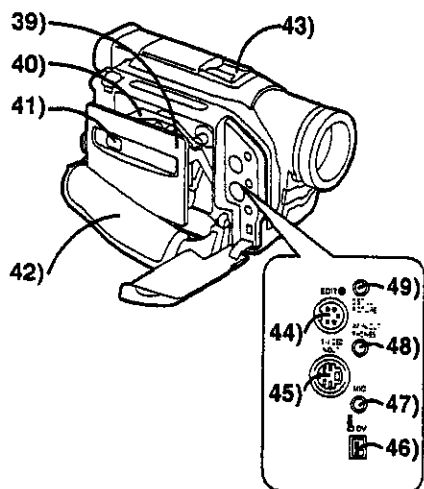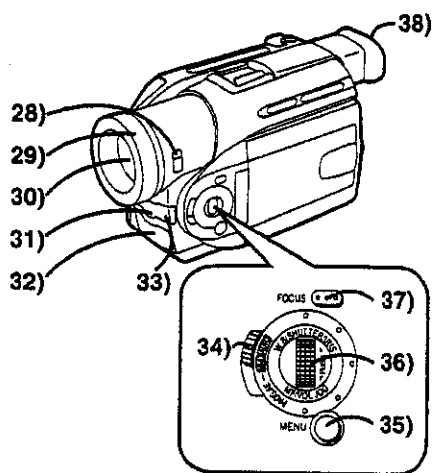

- 28) 0-Lux Recording Switch [0 LUX OFF/ON] (→ 21)
- 29) Lens Hood (→ 45)
- 30) Lens
- 31) Recording Lamp (→ 18)
- 32) Microphone (built-in, stereo) (→ 19)
- 33) White Balance Sensor (→ 47)  
Remote Control Sensor (→ 9)  
Built-in Infra-red Beam Emitters (→ 21)
- 34) Mode Selector Switch [AUTO/MNL/PROG.AE] (→ 18, 22, 24, 23)
- 35) Menu Button [MENU] (→ 13)
- 36) Multi-Function Dial [PUSH] (→ 13, 24, 23, 26)
- 37) Focus Button [FOCUS] (→ 24)
- 38) Eyecup
- 39) Cassette Compartment Cover (→ 11)
- 40) Cassette Holder (→ 11)
- 41) Cassette Compartment Lock Button [PUSH LOCK] (→ 11)
- 42) Grip Belt (→ 11)
- 43) Accessory Shoe
  - Accessories, such as a stereo microphone (VW-VMS2E; optional), are attached here.
- 44) Edit Socket [EDIT] (→ 32)
- 45) S-Video Input/Output Socket [S-VIDEO IN/OUT] (→ 30, 31, 32)
- 46) DV Terminal (i.LINK) [i] (→ 7)
  - Connect this to the digital video equipment.
  - "i.LINK" is the name of connectors in accordance with IEEE1394-1995.
  - "i" is a logo marked on products conforming with the "i.LINK" specifications.
- 47) Microphone Socket [MIC]
  - Connect with an external microphone or audio equipment. (When this socket is in use, the built-in microphone does not operate.)
- 48) Audio-Video Input/Output Socket [AV IN/OUT] (→ 30, 31)  
Headphone Socket [PHONES] (→ 41)
  - Connecting an AV Cable to this socket activates the Movie Camera's built-in speaker, but connecting a headphone, etc. deactivates it.
- 49) Digital Still Picture Terminal [D.STILL PICTURE] (→ 32)
- 50) Shoulder Strap Holders (→ 11)
- 51) Tripod Receptacle
  - Used for mounting the Movie Camera on an optional tripod.

## Remote Controller




Using the wireless Remote Controller that is supplied with the Movie Camera, most of the Movie Camera functions can be operated from a distance.

### Remote Controller Buttons


- 1) Date/Time [DATE/TIME] (→ 39)
- 2) Indication Output Button [OSD] (→ 30)
- 3) Counter Indication Shift Button [COUNTER] (→ 38)
- 4) Reset Button [RESET] (→ 47)
- 5) Recording Button [REC] (→ 31, 32)
- 6) Audio Dubbing Button [A.DUB] (→ 30)
- 7) Cursor Buttons for Variable Speed Search Function [▲, ▼] (→ 26)  
Direction Buttons for Playback Zoom Function [▲, ▼, ◀, ▶] (→ 29)
- 8) Slow Motion/Still Advance Buttons [◀, ▶] (◀: reverse, ▶: forward) (→ 27)
- 9) Index Search Buttons [◀◀, ▶▶] (◀◀: reverse, ▶▶: forward) (→ 28)
- 10) Selection Button [SELECT] (→ 29)
- 11) Store Button [STORE] (→ 29)
- 12) Off/On Button [OFF/ON] (→ 29)
- 13) Zoom/Volume Button [ZOOM/VOL] (→ 19, 26, 29)
- 14) Variable Speed Search Button [VAR.SEARCH] (→ 26)
- 15) Playback Zoom Button [P.B. ZOOM] (→ 29)

The following buttons function in the same manner as the corresponding buttons on the Movie Camera.

- 16) Photoshot Button [PHOTO SHOT] (→ 19, 33, 34, 36)
- 17) Title Button [TITLE] (Available only with NV-DS38) (→ 36)
- 18) Card Multi-Picture Button [MULTI/P-IN-P] (Available only with NV-DS38) (→ 36)
- This functions in the same manner as the [CARD MULTI] Button on the Movie Camera.
- 19) Rewind/Review Button [◀◀] (→ 18, 26)
- 20) Pause Button [||] (→ 27, 35)
- 21) Stop Button [■] (→ 26, 35)
- 22) Recording Start/Stop Button [START/STOP] (→ 18)
- 23) Play Button [▶] (→ 26, 35)
- 24) Fast-forward/Cue Button [▶▶] (→ 18, 26)
- 25) Menu Button [MENU] (→ 13)
- 26) Set Button [SET] (→ 13)
- 27) Item Button [ITEM] (→ 13)

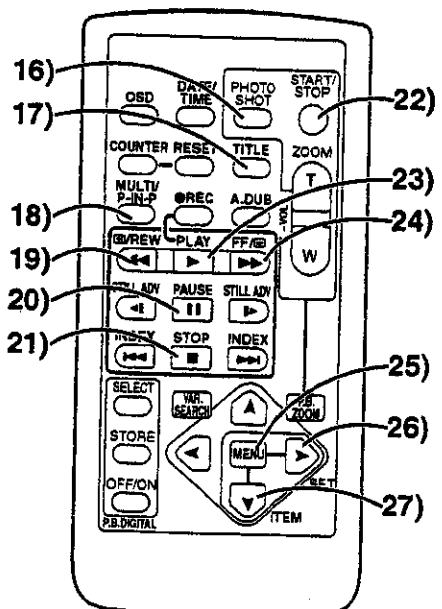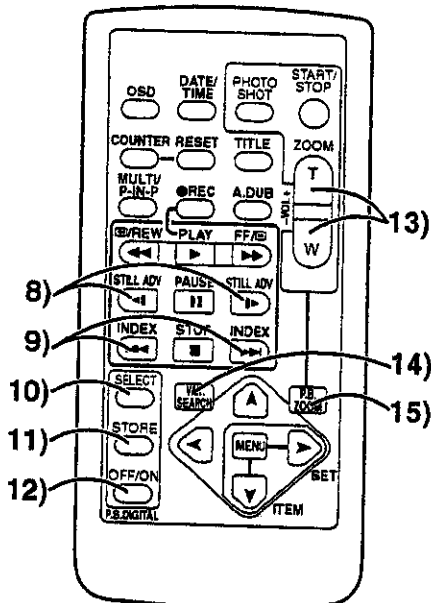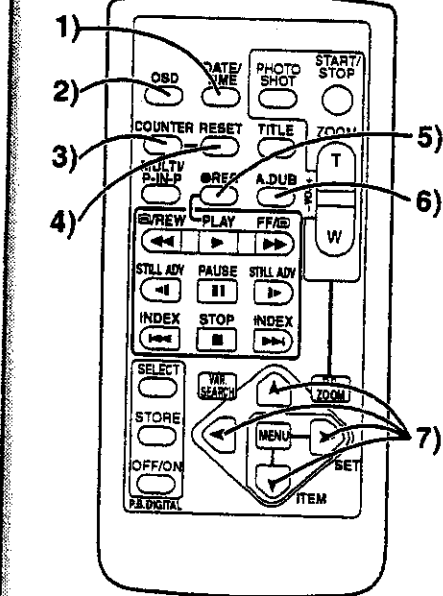



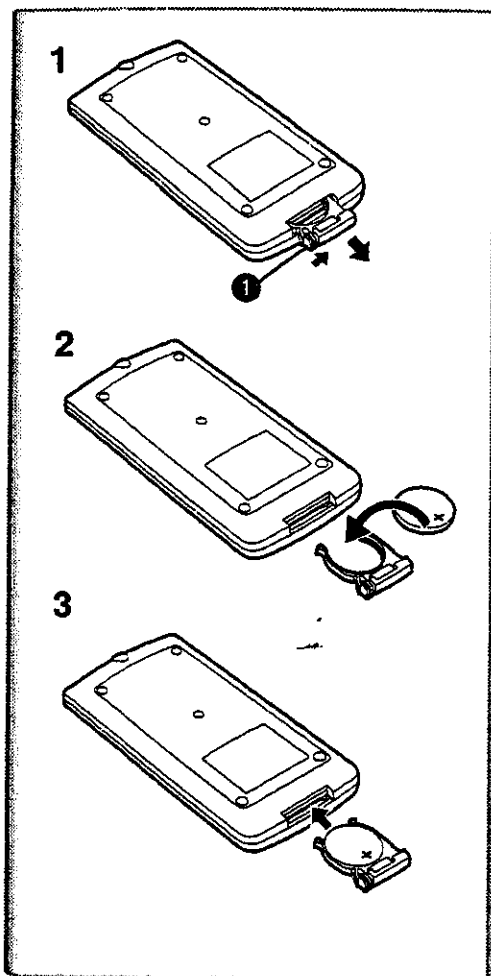

## Inserting a Button-type Battery

Before using the Remote Controller, insert the supplied button-type battery.

**1** While pressing the Stopper **1**, pull out the Battery Holder.

**2** Insert the button-type battery with the imprint (+) facing upward.

**3** Insert the Battery Holder into the Remote Controller.

- When the button-type battery is weak, replace it with a new CR2025 battery. (A battery is normally expected to last about 1 year. However, it depends on operation frequency.)


- Make sure to match the poles correctly when inserting the battery.

## CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the equipment manufacturer. Discard used batteries according to manufacturer's instructions.

## WARNING

Risk of fire, explosion and burns. Do not recharge, disassemble, heat above 100°C or incinerate. Keep the Button-Type battery out of the reach of children. Never put Button-Type battery in mouth. If swallowed call your doctor.

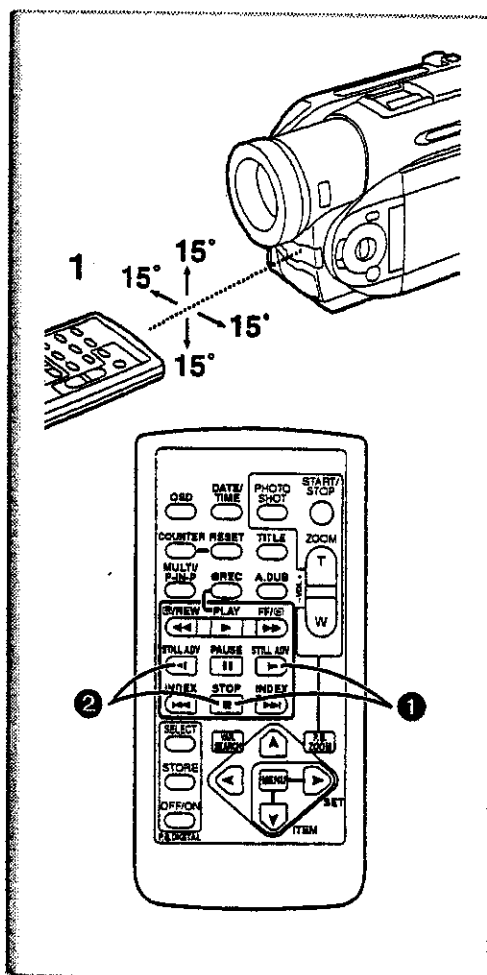

## Using the Remote Controller

**1** Direct the Remote Controller to the Remote Control Sensor of the Movie Camera and press an appropriate button.

- Distance from the Movie Camera: Within approximately 5 metres

- Angle: Within approximately 15° in the vertical and horizontal directions from the central axis

- The above operating ranges are for indoor use. Outdoors or under strong light, the Movie Camera may not operate properly even within the above ranges.

- Within a 1-metre range, you can also use the Remote Controller on the side (the [MENU] Button side) of the Movie Camera.

### Selecting Remote Controller Modes

When 2 Movie Cameras are used simultaneously, they can be operated individually by selecting different Remote Controller Modes.

- If the Remote Controller Mode of the Movie Camera and that of the Remote Controller do not match, [REMOTE] Indication is displayed.

### Setup on the Movie Camera:

Set [REMOTE] on the [OTHER FUNCTIONS] Sub-Menu to the desired Remote Controller Mode. (→ 13)

### Setup on the Remote Controller:

[VCR1]: Press the [▶] Button and [■] Button simultaneously. **1**


[VCR2]: Press the [◀] Button and [■] Button simultaneously. **2**

- When the battery in the Remote Controller is replaced, the mode is automatically reset to [VCR1] Mode.

## Power Supply

### ■ Using the AC Adaptor

- 1 Connect the DC Input Lead to the [DC IN] Socket on the Movie Camera.
  - 2 Connect the DC Input Lead to the AC Adaptor.
  - 3 Connect the AC Mains Lead to the AC Adaptor and the AC mains socket.
- The AC Mains Lead's outlet plug cannot be pushed fully into the AC Adaptor socket. A gap will remain as shown ①.
  - Before disconnecting the power supply, set the [OFF/ON] Switch on the Movie Camera to [OFF].

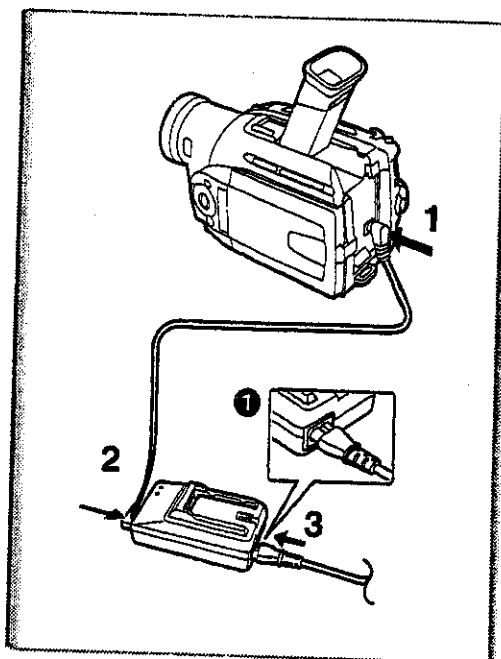

### ■ Using the Battery

Before use, fully charge the Battery.

#### 1 Attach the Battery to AC Adaptor and charge it.

- Since the Battery will not be charged when the DC Input Lead is connected to the AC Adaptor, disconnect them.
- The [POWER] Lamp or [CHARGE] Lamp lights up, and charging starts.
- When the [CHARGE] Lamp goes off, charging is completed.

#### 2 Attach the charged Battery to the Movie Camera.

##### To Remove the Battery


Set the [OFF/ON] Switch to [OFF], and while pressing the [PUSH] Button ②, slide the Battery to remove it.

### ■ Using the Car Battery Charger

If you use the Car Battery Charger (VW-KBD2E; optional), you can supply power to the Movie Camera and charge the battery inside your car. For further information, refer to the instruction manual of the Car Battery Charger.

- Be sure to start the car engine before you connect the Car Adaptor Cord, otherwise the fuse may blow.

• For other notes concerning this item, see page 39.

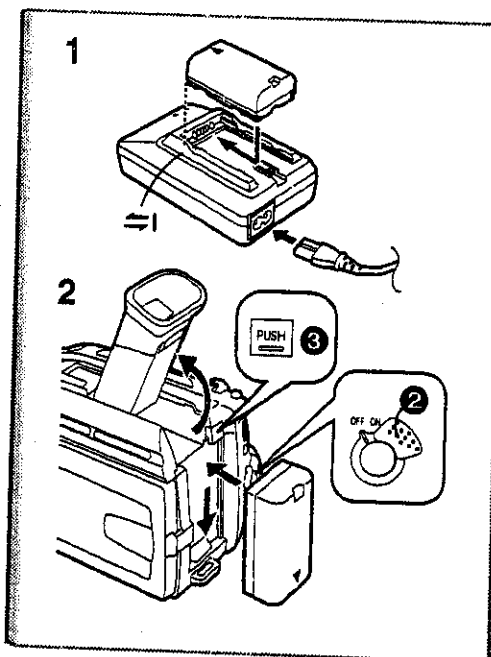

## ~~~~~ Charging Time and Available Recording Time ~~~~~

### Ⓐ Charging Time

### Ⓑ Maximum Continuous Recording Time

### Ⓒ Intermittent Recording Time

(Intermittent Recording Time is the available recording time with repeated recording and stopping actions.)


• "1h10min." indicates 1 hour and 10 minutes.

• Battery CGR-D08R is supplied.

• The times shown in the table are approximate times. The numbers in parentheses indicate the recording time when the LCD Monitor is used. In actual use, the available recording time may be shorter.

• The times shown in the table are for continuous recording at a temperature of 20°C and humidity of 60%. If the Battery is charged at a higher or lower temperature, the charging time may be longer.

		NV-DS28	NV-DS38
CGR-D08R CGR-D08S CGR-D120	Ⓐ	1 h.	1 h.
	Ⓑ	1 h 50 min. (1 h 30 min.)	1 h 40 min. (1 h 25 min.)
	Ⓒ	55 min. (45 min.)	50 min. (45 min.)
CGR-D14S CGR-D210	Ⓐ	1 h 50 min.	1 h 50 min.
	Ⓑ	3 h 10 min. (2 h 40 min.)	2 h 55 min. (2 h 30 min.)
	Ⓒ	1 h 35 min. (1 h 20 min.)	1 h 30 min. (1 h 15 min.)
CGR-D16S CGR-D220	Ⓐ	2 h.	2 h.
	Ⓑ	4 h. (3 h 15 min.)	3 h 30 min. (3 h.)
	Ⓒ	2 h. (1 h 40 min.)	1 h 45 min. (1 h 30 min.)
CGR-D28S CGR-D320	Ⓐ	3 h 15 min.	3 h 15 min.
	Ⓑ	7 h. (5 h 40 min.)	6 h 5 min. (5 h 15 min.)
	Ⓒ	3 h 30 min. (2 h 50 min.)	3 h 5 min. (2 h 40 min.)
CGR-D53S CGR-D615	Ⓐ	5 h 20 min.	5 h 20 min.
	Ⓑ	13 h. (10 h 25 min.)	11 h 25 min. (10 h.)
	Ⓒ	6 h 30 min. (5 h 15 min.)	5 h 45 min. (5 h.)

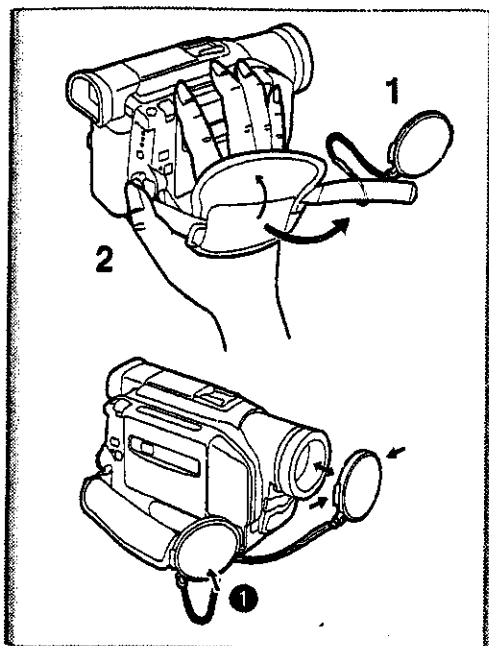


## Lens Cap and Grip Belt

To protect the Lens surface, attach the Lens Cap. Adjust the length of the Grip Belt to the size of your hand.

- 1 Attach the Lens Cap to the Grip Belt.
- 2 Put your hand through the Grip Belt and adjust the length.

• The removed Lens Cap can be hooked onto the Grip Belt ❶. (When you are not recording, be sure to keep the Lens Cap attached to the Lens for protection.)

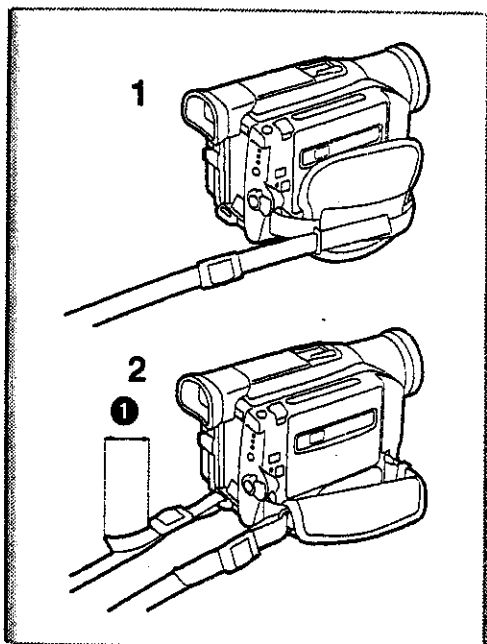


## ~~~~~ Attaching the Shoulder Strap

We recommend that you attach the Shoulder Strap before going out of doors to record so as to avoid dropping the Movie Camera.

- 1 Pull the end of the Shoulder Strap through the Shoulder Strap Holder on the Movie Camera.
- 2 Fold the tip of the Shoulder Strap, run it through the Shoulder Strap Length Adjuster, and pull it.

• Pull it out more than 2 cm ❶ from the Shoulder Strap Length Adjuster so that it cannot slip off.

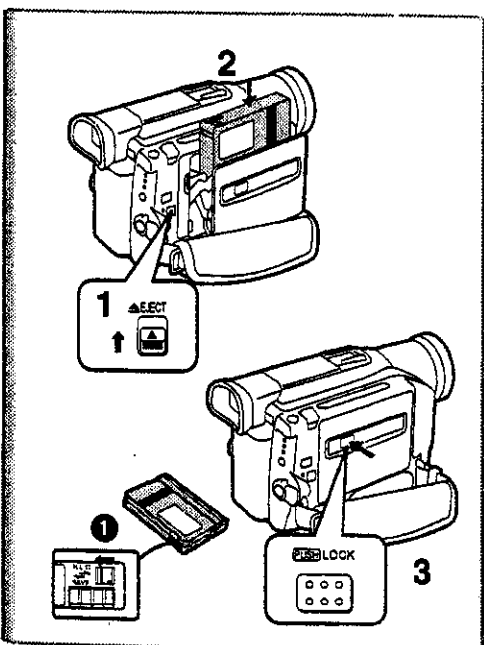

## ~~~~~ Inserting a Cassette


When power is supplied to the Movie Camera, the Cassette can be taken out without turning the Movie Camera [ON].

- 1 Slide the [▲EJECT] Lever to open the Cover.
- 2 Insert a Cassette.
- 3 Close the Cover and press the [PUSH LOCK] Button to lock the Cover.

### ■ Accidental Erasure Prevention

Opening the accidental erasure prevention slider ❶ on the cassette (by sliding it in the [SAVE] arrow direction) prevents recording. To enable recording, close the accidental erasure prevention slider (by sliding it in the [REC] arrow direction.)

• For other notes concerning this item, see page 39.

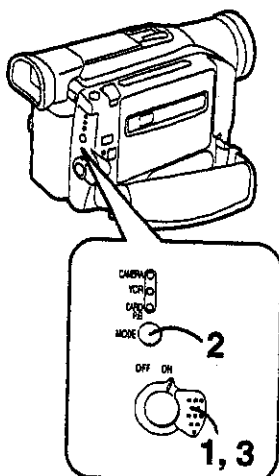

## Turning on the Movie Camera and Selecting Modes

Turn on the power first and then select modes.

### ■ How to Turn on the Power

- 1 Set the [OFF/ON] Switch to [ON].
  - The [CAMERA] Lamp lights up.

### ■ How to Switch Modes

- 2 Press the [MODE] Button.
  - With each press, the Mode changes.
  - The appropriate Mode Lamp lights up.

### ■ How to Turn off the Power

- 3 Set the [OFF/ON] Switch to [OFF].

## ~~~~~ Using the Viewfinder/LCD Monitor

### ■ Using the Viewfinder

Before using the Viewfinder, adjust the field of view so that the displays inside the Viewfinder become clear and easy to read.

- 1 Tilt the Viewfinder upward.
  - The Viewfinder can also be pulled out for use.
  - Do not pull on the Eyecup to extend the Viewfinder.
- 2 Adjust by sliding the Eyepiece Corrector Knob ①.

### ■ Using the LCD Monitor

With the LCD Monitor open, you can also record the picture while watching it.

- 1 Press the [PUSH OPEN] Button and, at the same time, bring the LCD Monitor out about 90° in the direction of the arrow.
  - The Viewfinder goes off.
- 2 Adjust the LCD Monitor angle according to the desired recording angle.

- The LCD Monitor can rotate a maximum of 180° ② from the vertical position to the upward direction and a maximum of 90° ③ to the downward direction. Forcefully rotating the LCD Monitor beyond these ranges will damage the Movie Camera.

### Closing the LCD Monitor

Push the LCD Monitor until the [PUSH OPEN] Button is securely locked.

### ■ Adjusting Brightness and Colour Level

When [LCD/EVF SET] on the [DISPLAY SETUP] Sub-Menu is set to [YES], the following items are displayed. (→ 13)

#### LCD Brightness [LCD BRIGHTNESS]

It adjusts the brightness of the image on the LCD screen.

#### LCD Colour Level [LCD COLOUR LEVEL]

It adjusts the colour saturation of the image on the LCD screen.

#### Brightness of the Viewfinder [EVF BRIGHTNESS]

It adjusts the brightness of the image in the Viewfinder.

#### To Adjust

Press the [PUSH] Dial and select the item to be adjusted, and then turn the [PUSH] Dial to raise or lower the number of vertical bars in the Bar Indication.




 
- A larger number of vertical bars indicates stronger brightness or colour saturation.

#### Increasing the Brightness of the Entire LCD Monitor

Set the [LCD MODE] on the [DISPLAY SETUP] Sub-Menu to [BRIGHT].

- These adjustments do not affect the recorded images.

- For other notes concerning this item, see page 45.

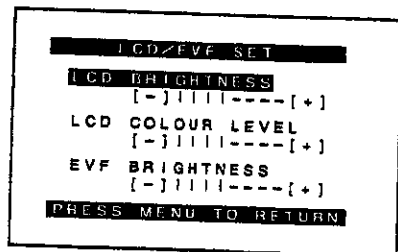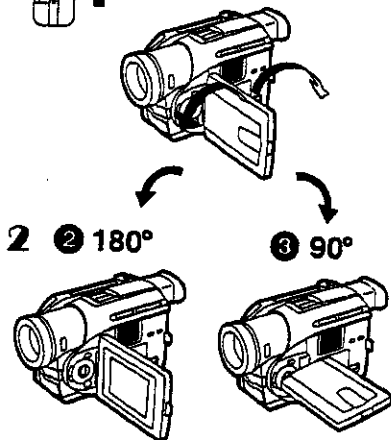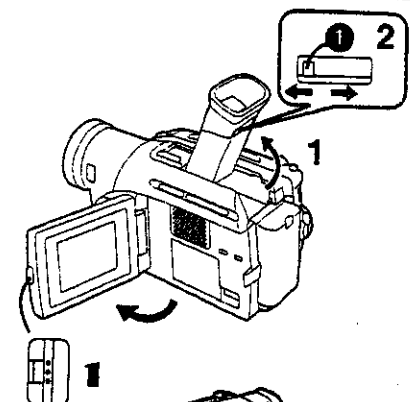

## Using the Menu Screen

To facilitate the selection of a desired function or setup, this Movie Camera displays various function setups on Menus.

### 1 Press the [MENU] Button.

- The Menu corresponding to the Mode selected using by the [MODE] Button ① is displayed.

### 2 Turn the [PUSH] Dial to select a desired Sub-Menu.

- Turn the [PUSH] Dial to display the highlighted item.

### 3 Press the [PUSH] Dial to display the selected Sub-Menu.

### 4 Turn the [PUSH] Dial to select the item to be set.

### 5 Press the [PUSH] Dial to set the selected item to a desired mode.

- With each pressing of the [PUSH] Dial, the cursor [▶] moves to the next mode. Menu items that cannot be used in combination with the selected item are displayed in dark blue.
- While a Menu is displayed, you cannot record or play back. Menus can be displayed during playback but not during recording. The above operations can be done using the [MENU] Button, [SET] Button and [ITEM] Button on the Remote Controller. (→ 8)

### To Exit the Menu Screen

Press the [MENU] Button again.

### About the Menu Mode Setting

The setting selected on the Menu will be retained even when the Movie Camera is turned off. However, if the Battery or AC Adaptor is disconnected before turning off the Movie Camera, the selected setup may not be retained. (But, the setups of [EFFECT2] (→ 25) are not retained.)

- Menu operation flow is shown in this text by >>.

## Image Selection (NV-DS38 only)




A Menu Selection Operation may be necessary during Menu Operations. In this case, carry out the following procedure.

### 1 Turn the [PUSH] Dial and select a picture.

- The selected picture is marked by a frame ②.

### 2 Press the [PUSH] Dial to confirm the selection of the picture.

- After the above Picture Selection Procedure, carry out the various Menu Operations. (The above procedure will not be repeated in the following instructions.)

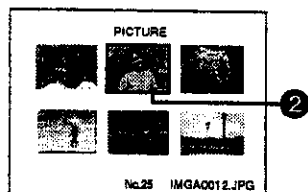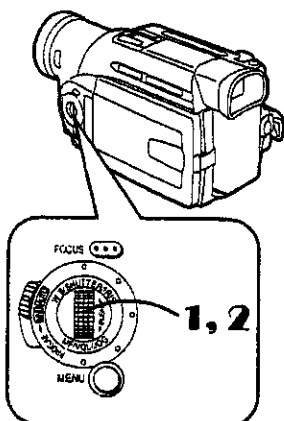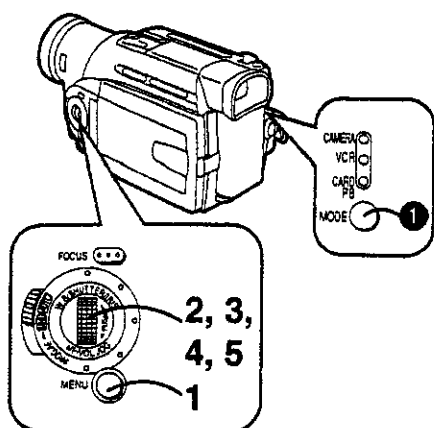

## List of Menus

The figures of the Menus are for explanation purposes only, and they are different from the actual Menus.

### Camera Mode Main-Menu [CAMERA FUNCTIONS]

#### [CAMERA SETUP] Sub-Menu

- 1) Progressive Photoshot Mode [PROGRESSIVE] (→ 19)
- 2) Image Stabilizer [SIS] (→ 20)
- 3) Digital Zoom [D.ZOOM] (→ 20)
- 4) Cinema-like Format Recording [CINEMA] (→ 21)
- 5) Motion Sensor Mode [M.SENSOR] (→ 21)
- 6) Returning to the Main-Menu [RETURN]
  - If you set [RETURN] to [YES], the menu changes back to the Main-Menu.

#### [DIGITAL EFFECT] Sub-Menu

- 7) Digital Effects 1 [EFFECT1] (→ 25)
- 8) Digital Effects 2 [EFFECT2] (→ 25)

#### [CARD SETUP] Sub-Menu (NV-DS38 only)

- 9) Picture Quality [PICTURE QUALITY] (→ 33)
- 10) Title Creation [CREATE TITLE] (→ 36)

#### [RECORDING SETUP] Sub-Menu

- 11) Recording Speed Mode [REC SPEED] (→ 17)
- 12) Audio Recording Mode [AUDIO REC] (→ 17)
- 13) Scene Index Mode [SCENEINDEX] (→ 28)
- 14) Wind Noise Reduction [WIND CUT] (→ 22)
- 15) Zoom Microphone [ZOOM MIC] (→ 19)

#### [DISPLAY SETUP] Sub-Menu

- 16) Date and Time Indication [DATE/TIME] (→ 39)
- 17) Counter Display Mode [C.DISPLAY] (→ 38)
- 18) Counter Reset [C.RESET] (→ 47)
  - It resets the counter to zero. However, it cannot reset the Time Code.
- 19) Display Mode [DISPLAY] (→ 39)
- 20) LCD Lighting Mode [LCD MODE] (→ 12)
- 21) LCD and Viewfinder Adjustment [LCD/EVF SET] (→ 12)

#### [OTHER FUNCTIONS] Sub-Menu

#### [DEMO MODE] Sub-Menu

- 22) Remote Controller Mode [REMOTE] (→ 9)
- 23) Recording Lamp [REC LAMP] (→ 18)
- 24) Beep Sound [BEEP SOUND] (→ 39)
- 25) Shutter Effect [SHTR EFFECT] (→ 19)
- 26) Date and Time Setting [CLOCK SET] (→ 17)
- 27) Self-Recording [SELFSHOOT] (→ 18)
- 28) Demonstration Mode [DEMO MODE]
  - If no operation takes place for approximately 10 minutes after the AC Adaptor was connected to the Movie Camera and the [OFF/ON] Switch was turned to [ON] without inserting a Cassette, the Movie Camera is automatically set to Demonstration Mode for introducing its functions. If any button is pressed or operated, the Demonstration Mode is cancelled. The Demonstration Mode can be started by setting [DEMO MODE] to [ON] and by exiting the Menu. To terminate the Demonstration Mode, insert a Cassette or set the [DEMO MODE] to [OFF].

#### CAMERA FUNCTIONS

1. CAMERA SETUP
2. DIGITAL EFFECT
3. CARD SETUP
4. RECORDING SETUP
5. DISPLAY SETUP
6. OTHER FUNCTIONS
7. DEMO MODE

PRESS MENU TO EXIT

#### CAMERA SETUP

- |             |     |      |       |
|-------------|-----|------|-------|
| PROGRESSIVE | OFF | ON   | AUTO  |
| SIS         | OFF | ON   |       |
| D. ZOOM     | OFF | 3.0x | 5.00x |
| CINEMA      | OFF | ON   |       |
| M. SENSOR   | OFF | ON   |       |

RETURN YES

PRESS MENU TO EXIT

#### DIGITAL EFFECT

- |         |        |            |
|---------|--------|------------|
| EFFECT1 | Wipe   | MIX        |
|         | STROBE | GAINUP     |
|         | TRACER | MOSAIC     |
| EFFECT2 | OFF    | NEGA SEPIA |
|         | B/W    | SOLARI     |

RETURN YES

PRESS MENU TO EXIT

#### CARD SETUP

- |                 |                     |
|-----------------|---------------------|
| PICTURE QUALITY |                     |
|                 | FINE NORMAL ECONOMY |
| CREATE TITLE    | YES                 |

RETURN YES

PRESS MENU TO EXIT

#### RECORDING SETUP

- |            |       |      |
|------------|-------|------|
| REC SPEED  | SP    | LP   |
| AUDIO REC  | 12HI  | 16HI |
| SCENEINDEX | 2HOUR | DAY  |
| WIND CUT   | OFF   | ON   |
| ZOOM MIC   | OFF   | ON   |

RETURN YES

PRESS MENU TO EXIT

#### DISPLAY SETUP

- |             |          |         |      |
|-------------|----------|---------|------|
| DATE/TIME   | OFF      | TIME    | DATE |
| C. DISPLAY  | COUNTER  | MEMORY  |      |
|             | TIMECODE |         |      |
| C. RESET    | YES      |         |      |
| DISPLAY     | ALL      | PARTIAL | OFF  |
| LCD MODE    | NORMAL   | BRIGHT  |      |
| LCD/EVF SET | YES      |         |      |

RETURN YES

PRESS MENU TO EXIT

#### OTHER FUNCTIONS

- |             |        |        |     |
|-------------|--------|--------|-----|
| REMOTE      | VCR1   | VCR2   | OFF |
| REC LAMP    | OFF    | ON     |     |
| BEEP SOUND  | OFF    | ON     |     |
| SHTR EFFECT | OFF    | ON     |     |
| CLOCK SET   | YES    |        |     |
| SELFSHOOT   | NORMAL | MIRROR |     |

RETURN YES

PRESS MENU TO EXIT

#### DEMO MODE

- |           |     |    |
|-----------|-----|----|
| DEMO MODE | OFF | ON |
|-----------|-----|----|

RETURN YES

PRESS MENU TO EXIT

# VCR Mode Main-Menu [VCR FUNCTIONS] [PLAYBACK FUNCTIONS] Sub-Menu

- 1) Blank Search [BLANK SEARCH] (→ 27)
- 2) Recording to Card [RECORD TO CARD] (NV-DS38 only) (→ 33)
- 3) Automatic Printing [AUTO PRINT] (→ 32)
- 4) Index Search Mode [SEARCH] (→ 28)
- 5) Audio Selector [12bit AUDIO] (→ 30)
- 6) Audio Output Mode [AUDIO OUT] (→ 41)
- 7) Returning to the Main-Menu [RETURN]

## [DIGITAL EFFECT] Sub-Menu

- 8) Digital Effect On/Off [EFFECT] (→ 29)
- 9) Digital Effect Selection [EFFECT SELECT] (→ 29)

## [CARD SETUP] Sub-Menu (NV-DS38 only)

- 10) Picture Quality [PICTURE QUALITY] (→ 33)

- 11) Title Creation [CREATE TITLE] (→ 36)

## [RECORDING SETUP] Sub-Menu

- 12) Recording Speed Mode [REC SPEED] (→ 17)

- 13) Audio Recording Mode [AUDIO REC] (→ 30)

## [AV IN/OUT SETUP] Sub-Menu (NV-DS38 only)

- 14) AV Socket [AV JACK] (→ 30, 31)

- 15) Audio Dubbing Input [A.DUB INPUT] (→ 30)

- 16) Analog-Digital Conversion Output [DV OUT] (→ 41)

## [DISPLAY SETUP] Sub-Menu

All of the items on the [DISPLAY SETUP] Sub-Menu are the same as those on the [DISPLAY SETUP] Sub-Menu of the [CAMERA FUNCTIONS] Main-Menu.

## [OTHER FUNCTIONS] Sub-Menu

All of the items on the [OTHER FUNCTIONS] Sub-Menu are the same as those on the [OTHER FUNCTIONS] Sub-Menu of the [CAMERA FUNCTIONS] Main-Menu.

### VCR FUNCTIONS

1. PLAYBACK FUNCTIONS
2. DIGITAL EFFECT
3. CARD SETUP
4. RECORDING SETUP
5. AV IN/OUT SETUP
6. DISPLAY SETUP
7. OTHER FUNCTIONS

PRESS MENU TO EXIT

### PLAYBACK FUNCTIONS

- 1) BLANK SEARCH ▶ ---- YES
- 2) RECORD TO CARD ▶ ---- YES
- 3) AUTO PRINT ▶ ---- YES
- 4) SEARCH ▶ PHOTO SCENE
- 5) 12bit AUDIO ▶ ST1 ST2 MIX
- 6) AUDIO OUT ▶ STEREO L R

RETURN ▶ ---- YES

PRESS MENU TO EXIT

### DIGITAL EFFECT

- 8) EFFECT ▶ OFF ON
- 9) EFFECT SELECT ▶ OFF WIPE MIX
- STROBE NEGA MIX
- S/W TRACER SOLARI
- MOSAIC MIRROR

RETURN ▶ ---- YES

PRESS MENU TO EXIT

### CARD SETUP

- 10) PICTURE QUALITY ▶ FINE NORMAL ECONOMY
- 11) CREATE TITLE ▶ ---- YES

RETURN ▶ ---- YES

PRESS MENU TO EXIT

### RECORDING SETUP

- 12) REC SPEED ▶ SP LP
- 13) AUDIO REC ▶ 12bit 16bit

RETURN ▶ ---- YES

PRESS MENU TO EXIT

### AV IN/OUT SETUP

- 14) AV JACK ▶ IN/OUT OUT/PHONES
- 15) A.DUB INPUT ▶ MIC AV IN
- 16) DV OUT ▶ OFF ON

RETURN ▶ ---- YES

PRESS MENU TO EXIT

### DISPLAY SETUP

- DATE/TIME ▶ OFF TIME DATE
- C. DISPLAY ▶ COUNTER MEMORY
- TIMECODE
- C. RESET ▶ ---- YES
- DISPLAY ▶ ALL PARTIAL OFF
- LCD MODE ▶ NORMAL BRIGHT
- LCD/EVF SET ▶ ---- YES

RETURN ▶ ---- YES







PRESS MENU TO EXIT

### OTHER FUNCTIONS

- REMOTE ▶ VCR1 VCR2 OFF
- CLOCK SET ▶ ---- YES

RETURN ▶ ---- YES

PRESS MENU TO EXIT

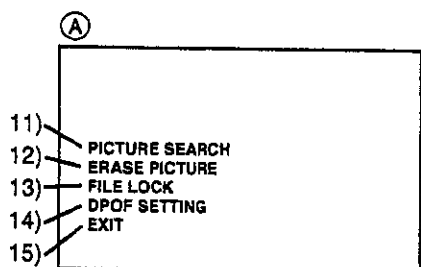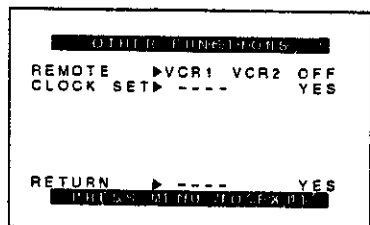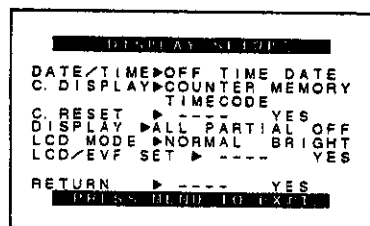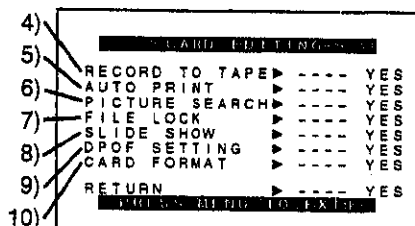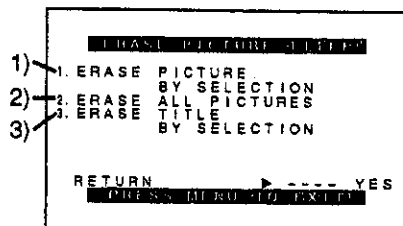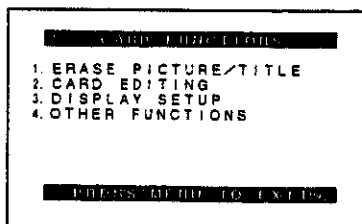

## Card Playback Mode Main-Menu [CARD FUNCTIONS] (NV-DS38 only) [ERASE PICTURE/TITLE] Sub-Menu

- 1) Selecting and Erasing a Picture [ERASE PICTURE BY SELECTION] (→ 37)
- 2) Erasing All Pictures [ERASE ALL PICTURES] (→ 37)
- 3) Selecting and Erasing a Title [ERASE TITLE BY SELECTION] (→ 37)

## [CARD EDITING] Sub-Menu

- 4) Recording to Tape [RECORD TO TAPE] (→ 34)
- 5) Automatic Printing [AUTO PRINT] (→ 32)
- 6) Searching a Picture [PICTURE SEARCH] (→ 34)
- 7) Setting the Lock [FILE LOCK] (→ 37)
- 8) Setting a Slide Show [SLIDE SHOW] (→ 35)
- 9) Setting DPOF [DPOF SETTING] (→ 37)
- 10) Formatting a Card [CARD FORMAT] (→ 42)

## [DISPLAY SETUP] Sub-Menu

All of the items on the [DISPLAY SETUP] Sub-Menu are the same as those on the [DISPLAY SETUP] Sub-Menu of the [CAMERA FUNCTIONS] Main-Menu.

## [OTHER FUNCTIONS] Sub-Menu


All of the items on the [OTHER FUNCTIONS] Sub-Menu are the same as those on the [OTHER FUNCTIONS] Sub-Menu of the [CAMERA FUNCTIONS] Main-Menu.

## Card Playback Mode の Short-Cut Menu (NV-DS38 only) (A)

If you use the Short-Cut Menu, the Card Playback Mode Menu can be called up quickly. Press the [PUSH] Dial to display the Short-Cut Menu, and turn the [PUSH] Dial to select the desired Menu.

- 11) [PICTURE SEARCH]:  
The [PICTURE SEARCH] Menu for finding pictures by number appears. (→ 34)
- 12) [ERASE PICTURE]:  
The [ERASE PICTURE] Menu for erasing the picture being displayed appears. (→ 37) Use this Menu after the picture to be erased appears.
- 13) [FILE LOCK]:  
The [FILE LOCK] Menu for avoiding accidental erasure of pictures (Lock Setting) being displayed appears. (→ 37) Use this Menu after the picture to be locked appears.
- 14) [DPOF SETTING]:  
The [DPOF SETTING] Menu for setting DPOF to the picture displayed appears. (→ 37) Use this Menu after the picture for DPOF Setting appears.
- 15) [EXIT]:  
It is for terminating the Short-Cut Menu.



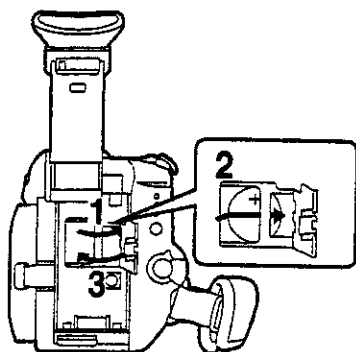

## To Insert a Button-Type Battery into the Body

Insert the supplied button-type battery before setting date and time.

- 1 Open the [BACKUP BATTERY] Cover.
- 2 Insert the button-type battery with the imprint (+) facing upward.
- 3 Close the [BACKUP BATTERY] Cover.




- Make sure to set the [OFF/ON] Switch to [OFF] when inserting or removing the button-type battery.
- It is easier to use a hard and pointed object when removing the button-type battery.
- When the button-type battery is weak, replace it with a new CR2025 battery. (A battery is normally expected to last about 1 year. However, it depends on operation frequency.)
- Make sure to match the poles correctly when inserting the battery.

## CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the equipment manufacturer. Discard used batteries according to manufacturer's instructions.

## WARNING

Risk of fire, explosion and burns. Do not recharge, disassemble, heat above 100°C or incinerate. Keep the Button-Type battery out of the reach of children. Never put Button-Type battery in mouth. If swallowed call your doctor.

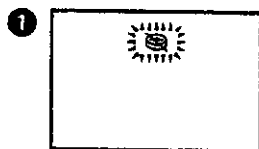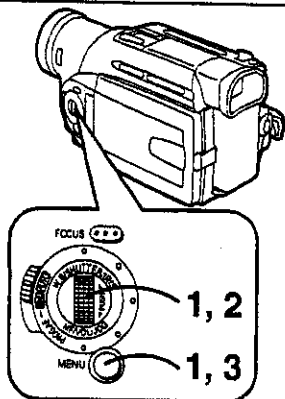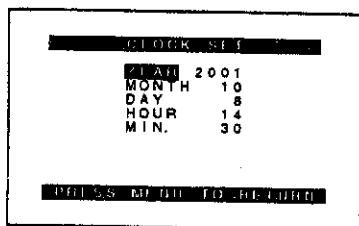

## Setting Date and Time

Since the internal clock of the Movie Camera has a slight imprecision, make sure to check the time before recording.

- 1 Set [OTHER FUNCTIONS] >> [CLOCK SET] >> [YES].
  - 2 Press the [PUSH] Dial to select [YEAR]/[MONTH]/[DAY]/[HOUR]/[MIN.] and turn to set it to a desired value.
    - Year will cycle in the order shown below.  
2000, 2001, ..., 2089, 2000, ...
  - 3 Press the [MENU] Button to finish setting the date and time.
    - The clock operation starts from [00] second.
    - The Menu will disappear when the [MENU] Button is pressed again.
- If the button-type battery is not in or if the button-type battery is weak, the [S] indication ❶ flashes. In this case, replace the button-type battery with a new one.
- The clock employs the 24-hour system.

## LP Mode

A desired recording speed can be selected with [REC SPEED] on the [RECORDING SETUP] Sub-Menu.

If LP Mode is selected, the recording time becomes 1.5 times longer than that of SP Mode.

Although the image quality does not decrease with the LP Mode recording, mosaic-pattern noise may appear on a playback image, or some normal functions may be restricted.

- The contents that are recorded in LP Mode are not completely compatible with other equipment.
- Audio dubbing is not possible with LP Mode. (→ 30)

## Audio Recording Mode

The sound quality of the recorded sound can be selected with [AUDIO REC] on the [RECORDING SETUP] Sub-Menu.

High sound-quality recording is possible with "16 bit 48 kHz 2 track" Mode. With the "12 bit 32 kHz 4 track" Mode, the original sound can be recorded on 2 tracks in stereo, while the other 2 tracks can be used for Audio Dubbing.

## CAMERA Mode

### Recording

When recording with the Mode Selector Switch ① set to [AUTO], the Movie Camera automatically adjust the focus and white balance. In some cases, they cannot be adjusted automatically and need to be adjusted manually. (→ 24, 23)

1 Set the [OFF/ON] Switch to [ON].

- The [CAMERA] Lamp lights up. ②

2 Slide the [TAPE/CARD] Selector towards [TAPE]. (NV-DS38 only)

3 Press the Recording Start/Stop Button.

- Recording starts.

- After the [RECORD] is displayed, it changes to [REC]. ③

### Recording Lamp (Tally Lamp) ④

The Recording Lamp 4 lights up during recording and alerts those being recorded that recording is in progress.

- The Recording Lamp does not light up if the [REC LAMP] on the [OTHER FUNCTIONS] Sub-Menu is set to [OFF].

### To Pause the Recording

Press the Recording Start/Stop Button again.

The [PAUSE] Indication is displayed. ⑤

- If the Recording Pause Mode continues for more than 6 minutes, the power is turned off automatically for tape protection and power conservation. To resume recording from this condition, turn on the power again.

### To Check the Recording

By pressing the [CHK] Button ⑥ in the Recording Pause Mode, you can play back the last few seconds of the recorded scene.

- The [CHK] Indication is displayed. After checking, the Movie Camera resumes the Recording Pause Mode.

### To View the Recorded Scene while the Recording Is Paused

(Camera Search)

The recorded scene can be viewed by keep pressing the [-SEARCH] Button ⑥ or [SEARCH+] Button ⑦ in the Recording Pause Mode.

- When the [-SEARCH] Button is pressed, images are played back in the reverse direction.
- When the [SEARCH+] Button is pressed, images are played back in the forward direction.

### Self-Recording

By opening the LCD Monitor and rotating it frontward (to the lens side), you can let the subject in front of the Movie Camera monitor the shot while recording is in progress.

- When the LCD Monitor is opened, the Viewfinder is disabled automatically. However, when the LCD Monitor is rotated frontward, the image is also shown in the Viewfinder.
- If you prefer to have the image on the LCD Monitor to look like an image in a mirror, set [SELF SHOOT] on the [OTHER FUNCTIONS] Sub-Menu to [MIRROR].






Images are recorded normally and no left and right reversal occurs.

- If [MIRROR] is used during self-recording, only the basic indications, such as the Recording Indication [●], Recording Pause Indication [●||] and Remaining Battery Power Indication [■], are displayed. ⑧
- If a general Warning/Alarm Indication [!] appears, return the LCD Monitor to the original position in order to check the specific content of the Warning/Alarm Indication.

### To Finish the Recording

Set the [OFF/ON] Switch to [OFF].

- For other notes concerning this item, see page 39.

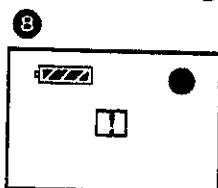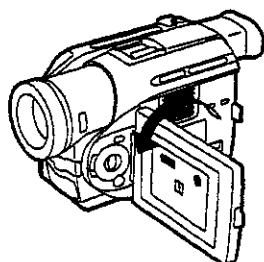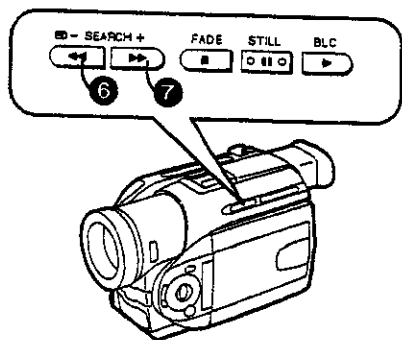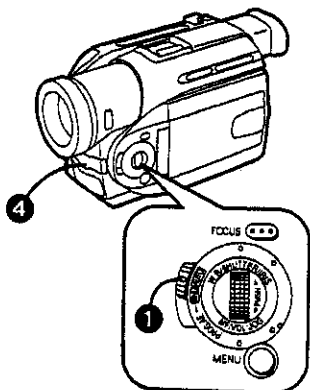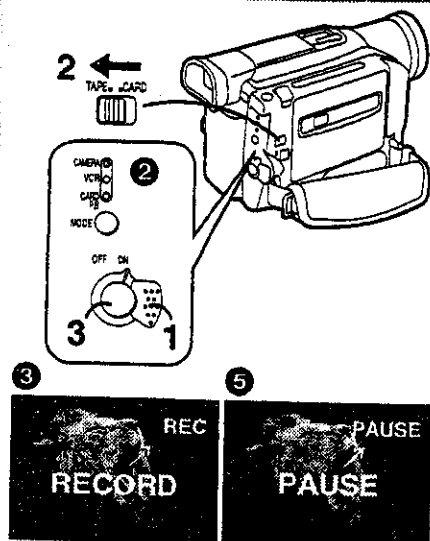

## Photoshot

Photoshot This Movie Camera can take approximately 7 seconds still pictures containing sound.

**1 Slide the [TAPE/CARD] Selector towards [TAPE].** (NV-DS38 only)

**2 Press the [PHOTO SHOT] Button in the Recording Pause Mode.**

- The Movie Camera records a still picture for about 7 seconds and then switches back to the Recording Pause Mode.

## Progressive Photoshot

With the Progressive Photoshot Function, you can record still pictures with higher resolution than with the normal Photoshot Function.

- When [PROGRESSIVE] on the [CAMERA SETUP] Sub-Menu is set to [ON] or [AUTO], the [P] Indication **1** is displayed. When the [P] Indication is displayed, press the [PHOTO SHOT] Button in the Recording Pause Mode.
- This function may not work with some function setups.

## Continuous Photoshot

If the [PHOTO SHOT] Button continues to be pressed when the [SHTR EFFECT] on the [OTHER FUNCTIONS] Sub-Menu is [ON], the Movie Camera will continuously record still pictures in approximately 0.7 second intervals until the button is released. (However, this does not operate when using Progressive Photoshot.)

- The screen blinks, and, at the same time, a shutter clicking sound is recorded.

## Digital Still Picture

When the [STILL] Button **2** is pressed, images become still pictures. When the button is pressed again, the Digital Still Picture Mode is cancelled.

- We recommend that you press the [STILL] Button first at the position where you wish to record the picture so as to enter the Digital Still Picture Mode and then press the [PHOTO SHOT] Button.

- For other notes concerning this item, see page 39.

## Zoom In/Out Functions

It gives special effects to the video by recording objects close by or with wide-angle shot.

**1 For wide-angle shots (zoom out):**

Push the [W/T] Zoom Lever towards [W].

**For close-ups (zoom in):**

Push the [W/T] Zoom Lever towards [T].

- Zoom Magnification Indication is displayed for a few seconds.

## To Take Close-up Shots of Small Subjects

(Macro Close-up Function)



When the zoom magnification is 1×, the Movie Camera can focus on a subject that is as close as approximately 30 mm from the Lens. With this, small subjects like insects can be recorded.


## To Use the Zoom Microphone Function

Along with the zooming operation, the microphone's directional angle and sensitivity are varied for recording sounds.

- Set [ZOOM MIC] on the [RECORDING SETUP] Sub-Menu to [ON]. (The [Z.MIC] Indication is displayed. **1**)
- The Zoom Microphone Function may not work effectively if the surrounding noise is too loud.

- For other notes concerning this item, see page 40.

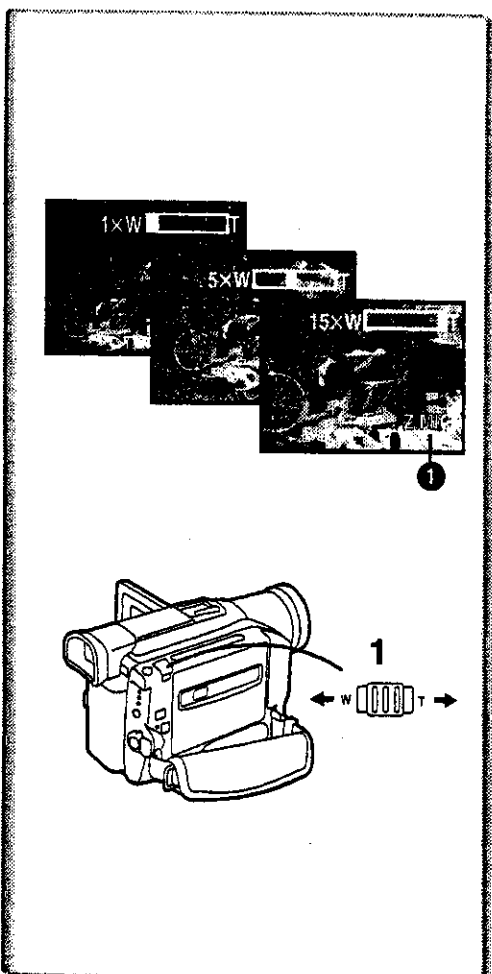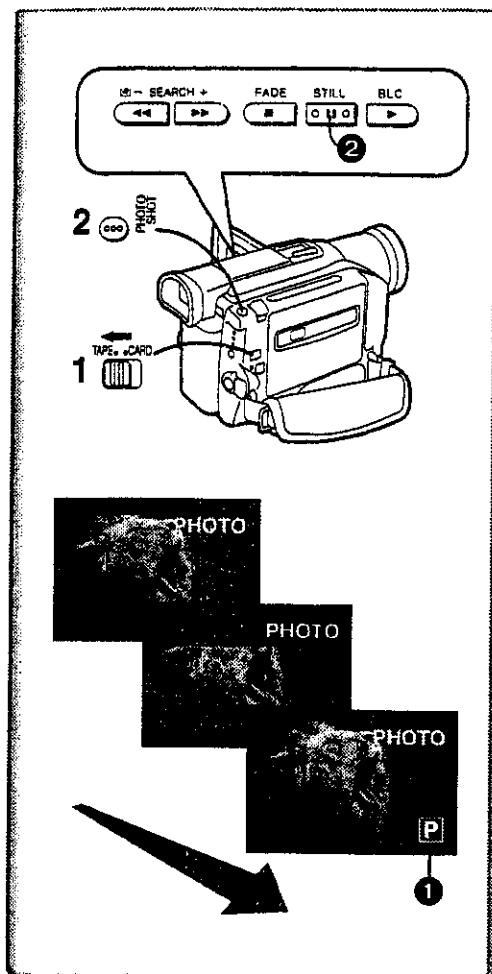

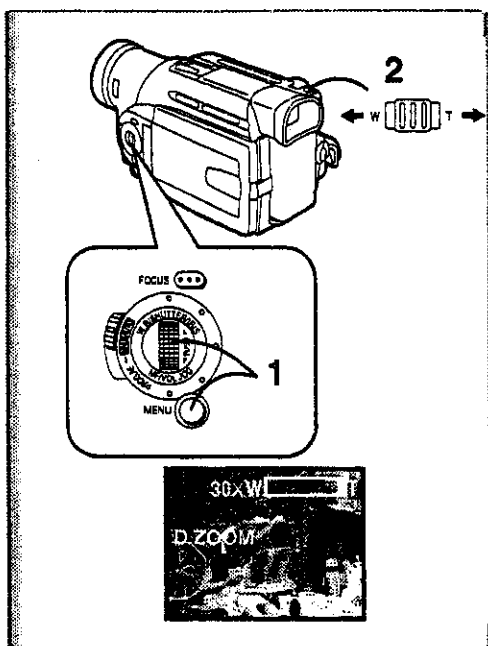

## Digital Zoom Function

This function is useful when you want to record close-up shots of subjects located beyond a normal zoom range of 1× to 15× magnification. With the Digital Zoom Function, you can select a magnification of 30× or even to 600×.

### 1 Set [CAMERA FUNCTIONS] >> [CAMERA SETUP] >> [D.ZOOM] >> [30×] or [600×].


- 30×: Digital zooming to 30×
- 600×: Digital zooming to 600×

### 2 To zoom in or out, push the [W/T] Zoom Lever towards [W] or towards [T].

#### To Stop the Digital Zoom Function

Set [D.ZOOM] on the [CAMERA SETUP] Sub-Menu to [OFF].

- As the magnification of digital zoom increases, the quality of image may deteriorate.
- White balance cannot be set in the digital zoom range.

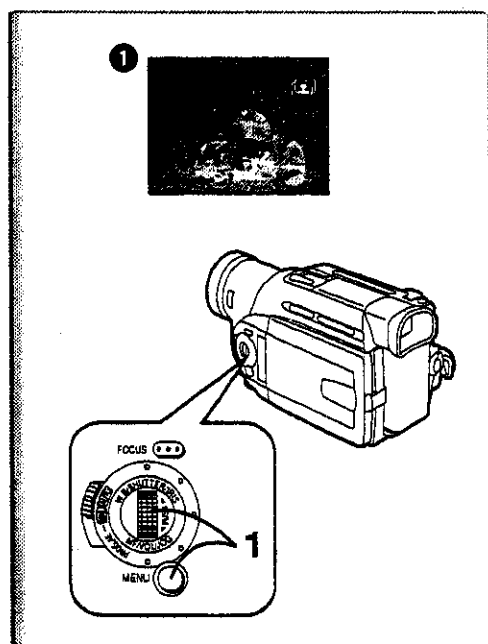

## Image Stabilizer Function

If the Movie Camera might be shaken while recording, the camera shake in the image can be corrected.

- If the Movie Camera shakes too much, this function may not be able to stabilize images.


### 1 Set [CAMERA FUNCTIONS] >> [CAMERA SETUP] >> [SIS] >> [ON].

- The [IS] Indication ① appears.

#### To Cancel Image Stabilizer

Set [SIS] on the [CAMERA SETUP] Sub-Menu to [OFF].

- For other notes concerning this item, see page 40.

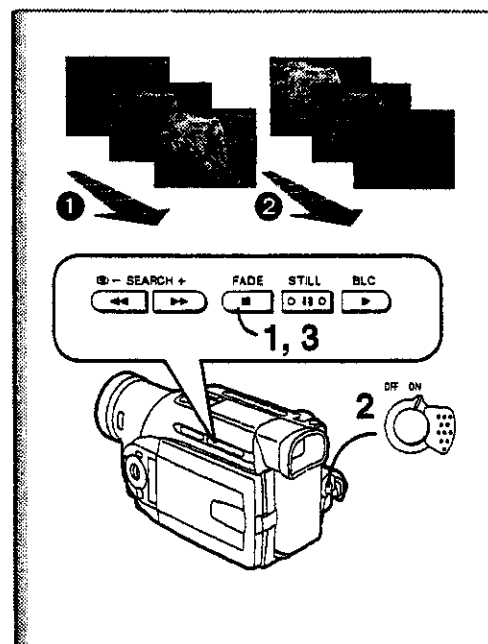

## Fade In/Out Functions

### Fade In ①

Fade In brings out images and sounds gradually from a black screen at the beginning of a scene.

### 1 Keep pressing the [FADE] Button during the Recording Pause Mode.

- The image fades out gradually.

### 2 When the image is completely gone, press the Recording Start/Stop Button to start recording.

### 3 Release the [FADE] Button about 3 seconds after starting recording.

- The image reappears gradually.

### Fade Out ②

Fade Out causes images and sounds to disappear gradually, leaving a black screen at the end of a scene.


### 1 Keep pressing the [FADE] Button while recording.

- The image fades out gradually.

### 2 When the image is completely gone, press the Recording Start/Stop Button to stop recording.

### 3 Release the [FADE] Button.

- The still picture can't fade in or fade out.

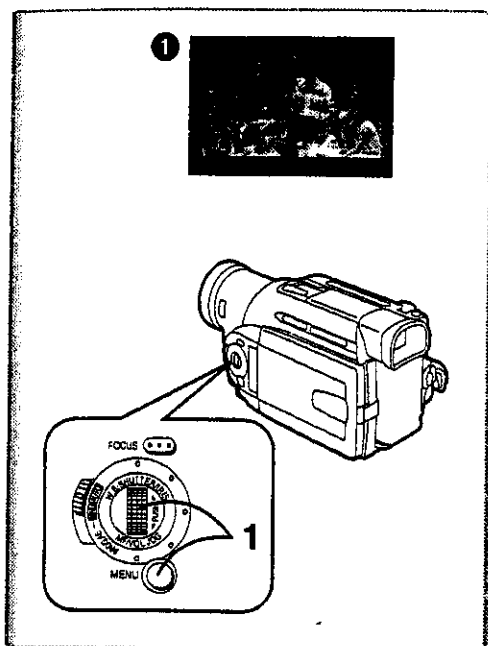

## Cinema Function

This function is for recording in a cinema-like wide screen.


- 1 Set [CAMERA FUNCTIONS] >> [CAMERA SETUP] >> [CINEMA] >> [ON].

• Black bars appear at the top and bottom of the screen. ①

### To Cancel the Cinema Mode

Set [CAMERA FUNCTIONS] >> [CAMERA SETUP] >> [CINEMA] >> [OFF].

• For other notes concerning this item, see page 40.

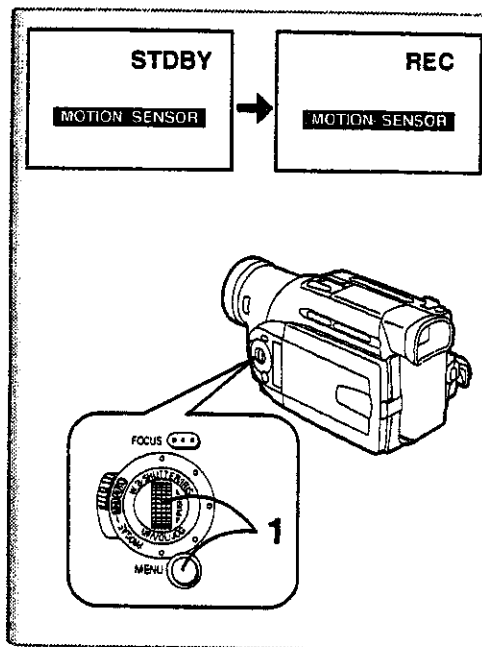

## Motion Sensor Function

With the built-in Motion Sensor, the Movie Camera senses the subject's movement and starts recording automatically.

- 1 Set [CAMERA FUNCTIONS] >> [CAMERA SETUP] >> [M.SENSOR] >> [ON].

• The Motion Sensor Function Stand-by [STDBY] Indication appears.

• When the Movie Camera's Motion Sensor senses a movement in the screen for approximately 1 second or longer, the Movie Camera starts recording automatically.

• Approximately 10 seconds after the movement in the screen stops, the recording is automatically stopped, and the Movie Camera resumes the Motion Sensor Stand-by Mode.

• When the Movie Camera stays in the Motion Sensor Stand-by Mode for 6 minutes or longer, the Display turns off. When the Motion Sensor senses a movement in the screen again, the Display turns back on automatically, and, approximately 4 seconds afterwards, the Movie Camera starts recording.


### To Cancel the Motion Sensor Function during Stand-by

Set [M.SENSOR] on the [CAMERA SETUP] Sub-Menu to [OFF].

### To Cancel the Motion Sensor Function during Recording

Press the Recording Start/Stop Button for more than 2 seconds.

• For other notes concerning this item, see page 40.

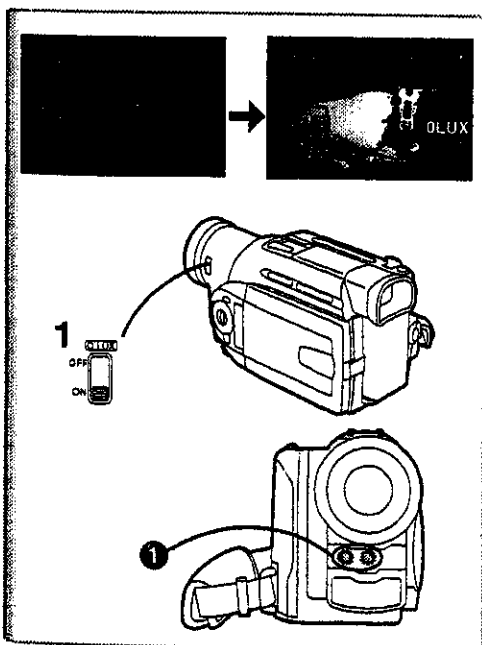

## 0 Lux Night View Function

Your Movie Camera emits infrared rays so as to record subjects that cannot be seen with the naked eye.

- 1 Set the [0 LUX OFF/ON] Switch to [ON] and bring up the [0LUX] Indication.


• Built-in Infra-red Beam Emitters ① light up. Be careful not to cover them with your hand during recording.

### To cancel the 0 Lux Night View Function

Set the [0 LUX OFF/ON] Switch to [OFF] to turn off the [0LUX] Indication.

• The Motion Sensor Function and 0 Lux Night View Function, when used together, are useful for recording animals at night with no one attending.

• For other notes concerning this item, see page 40.

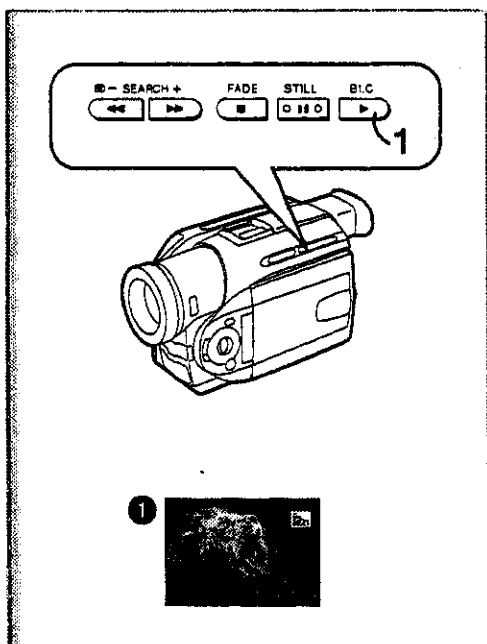

## Backlight Compensation Function

This prevents a recording subject from being recorded darker in backlight. (Backlight is the light that shines from behind a recording subject.)

### 1 Press the [BLC] Button.

- The [BLC] Indication ① flashes and then is displayed.

### To Resume Normal Recording

Press the [BLC] Button.

- When the [BLC] Button is pressed, the entire screen becomes brighter.
- By operating the [OFF/ON] Switch, the Backlight Compensation Function is cancelled.

## ~~~~~ Recording in Special Situations

(Programme AE)

You can select optimal automatic exposures under specific recording situations.

### 1 Repeatedly slide the Mode Selector Switch downwards from the [MNL] position until a desired mode [ ], [ ], [ ], [ ] or [ ] appears.

- The Indication for the selected mode appears.

#### [ ] Sports Mode ①

For recording scenes involving quick movements, such as sports scenes.

#### [ ] Portrait Mode ②

For bringing up people clearly from the background.

#### [ ] Low Light Mode ③

For recording a dark scene brighter.

#### [ ] Spotlight Mode ④

For recording a subject under spotlight in a party, theatre, etc.


#### [ ] Surf & Snow Mode ⑤

For recording in a glaring surrounding, such as skiing grounds, beaches, etc.

### To Cancel the Programme AE Function

Set the Mode Selector Switch to [AUTO].

- For other notes concerning this item, see page 40.

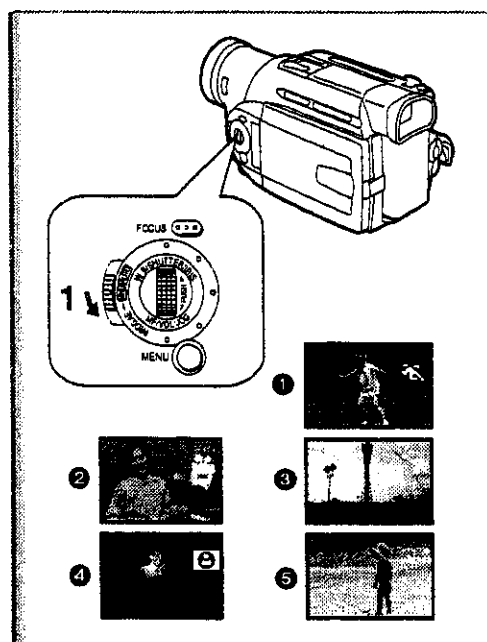


## ~~~~~ Wind Noise Reduction Function

This function reduces the sound of a wind hitting the microphone for recording.

### 1 Set [CAMERA FUNCTIONS] >> [RECORDING SETUP] >> [WIND CUT] >> [ON].

- The [WIND CUT] Indication ① appears.

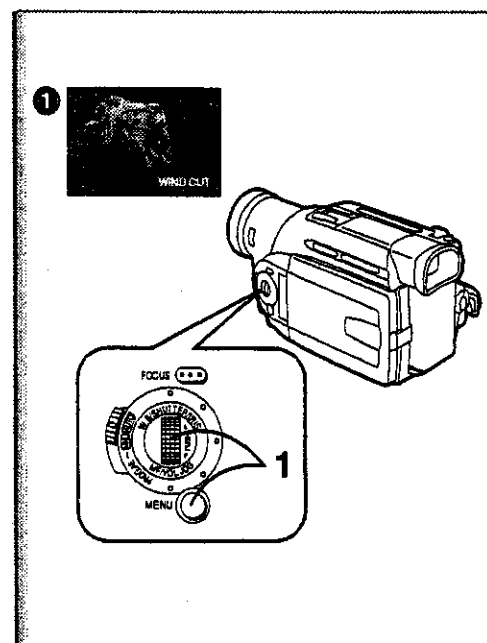

## Recording in Natural Colours

### (White Balance)

Depending on the scene or light condition, the Automatic White Balance Adjustment Mode may not be able to bring out natural colours. (→ 23, 47) In such a case, the white balance can be adjusted manually.

#### 1 Set the Mode Selector Switch to [MNL].

- The [MNL] Indication appears.

#### 2 Press the [PUSH] Dial.


- The [AWB] Indication appears.

#### 3 Turn the [PUSH] Dial to set a desired White Balance Mode.

- ① Automatic White Balance Adjustment [AWB]
- ② The white balance setting that was previously set manually [MNL]
- ③ Outdoor Mode [※]
- ④ Indoor Mode (recording under incandescent lamp) [※]

#### To Resume Automatic Adjustment

Turn the [PUSH] Dial until the [AWB] Indication appears. Or, set the Mode Selector Switch to [AUTO].

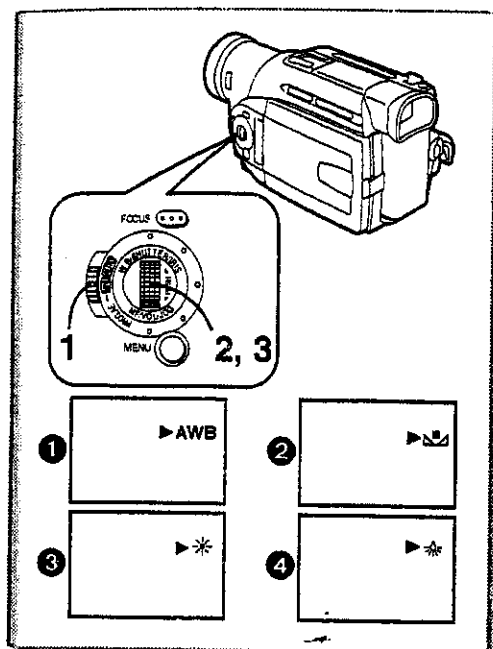

## Adjusting White Balance Manually

For light outside the functional Auto White Balance Adjustment range, use the Manual White Balance Adjustment Mode.

#### 1 Attach the Lens Cap and zoom in until the entire screen becomes white.

#### 2 Set the Mode Selector Switch to [MNL].

- The [MNL] Indication appears.

#### 3 Press the [PUSH] Dial.


- The [AWB] Indication appears.

#### 4 Turn the [PUSH] Dial until the [MNL] Indication is displayed.

#### 5 Keep pressing [PUSH] Dial until the [MNL] Indication stops flashing.

#### To Resume Automatic Adjustment


Turn [PUSH] Dial until the [AWB] Indication is displayed. Or, set the Mode Selector Switch to [AUTO].

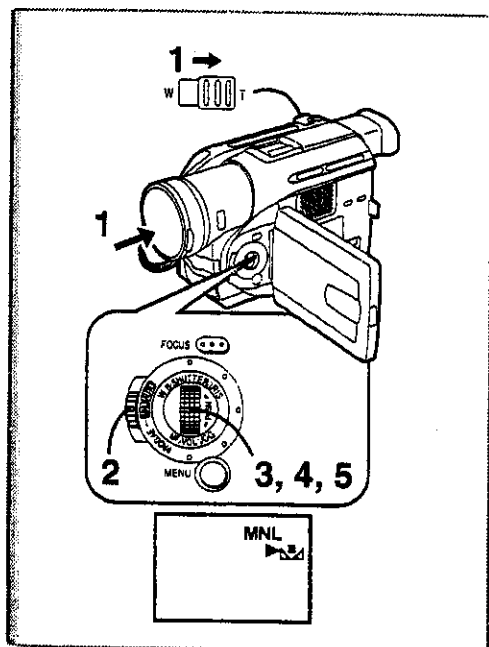


Outside of the effective range of Automatic White Balance Adjustment, the image will become reddish or bluish. Even within the effective range of Automatic White Balance Adjustment, the Automatic White Balance Adjustment may not function properly if there is more than one light source. In this case, adjust the White Balance.

- 1) The effective range of Automatic White Balance Adjustment on this Movie Camera
- 2) Blue sky
- 3) Cloudy sky (Rain)
- 4) TV screen
- 5) Sunlight
- 6) White fluorescent lamp
- 7) 2 hour after sunrise and before sunset
- 8) 1 hour after sunrise and before sunset
- 9) Halogen light bulb
- 10) Incandescent light bulb
- 11) Incandescent light bulb Sunrise and sunset
- 12) Candlelight

• For other notes concerning this item, see page 40.

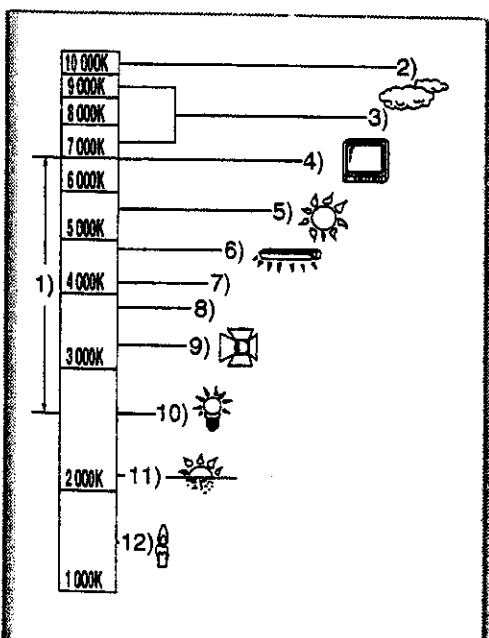

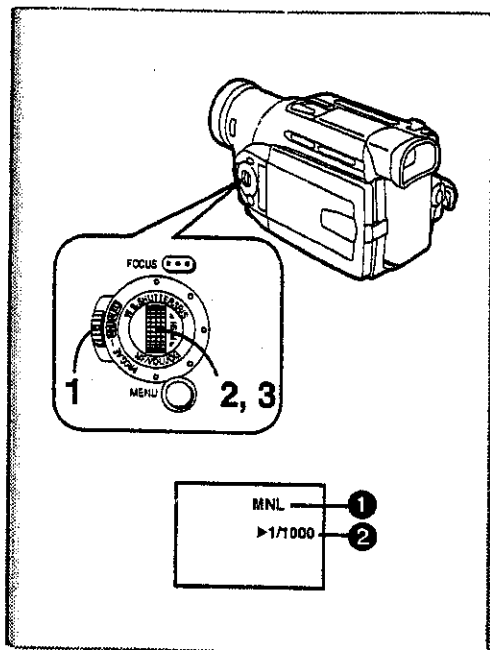

## Manual Shutter Speed Adjustment

It is useful for recording fast-moving subjects.

- 1 Set the Mode Selector Switch to [MNL].
  - The [MNL] Indication ① appears.
- 2 Press the [PUSH] Dial until the Shutter Speed Indication ② appears.
- 3 Turn the [PUSH] Dial to adjust the shutter speed.

### Range of Shutter Speed Adjustment

1/50–1/8000 s


The standard shutter speed is 1/50 s.

Selecting a speed closer to [1/8000] causes the shutter speed to be faster.

### To Resume Automatic Adjustment

Set the Mode Selector Switch to [AUTO].

• For other notes concerning this item, see page 40.

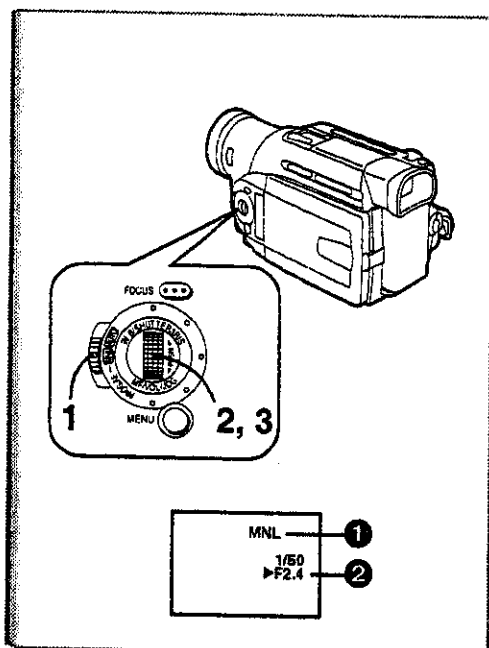

## Manual Iris Adjustment

(F Number)

You can use this function when the screen is too bright or too dark.

- 1 Set the Mode Selector Switch to [MNL].
  - The [MNL] ① Indication appears.
- 2 Press the [PUSH] Dial until the Iris Indication ① appears.
- 3 Turn the [PUSH] Dial to adjust the iris.

### Range of Iris Adjustment

CLOSE (Closed), F16, ..., F2.0,

OP (Opened)+0dB, ..., OP+18dB

When the Gain-up Mode [GAINUP] (→ 25) is used, gain adjustment is by OP+12dB.

When a value closer to [CLOSE] is selected, the image becomes darker.


When a value closer to [OP+18dB] is selected, the image becomes brighter.

The value to which dB is attached indicates a Gain-up value. If this value is too large, the quality of the image deteriorates.

### To Resume Automatic Adjustment

Set the Mode Selector Switch to [AUTO].

• For other notes concerning this item, see page 40.

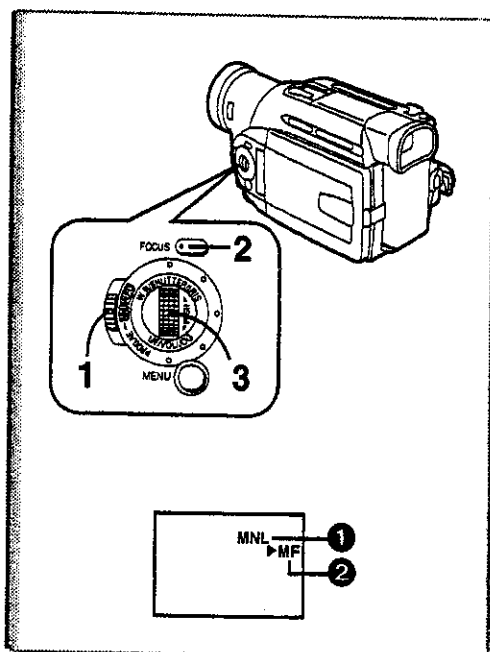

## Manual Focus Adjustment

Focus can be adjusted manually for recording in a situation where auto focus may not function well.

- 1 Set the Mode Selector Switch to [MNL].
  - The [MNL] Indication ① appears.
- 2 Press the [FOCUS] Button.
  - The [▶MF] Indication (Manual Focus Mode) ② appears.
- 3 Turn the [PUSH] Dial to adjust the focus.

### To Resume Automatic Adjustment

Press the [FOCUS] Button to turn off the [▶MF] Indication. Or, set the Mode Selector Switch to [AUTO].



**[EFFECT 1]**

1) WIPE



2) MIX



3) STROBE



4) GAINUP



5) TRACER



6) MOSAIC



7) MIRROR

**[EFFECT 2]**

8) NEGA



9) SEPIA



10) B/W



11) SOLARI

**Digital Effect Functions**

This Movie Camera is equipped with Digital Effect Functions that add special effects to the scene.

**Digital Effect 1 [EFFECT1]**

- 1) Wipe Mode [WIPE] (→ 25)
- 2) Mix Mode [MIX] (→ 25)
- 3) Strobe Mode [STROBE]
  - It records images with a stroboscopic effect.
- 4) Gain-up Mode [GAINUP]
  - It brightens images electronically.
  - Adjust focus manually when using this mode.
- 5) Trailing Effect Mode [TRACER]
  - It records images with a trailing effect.
- 6) Mosaic Mode [MOSAIC]
  - It produces a mosaic-like image.
- 7) Mirror Mode [MIRROR]
  - The right half of an image becomes a mirror image of the left half.

**Digital Effects 2 [EFFECT2]**

- 8) Negative Mode [NEGA]
  - The colours of the recorded image are inverted as seen in a negative.
- 9) Sepia Mode [SEPIA]
  - It records a scene with a brownish tint, like the colour of old pictures.
- 10) Black & White Mode [B/W]
  - It records an image in black and white.
- 11) Solarisation Mode [SOLARI]
  - It records an image with a painting-like effect.

**To Select a Desired Digital Effect**

Set [CAMERA FUNCTIONS] >> [DIGITAL EFFECT] >> [EFFECT1] or [EFFECT2] >> a desired Digital Effect.

**To Cancel the Digital Effect**

Set [CAMERA FUNCTIONS] >> [DIGITAL EFFECT] >> [EFFECT1] or [EFFECT2] >> [OFF].

- If the Movie Camera is turned off, the [EFFECT2] settings are cancelled.
- For other notes concerning this item, see page 41.

**Wipe Mode and Mix Mode****Wipe Mode:**


Like a curtain is being pulled, the still picture of the last recorded scene gradually changes to the moving image of a new scene.

**Mix Mode:**

While the moving image of a new scene fades in, the still image of the last recorded scene gradually fades out.

- 1 Set [DIGITAL EFFECT] >> [EFFECT1] >> [WIPE] or [MIX].
  - The [WIPE] or [MIX] Indication appears.
- 2 Press the Recording Start/Stop Button to start recording.
- 3 Press the Recording Start/Stop Button to pause the recording.
  - The last scene is stored in memory. The [WIPE] or [MIX] Indication changes to [WIPE] or [MIX].
- 4 Press the Recording Start/Stop Button to restart the recording.
  - The last image of the previous scene gradually changes to the new scene.

- For other notes concerning this item, see page 41.

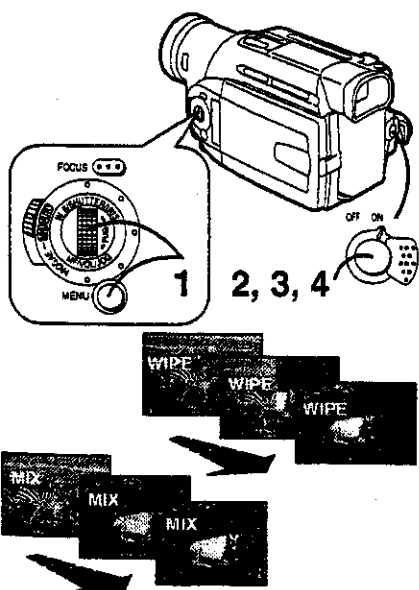

## VCR Mode

### Playing Back

The recorded scene can be played back immediately after the recording.

#### 1 Press the [MODE] Button to select the VCR Mode.

- The [VCR] Lamp lights up. ①

#### 2 Press the [◀◀] Button to rewind the tape.

- Rewind the tape to the point where you want to start playback.
- When the tape reaches the beginning, rewinding stops automatically.

#### 3 Press the [▶] Button to start playback.

- The [▶] Indication ② appears.

### To Stop Playback

Press the [■] Button. ③

### Adjusting the Sound Volume

Until the [VOLUME] Indication ④ appears, keep pressing the [PUSH] Dial ⑤. Then, turn the [PUSH] Dial to adjust the volume. After the adjustment, press the [PUSH] Dial to make the [VOLUME] Indication disappear.

To adjust the volume with the Remote Controller, press the [T] or [W] Button to display the [VOLUME] Indication. Press the [T] Button to increase the volume or press the [W] Button to decrease the volume. The [VOLUME] Indication goes off a few seconds after the adjustment is finished.

- The sound volume cannot be adjusted using the Remote Controller in Playback Zoom Mode.

- If a Cassette recorded with copyright protection signals is played back, the screen becomes black.

- For other notes concerning this item, see page 41.

### Finding a Scene You Want to Play Back

#### Cue/Review Playback

If the [▶▶] Button ① or [◀◀] Button ② is pressed during Playback, it turns to Cue Playback (A) or Review Playback (B).

- If the Button is held continuously, it turns to Cue Playback or Review Playback until you release it.
- If the Button is just tapped, Cue Playback or Review Playback continues even when it is released.

#### Variable Speed Search Function (C)

The speed of Cue Playback or Review Playback can be varied.

##### 1 During playback, press the [▶] Button.

##### 2 Turn the [PUSH] Dial to select a desired search speed.



The following 6 playback speeds are available for the Variable Speed Search Function in both the fast-forwarding and rewinding directions. 1/5× (slow playback in SP Mode only), 1/3× (slow playback in LP Mode only), 1×, 2×, 5×, 10× and 20×


#### To Resume Normal Playback

Press the [▶] Button.

- During Cue or Review Playback, fast-moving images may show mosaic-pattern noise.

- The sound is muted during search.

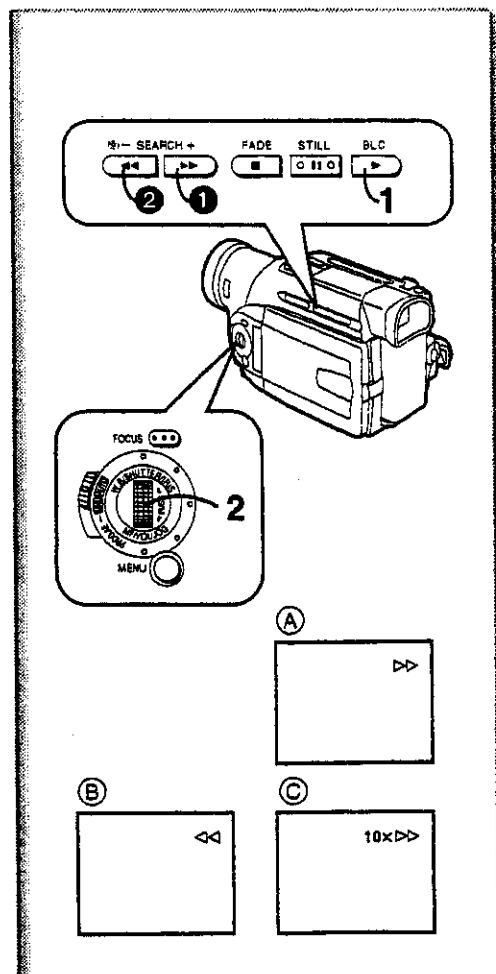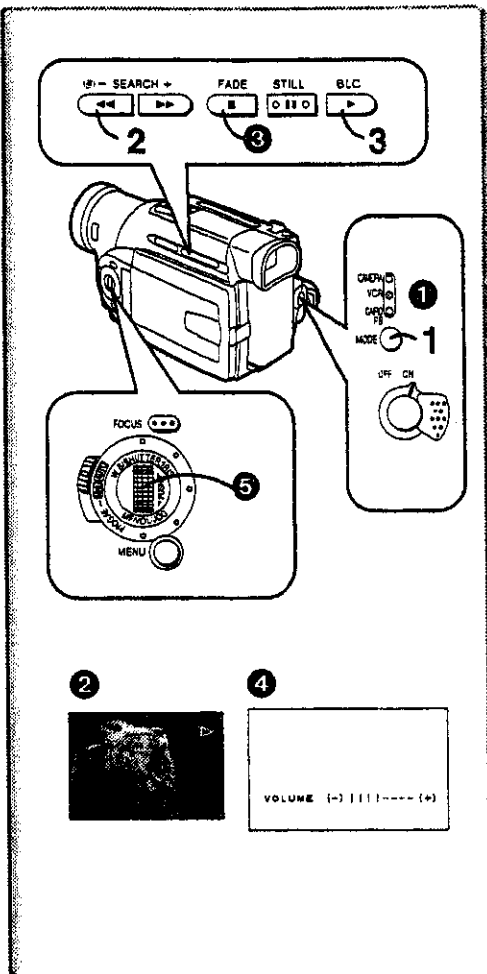

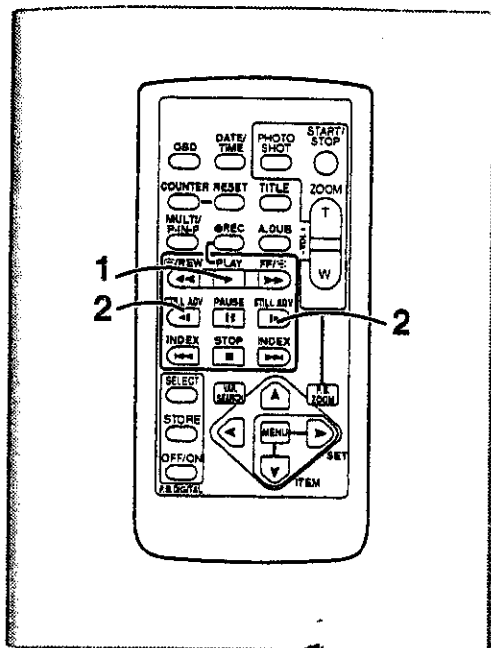

## Slow Motion Playback

This Movie Camera can play back at a slow speed.

- 1 Press the [▶] Button.
- 2 Press the [◀] Button or [▶] Button on the Remote Controller.
  - When the [◀] Button is pressed, Slow Motion Playback proceeds in the reverse direction, while pressing the [▶] Button starts Slow Motion Playback in the forward direction.

Scenes recorded in the SP Mode are played back at approximately 1/5th of the normal speed.

Scenes recorded in the LP Mode are played back at approximately 1/3rd of the normal speed.

### To Resume Normal Playback

Press the [▶] Button.

## ~~~~~ Still Playback/Still Advance Playback

This Movie Camera is capable of still picture playback and frame-advance playback.

- 1 Press the [▶] Button.
- 2 Press the [II] Button.
  - The playback image stops in the Still Playback Mode.
- 3 Press the [◀] Button or [▶] Button on the Remote Controller.
  - With each pressing of the [◀] Button, still pictures advance in the reverse direction. With each pressing of the [▶] Button, still pictures advances in the forward direction. If either one of the buttons continues to be pressed, still pictures advance continuously 1 frame at a time until the button is released.

### To Resume Normal Playback

Press the [▶] Button.

### Jog Playback

By turning the Jog Dial ([PUSH] Dial) ① of the Movie Camera in the Still Playback Mode, still pictures can be advanced one frame at a time in the forward or backward direction.

- If the Movie Camera is left in the Still Playback Mode for more than 6 minutes, the Movie Camera switches to the Stop Mode to protect the video heads from excessive wear and tear.

## ~~~~~ Finding the End of Recording



### (Blank Search Function)





The Blank Search Function aids you locate the end of the recording on the Cassette quickly.

- 1 Set [VCR FUNCTIONS] >> [PLAYBACK FUNCTIONS] >> [BLANK SEARCH] >> [YES].
  - The [BLANK] Indication appears ① during the Blank Search.
  - Approximately 1 second before the last recorded scene, the Movie Camera switches to the Still Playback Mode.
  - If there is no blank portion left on the Cassette, the Movie Camera stops at the end of the tape.

### To Cancel Blank Search Before Completion

Press the [■] Button.

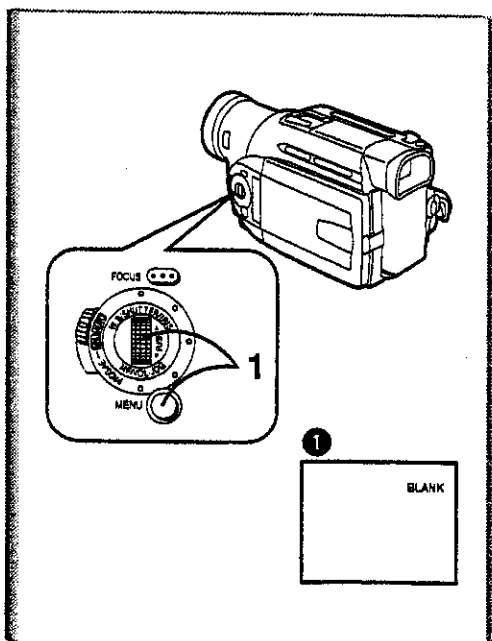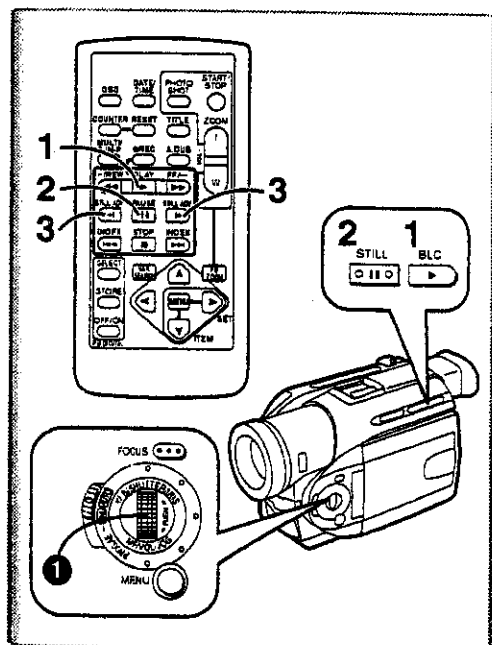

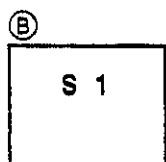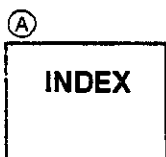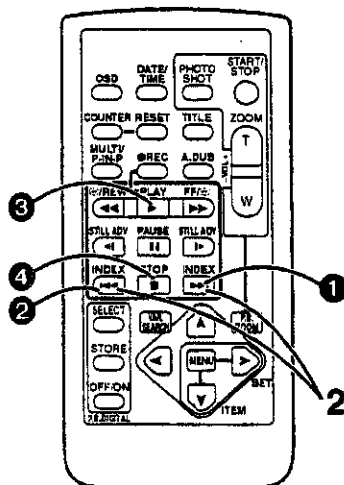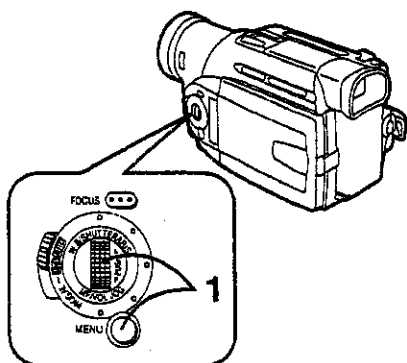

## Index Search Functions

To facilitate searching of desired scene, this Movie Camera automatically records index signals during recording, as explained in the following.

### Photoshot Index Signal

These signals are automatically recorded whenever still pictures are taken in Photoshot Mode. (→ 19) Photoshot Index Signals are not recorded on still pictures recorded in Continuous Photoshot Mode.

### Scene Index Signal

Scene Index Signals are automatically recorded when you start recording after inserting a Cassette.

- If [SCENEINDEX] of [RECORDING SETUP] Sub-Menu on the [CAMERA FUNCTIONS] Main-Menu is set to [2HOUR], an index signal is recorded when recording is restarted after an elapse of 2 hours or longer. If it is set to [DAY], an index signal is recorded when recording is restarted after the date has changed since the last recording. (While the index signal is recorded, the [INDEX] Indication flashes for a few seconds. (A))
- If the Movie Camera is switched from the VCR Mode to Camera Mode or if the date and time is set before the start of recording, the index signal is not recorded.

### Photoshot Index Search

- 1 Set [VCR FUNCTIONS] >> [PLAYBACK FUNCTIONS] >> [SEARCH] >> [PHOTO].
- 2 Press the [▶▶] Button ① or [◀◀] Button ② on the Remote Controller.

- With each press of the corresponding button, still pictures recorded in Photoshot Mode are searched.
- Sounds are played back for approximately 4 seconds.

### Scene Index Search


- 1 Set [VCR FUNCTIONS] >> [PLAYBACK FUNCTIONS] >> [SEARCH] >> [SCENE].
- 2 Press the [▶▶] Button or [◀◀] Button on the Remote Controller.

- When the corresponding button is pressed once, the [S 1] Indication (B) appears, and searching of the subsequent scene marked with an index signal starts. Each time the button is pressed after the start of Scene Index Search, the Indication changes from [S 2] to [S 9], and the beginning of the scene corresponding to the selected number will be searched.
- Up to 9 scene numbers can be selected.

### Continuous Index Search

If the [▶▶] Button or the [◀◀] Button is pressed for 2 seconds or longer, search can be continued at several-second intervals. (To cancel, press the [▶] Button ③ or the [■] Button ④.)

- For other notes concerning this item, see page 41.

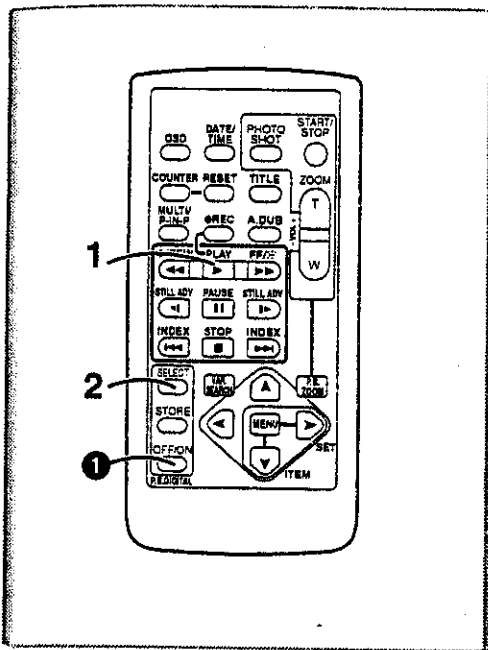

## Playback Digital Effect Functions

During playback, special digital effects can be added to the recorded pictures. The same effects as those of Digital Effects 1 and 2, which are used during recording, are obtained.

**1 Press the [P.B. ZOOM] Button.**

**2 Press the [SELECT] Button of the Remote Controller to select a desired digital effect.**

- When the [SELECT] Button is pressed repeatedly, the digital effect selection changes.

- The same setting can be done using [DIGITAL EFFECT] on the [VCR FUNCTIONS] Main-Menu.

### To suspend Playback Digital Effect Temporarily

Press the [OFF/ON] Button **3** to suspend or restart the digital effect. When the digital effect is paused temporarily, the selected effect's indication flashes.

### To Cancel the Digital Effect

Press the [SELECT] Button on the Remote Controller and clear the digital effect indication.

- For other notes concerning this item, see page 41.

## Wipe Mode and Mix Mode

**1 Press the [P.B. ZOOM] Button.**

**2 Press the [SELECT] Button on the Remote Controller and select [WIPE] or [MIX].**

**3 Press the [STORE] Button at the moment you want to save as a still picture.**



- The [WIPE] or [MIX] indication appears, and the image is saved.

**4 Press the [OFF/ON] Button in the scene in which you want to use the Wipe or Mix effect.**

- The scene changes as a result of the Wipe or Mix effect.

- The Wipe Function and Mix Function can be used only from the Remote Controller during playback.

- If the [OFF/ON] Button is pressed while Wipe or Mix is carried out, the effect will stop temporarily at that point. Pressing the [OFF/ON] Button again will bring back the effect.

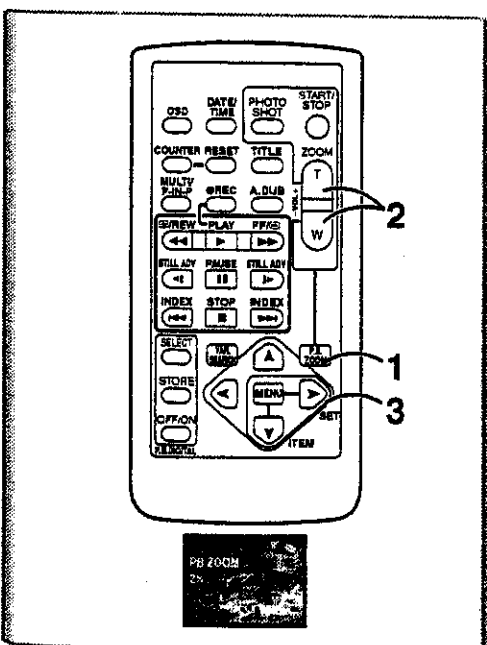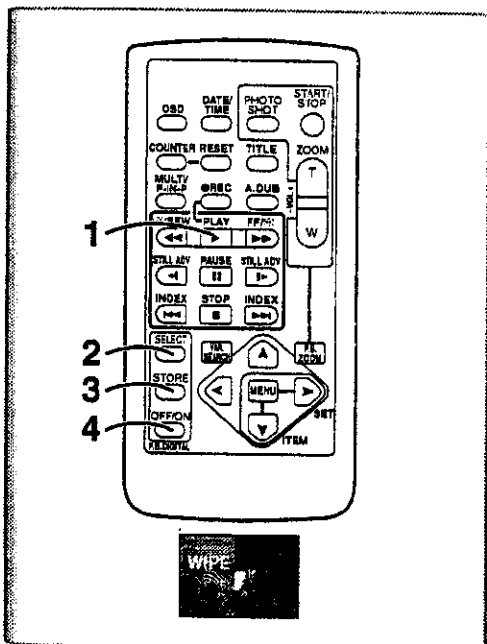

## Playback Zoom Function

A part of the image can be enlarged up to 10 times during playback.

**1 During playback, press the [P.B. ZOOM] Button on the Remote Controller.**

- The centre of the image is enlarged to approximately 2 times.

### To Change the Zoom Magnification

**2 Change the magnification by pressing the [W] Button or [T] Button on the Remote Controller.**


### To Change the Enlarging Area of an Image

**3 Press the Arrow Button (▲, ◀, ▶, ▼) on the Remote Controller that points to the area you want to enlarge.**

### To Cancel the Playback Zoom Function

Press the [P.B. ZOOM] Button on the Remote Controller.

- For other notes concerning this item, see page 41.

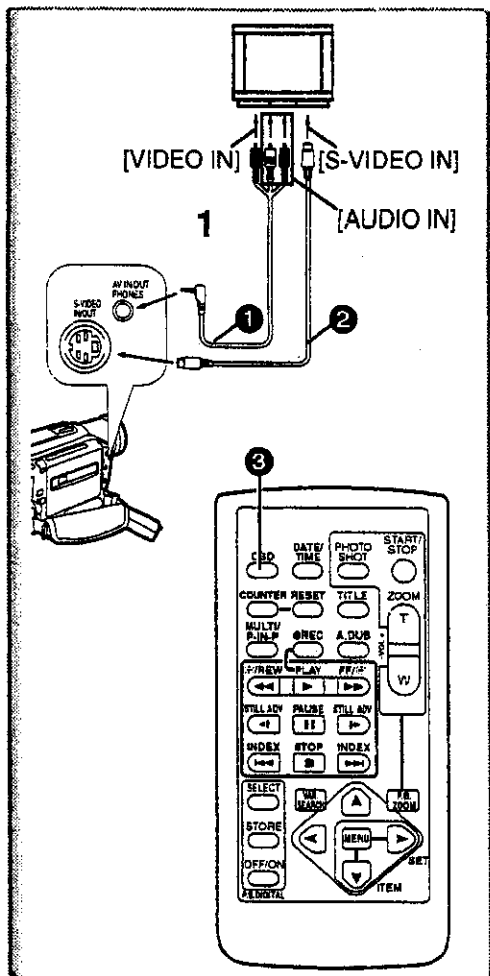

## Playing Back on Your TV

By connecting your Movie Camera with your TV, the recorded scenes can be viewed on your TV screen.

- Before connecting them, turn off the power of both the Movie Camera and TV.


### 1 Connect the [AV OUT] Socket of the Movie Camera and the Video and Audio Input Sockets of the TV.

- Using the AV Cable **1**, make a connection with the TV. If the TV has an S-Video Socket, connect the S-Video Cable **2** (not supplied), too.

### To Make the Indications Appear on the TV Screen

Press the [OSD] Button **3** on the Remote Controller.

- For other notes concerning this item, see page 41.

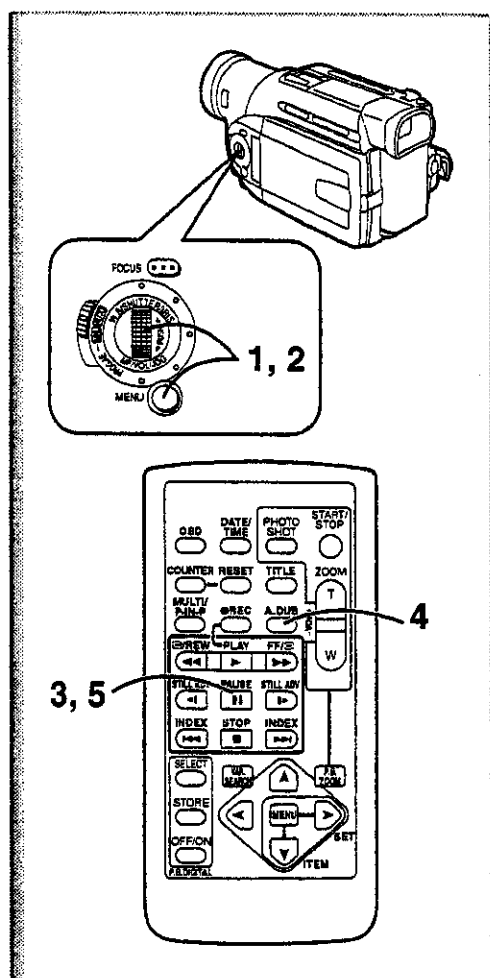

## Audio Dubbing

You can add music or narration to the recorded Cassette.

- If the tape recorded in the [16bit] Mode is dubbed with the Audio Dubbing function, the original sound is erased. (If you wish to preserve the original sound, use the [12bit] Mode when recording.)
- Audio Dubbing cannot be performed on a recording done in LP Mode. (→ 17)

### 1 Set [VCR FUNCTIONS] >> [AV IN/OUT SETUP] >> [AV JACK] >> [IN/OUT].

### 2 Continuing the aforesaid setup, select [A.DUB INPUT] >> [MIC] or [AV IN].

- Set to [AV IN] when external device is used, and to [MIC] when an external or built-in microphone is used.

### 3 Switch the Movie Camera over to the Still Playback Mode where you want to add new sound.

### 4 Press the [A.DUB] Button on the Remote Controller.

### 5 To start Audio Dubbing, press the [II] Button on the Remote Controller.

### To Cancel Audio Dubbing

Press the [II] Button on the Remote Controller.

The Movie Camera is in the Still Playback Mode again.

### To Play Back the Sound Recorded by 12bit Audio Dubbing

Set [VCR FUNCTIONS] >> [PLAYBACK FUNCTIONS] >> [12bit AUDIO] >> [ST2] or [MIX].

ST1: It plays back only the original sound.



ST2: It plays back only the sound added by Audio Dubbing.

MIX: It plays back both the original sound and the sound added by Audio Dubbing simultaneously.


- For other notes concerning this item, see page 41.

1. AV IN/OUT SETUP  
2. A.DUB INPUT  
3. II

2, 4, 5  
3, 6

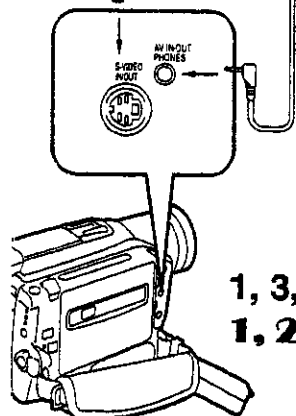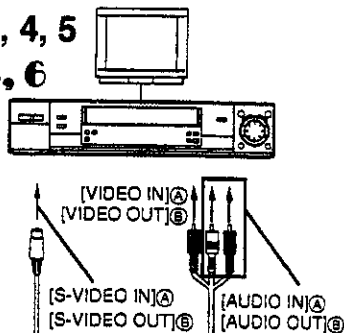

1, 3, 6  
1, 2, 4, 5

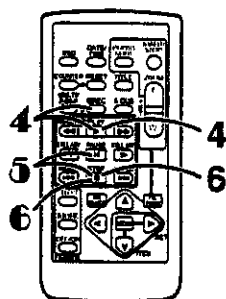

## Copying on an S-VHS (or a VHS) Cassette

(Dubbing)

After connecting the Movie Camera and the VCR as illustrated at left (A), start the following procedures.

- Be sure to press the [OSD] Button (→ 8) on the Remote Controller prior to copying so that no indications are visible. Otherwise, the displayed tape counter and function indications are also copied.

[Movie Camera]

- 1 Insert the recorded Cassette.

[VCR]

- 2 Insert an unrecorded Cassette with an erasure prevention tab.

- If various setups (such as external input, tape speed, etc.) are required, please refer to the operating instructions of your VCR.

[Movie Camera]

- 3 Press the [▶] Button to start playback.

[VCR]

- 4 Start recording.
- 5 Press the Pause or Stop Button to stop recording.

[Movie Camera]

- 6 Press the [■] Button to stop playback.

① S-Video Cable (not supplied)

② AV Cable

## ~~~~~ Recording the Contents of Other Equipment

After connecting the Movie Camera and the other equipment as illustrated at left (B), start the following procedures.

- You need the Remote Controller.

[Movie Camera]

- 1 Set [VCR FUNCTIONS] >> [AV IN/OUT SETUP] >> [AV JACK] >> [IN/OUT].

- 2 Insert an unrecorded Cassette.

[Other Equipment]

- 3 Insert a recorded Cassette and start playback.

[Movie Camera]

- 4 While pressing the [REC] Button, press the [PLAY] Button.  
(Both are on the Remote Controller.)


- 5 Press the [||] Button or [■] Button to stop recording.

[Other Equipment]

- 6 Press the [■] Button to stop playback.

- For other notes concerning this item, see page 41.

VCR

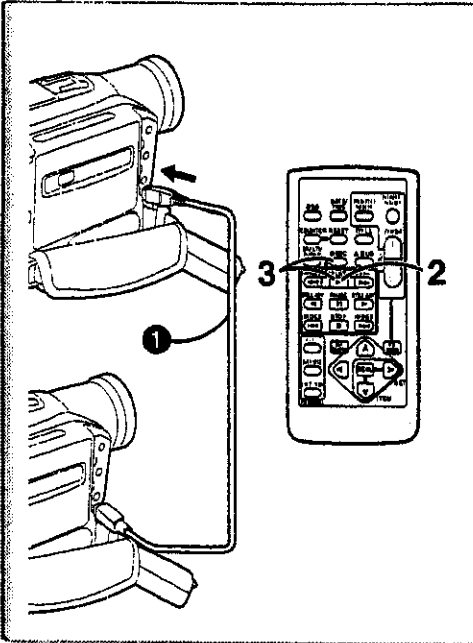

## Using the DV Cable for Recording

### (Digital Dubbing)

By connecting this Movie Camera with other digital video equipment that has a DV Input/Output Terminal (i.LINK) using a DV Cable VW-CD1E (optional)

- 1, dubbing can be done in the digital format.

### [Player/Recorder]

- 1 Insert the Cassette and set to the VCR Mode.

### [Player]

- 2 Press the [▶] Button to start playback.

### [Recorder]

- 3 While pressing the [REC] Button, press the [PLAY] Button.  
(Both are on the Remote Controller.)

• Recording starts.

### To Stop Dubbing

Press the [II] Button or the [■] Button.

• For other notes concerning this item, see page 41.

## Using the Automatic Printing Function

### (Autoprint)

By connecting a Video Printer 1 equipped with a 5-pin Edit Socket and your Movie Camera, you can automatically print out the still pictures with the Photoshot Index. (→ 28)

After making connections in the figure, set up the Video Printer as necessary.

- 1 Search for the Still Picture where you want to start printing with the Automatic Printing Function.

• If you want to print all the still pictures recorded on the Cassette, rewind the tape back to the beginning.

- 2 Set [VCR FUNCTIONS] >> [PLAYBACK FUNCTIONS] >> [AUTO PRINT] >> [YES].

Or set [CARD FUNCTIONS] >> [CARD EDITING] >> [AUTO PRINT] >> [YES]. (NV-DS38 only)

• Automatic printing starts.


### To Cancel Autoprint

Press the [■] Button on the Movie Camera.

- 2 Edit Cable VW-K5E (optional)

- 3 S-Video Cable (not supplied)

• For other notes concerning this item, see page 41.

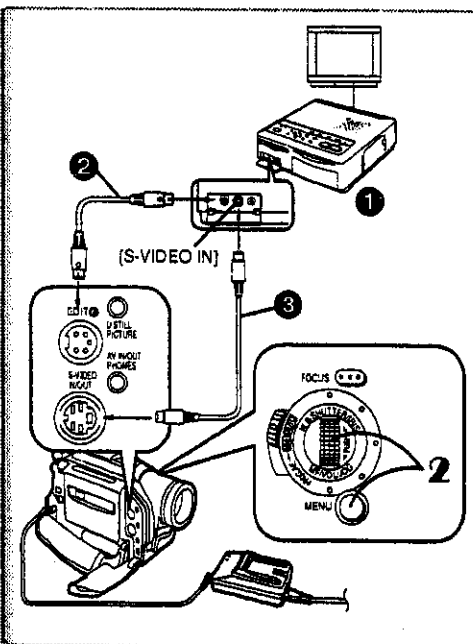


## Personal Computer Connection Kit

Using the supplied Personal Computer Connection Kit, you can import still pictures into your personal computer.

- Use the Digital Still Picture Terminal [D.STILL PICTURE] 1 when using the Personal Computer Connection Kit.

- When recording, be careful not to cut off the Time Code from the start of the tape.

- For more details on the operating environment, connections, and procedures, please refer to Personal Computer Connection Kit's operating instructions.

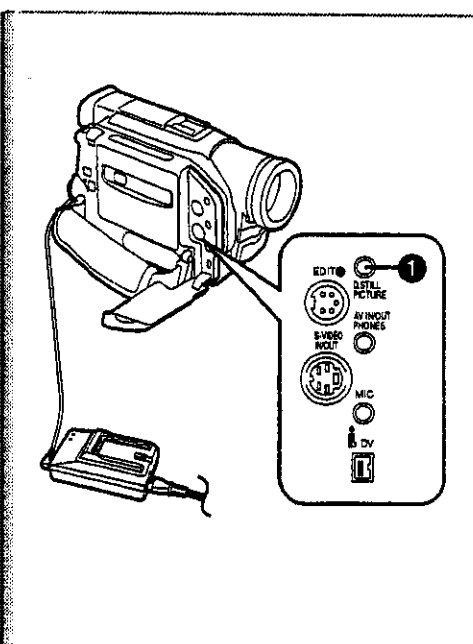



## CARD Mode

### Using a Card

A Card can be used to record still pictures.

#### ■ Inserting a Card





Before inserting a Card, be sure to turn off the Movie Camera.

- 1 Slide the [OPEN] Lever and open the Card Compartment.
- 2 Hold the Card with its notch ❶ facing left and insert it in the Card Compartment.
- 3 Push the part ❷ and close the Card Compartment securely.

#### ■ [ACCESS] Lamp

While the Movie Camera is making an access to the Card (reading, recording, playback, erasing, moving of images), the [ACCESS] Lamp lights up.

- While the [ACCESS] Lamp ❸ is on, never attempt to open the Card Compartment, to pull out the Card, to turn off the Movie Camera, or to switch the [TAPE/CARD] Selector. Such actions will damage the Card, cause loss of recorded data and cause the Movie Camera to malfunction.

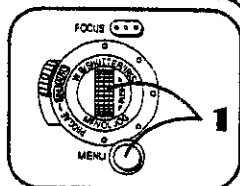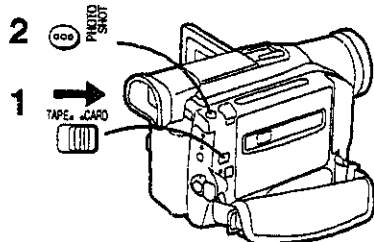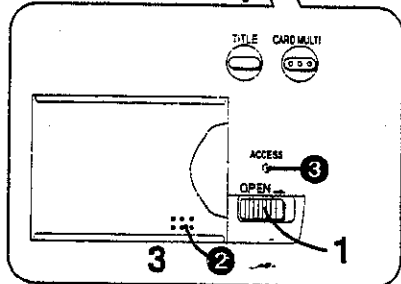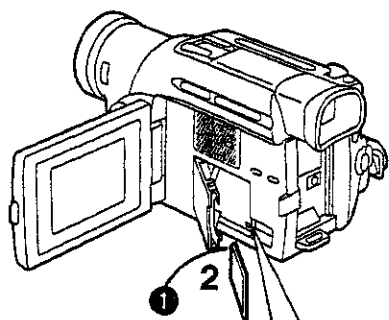

### ~~~~~ Recording on a Card

Still pictures can be recorded on a Card from the Movie Camera lens as well as from scenes that have already been recorded on a cassette.

#### ■ Card Photoshot

Recording from the Movie Camera Lens (CAMERA Mode)

- 1 Slide the [TAPE/CARD] Selector towards [CARD].
  - 2 Press the [PHOTO SHOT] Button.
    - If nothing is recorded for approximately 6 minutes, the Movie Camera is turned off automatically.
- When the [TAPE/CARD] Selector is set to [CARD], you cannot record to the Tape.

Recording from a Cassette (VCR Mode)

- 1 Slide the [TAPE/CARD] Selector towards [CARD].
- 2 Start playback and set the Movie Camera to Still Playback Mode at the scene you wish to record, and press the [PHOTO SHOT] Button.

Selecting the quality of Card Photoshot images

- 1 Set [CAMERA FUNCTIONS] or [VCR FUNCTIONS] >> [CARD SETUP] >> [PICTURE QUALITY] >> a desired image quality.

Maximum number of images recordable on a Card (8MB)

[FINE] (high image quality): approximately 45 pictures

[NORMAL] (Normal): approximately 95 pictures

[ECONOMY] (low image quality): approximately 190 pictures

#### ■ Automatically Copying Still Pictures That Have Already Been Recorded on a Tape


 
The images with the Photo Index signals are automatically recorded to the Card.

- 1 Set the Movie Camera to Still Playback Mode at the scene immediately before you want to start moving images.
- 2 Set [VCR FUNCTIONS] >> [PLAYBACK FUNCTIONS] >> [RECORD TO CARD] >> [YES].
  - Search starts from the current Tape position, and images with Photo Index signals are recorded onto the Card sequentially.
  - During copying, the Indication ❶ appears.

#### To Stop Automatic Recording

Press the [■] Button.

- For other notes concerning this item, see page 42.

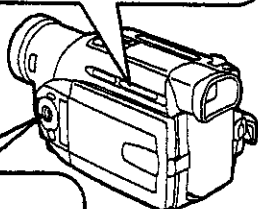

❶

TAPE >> CARD

NOW WRITING

## Playing Back a Card

It plays back images recorded on a Card.

- 1 Press the [MODE] Button to select the Card Playback Mode.
  - The [CARD P.B] Lamp lights up.
  - The still picture that was recorded last on the Card is displayed.
- 2 Press the [◀◀] Button or [▶▶] Button to display the desired picture.
  - Each time the button is pressed the picture returns or is sent.

- 1 File Name
- 2 Picture Size
- 3 The number of the image

### To Select a Desired Image and Play It Back

- 1 Press the [CARD MULTI] Button.
  - The still pictures recorded on the Card are displayed in Multi-Picture Mode. 4
- 2 Turn the [PUSH] Dial and select a desired picture.
  - The selected picture is marked with a frame.
  - When 7 or more pictures have been recorded, turn the [PUSH] Dial to display the next picture. (The [◀◀] Button or [▶▶] Button can be used instead of the [PUSH] Dial.)
- 3 Press either the [PUSH] Dial or the [CARD MULTI] Button.
  - The selected picture is shown on the entire screen.

- 5 Picture Size
- 6 File Number
- 7 File Name

### Using Picture Search Mode

- 1 Set [CARD FUNCTIONS] >> [CARD EDITING] >> [PICTURE SEARCH] >> [YES].
- 2 Turn the [PUSH] Dial and select the desired picture number, and press the [PUSH] Dial. 8

For other notes concerning this item, see page 42.

## ~~~~~ Recording Pictures on a Card to a Tape



Card images can be recorded on the Tape one at a time or all automatically.

### To Copy 1 Picture

- 1 Slide the [TAPE/CARD] Selector towards [TAPE].
- 2 Display a desired picture.
- 3 Press the [PHOTO SHOT] Button.
  - It takes a few seconds to record a picture to the Tape.

### To Copy All the Pictures

- 1 Display the first picture.
    - If a picture other than the first one is displayed, only the subsequent pictures will be copied.
  - 2 Set [CARD FUNCTIONS] >> [CARD EDITING] >> [RECORD TO TAPE] >> [YES].
    - It takes a few seconds for each picture to be copy on the Tape. To stop the copying midway, press the [■] Button.
    - During the copying, the Indication 1 appears.
- For other notes concerning this item, see page 42.

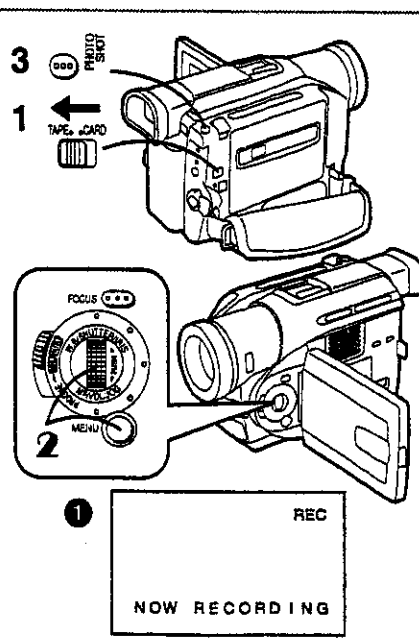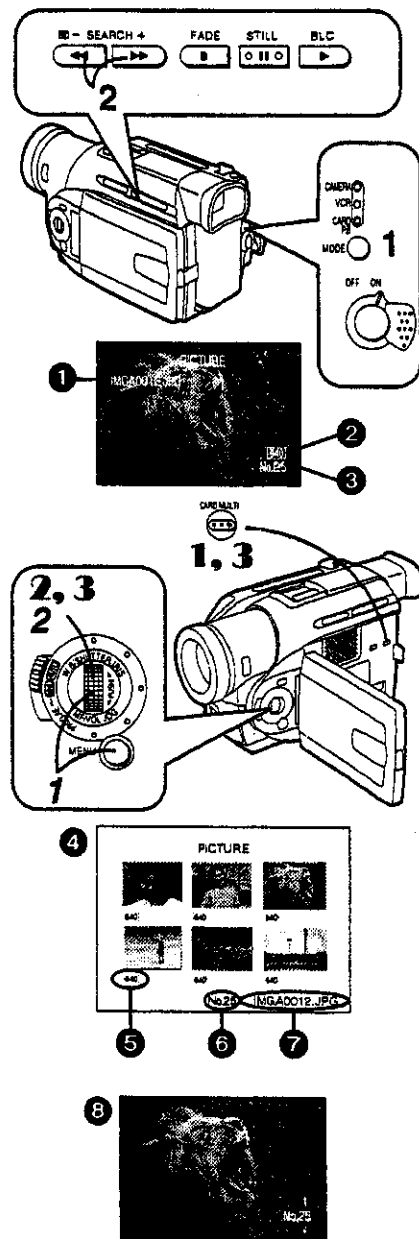

## Slide Show

The recorded still pictures in the Card can be played back like a Slide Show.

### To Play Back All the Pictures Continuously

- 1 Set [CARD FUNCTIONS] >> [CARD EDITING] >> [SLIDE SHOW] >> [SLIDE SHOW] >> [ALL]

- But, this procedure is unnecessary when editing of a Slide Show (undermentioned reference) isn't being done.

- 2 Press the [▶] Button.

- The [SLIDE▶] Indication is displayed. ①

- All of the pictures are played back for several seconds each.


### To Pause the Slide Show

Press the [⏏] Button.

The [SLIDE⏏] Indication is displayed. ②

### To Stop the Slide Show

Press the [■] Button.

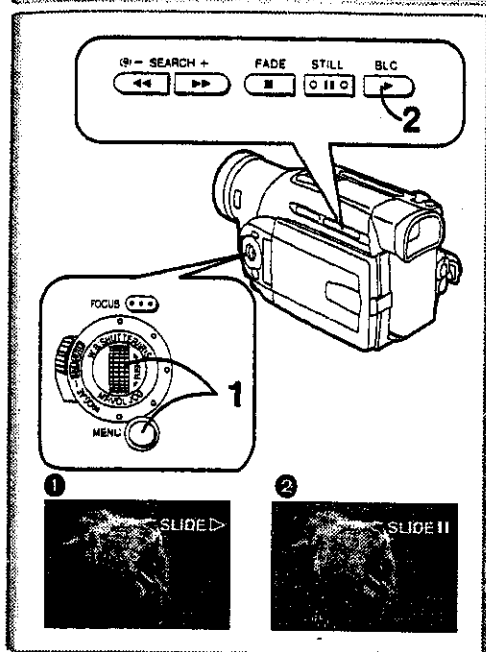

## Editing a Slide Show

You can set up a Slide Show or change the content.

### To Select Pictures to Play Back in Your Slide Show

- 1 Set [CARD FUNCTIONS] >> [CARD EDITING] >> [SLIDE SHOW] >> [EDIT] >> [YES].
- 2 Turn the [PUSH] Dial to select a picture and then press the dial.
- 3 Turn the [PUSH] Dial to select a picture and then press the dial.

- Playback Order Indication ①

- 4 Turn the [PUSH] Dial to adjust the playback time and press the dial.

- Playback Time (Second) Indication ②

- The [●] Indication ③ is displayed to the picture set.

- To select the next picture, repeat the Steps 2 to 4 above.

- 5 Press the [MENU] Button to end the setup.

### To Play Back the Slide Show That Has Been Set

You must set [SLIDE SHOW] >> [EDIT] first.

- 1 Set [CARD FUNCTIONS] >> [CARD EDITING] >> [SLIDE SHOW] >> [SLIDE SHOW] >> [PRESET].

- 2 Press the [▶] Button.

- The [M.SLIDE▶] Indication is displayed. ④

### To Verify the Selected Picture

Set [CARD FUNCTIONS] >> [CARD EDITING] >> [SLIDE SHOW] >> [VERIFY] >> [YES] >> [YES].

- Only the selected pictures are displayed in the Playback Order.

### To Delete the Selected Picture

- 1 Set [CARD FUNCTIONS] >> [CARD EDITING] >> [SLIDE SHOW] >> [DELETE] >> [YES].

- 2 Select the picture you wish to delete and press the [PUSH] Dial.


- The selected picture is marked with a frame.

### To Reset the Slide Show Setup

Set [CARD FUNCTIONS] >> [CARD EDITING] >> [SLIDE SHOW] >> [RESET] >> [YES].

- Slide Show settings are reset.

• For other notes concerning this item, see page 42.

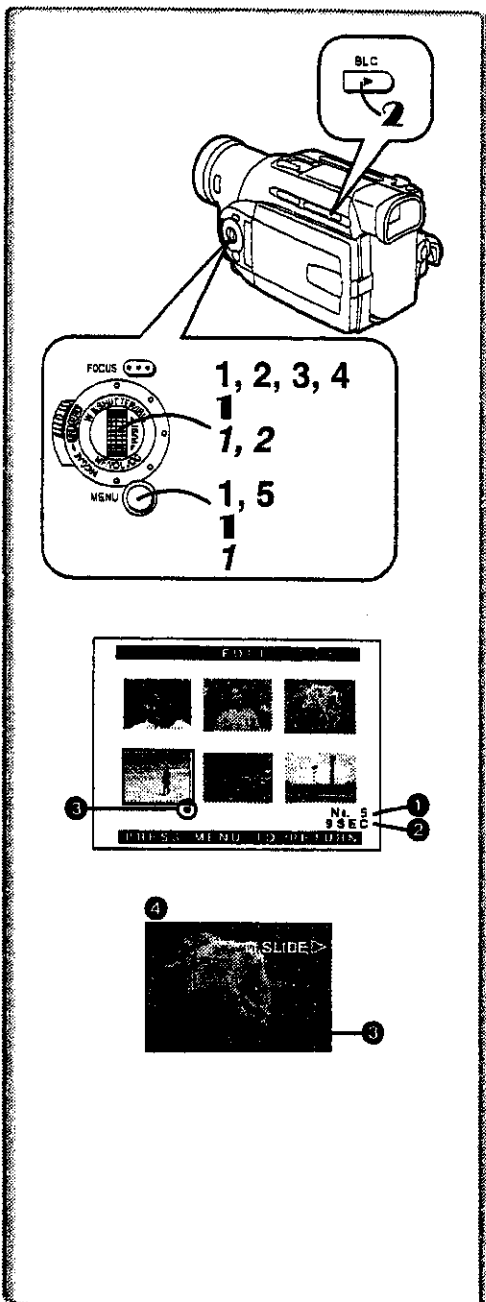

## Creating a Title

You can create a title and record on a Card.

### 1 Camera Mode:

Set the Lens to the image you want to use for creating a title.

### VCR Mode:

Search for the image you want to use for creating a title and set the Movie Camera to the Still Playback Mode.

### 2 Set [CARD SETUP] >> [CREATE TITLE] >> [YES].

### 3 Press the [PHOTO SHOT] Button.

•To perform Photoshot again, select [RETURN].




### 4 Select [LUMINANCE] and press the [PUSH] Dial, turn it to adjust the title contrast and press it.

### 5 Select [COLOUR] and press the [PUSH] Dial, turn it to adjust the colour and press it.

•The dark portion of the image is missing ①, and the colours of the bright portion change in order the original colour, black, blue, green, cyan, red, pink, yellow, and white, after which the bright portion of the image is missing ② and the colours of the dark portion change in the above order.

### 6 Select [RECORD] and press the [PUSH] Dial.

•For other notes concerning this item, see page 42.

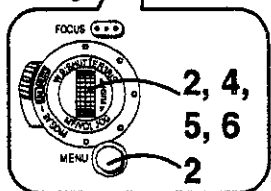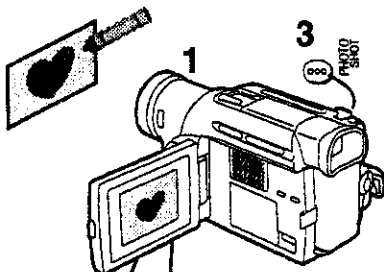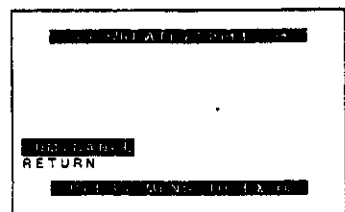

## Adding a Title

A title can be added to the picture. It is displayed in Camera Mode, VCR Mode and Card Playback Mode.

### 1 Press the [TITLE] Button.

•The title is displayed.

### 2 Press [CARD MULTI] Button.

•A list of titles is displayed. ①

### 3 Turn the [PUSH] Dial to select a desired title.

•The selected title is marked with a frame.

### 4 Press the [PUSH] Dial or press the [CARD MULTI] Button.

•The selected title is displayed.

•Recording and Photoshot Recording can be done with pictures that have titles.



### ② File Name

### To Clear the Title Display

Press the [TITLE] Button

•The supplied Card contains titles. If an original title has not been created, a preset title will be displayed.

•For other notes concerning this item, see page 42.

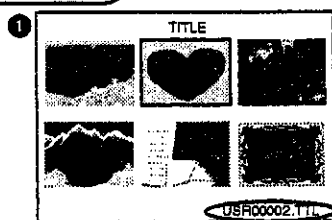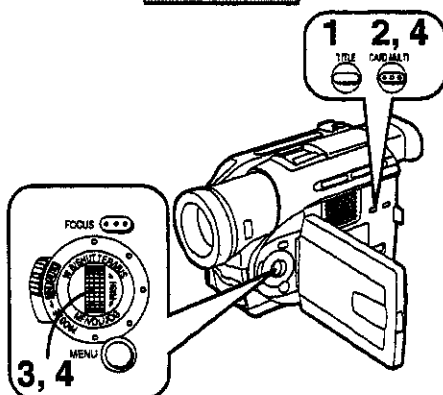

## Protecting the Pictures on a Card

### (Lock Setting)

Precious pictures recorded on a Card can be locked (to prevent accidental erasure.) (Even if pictures are locked, the pictures will be deleted when the Card is formatted.)

- 1 Set [CARD FUNCTIONS] >> [CARD EDITING] >> [FILE LOCK] >> [YES].

- The [FILE LOCK] Menu is displayed.

- 2 Select [PICTURE] or [TITLE].

- 3 Select the picture to be locked, and press the [PUSH] Dial.

- The [ ] Indication ① is attached to the selected picture. Repeat this procedure to lock 1 or more picture.

- Press the [PUSH] Dial again to cancel.

- The SD Memory Card has a write protection switch. (→ 42)

## Deleting the Pictures Recorded on a Card

Using the Movie Camera, you can delete the still pictures recorded on a Card. After the picture is deleted, it cannot be restored.

### To Select and Delete a Picture

- 1 Set [CARD FUNCTIONS] >> [ERASE PICTURE/TITLE] >> [ERASE PICTURE BY SELECTION].

- To erase a title, select [ERASE TITLE BY SELECTION].

- 2 Select the picture you wish to delete and press the [PUSH] Dial.

- The frame around the selected picture flashes.

- To erase 2 pictures or more, repeat this step.

- 3 Press the [PHOTO SHOT] Button.

- A verification message appears.

- 4 Select [YES] and press the [PUSH] Dial.

- The selected picture is deleted from the Card.

- If [NO] is selected, the picture selection is cancelled.

### To Select and Delete All Pictures

- 1 Set [CARD FUNCTIONS] >> [ERASE PICTURE/TITLE] >> [ERASE ALL PICTURES].

- A verification message appears.

- 2 Select [YES] and press the [PUSH] Dial.

- All the pictures stored in the Card are deleted.

- A locked picture cannot be erased.

## Writing Printing Data on a Card

### (DPOF Setting)

DPOF Setting Printing data (DPOF Settings), such as the number of images to be printed, can be written to the Card. "DPOF" means Digital Print Order Format.

- 1 Set [CARD FUNCTIONS] >> [CARD EDITING] >> [DPOF SETTING] >> [YES] >> [VARIABLE]

- To print all pictures one at a time, select [ALL 1]. When all images are not printed, select [ALL 0].

- 2 Select a desired picture.

- The number of prints set by DPOF ① is displayed.

- 3 Turn the [PUSH] Dial and select the number of pictures to be printed, and press the [PUSH] Dial.




- [●] Indication ② is displayed in the picture set.

- 4 Repeat Step 2 and 3 and press the [MENU] Button when the setup is completed.

### To Verify DPOF Setting

Select [VERIFY] in Step 1 above. The pictures for which 1 or more print is set in DPOF are played back continuously.

- For other notes concerning this item, see page 42.

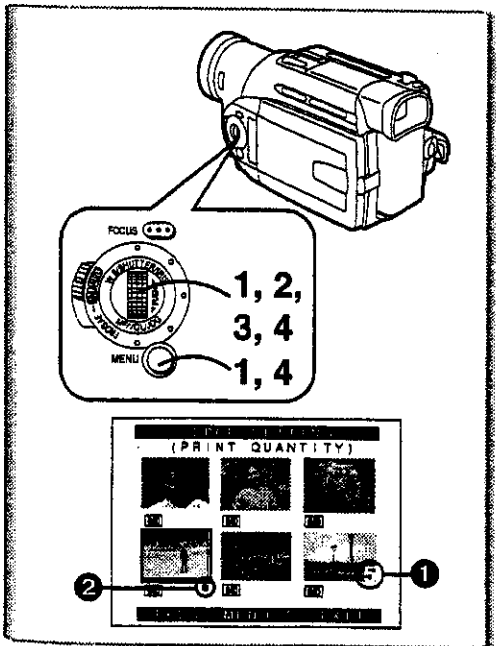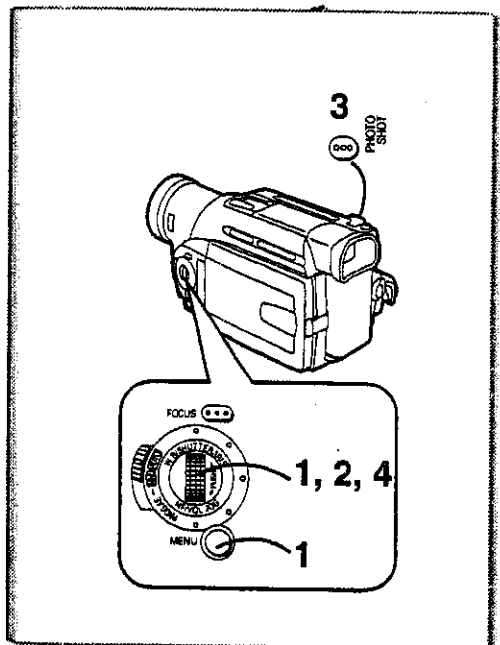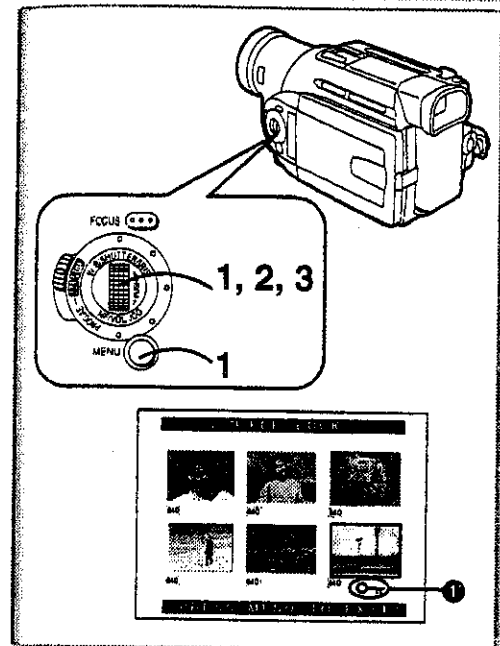


## Others



### Indications

Various functions and the Movie Camera status are shown on the screen.

- Some Indications may not be displayed according to the model.

: Remaining Battery Power

- When the battery power becomes low, the Indication changes. When the battery is discharged completely, the  Indication flashes.

: (When you are using the AC Adaptor, the  Indication may appear, however, this is not a malfunction.)

R0:45: Remaining Tape Time

- Remaining tape time is indicated in minutes. (When it reaches less than 3 minutes, the Indication starts flashing.)

D.ZOOM: Digital Zoom (→ 20)

WIPE: Wipe Mode (→ 25)

MIX: Mix Mode (→ 25)

STROBE: Strobe Mode (→ 25)

GAINUP: Gain-up Mode (→ 25)

TRACER: Trailing Effect Mode (→ 25)

MOSAIC: Mosaic Mode (→ 25)

MIRROR: Mirror Mode (→ 25)

NEGA: Negative Mode (→ 25)

SEPIA: Sepia Mode (→ 25)

B/W: Black & White Mode (→ 25)

SOLARI: Solarisation Mode (→ 25)

PB ZOOM: Playback Zoom (→ 29)

SP: Standard Mode (Recording Speed Mode) (→ 17)

LP: Long Play Mode (Recording Speed Mode) (→ 17)

INDEX: Index signal recording (→ 28)

S 1: Search Number (→ 28)

5x: Zoom Magnification Indication (→ 19)

AUTO: Automatic Mode (→ 18)

MNL: Manual Mode (→ 24, 23)

: Image Stabilizer (→ 20)

MIC, AV IN: Audio Dubbing Input Display (→ 30)

12 bit, 16 bit: Audio Recording Mode (→ 17)

AUTOPRINT: Automatic Printing (→ 32)

MF: Manual Focus (→ 24)

: Back Light Mode (→ 22)

: Sports Mode (Programme AE) (→ 22)

: Portrait Mode (Programme AE) (→ 22)

: Low Light Mode (Programme AE) (→ 22)

: Spotlight Mode (Programme AE) (→ 22)

: Surf & Snow Mode (Programme AE) (→ 22)

REC: Recording (→ 18)

PAUSE: Recording Pause (→ 18)

▷: Playback (→ 26)/Forward Camera Search (→ 18)

◁: Reverse Camera Search (→ 18)

||: Still Playback (→ 27)

▷▷: Fast-forward/Cue Playback (→ 26)

◁◁: Rewind/Review Playback (→ 26)

◁||, ||▷: Slow Motion Playback (→ 27)

◁|||, |||▷: Still Advance Playback (→ 27)

◁◁, ▷▷: Index Search (→ 28)

CHK: Recording Check (→ 18)

A.DUB ▷: Audio Dubbing (→ 30)

A.DUB ||: Audio Dubbing Pause (→ 30)

PHOTO:

BLANK:

R ▷:

2x▷▷:

1/500:

SLIDE▷:

SLIDE||:

M.SLIDE▷:

M.SLIDE||:

F2.4:

AWB:

:

✱:

✱:

Z.MIC:

WIND CUT:

:


STDBY

OLUX

VOLUME:


15:30:45 :

N (F, E):

 (Red):

ACCESS:

:

 (cyan):


00:

:

● (White) : DPOF Setting completed (set to 1 or more picture) (→ 35)

● (Green) : Slide Show Settings completed (→ 37)

● (Blue) : DPOF Setting (set to 1 or more picture)/ Slide Show Settings both completed (→ 35, 37)


: [640×480] Image size

- For images not recorded with this Movie Camera, the size display is determined as follows according to the the number of horizontal pixels.

: From 640 to 800 (The size is not displayed at under 640 pixels.)

: From 800 to 1024

: From 1024 to 1280

: From 1280 to 1600

: Over 1600

### ■ To Change the Counter Display Mode

By changing [C.DISPLAY] on the [DISPLAY SETUP] Sub-Menu, you can change the Counter Display Mode to Tape Counter Indication [COUNTER] (0:00.00), Memory Counter Indication [MEMORY] (M0:00.00), and Time Code Indication [TIMECODE] (0h00m00s00f). (→ 13) By repeatedly pressing the [COUNTER] Button on the Remote Controller, you can change the Counter Display Mode.

### ■ To Display Date/Time Indication

Photoshot Mode Recording (→ 19)

Blank Search (→ 27)

Repeat Playback (→ 41)

Variable Speed Search (→ 26)

When you adjust shutter speed manually, this indication appears. (→ 24)

Slide Show Playback (→ 35)

Slide Show Playback Pause (→ 35)

Manual Slide Show Playback (→ 35)

Manual Slide Show Playback Pause (→ 35)

When you adjust the F Number manually, this indication appears. (→ 24)

Automatic White Balance Mode (→ 23)

White Balance setting Mode (→ 23)

Outdoor Mode (→ 23)

Indoor Mode (recording under incandescent lamp) (→ 23)

Zoom Microphone (→ 19)

Wind Noise Reduction (→ 22)

Progressive Photoshot Mode (→ 19)

Motion Sensor Stand-by Mode (→ 21)

0 Lux Night View Mode (→ 21)

Volume adjustment (→ 26)

Date/Time Indication (→ 38)

CardPhotoshot Picture Quality (during Card Photoshot recording) [F] means Fine, [N] means Normal and [E] means Economy.(→ 33)

Card Photoshot Recording (→ 33)

While Card is being read (during Playback, Formatting and Multi-Picture Function use) (→ 33)

Card not inserted (→ 33)

Card Photoshot Recording preparation completed (→ 33)

Remaining Number of Card Photoshot pictures(→ 33)

Lock Setting(→ 37)

To dis

Time I

(→ 13

You al

Contr

Indica

■ To

By cha

Menu,

Displa

Displa

~

Wai

If any

please

• Som

mod

▲:

☒:

☒:

☒:

☒:

☒EN

REMO

PRIN

UNPL

(OTH

UNAE

(LP R

INCO

TAPE

COPY

PLEA

AFTE

RESE

TO S

CARI

NO C

NO P

CARI

COP

To display Date/Time Indication, set the appropriate Date/Time in [DATE/TIME] on the [DISPLAY SETUP] Sub-Menu. (→ 13)

You also can press the [DATE/TIME] Button of the Remote Controller repeatedly to display or change the Date/Time Indication.


 
## ■ To Change the Display Mode



By changing [DISPLAY] on the [DISPLAY SETUP] Sub-Menu, you can change the Display Mode to All Function Display [ALL], Partial Display [PARTIAL], and Minimum Display [OFF].


## ~~~~~ Warning/Alarm Indications


 
If any one of the following indications lights up or flashes, please check the condition of the Movie Camera.

- Some Indications may not be displayed according to the model.

 : Condensation has occurred. (→ 43)  
 : The accidental erasure prevention slider on the inserted Cassette is open (that is, set to [SAVE].) You are about to do audio dubbing on the unrecorded (blank) portion of the tape.

 : No Cassette is inserted. (→ 11)  
 : The Battery is low. Recharge it. (→ 10)

 : The button-type battery is low or not in. (→ 17)

 : The video heads are dirty. (→ 44)  
 END: The tape came to end during recording.

REMOTE: Wrong Remote Controller Mode has been selected. (→ 9)

PRINTER ERROR: The Video Printer is not connected correctly, or the Video Printer is not functioning properly.

UNPLAYABLE TAPE (OTHER FORMAT): You are attempting to play back a tape section that has been recorded with a different TV system.

UNABLE TO A. DUB (LP RECORDED): Because the original recording was done in LP Mode, audio dubbing cannot be performed.

INCOMPATIBLE TAPE: This Cassette is incompatible.  
 COPY INHIBITED: Because the medium is protected by a copy guard, images cannot be recorded correctly.

PLEASE RE-OPERATE AFTER PUSHING RESET BUTTON: Mechanism Irregular is detected. Press the [RESET] Button (→ 6). This may solve the problem.

TO SERVICE: It is a malfunction.  
 CARD FULL: Card does not have sufficient memory remaining.

NO CARD: Card is not inserted.  
 NO PICTURE: Card has no pictures recorded on it.  
 CARD ERROR: This Card is not compatible with this Movie Camera.

COPY INHIBITED: Because the medium is protected by a copy guard, images cannot be recorded correctly.

## ~~~~~ Notes and Hints

### ■ Concerning the Power Supply

- When the Movie Camera is used for a long time, the Camera body becomes warm, but this is not a malfunction.
- If the [CHARGE] Lamp does not light up although the Battery is attached to AC Adaptor, detach the Battery and reattach it.
- Battery CGP-D110 and CGP-D105 cannot be charged with this AC Adaptor.

### ■ Inserting/Removing the Cassette

- In the case of using a previously recorded Cassette, you can use the Camera Search Function to find the position where you want to continue recording.
- If a new Cassette is inserted, rewind to the beginning of the tape before starting recording.
- When inserting the cassette, make sure it faces in the right direction and then push it in until it stops.
- When opening or closing the Cassette Compartment, push down the buckle of the Grip Belt so that it does not obstruct the opening and closing of the Cassette Compartment.

### ■ Alarm Sounds

When [BEEP SOUND] on the [OTHER FUNCTIONS] Sub-Menu on the [CAMERA FUNCTIONS] Main-Menu is set to [ON], confirmation/alarm beeps are issued as follows.

1 Beeps

- When you start recording
- When you switch the [OFF/ON] Switch from [OFF] to [ON]

2 Beeps

- When you pause recording

10 Beeps

- If you perform a wrong operation before or during recording

### ■ Recording

- Before turning on the power, remove the Lens Cap. If the Lens Cap is still attached when the power is turned [ON], Automatic White Balance Adjustment (→ 47) may not function correctly.

### ■ Recording Check

- For Recording Check, the Movie Camera mode (SP/LP) must be the same as the mode used for the recording. If different, playback images will be distorted.

### ■ Camera Search

- In Camera Search Mode, images may contain mosaic-pattern noise. This is a phenomenon that is characteristic of digital video and not a malfunction.
- If the recording speed modes (SP/LP) of previous recording and new recording are different, playback images may be distorted.

### ■ Photoshot

- Photoshot Recording results in slightly inferior image quality.

### ■ Progressive Photoshot Function

- When you change to the Still Picture Mode, you will hear a click. This is the sound of the iris closing and not an indication of malfunction.
- If you record still pictures in Progressive Photoshot Mode when your Movie Camera is set to Programme AE (→ 22), the brightness of the images may change.

#### About [PROGRESSIVE] Setup

- When the [P] Indication is displayed, you can use the Progressive Photoshot Function.

When [PROGRESSIVE] is [ON]:

You can use the Progressive Photoshot Function at any time. In this case, however, the following functions are disabled.

- Digital Effect Modes in [EFFECT1] (→ 25)
- Digital Zoom [D.ZOOM] (→ 20)
- 1/750 s or faster shutter speed (→ 24)

When [PROGRESSIVE] is set to [AUTO]

You cannot use the Progressive Photoshot Function in the following cases.

- When the zoom magnification is approximately 15× or higher
- When the shutter speed is 1/750 s or faster
- When [EFFECT1] is set to [WIPE], [MIX], [STROBE], [GAINUP], [TRACER], [MOSAIC], [MIRROR]

### Zoom In/Out Functions

- When you are zooming on a faraway subject, a sharper focus is achieved if the recording subject is 1.7 metres or more away from the Movie Camera.
- When an external microphone is used, the [Z.MIC] indication appears, but the Zoom Microphone function does not function.

### Image Stabilizer Function

- The Image Stabilizer Function does not operate in a dimly lit place. In this case, the [ ] Indication lights up.
- Under fluorescent lighting, image brightness may change or colours may not look natural.
- After-images may appear.
- When a tripod is used, it is recommended that you turn the Image Stabilizer off.

### Cinema Function

- If you play back tape recorded in Cinema Mode on a wide-screen (16:9) format TV, playback size is automatically adjusted to fit the TV screen format. Please refer to the TV's operating instructions for details.
- When images are displayed on a TV screen, the Date/Time indication may be erased in some cases.

### Motion Sensor Function

- When you use the Motion Sensor Function, it is recommended that you use the AC Adaptor.
- The Motion Sensor Function may not operate in a dimly lit place. In this case, the [MOTION SENSOR] Indication flashes.
- Depending on the colour, size, or movement of the recording subject, the Motion Sensor may not function properly.
- When setting the Motion Sensor Function, [EFFECT1] on the [DIGITAL EFFECT] Sub-Menu and [SIS] and [D.ZOOM] on the [CAMERA SETUP] Sub-Menu are automatically set to [OFF].
- When setting the Motion Sensor Function, the recording and search functions are disabled.
- You cannot record the beginning of the movement.

### 0 Lux Night View Function

- The 0 Lux Night View Function should not be used in brightly-lit places, and the Movie Camera should not be directed toward the sun. Otherwise, irreparable damage may occur.
- Scenes taken by the 0 Lux Night View Function are played back in black and white.
- When recording with the 0 Lux Night View Function, operating the shutter speed, iris and white balance is not possible.
- While the 0 Lux Night View Function is operating, you cannot use any of the Programme AE Modes.
- When the 0 Lux Night View Function is in use, the subject should be within 3 metres of the Movie Camera.

- If the Motion-Sensor-Controlled Recording Function is used with the 0 Lux Night View Function, the [MOTION SENSOR] Indication may flash, and you may not be able to record properly.

### Programme AE

- If any of the Programme AE Modes is selected, you cannot adjust the shutter speed (→ 24) or iris (→ 24).
- You cannot use Sports Mode, Portrait Mode or Low-Light Mode with Gain-up Mode [GAINUP].

### Sports Mode

- During normal playback, the image movement may not look smooth.
- Because the colour and brightness of the playback image may change, avoid recording under fluorescent light, mercury light, or sodium light.
- If you record a subject illuminated with strong light or a highly reflective subject, vertical lines of light may appear.
- If the light is insufficient, the [ ] Indication flashes.
- If this mode is used for indoor recording, playback images may flicker.

### Sports Mode/Portrait Mode

- If you record a still picture in Progressive Photoshot Mode, the brightness and hue of the recorded still picture may become unstable.

### Low Light Mode

- Extremely dark scenes may not be able to be made brighter to a satisfactory degree.

### Spotlight Mode

- With this mode, recorded images may turn out to be extremely dark.
- If the recording subject is extremely bright, its recorded image may turn out to be whitish.

### Surf & Snow Mode

- If the recording subject is extremely bright, its recorded image may turn out to be whitish.

### White Balance

- You cannot change White Balance if you set [EFFECT1] of [DIGITAL EFFECT] Sub-Menu on the [CAMERA FUNCTIONS] Main-Menu to [GAINUP], or if you set [EFFECT2] to [SEPIA] or to [B/W].

In the following cases, the [ ] Indication flashes:

- The flashing indicates that the previously adjusted White Balance setting is still kept. This setting will be kept until White Balance is adjusted again.
- You may not be able to achieve correct White Balance Adjustment manually under weak illumination.

### Manual Shutter Speed Adjustment

- You may see vertical lines of light in the playback image of a brightly shining subject or highly reflective subject.
- During normal playback, movement in the images may not look smooth.
- Because the colour and brightness of the playback image may become unstable, avoid recording under fluorescent light, mercury light, or sodium light.
- If you are using either Gain-up Mode (→ 25) or Programme AE Mode (→ 22), you cannot adjust the shutter speed. If the shutter speed was adjusted manually, this setting will be cancelled.

### Manual Iris Adjustment




- Depending on zoom magnification, there are iris values that will not be displayed.
- If you are using Programme AE Mode (→ 22), you cannot adjust the iris. If the iris is adjusted manually, this setting will be cancelled.



- If you attempt to adjust the White Balance or Shutter Speed after setting the Iris, the value set for the Iris will be cancelled.

## ■ Digital Effect Functions

It is as follows when [GAINUP] is selected.

- Manual Focus Mode
- The shutter speed, Iris and White Balance cannot be operated.
- The Sports Mode [  ], the Portrait Mode [  ] and Low Light Mode [  ] are canceled.
- It is not possible to use [WIPE], [MIX] or [TRACER] of [EFFECT1] together with the digital modes of [EFFECT2] on the [DIGITAL EFFECT] Sub-Menu
- If you have set [EFFECT2] to [B/W] or [SEPIA], changing the selected White Balance Mode is not possible. (→ 23)
- When [PROGRESSIVE] on the [CAMERA SETUP] Sub-Menu is set to [ON], the digital modes of [EFFECT1] on the [DIGITAL EFFECT] Sub-Menu cannot be used. (→ 39)

## ■ Wipe Mode and Mix Mode

If either one of the following operations is carried out, stored images will be erased, and Wipe and Mix Functions cannot be used.

- Use the Camera Search Function
- Press the [STILL] Button

## ■ Playing Back

### Repeat Playback

If you continue to press the [▶] Button for 5 seconds or longer, the Movie Camera switches to Repeat Playback Mode, and the [R ▶] Indication appears. (To cancel Repeat Playback Mode, set the [OFF/ON] Switch to [OFF].)

### Listening to Playback Sound through Headphones

When you wish to listen to playback sound through headphones, connect the headphones to the [PHONES] Socket on the Movie Camera. In this case, no sound (including a warning sound and shutter sound) will not be reproduced through the built-in speaker of the Movie Camera.

### Choosing Sound during Playback

You can select the sound by using the [AUDIO OUT] setting on the [PLAYBACK FUNCTIONS] Sub-Menu.

- STEREO: Stereo Sound (main sound and sub sound)  
L: Left channel sound (main sound)  
R: Right channel sound (sub sound)

- If you dub a tape recorded at the [12bit] selected as the [AUDIO REC] setting, playback sound becomes stereo sound regardless of whether [12bit AUDIO] is set to [MIX] or to [AUDIO OUT].

## ■ Index Search Functions

- Index Search may not be possible at the beginning of tape.
- Because Photoshot Index Signals are not recorded on still pictures recorded in Continuous Photoshot Mode, the Photoshot Index Search Function cannot be used for these still pictures.
- Scene Index Search may not function properly if the interval between 2 scene index signals is shorter than 1 minute.

## ■ Playback Digital Effect Functions

- Signals of images to which digital effects are added during playback cannot be output from the DV Terminal (→ 7) or Digital Still Picture Terminal (→ 32).
- You cannot use the Wipe or Mix Function while playing back the non-recorded portion of tape.

## ■ Playback Zoom Function

- You cannot adjust the sound volume with the Remote Controller in Playback Zoom Mode.
- If you turn off the Movie Camera power or if you switch from VCR Mode to Camera Mode, Playback Zoom Mode is automatically cancelled.
- Even if Playback Zoom Functions are being used, images that are output from the DV Terminal (→ 7) or Digital Still Picture Terminal (→ 32) are not enlarged.
- As you enlarge an image, the quality of image suffers.

## ■ Playing Back on Your TV

- If you play back a Cassette recorded with copyright protection signals, the screen becomes black.
- If you set [AV JACK] on the [AV IN/OUT SETUP] Sub-Menu to [IN/OUT], nothing will be shown on the TV screen except during playback.

## ■ Audio Dubbing

- The blank section of a tape cannot be dubbed.
- Sounds sent through the DV Terminal cannot be dubbed.
- If a tape has a non-recorded portion when the tape is dubbed, images and sounds may be disturbed when this portion of the tape is played back.
- If you set the tape counter back to 0 at the position where you want to stop Audio Dubbing so as to make it possible to use the Memory Stop Function (→ 47), Audio Dubbing is terminated automatically when the tape reaches this position.
- In the case of importing data recorded with Audio Dubbing to a PC using the PC's software programme, only the original sound (ST1) may be imported, depending on the software programme.

## ■ Recording the Contents of Other Equipment

### Recording to a Card

If you set the [TAPE/CARD] Selector to [CARD], you can use the Card Photoshot function for external input signals.

- Black streaks may appear at the 4 edges of the image.
- When the [PHOTO SHOT] Button is pressed, the image may seem to move backward momentarily, but this does not affect the recording.

## Analog-Digital Conversion

- When the Movie Camera is connected with other digital video equipment through its DV Terminal, images recorded in analog form from other external equipment can be output to the digital video equipment through the DV Terminal.
- To DV-output analog video signals sent from other equipment, set [DV OUT] on the [AV IN/OUT SETUP] Sub-Menu to [ON]. (Normally, keep the [DV OUT] set to [OFF]. If it is set to [ON], the quality of the image may be disturbed.)

## ■ Using the DV Cable for Recording (Digital Dubbing)

- If you set the [TAPE/CARD] Selector to [CARD], you can use the Card Photoshot function for external input signals.
- Regardless of the setting, digital dubbing is carried out automatically in the same audio recording mode as that of the Cassette on the playback-side.
- The images on the monitor of the recording side may be disturbed, but it does not affect the recorded images.
- Even if Playback Digital Effects, Playback Zoom, or Playback Title In have been used, these effects are not output from the DV Terminal.
- Even if you use device equipped with DV Terminals (such as i.LINK), you may not be able to perform Digital Dubbing in some cases.

## ■ Autoprint

- When the cooling function of a video printer has been working and the printing speed is dropping, Autoprint may stop. When this happens, set [AUTO PRINT] to [YES] once more.
- If you replace the Ink Cassette or paper during printing, the same picture may be printed twice.
- When the Movie Camera is not connected to the video printer properly, when the Ink Cassette is not inserted or is empty, or when the printer is out of paper, the [PRINTER ERROR] Indication appears.
- Some Photoshot images may be skipped during Autoprint.

### ■ Recording on a Card

- The sound cannot be recorded.
- The Shutter Effect cannot be used.
- If [ECONOMY] is selected for recording, mosaic-pattern noise may appear on a playback image depending on the image content.
- During automatic recording of images, the number of images that can still be recorded on the Card is displayed. When it becomes [0], the Tape is set to the Recording Pause Mode.
- Pictures with wide-screen format signals cannot be copied.
- The Lock Setting carried out by this Movie Camera is only effective for this Movie Camera.
- The SD Memory Card has a write protection switch on it. If the switch is moved to the [LOCK] side, you cannot write to or format the Card. If it is moved back, you can.

### ■ Playing Back a Card

- If a blank (nothing recorded) Card is played, the screen becomes white and the [NO PICTURE] Indication appears.
- If you attempt to play back a still picture recorded in a different format or a picture whose image data is defective, the [X] Indication and the [CARD ERROR] Indication could appear as warning.

### ■ Recording a Card Image on a Tape

- If you attempt to record a still picture with a large image size on a Tape, there may be a reduction in the quality of the image.
- When recording the Card Images on a Tape, a Photoshot index signal is automatically recorded with a picture.
- A Photoshot index signal is automatically recorded with a picture.

### ■ Slide Show

- It may take playback time longer than usual time depending on the picture.

### ■ Creating a Title

- Even if the contrast of the Title is adjusted, the portions where there is little difference between light and dark and where the boundary between light and dark is unclear may not appear.
- The Title may not appear well if something small is used for it.
- If titles are created, the number of images that can be recorded on a Card decreases.
- If the number of images that can be recorded on a Card is small, you may not be able to create a title.

### ■ Adding a Title

- The Title Function and Digital Function cannot be used simultaneously.

### ■ Formatting a Card (NV-DS38 only)

If a Card becomes unreadable by the Movie Camera, formatting it may make it reusable. Formatting erases all the data recorded on a Card.

- 1 Set [CARD FUNCTIONS] >> [CARD EDITING]  
>> [CARD FORMAT] >> [YES]

- Since a confirmation message appears, select [YES] and formatting will be carried out.
- When the formatting is completed, the screen becomes white.
- It may not be possible to use the Card which was formatted using this Movie Camera on another unit. In this case, format the Card on the unit which will be using the Card. Take steps to ensure that valuable pictures are stored on the personal computer, etc. as well before proceeding.

### ■ DPOF


- Perform the DPOF Settings with your own Movie Camera in use.
- Verifying the DPOF Settings may take a little time. Wait until the [ACCESS] Lamp goes out.

### ■ Using a Card in a Personal Computer (NV-DS38 only)

- To use the images on a Card on a personal computer, the optional USB Reader Writer for SD Memory Card (BN-SDCAPE) or PC Card Adaptor for SD Memory Card (BN-SDABPE) is necessary. There are cases in which it cannot be used depending on a personal computer, so please consult the dealer.
- You may not be able to properly play back or search the images on the Movie Camera after editing the recorded data or changing the image data on a personal computer.
- The image data files recorded on the Card with this Movie Camera conform to the DCF (Design Rules for Camera Files Systems universal standard) stipulated by JEIDA (Japan Electronic Industry Development Association).

### Constructing a Folder when the Card is used with a PC

- When a Card with data recorded on it is inserted into a personal computer, folders will be displayed as in the figure.

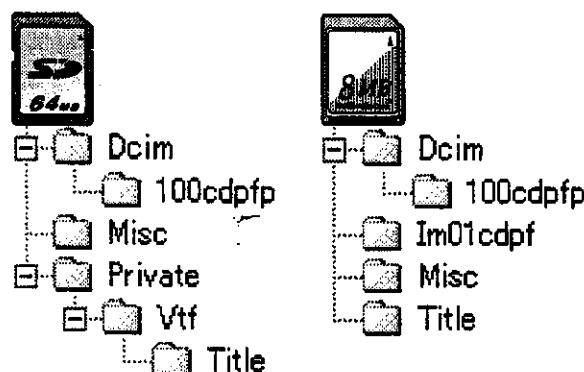

- [100cdpfp]: The images (Imga0001.jpg, etc.) in this folder are recorded in the JPEG format.
- [Misc]: Files in which DPOF Data has been set to the image are in this.
- [Title]: Title data (Usr00001.jpg, Usr00001.ttl, etc.) is in this.

- [Dcim], [Im01cdpfp], [Private], [Vtf], etc. are necessary items in the folder structure. They have nothing to do with actual operations.
- In the Card Photoshot Mode, the Movie Camera automatically saves file numbers (Imga0001.jpg, etc.) along with the images. The file numbers are recorded with each image as a consecutive number.

## Cautions for Use

In the event of abnormal operation (e.g. if the unit emits smoke or an unusual smell), immediately stop operating the unit and consult the Panasonic Customer Care Centre on 132600.

### After Use

- 1 Take out the Cassette. (→ 11)
- 2 Set the [OFF/ON] Switch to [OFF].
- 3 Remove the Card. (NV-DS38 only)
- 4 Detach the power supply and retract the Viewfinder or the LCD Monitor. (→ 10, 12)
- 5 To protect the Lens, attach the supplied Lens Cap.

### Cautions for Use

When you use your Movie Camera in a rainy or snowy day or on a beach, make sure that no water enters inside the Movie Camera.

- Water may cause the Movie Camera or Cassette to malfunction. (Irreparable failure may occur.)
- If sea water splashes onto the Movie Camera, wet a soft cloth with tap water, wring it well, and use it to wipe the camera body carefully. Then, wipe it again thoroughly with a soft dry cloth.

Keep the Movie Camera away from magnetized equipment (such as a microwave oven, TV, video game equipment, etc.)

- If you use the Movie Camera on or near a TV, images or sounds may be disturbed due to electromagnetic wave radiation.
- Do not use near a cell phone because doing so may cause noise to adversely affect the picture and sound.
- By strong magnetic fields created by speakers or large motors, recording on the tape may be damaged, or images may be distorted.
- Electromagnetic wave radiation generated by a microprocessor may adversely affect the Movie Camera, causing the disturbance of images and sounds.
- If the Movie Camera is affected by magnetically charged equipment and does not function properly, turn off the Movie Camera power and detach the Battery or AC Adaptor and then connect the Battery or AC Adaptor again. Thereafter, turn on the Movie Camera power.

Do not use your Movie Camera near radio transmitters or high-voltage lines.

- If you record pictures near radio transmitters or high-voltage lines, recorded images or sounds may be adversely affected.

Do not use this Movie Camera for surveillance purpose or other business use.

- If you use the Movie Camera for a long period of time, the internal temperature increases and, consequently, this may cause malfunction.
- This Movie Camera is not intended for business use.

When you use your Movie Camera on a beach or similar place, do not let sand or fine dust get into the Movie Camera.

- Sand or dust may damage the Movie Camera or Cassette. (Care should be taken when inserting and removing the Cassette.)

Do not spray insecticides or volatile chemicals onto the Movie Camera.

- If the Movie Camera is sprayed with such chemicals, the camera body may be deformed and the surface finish may peel off.
- Do not keep rubber or plastic product in contact with the Movie Camera for a long period of time.

Do not use benzene, thinner or alcohol for cleaning the Movie Camera.

- The camera body may be deformed and the surface finish may peel off.
- Before cleaning, detach the Battery or pull out the AC Mains Lead from the AC mains socket.
- Wipe the Movie Camera with a soft dry cloth. To remove stubborn stains, wipe with a cloth that is soaked in a detergent diluted with water and afterward finish wiping with a dry cloth.
- For storing or transporting the Movie Camera, place it in a bag or case lined with soft pads so as to prevent the coating on the camera body from being worn.

After use, be sure to take the Cassette out and detach the Battery from the Movie Camera or pull out the AC Mains Lead from AC mains socket.

- If the Cassette is left in the Movie Camera, the tape sags and deteriorates.
- If the Battery is left on the Movie Camera for a long time, the voltage drops excessively, and the Battery will not function even after it is recharged.

### About AC Adaptor

- If the temperature of the Battery is extremely high or extremely low, the [CHARGE] Lamp may continue flashing, and the Battery may not be charged. After the temperature of the Battery has decreased or increased sufficiently, charging starts automatically. If the [CHARGE] Lamp continues to flash even after the Battery temperature has decreased or increased sufficiently, the Battery or AC Adaptor may be faulty. In this case, please contact a dealer.
- If the Battery is warm, charging takes a longer time than normal.
- If you use the AC Adaptor near a radio, radio reception may be disturbed. Keep the AC Adaptor 1 metre or more away from radio.
- When the AC Adaptor is in use, it may generate whirring sounds. However, this is normal.
- After use, be sure to pull out the AC Mains Lead from the AC mains socket. (If they are left connected, a minute amount of current is consumed.)
- Keep the electrodes of the AC Adaptor and Battery always clean.

### Condensation

If the Condensation Indication flashes after the Movie Camera is turned on, condensation has formed inside the Movie Camera. In this case, the Movie Camera power is turned off automatically after about 1 minute.

Follow the steps below:

#### 1 Take out the Cassette.

- None of the other functions operate. Depending on the amount of condensation, removing the Cassette may even become difficult. If this happens, wait for 2 to 3 hours before taking the Cassette out.

#### 2 Open the Cassette Compartment Cover and wait for 2 to 3 hours.

- The number of hours to wait depends on the amount of condensation and ambient temperature.

#### 3 2 to 3 hours later, turn on the Movie Camera power and check to see if the Condensation Indication is displayed.

- Even if the Condensation Indication is not displayed, as a precaution, please wait for another hour before using the Movie Camera.

#### **Watch for Condensation even before the Condensation Indication is displayed.**

- Because condensation takes place gradually, the Condensation Indication may not be displayed during the first 10 to 15 minutes of condensation formation inside the Movie Camera.
- In extremely cold places, condensation may freeze and form frost. In this case, the frost melts first, thus forming condensation, and then it takes another 2 to 3 hours to eliminate the condensation.

#### **When the Lens is Fogged:**

Set the [OFF/ON] Switch to [OFF] and leave the Movie Camera in this condition for about 1 hour. When the lens temperature becomes close to the ambient temperature, the fog disappears naturally.

#### **Video Head Clogging and Care**

If the heads (the parts that make contact with tape) are dirty, mosaic-pattern noise may appear on the playback image, or the screen as a whole becomes black. If the heads are extremely dirty, recording performance deteriorates, and, in the worst case, the Movie Camera cannot record at all.

#### **Causes of Dirty Heads**

- Large quantity of dust in the air
- High-temperature and high-humidity environment
- Damaged tape
- Long operating hours

#### **Using Mini-DV Format Digital Video Head Cleaner**

- 1 Insert the Head Cleaner into the Movie Camera in the same manner as a Video Cassette.
- 2 Press the [▶] Button, and 20 seconds later, press the [■] Button. (Do not rewind the tape.)
- 3 Take out the Head Cleaner. Insert a Video Cassette and start recording. Then, play the tape back to check the recorded image.
- 4 If the image is not still clear, repeat Steps 1 to 3. (Do not use the Head Cleaner for 3 times or more consecutively.)

#### **Notes:**

- Do not rewind every time you use the Head Cleaner. Rewind only when the tape reaches the end, and then use it again from the beginning in the same manner as before.
- If the heads become dirty soon after cleaning, the tape may be damaged. In this case, immediately stop using that Cassette.
- Do not clean the heads excessively. (Excessive cleaning may cause excessive wear of the heads. If the heads are worn, images cannot be played back even after the heads are cleaned.)
- If the dirty heads cannot be cleaned with the Head Cleaner, the Movie Camera needs to be cleaned at a service centre. Please consult a dealer.
- Video Head Cleaners can be purchased from service centres.
- Head cleaning due to dirty heads is not considered a malfunction of the product. It is not covered by the warranty.

#### **Periodical Check-up**

To maintain the highest image quality, we recommend replacement of worn parts, such as heads, etc., after approximately 1000 hours of use. (This, however, depends on operating conditions, such as temperature, humidity, dust, etc.)

#### **Optimal Use of the Battery**

#### **Battery Characteristics**

This Battery is a rechargeable lithium ion battery. Its ability to generate power is based upon the chemical reaction that takes place inside it. This reaction is susceptible to the surrounding temperature and humidity, and, if the temperature is too high or too low, the operating time of the Battery becomes shorter. If the Battery is used in an extremely cold environment, the Battery may operate only for about 5 minutes. If the Battery becomes extremely hot, a protective function may operate, and the Battery may become unusable for a while.

#### **Be Sure to Detach the Battery after Use**

Be sure to detach the Battery from the Movie Camera. (If it is left attached to the Movie Camera, a minute amount of current is consumed even when the Movie Camera power is off.) If the Battery is left attached to the Movie Camera for a long time, over discharge takes place. The Battery may become unusable after it is charged.

#### **Disposing of an Unusable Battery**

- The Battery has a limited life.
- Do not throw the Battery into fire because it may cause an explosion.

#### **Always Keep the Terminals of the Battery Clean**

Prevent the terminals from getting clogged with dirt, dust, or other substances.

If you drop the Battery accidentally, check to see if the Battery body and terminals are deformed.

Attaching a deformed Battery to the Movie Camera or AC Adaptor may damage the Movie Camera or AC Adaptor.

#### **Cautions for Storage**

Before storing the Movie Camera, take the Cassette out and detach the Battery.

Store all the components in a dry place with a relatively stable temperature.

(Recommended Temperature: 15 to 25°C, Recommended Humidity: 40 to 60%)

#### **Movie Camera**

- Wrap it with a soft cloth to prevent dust from getting into the Camera.
- Do not leave the Movie Camera in places that expose it to high temperature.

#### **Battery**

- Extremely high temperatures or low temperatures will shorten the life of the Battery.
- If the Battery is kept in smoky or dusty places, the terminal may rust and cause malfunctions.
- Do not allow the Battery terminals to come in contact with metal objects (such as necklaces, hairpins, etc.) This can result in a short circuit or heat generation and, if you touch the Battery in this condition, you may be badly burned.
- Store the Battery in a completely discharged state. To store the Battery for a long period of time, we recommend you charge it once every year and store it again after you completely use up the charged capacity.

#### **Cassette**

- Before storing it, rewind the tape to the beginning. If the Cassette is left for more than 6 months with the tape stopped midway, the tape sags (although it depends on the storage condition.) Be sure to rewind to the beginning.
- Store the Cassette in its case. Dust, direct sunlight (ultraviolet rays), or humidity may damage the tape. Dust contains hard mineral particles, and dusty Cassettes damage the heads of the Movie Camera and other components. Develop a habit of returning the Cassette back to its case.

- Once rewinding longer humid to sweet stick to
- Do not or equivalent
- The strong Magna strong erase image
- Card (N
- When off the
- Do not tempe waves
- Do not conter
- After Came
- Do not your fi

#### **LCD**

- LCD Mo
- In a pl may fc
- If your power than u increa

Extreme the LCD 110,000 pixels w However recorder

#### **Viewfin**

- Do not compc
- When Batter is not Batter angle.

Extreme the View 113,000 pixels w However recorder

#### **Lens H**

- When Movie

- Once every half year, wind the tape to the end and then rewind it to the beginning. If the Cassette is left for 1 year or longer without winding or rewinding, temperature and humidity changes may cause the Cassette to deform due to swelling, shrinking, and so forth. The wound tape may stick to itself.
- Do not place a Cassette near highly magnetic substances or equipment.
- The surface of tape is covered with extremely minute magnetic particles, upon which signals are recorded. Magnetic necklaces, toys, etc., have magnetic force that is stronger than you may normally expect, and they may erase the contents of a recording or may cause noise in images and sounds.

#### Card (NV-DS38 only)

- When the Card is being read, do not remove the Card, turn off the power, or subject it to vibration or impact.
- Do not leave the Card in places where there is high temperature or direct sunlight, or where electromagnetic waves or static electricity are easily generated.
- Do not bend or drop the Card. The Card or the recorded content may be damaged.
- After use, be sure to remove the Card from the Movie Camera.
- Do not touch the terminals on the back of the Card with your fingers. Do not allow dirt, dust or water to enter it.

#### LCD Monitor/Viewfinder/Lens Hood

##### LCD Monitor

- In a place with drastic temperature changes, condensation may form on the LCD Monitor. Wipe it with soft dry cloth.
- If your Movie Camera is extremely cold when you turn its power on, the image on the LCD Monitor is slightly darker than usual at first. However, as the internal temperature increases, it goes back to the normal brightness.

Extremely high precision technology is employed to produce the LCD Monitor screen featuring a total of approximately 110,000 pixels. The result is more than 99.99% effective pixels with a mere 0.01% of the pixels inactive or always lit. However, this is not a malfunction and does not affect the recorded picture.


##### Viewfinder

- Do not direct the Viewfinder or Lens to the sun. Internal components may be seriously damaged.
- When the Movie Camera is used with a large capacity Battery (CGP-D28S/CGP-D320; optional) attached to it, it is not practical to look in the Viewfinder from behind the Battery. In this case, lift up the Viewfinder to an easy-to-see angle.

Extremely high precision technology is employed to produce the Viewfinder screen featuring a total of approximately 113,000 pixels. The result is more than 99.99% effective pixels with a mere 0.01% of the pixels inactive or always lit. However, this is not a malfunction and does not affect the recorded picture.

##### Lens Hood

- When attaching the Lens Hood, match the marks ① on the Movie Camera and the Lens Hood and turn.

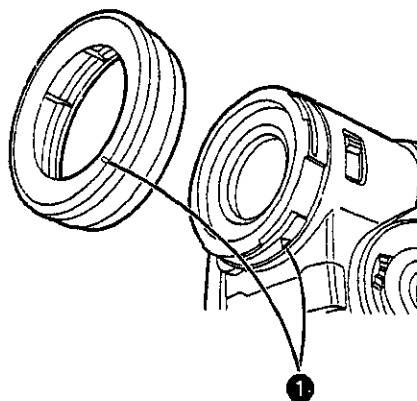

- Do not attach other conversion lenses in front of the Lens Hood; there is no mount to be used for the attachment.
- When you wish to attach the Tele Conversion Lens (VW-LT3714ME; optional), Wide Conversion Lens (VW-LW3707ME; optional), MC Protector (VW-LMC37E; optional), or ND Filter (VW-LND37E; optional), first of all, turn the Lens Hood counterclockwise. If the MC Protector or ND Filter is used, the Lens Hood can be mounted on the filter.
- If you push the [W/T] Lever toward [W] during recording with the filter or conversion lens attached to the Movie Camera, 4 corners of the image may become dark (vignetting). For details, please refer to the operating instructions of your accessories.
- Be sure to keep the Lens Hood attached to the Movie Camera so as to shut out unnecessary light.

### ~~~~~ Before Requesting Repair (Problems and Solutions)

#### Power

- 1: The Movie Camera power cannot be turned on.**
  - 1: Is the power source connected correctly? (→ 10)
- 2: The Movie Camera power is turned off automatically.**
  - 2: If you leave the Movie Camera in Recording Pause Mode for more than 6 minutes, the power is turned off automatically to protect the tape and to save the Battery power. (→ 18)
- 3: The Movie Camera power does not stay on long enough.**
  - 3-1: Is the Battery low? Charge the Battery or attach a fully charged Battery. (→ 10)
  - 3-2: Has condensation occurred? Wait until the Condensation Indication disappears. (→ 43)

#### Battery

- 1: Battery runs down quickly.**
  - 1-1: Is the Battery fully charged? Charge it with the AC Adaptor. (→ 10)
  - 1-2: Are you using the Battery in an extremely cold place? In cold places, the operating time of the Battery becomes shorter. (→ 44)
  - 1-3: Has the Battery worn out? If the operating time is still too short even after the Battery is fully charged, the Battery has worn out.
- 2: The Battery cannot be charged.**
  - 2: If the DC Input Lead is connected to the AC Adaptor, charging cannot be performed. Disconnect the DC Input Lead.

#### Normal Recording

The si  
Comp  
Beacu  
analog  
Came  
for pla  
Fo  
Auto  
The Ai  
backw  
the sul  
Howev  
for the  
conditi  
Please  
1) Re  
to  
fr  
E  
C  
ti  
2) Re  
E  
E  
3) Re  
E  
k  
C  
4) Re  
wi  
E  
v  
n  
5) Re  
B  
C  
6) Re  
B  
u  
C  
W  
Depen  
by the  
images  
minimi  
called  
White  
White I  
makes  
white.  
Auton  
This M  
several  
determ  
and WI  
recordi  
function  
Howev  
of light  
does n  
that is  
Tin  
Time C  
hours,

1: Recording does not start although power is supplied to the Movie Camera and the Cassette is correctly inserted.

1-1: Is the accidental erasure prevention slider on the Cassette open? If it is open (set to [SAVE]), recording cannot be performed. (→ 11)

1-2: Is the tape wound to the end? Insert a new Cassette. (→ 11)

1-3: Is the Movie Camera power turned on? (→ 18)

1-4: Is the [CAMERA] Lamp on? If the [CAMERA] Lamp is not on, no recording function can be operated. (→ 26)

1-5: Has condensation occurred? Wait until the Condensation Indication disappears. (→ 43)

**Other Recording**

1: Auto Focus Function does not work.

1-1: Is Manual Focus Mode selected? If Auto Focus Mode is selected, focus is automatically adjusted. (→ 24)

1-2: There are some recording subjects and recording surroundings for which the Auto Focus Function does not operate correctly. In this case, use the Manual Focus Mode to adjust the focus. (→ 47)

**Editing**

1: Audio dubbing cannot be performed.

1-1: Is the accidental erasure prevention slider on the Cassette open? If it is open (set to [SAVE]), recording cannot be performed. (→ 11)

1-2: Are you attempting to edit a tape portion that was recorded in LP Mode? LP Mode does not allow audio dubbing to operate. (→ 17)

**Indications**

1: The Time Code becomes inaccurate.

1: The Time Code Indication counter may not be constant in the reverse direction in Slow Motion Playback Mode, but this is not a malfunction.

2: The Remaining Tape Time Indication disappears.

2: When you record still pictures in Photoshot Mode, the Remaining Tape Time Indication may disappear temporarily. However, it reappears when recording normally.

3: The Remaining Tape Time Indication does not match the actual remaining tape time.

3-1: If scenes of less than 15 seconds are continuously recorded, the remaining tape time cannot be displayed correctly.

3-2: In some cases, the Remaining Tape Time Indication may show remaining tape time that is 2 to 3 minutes shorter than the actual remaining tape time.

**Playback (Images)**

1: Images cannot be played back even when the [▶] Button is pressed.

1: Is the [VCR] Lamp on? If the [VCR] Lamp is not on, the playback function cannot be used. (→ 26)

2: Mosaic-pattern noise appears on images during Cue, Review or Slow Motion Playback.

2: This phenomenon is characteristic of digital video systems. It is not a malfunction.

3: Although the Movie Camera is correctly connected to a TV, playback images cannot be seen.

3: Have you selected "Video Input" on the TV? Please read the operating instructions of your TV and select the channel that matches the input sockets used for the connection.

4: Playback image is not clear.

4: Are the heads of the Movie Camera dirty? If the heads are dirty, playback image cannot be clear. (→ 44)

**Playback (Sound)**

1: Sound is not played back from the built-in speaker of the Movie Camera or the headphones.

1: Is the volume too low? During playback, keep pressing the [PUSH] Dial until the [VOLUME] Indication appears. Then, turn the [PUSH] Dial to adjust the volume. (→ 26)

2: Different sounds are reproduced at the same time.

2: [12bit AUDIO] on the [PLAYBACK FUNCTIONS] Sub-Menu of the [VCR FUNCTIONS] Main-Menu has been set to [MIX]. As a result, the original sound and sound that was recorded by audio dubbing are played back together. It is possible to reproduce the sounds separately. (→ 30)

3: The original sound was erased when audio dubbing was performed.

3: If you perform audio dubbing on a recording done in [16bit] Mode, the original sound will be erased. If you wish to preserve the original sound, be sure to select [12bit] Mode at the time of recording.

4: Sounds cannot be played back.

4-1: Although a Cassette with no audio dubbing is being played, is [12bit AUDIO] on the [PLAYBACK FUNCTIONS] Sub-Menu of the [VCR FUNCTIONS] Main-Menu set to [ST2]? To play back a Cassette with no audio dubbing, [12bit AUDIO] must be set to [ST1]. (→ 30)

4-2: Is the Variable Speed Search Function working? Press the [▶] Button to cancel the Variable Speed Search Function. (→ 26)

**Card (NV-DS38 only)**

1: Recorded images are not beautiful.

1: Is [PICTURE QUALITY] on the [CARD SETUP] Sub-Menu set to [ECONOMY]? If recording is done with it set to [ECONOMY], images with fine details may include a mosaic-like pattern. Set [PICTURE QUALITY] to [NORMAL] or [FINE]. (→ 33)

2: Card Photoshot Playback images do not look normal.

2: The picture may be damaged. In order to prevent the loss of image data, backing up on a Cassette or a personal computer is recommended. (→ 32, 34, 42)

3: During Playback the [X] Indication is displayed.

3: The image was either recorded in a different format, or data is damaged.

4: Even if a Card is formatted, it cannot be used.

4: Either the Movie Camera or the Card may be damaged. Please consult a dealer.

~~~~~

**Explanation of Terms**

**Digital Video System**

In a digital video system, images and sounds are converted into digital signals and recorded on a tape. This complete digital recording is capable of recording and playback with minimal image and sound deterioration. In addition, it automatically records data, such as Time Code and Date/Time, as digital signals.

**Compatibility with S-VHS or VHS Cassettes**

Because this Movie Camera employs a digital system for recording image and sound data, it is not compatible with conventional S-VHS or VHS video equipment that employs an analog recording system.

46

The size and shape of the Cassette are also different.

### Compatibility with Output Signals

Because AV signal output from the AV signal output socket is analog (the same as conventional video systems), this Movie Camera can be connected with S-VHS or VHS video or a TV for playback.

## Focus

### Auto Focus Adjustment

The Auto Focus System automatically moves forward and backward the focusing lens inside the Movie Camera to bring the subject into focus so that the subject can be seen clearly. However, the Auto Focus System does not function properly for the following subjects or under the following recording conditions.

**Please use the Manual Focus Mode Instead.**

- 1) **Recording a subject whose one end is located closer to the Movie Camera and the other end farther away from it**
  - Because Auto Focus makes adjustments at the centre of an image, it may be impossible to focus on a subject that is located in both foreground and background.
- 2) **Recording a subject behind dirty or dusty glass**
  - Because the focus is on the dirty glass, the subject behind the glass will not be focused.
- 3) **Recording a subject in dark surroundings**
  - Because the light information that comes through the lens decreases considerably, the Movie Camera cannot focus correctly.
- 4) **Recording a subject that is surrounded by objects with glossy surfaces or by highly reflective objects**
  - Because the Movie Camera focuses on the objects with glossy surfaces or on highly reflective objects, the recording subject may become blurry.
- 5) **Recording a fast-moving subject**
  - Because the focus lens inside moves mechanically, it cannot keep up with the fast-moving subject.
- 6) **Recording a subject with little contrast**
  - Because the Movie Camera achieves focus based upon the vertical lines of an image, a subject with little contrast, such as a white wall, may become blurry.

## White Balance Adjustment

Depending on the type of light source, the colours recorded by the Movie Camera may be affected. In some cases, images may be recorded with bluish or reddish hue. To minimize the effect of light on the subject's colour, what is called White Balance Adjustment becomes necessary.

### White Balance Adjustment

White Balance Adjustment recognizes the colour of light and makes adjustment so that the white colour will become pure white.

### Automatic White Balance Adjustment

This Movie Camera stores settings that are optimal for several kinds of general light sources. The Movie Camera determines the hue of light that it receives through the Lens and White Balance Sensor (→ 7), thereby judging the recording condition, and selects the closest hue setting. This function is called Automatic White Balance Adjustment. However, since white balance settings for only several kinds of light sources are stored, the Auto White Balance Function does not operate properly when recording occurs under light that is out of the range of the setup values.

## Time Code

Time Code signals are data that indicate time measured in hours, minutes, seconds, and frames (25 frames per

second.) If this data is included in a recording, an address is assigned to each image on the tape.

- The Time Code is automatically recorded as a part of the sub-code at each recording.
- When a new (previously unrecorded) Cassette is inserted, the Time Code automatically starts from zero. If a recorded Cassette is inserted, the Time Code picks up from the point where the last scene was recorded. (In this case, when the Cassette is inserted, the zero display [0h00m00s00f] may appear, but the Time Code starts from the previous value.)
- The Time Code cannot be reset to zero.
- Unless the Time Code is continuously recorded from the beginning of a tape, accurate editing may not be possible. To ensure that the Time Code will be recorded with no breaks, we recommend the use of the Camera Search Function (→ 18) or the Blank Search Function (→ 27) before recording a new scene.

## Memory Stop Function

The Memory Stop Function is useful for the following operations.

**Rewinding or fast-forwarding a tape to a desired position**

- 1 **Set [DISPLAY SETUP] >> [C.DISPLAY] >> [MEMORY].**
- 2 **Reset the Tape Counter to zero at the tape position from which you want to play it back later. (→ 8, 14)**
- 3 **Start playback or recording.**
- 4 **After playback or recording has finished: Press the [MODE] Button to set the Movie Camera to VCR Mode.**
  - The [VCR] Lamp lights up.
- 5 **Rewind the tape.**
  - The tape automatically stops approximately at the position where the counter was set to zero.

**Stopping editing automatically during audio dubbing**

- 1 **Set [DISPLAY SETUP] >> [C.DISPLAY] >> [MEMORY].**
- 2 **Reset the Tape Counter to zero at the position where you want to stop editing.**
- 3 **Play back the still pictures where you want to start audio dubbing.**
- 4 **Start audio dubbing. (→ 30)**
  - Audio dubbing automatically stops at the position where the counter was set to zero.



Specifications

|                                |                                                                                                                                                                                                                    |
|--------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Digital Video Camera           | Information for your safety                                                                                                                                                                                        |
| Power Source:                  | DC 7.9/7.2 V                                                                                                                                                                                                       |
| Power Consumption:             | (NV-DS28) Recording<br>2.9 W (When using Viewfinder)<br>3.6 W (When using LCD Monitor)<br>(NV-DS38) Recording<br>3.3 W (When using Viewfinder)<br>4.0 W (When using LCD Monitor)                                   |
| Recording Format:              | Mini DV (Consumer-use Digital Video SD Format)                                                                                                                                                                     |
| Tape Used:                     | 6.35 mm digital video tape                                                                                                                                                                                         |
| Recording/Playback Time:       | SP: 80 min.; LP: 120 min. (with DVM80)                                                                                                                                                                             |
| Video                          |                                                                                                                                                                                                                    |
| Recording System:              | Digital Component                                                                                                                                                                                                  |
| Television System:             | CCIR: 625 lines, 50 fields PAL colour signal                                                                                                                                                                       |
| Audio                          |                                                                                                                                                                                                                    |
| Recording System:              | PCM Digital Recording<br>16 bit (48 kHz/2ch),<br>12 bit (32 kHz/4ch)                                                                                                                                               |
| Image Sensor:                  | 1/4-inch CCD Image Sensor                                                                                                                                                                                          |
| Lens:                          | Auto Iris, F1.8, Focal Length: 3.1-46.5 mm,<br>Macro (Full Range AF)                                                                                                                                               |
| Filter Diameter:               | 37 mm                                                                                                                                                                                                              |
| Zoom:                          | 15:1 Power Zoom                                                                                                                                                                                                    |
| Monitor:                       | 2.5-inch LCD                                                                                                                                                                                                       |
| Viewfinder:                    | Colour Electronic Viewfinder                                                                                                                                                                                       |
| Microphone:                    | Stereo                                                                                                                                                                                                             |
| Speaker:                       | 1 round speaker + 28 mm                                                                                                                                                                                            |
| Standard Illumination:         | 1,400 lx                                                                                                                                                                                                           |
| Minimum Required Illumination: | 1 lx (Digital Gain-up Mode)                                                                                                                                                                                        |
| Video Output Level:            | 1.0 Vp-p, 75 ohm                                                                                                                                                                                                   |
| S-Video Output Level:          | Y Output: 1.0 Vp-p, 75 ohm<br>C Output: 0.286 Vp-p, 75 ohm                                                                                                                                                         |
| Audio Output Level (Line):     | 316 mV, 600 ohm                                                                                                                                                                                                    |
| Video Input Level:             | 1.0 Vp-p, 75 ohm                                                                                                                                                                                                   |
| S-Video Input Level:           | Y Input: 1.0 Vp-p, 75 ohm<br>C Input: 0.286 Vp-p, 75 ohm                                                                                                                                                           |
| Audio Input Level (Line):      | 316 mV, 10 kohm or more                                                                                                                                                                                            |
| Mic Input:                     | Mic sensitivity -50 dB (0 dB = 1 V/Pa, 1 kHz)<br>(Stereo mini jack)                                                                                                                                                |
| Digital Still Picture:         | Digital Still Picture Output, Control Signal Input/Output<br>(Transfer rate: max. 115 kbps)                                                                                                                        |
| Digital Interface:             | DV Input/Output Terminal (i.LINK, 4-pin)                                                                                                                                                                           |
| Dimensions:                    | Approx. 77 (W) X 96 (H) X 179 (D) mm                                                                                                                                                                               |
| Weight:                        | (NV-DS28)<br>Approx. 620 g (without Battery and DV cassette)<br>Approx. 700 g (with CGR-D08R and DVM60)<br>(NV-DS38)<br>Approx. 640 g (without Battery and DV cassette)<br>Approx. 720 g (with CGR-D08R and DVM60) |
| Operating Temperature:         | 0 °C-40 °C                                                                                                                                                                                                         |
| Operating Humidity:            | 10%-80%                                                                                                                                                                                                            |
| Card Memory Functions          | (NV-DS38 only)                                                                                                                                                                                                     |
| Recording Media:               | MultiMediaCard, SD Memory Card                                                                                                                                                                                     |
| Image Compression:             | JPEG                                                                                                                                                                                                               |

AC Adaptor

Information for your safety

|                                                                                                  |                                                                              |
|--------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------|
| Power Source:                                                                                    | AC 100-240 V, 50/60 Hz                                                       |
| Power Consumption:                                                                               | 20 W                                                                         |
| DC Output:                                                                                       | DC 7.9 V, 9 W (Movie Camera Operation)<br>DC 8.4 V, 1.2 A (Battery Charging) |
| Dimensions:                                                                                      | 70 (W) X 45 (H) X 116 (D) mm                                                 |
| Weight:                                                                                          | Approx. 165 g                                                                |
| Weight and dimensions are approximate values.<br>Specifications may change without prior notice. |                                                                              |

Index

|            |            |
|------------|------------|
| ■ A        | AC Adaptor |
| ■ Audio    | Audio      |
| ■ Auto I   | Auto I     |
| ■ Auton    | Auton      |
| ■ B        | Backlit    |
| ■ Black    | Black      |
| ■ Blank    | Blank      |
| ■ C        | Came       |
| ■ Card I   | Card I     |
| ■ Card I   | Card I     |
| ■ Charg    | Charg      |
| ■ Cinem    | Cinem      |
| ■ Conde    | Conde      |
| ■ Contr    | Contr      |
| ■ Cue P    | Cue P      |
| ■ D        | Date/      |
| ■ Date/    | Date/      |
| ■ DCF      | DCF        |
| ■ Digital  | Digital    |
| ■ Digital  | Digital    |
| ■ Digital  | Digital    |
| ■ DPOF     | DPOF       |
| ■ Dubbi    | Dubbi      |
| ■ E        | Erasur     |
| ■ F        | F Nurr     |
| ■ F Nurr   | F Nurr     |
| ■ Fade     | Fade       |
| ■ Forma    | Forma      |
| ■ G        | Gain-u     |
| ■ Gain-u   | Gain-u     |
| ■ H        | Headp      |
| ■ Headp    | Headp      |
| ■ I        | Iris ...   |
| ■ Iris ... | Iris ...   |
| ■ J        | Jog Pl     |
| ■ Jog Pl   | Jog Pl     |
| ■ L        | LCD M      |
| ■ LCD M    | LCD M      |
| ■ Lock S   | Lock S     |
| ■ Low Li   | Low Li     |
| ■ M        | Macro      |
| ■ Macro    | Macro      |
| ■ Manua    | Manua      |
| ■ Memoi    | Memoi      |
| ■ Menu :   | Menu :     |
| ■ Microp   | Microp     |
| ■ Mirror   | Mirror     |
| ■ Mix Mc   | Mix Mc     |
| ■ Mosak    | Mosak      |
| ■ N        | Negati     |
| ■ Negati   | Negati     |
| ■ P        | Photos     |
| ■ Photos   | Photos     |
| ■ Picture  | Picture    |
| ■ Picture  | Picture    |
| ■ Playba   | Playba     |
| ■ Playba   | Playba     |



## Index

|                                          |        |
|------------------------------------------|--------|
| <b>A</b>                                 |        |
| AC Adaptor .....                         | 10, 43 |
| Audio Dubbing .....                      | 30     |
| Auto Focus .....                         | 47     |
| Automatic Printing .....                 | 32     |
| Automatic White Balance Adjustment ..... | 47     |
| <b>B</b>                                 |        |
| Backlight Compensation .....             | 22     |
| Black & White Mode .....                 | 25     |
| Blank Search .....                       | 27     |
| <b>C</b>                                 |        |
| Camera Search .....                      | 18     |
| Card Photoshot .....                     | 33     |
| Card Playback .....                      | 34     |
| Charging the Battery .....               | 10     |
| Cinema Mode .....                        | 21     |
| Condensation .....                       | 43     |
| Continuous Photoshot .....               | 19     |
| Cue Playback .....                       | 26     |
| <b>D</b>                                 |        |
| Date/Time Indication .....               | 38     |
| Date/Time Setting .....                  | 17     |
| DCF .....                                | 42     |
| Digital Effects .....                    | 25     |
| Digital Still Picture .....              | 19     |
| Digital Zoom .....                       | 20     |
| DPOF Setting .....                       | 37     |
| Dubbing .....                            | 31, 32 |
| <b>E</b>                                 |        |
| Erasur Prevention Slider .....           | 11     |
| <b>F</b>                                 |        |
| F Number .....                           | 24     |
| Fade .....                               | 20     |
| Formatting .....                         | 42     |
| <b>G</b>                                 |        |
| Gain-up Mode .....                       | 25     |
| <b>H</b>                                 |        |
| Headphones .....                         | 41     |
| <b>I</b>                                 |        |
| Iris .....                               | 24     |
| <b>J</b>                                 |        |
| Jog Playback .....                       | 27     |
| <b>L</b>                                 |        |
| LCD Monitor .....                        | 12     |
| Lock Setting .....                       | 37     |
| Low Light Mode .....                     | 22     |
| <b>M</b>                                 |        |
| Macro Close-up .....                     | 19     |
| Manual Focus .....                       | 24     |
| Memory Stop .....                        | 47     |
| Menu Screen .....                        | 13     |
| Microphone .....                         | 19     |
| Mirror Mode .....                        | 25     |
| Mix Mode .....                           | 25     |
| Mosaic Mode .....                        | 25     |
| <b>N</b>                                 |        |
| Negative Mode .....                      | 25     |
| <b>P</b>                                 |        |
| Photoshot .....                          | 19, 33 |
| Picture Search Mode .....                | 34     |
| Picture Size .....                       | 34     |
| Playback Digital Effects .....           | 29     |
| Playback Zoom .....                      | 29     |
| Portrait Mode .....                      | 22     |
| Program AE .....                         | 22     |
| <b>R</b>                                 |        |
| Recording Check .....                    | 18     |
| Recording Pause Mode .....               | 18     |
| Recording Speed .....                    | 17     |
| Remaining Tape Time .....                | 38     |
| Remote Controller .....                  | 8      |
| Repeat Playback .....                    | 41     |
| <b>S</b>                                 |        |
| Self-Recording .....                     | 18     |
| Sepia Mode .....                         | 25     |
| Shutter Speed .....                      | 24     |
| Slow Motion Playback .....               | 27     |
| Solarisation Mode .....                  | 25     |
| Sound Volume .....                       | 26     |
| SP/LP Mode .....                         | 17     |
| Sports Mode .....                        | 22     |
| Spotlight Mode .....                     | 22     |
| Still Advance Playback .....             | 27     |
| Strobe Mode .....                        | 25     |
| Surf & Snow Mode .....                   | 22     |
| <b>T</b>                                 |        |
| Time Code .....                          | 47     |
| Trailing Effect Mode .....               | 25     |
| <b>V</b>                                 |        |
| Variable Speed Search .....              | 26     |
| Video Head Clogging .....                | 44     |
| Video Printer .....                      | 32     |
| Viewfinder .....                         | 12, 45 |
| <b>W</b>                                 |        |
| White Balance .....                      | 23, 47 |
| Wipe Mode .....                          | 25     |
| <b>Z</b>                                 |        |
| Zoom .....                               | 19     |
| Zoom Microphone .....                    | 19     |

A

T9371  
01Yu0( 150 (A))

**Matsushita Electric Industrial Co., Ltd.**  
Central P.O. Box 288, Osaka 530-91, Japan