Panasonic®

Operating Instructions

Digital Video Camera



Model No. NV-GS75EB





Before use, please read these instructions completely.







Dear Customer.

We would like to take this opportunity to thank you for purchasing this Panasonic Movie Camera. Please read these Operating Instructions carefully and keep them handy for future reference. Please note that the actual controls and components, menu items, etc. of your Movie Camera may look somewhat different from those shown in the illustrations in these Operating Instructions.

Information for Your Safety

As this equipment gets hot during use, operate it in well ventilated place; do not install this equipment in a confined space such as a bookcase or similar unit.

To reduce the risk of fire, electric shock or product damage, do not expose this equipment to rain, moisture, dripping or splashing and ensure that no objects filled with liquids, such as vases, shall be placed on the equipment.

AC Adaptor

 The rating plate is on the underside of the AC Adaptor.

Caution for AC mains lead

For your safety, please read the following text carefully.

This appliance is supplied with a moulded threepin mains plug for your safety and convenience. A 5-ampere fuse is fitted in this plug.

Should the fuse need to be replaced, please ensure that the replacement fuse has a rating of 5-amperes and it is approved by ASTA or BSI to BS1362. Check for the ASTA mark 🏟 or the BSI mark 🕏 on the body of the fuse.

If the plug contains a removable fuse cover you must ensure that it is refitted when the fuse is replaced. If you lose the fuse cover, the plug must not be used until a replacement cover is obtained. A replacement fuse cover can be purchased from your local Panasonic Dealer.

IF THE FITTED MOULDED PLUG IS UNSUITABLE FOR THE SOCKET OUTLET IN YOUR HOME THEN THE FUSE SHOULD BE REMOVED AND THE PLUG CUT OFF AND DISPOSED OF SAFELY.
THERE IS A DANGER OF SEVERE

ELECTRICAL SHOCK IF THE CUT OFF PLUG IS INSERTED INTO ANY 13-AMPERE SOCKET.

If a new plug is to be fitted, please observe the wiring code as shown below.

If in any doubt, please consult a qualified electrician.

IMPORTANT

The wires in this mains lead are coloured in accordance with the following code:

Blue: Neutral Brown: Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal in the plug which is marked with the letter N or coloured BLACK.

The wire which is coloured BROWN must be connected to the terminal in the plug which is marked with the letter L or coloured RED.

Under no circumstances should either of these wires be connected to the earth terminal of the three-pin plug, marked with the letter E or the Earth Symbol \perp .

■ Before Use

 
Remove the Connector Cover.

How to replace the Fuse


The location of the fuse differ according to the type of AC mains plug (figures A and B). Confirm the AC mains plug fitted and follow the instructions below.

Illustrations may differ from actual AC mains plug.

1) Open the fuse cover with a screwdriver.



 Replace the fuse and close or attach the fuse cover.



- Windows is a trademark or registered trademark of Microsoft Corporation U.S.A.
- SD Logo is a trademark.
- All other company and product names in the operating instructions are trademarks of their respective corporations.

Files recorded on a SD Memory Card

It may not be possible to play back the files on this Movie Camera recorded on and created by other equipment or vice versa. For this reason, check the compatibility of the equipment in advance.

 Keep the Memory Card out of reach of children to prevent swallowing.

Pages for reference

Pages for reference are indicated by dashes either side of a number, for example: -00-

The menu operation flow is indicated by >> in the description.

Use only the recommended accessories.

- Do not use any other AV cables and USB cables except the supplied one.
- When you use the cable which are sold separately, please make sure to use the one whose length is less than 3 meters.

■ WARNING

Do not remove the cover (or back); there are no user serviceable parts inside.

Refer servicing to qualified service personnel.

- Carefully observe copyright laws. Recording of pre-recorded tapes or discs or other published or broadcast material for purposes other than your own private use may infringe copyright laws. Even for the purpose of private use, recording of certain material may be restricted.
- The Movie Camera uses copyright-protected technologies and is protected by the patented technologies and intellectual properties of Japan and the U.S. To use these copyrightprotected technologies, authorization of the Macrovision Company is required. It is prohibited to disassemble or modify the Movie Camera.

Contents

Information for Your Safety 2
Before using
Accessories5
Optional5
Parts identification and handling5
Fitting the lens cap7
The one-touch free-style grip belt 8
Using the LCD monitor 8
Using the viewfinder9
Power supply9
Charging time and recordable time 10
Inserting/removing a cassette 10
Inserting/removing a card11
Turning the camera on
Selecting a mode
How to use the joystick
Switching the language
Using the menu screen
Setting date and time
Adjusting LCD monitor/viewfinder
Using the remote control
Free style remote control
Record mode
Check before recording
Recording on a tape
Recording still pictures on a card while
recording image onto a tape
Check the recording
Blank search function
Recording still pictures onto a card
(Photoshot)21
Zoom in/out function
Recording yourself
Quick start23
Backlight compensation function
Night view functions
Soft skin mode
Tele-macro function
Fade in/fade out function
Wind noise reduction function
Self-timer recording
Recording images for wide-screen TVs 26
Image stabilizer function
Continuous Photoshot
Recording in various situations
(Scene mode)
Recording in natural colours
(White balance)
Manual focus adjustment
Manual shutter speed/aperture adjustment 29

Playback mode Playing back tape......31 Slow-motion playback/ frame-by-frame playback......31 Deleting files recorded on a card 34 Writing the printing data on a card Edit mode Copying onto a DVD recorder or a VCR Using the DV Cable for Recording Audio dubbing 37 Printing pictures by directly connecting to Menu Menus related to taking pictures 42 Menus related to playback 42 Others Warning/alarm indications...... 45 Functions cannot be used simultaneously 46 Before requesting repair (Problems and solutions)...... 47 Cautions for Use 50 Explanation of terms 54 **Specifications**

Specifications 55

Before using

■ Sales and Support Information

Customer Care Centre

- For UK customers: 08705 357357
- For Republic of Ireland customers: 01 289 8333
- Visit our website for product information
- E-mail: customer.care@panasonic.co.uk

Technical Support for AV Software


- For callers in UK: 08701 505610
- For callers in ROI: 0044 8701 505610

Direct Sales at Panasonic UK

- Order accessory and consumable items for your product with ease and confidence by phoning our Customer Care Centre Monday–Friday
 9:00am– 5:30pm. (Excluding public holidays).
- Or go on line through our Internet Accessory ordering application at www.panasonic.co.uk.
- Most major credit and debit cards accepted.
- All enquiries transactions and distribution facilities are provided directly by Panasonic UK Ltd.
- It couldn't be simpler!
- Also available through our Internet is direct shopping for a wide range of finished products, take a browse on our website for further details.

Accessories

The followings are the accessories supplied with this product.

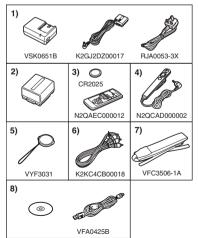

- 1) AC adaptor, DC input lead, AC mains lead
- 2) Battery pack -9-


- 3) Remote control, button-type battery -16-
- 4) Free style remote control -17-
- 5) Lens cap -7-
- 6) AV cable -36-
- 7) Shoulder strap -7-
- 8) USB cable and CD-ROM -38-

Optional


- 1) AC adaptor (VW-AD11EB)
- 2) Battery pack (lithium/CGR-DU06/640mAh)
- 3) Battery pack (lithium/CGA-DU07/680mAh)
- 4) Battery pack (lithium/CGA-DU12/1150mAh)
- 5) Battery pack (lithium/CGA-DU14/1360mAh)
- 6) Battery pack (lithium/CGA-DU21/2040mAh)
- 7) Wide conversion lens (VW-LW3707M3E)
- 8) Tele conversion lens (VW-LT3714M2E)
- 9) Filter kit (VW-LF37WE)
- 10) Video DC light (VW-LDC10E)
- 11) Light bulb for video DC light (VZ-LL10E)
- 12) Stereo microphone (VW-VMS2E)
- 13) Tripod (VW-CT45E)
- 14) DV cable (VW-CD1E)
- 15) Jacket pouch (VW-SJ05E)
- Some optional accessories may not be available in some countries.

Parts identification and handling

■ Camera

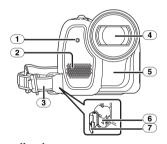

- 1) Recording lamp -42-
- (2) Microphone (built-in, stereo) -23-, -25-
- 3 Grip belt
- (One-touch free style grip belt) -8-
- (4) Lens
- White balance sensor -28-Remote control sensor -17-
- 6 Lock button -8-
- 7 Lock cover -8-

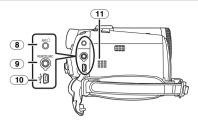


- 8 Audio-video output terminal [AV] -36-
 - •Use the supplied AV cable or headphones only, otherwise audio may not be played back normally.

Headphone terminal $[\Omega]$

Terminal for free style remote control [REMOTE] -17-

Microphone terminal [MIC]

- A compatible plug-in powered microphone can be used as an external microphone.
- When the movie camera is connected with AC Adaptor, sometimes noise may be heard depending on microphone type. In that case, please switch to battery for power supply and noise will stop.
- (10) USB terminal [¹/₄] -38-
- 11) Speaker -31-

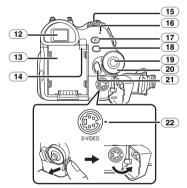


(12) Viewfinder -9-, -53-

Due to limitations in LCD production technology, there may be some tiny bright or dark spots on the Viewfinder screen. However, this is not a malfunction and does not affect the recorded picture.

- 13) Battery holder
- (14) Battery eject button [PUSH BATT] -10-
- 15 Power switch [OFF/ON] -12-
- (16) Power lamp -12-
- (17) Quick start recording button [QUICK START] -23-Quick start recording lamp -23-


- 18 Menu button [MENU] -14-
- 19 Joystick -12-
- 20 Mode dial -12-
- (21) Recording start/stop button -20-
- (22) S-Video output terminal [S-VIDEO] -32-

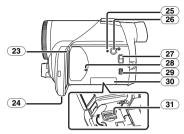

23) LCD monitor -8-, -53-

Due to limitations in LCD production technology, there may be some tiny bright or dark spots on the LCD monitor screen. However, this is not a malfunction and does not affect the recorded picture.


- 24) LCD monitor open part [OPEN] -8-
- 25) Reset button [RESET] -45-
- 26 Power LCD button [POWER LCD] -15-Power LCD lamp -15-
- (27) Mode select switch [AUTO/MANUAL/ FOCUS] -19-, -27-, -29-
- 28) Card access lamp -11-
- 29 DV terminal [DV] -37-
- 30 Card slot cover -11-
- (31) Card slot -11-

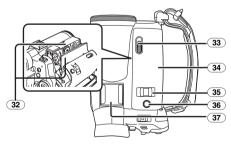

- (32) Cassette holder -10-
- 33) Cassette eject lever [OPEN/EJECT] -10-
- (34) Cassette cover -10-
- 35 Zoom lever [W/T] -22-

Volume lever [- ₩/VOL+] -31-

- (36) Photoshot button [PHOTO SHOT] -20-
- (37) Accessory shoe
- Accessories, such as a stereo microphone (VW-VMS2E: optional), are attached here.

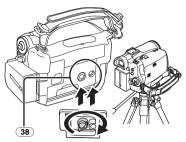


(38) Tripod receptacle

This is a hole for attaching the camera to optional tripod/VW-CT45E. (Please carefully read the operating instructions for how to attach the tripod to the camera.)


- When the tripod is used, operate the camera from the free style remote control for convenience. (When not using the remote control, attach the clip to the grip belt for convenience. When you move with remote control attached to a pocket, etc., take care to avoid falling of the tripod.)
- You cannot open the card slot cover when the tripod is used. Insert the card first and then attach the tripod.



 (39) Shoulder strap fixture



 - Put the strap through the fixture ① and through the stopper ② so it will not come off. Extend part ③ by at least 2 cm.
- Fit the other end of the belt similarly.




In order to remove the lens hood, rotate it counterclockwise **1**. In order to fit it, put into slot **2**, and then rotate it clockwise.

- Fit the MC protector or the ND filter of the Filter Kit (VW-LF37WE; optional) in front of the lens hood. Do not fit the other accessories on the hood. (Except for the lens cap)
- When fitting the tele conversion lens (VW-LT3714M2E; optional) or the wide conversion lens (VW-LW3707M3E; optional), first remove the lens hood.
- When 2 lens accessories, such as the ND filter and tele conversion lens, are fitted and the [W/T] lever is pressed toward the [W] side, the 4 corners of an image will be darkened. (Vignetting)


Fitting the lens cap

Fit the lens cap to protect the surface of the lens. If you do not use the movie camera when the MC protector or the ND filter of the Filter Kit (VW-LF37WE; optional) is attached to the front of the lens hood, attach the lens cap to protect the surface of the lens

 1 Remove the grip belt. Run the end of the lens cap cord through the hole in the grip belt attachment part and run the lens cap through the lens cap cord.



  The lens cap removed can be hung on the lens cap fixture. (It cannot be hung if the grip belt is used as a hand strap.)




• To fit or remove the lens cap, hold both sides of the lens cap with the tips of your first 2 fingers.

The one-touch free-style grip belt

■ To use as a hand strap

If you use the grip belt as a hand strap, then you can carry or handle this camera more easily.

 1 Open the lock cover 1 by pinching the projections 2 on both sides. Press the lock button 3 to remove the grip belt.



- When removing the grip belt, tightly hold the camera with both hands.
- After removing the grip belt, restore the lock cover to the original position.
- 2 Adjust the belt length.



- 1) Flip the belt.
- ② Slide 1 in the direction indicated by the arrow.
- (3) Fix the belt.
- 3 Put your hand through the strap.



- Use the free style remote control for more convenience.
- Hold the movie camera not to cover the microphones or the sensors with your hands.

■ To restore the strap to the grip belt


•When returning the grip belt to the grip belt attachment part, press the lock cover and check if the grip belt is securely locked.



■ To use as a grip belt

Adjust the belt length so it fits your hand.

1 Adjust the belt length and the pad position.

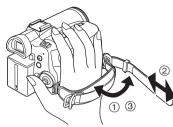


- 1) Flip the belt.
- 2 Adjust the length.
- (3) Fix the belt.


Using the LCD monitor

You can record the image while viewing it on the LCD monitor opened.

 1 Put a finger on the LCD monitor open part and pull the LCD monitor out in the direction of the arrow.



 - The viewfinder will go off.
- It can open up to 90°.
- 2 Adjust the angle of the LCD monitor as you prefer.




- It can rotate up to 180° towards the lens or 90° towards the viewfinder.
- The brightness and colour level of the LCD monitor can be adjusted from the menu.
- If it is forcibly opened or rotated, the camera may be damaged or fail.
- Check that the card slot cover is closed.
- When the LCD monitor is rotated by 180° towards the lens (when recording yourself), the LCD monitor and the viewfinder will be simultaneously activated.

Using the viewfinder


■ Extending the viewfinder

 1 Pull out the viewfinder and extend it by pinching the extension knob.



Adjusting the field of view

 1 Adjust the focus by sliding the eyepiece corrector knob.




 You can adjust the brightness of the viewfinder from the menu.

Power supply

Charging the battery

When this product is purchased, the battery is not charged. Charge the battery before using this product.

 - Battery charging time (-10-)
- We recommend using Panasonic batteries.
- If you use other batteries, we cannot guarantee the quality of this product.
- If the DC input lead is connected to the AC adaptor, then the battery will not get charged.
 Remove the DC input lead from the AC adaptor.
- 1 Connect the AC mains lead to the AC adaptor and the AC mains socket.
- 2 Put the battery on the battery mount by aligning the mark, and then securely plug it in.



■ Charging lamp

Lights up: Charging


Goes off: Charging completed

Flashing: The battery is over discharged (discharged excessively). In a while, the lamp will light up and normal charging will start.

When the battery temperature is excessively high or low, the [CHARGE] lamp flashes and the charging time will

be longer than normal.


■ Connecting to the AC outlet

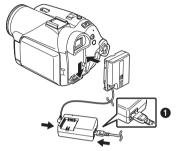

- Connect the AC mains lead to the AC adaptor and the AC mains socket.
- 2 Connect the DC input lead to the AC adaptor.
- 3 Connect the DC input lead to this product.
 - The output plug of the AC mains lead is not completely connected to the AC adaptor socket. As shown in 1, there is a gap.
 - Do not use the power cord for other equipment since the power cord is exclusively designed for the movie camera. Or do not use the power cord of other equipment for the movie camera.

Fitting the battery

 Push the battery against the battery holder and slide it until it clicks.



Removing the battery

While pushing the [PUSH BATT] button, slide the battery (or the DC input lead) to remove it.



 Hold the battery with your hand so it does not fall.

Charging time and recordable time

The times shown in the table below show the times at a temperature of 25°C and a humidity of 60%. This is just a guide. If the temperature is higher or lower than the specified value, the charging time will become longer.

Supplied	A	2 h. 25 min.
battery/	B	2 h. 40 min.
CGA-DU12		(2 h. 25 min.)
(7.2 V/	©	1h. 20 min.
1150 mAh)		(1 h. 15 min.)
CGA-DU14	A	2 h. 45 min.
(7.2 V/	B	3 h.
1360 mAh)		(2 h. 50 min.)
	©	1h. 30 min.
		(1 h. 25 min.)
CGA-DU21	A	3 h. 55 min.
(7.2 V/	B	4 h. 30 min.
2040 mAh)		(4 h. 15 min.)
	©	2 h. 15 min.
		(2 h. 10 min.)
CGR-DU06	A	1 h. 40 min.
(7.2 V/	B	1 h. 25 min.
640 mAh)		(1 h. 20 min.)
	©	45 min.
		(40 min.)
CGA-DU07	A	1 h. 30 min.
(7.2 V/	B	1h. 30 min.
680 mAh)		(1 h. 25 min.)
	0	45 min.
		(45 min.)

- A Charging time
- (B) Maximum continuously recordable time
- © Intermittent recordable time

 
(The intermittent recordable time refers to recordable time when the recording and stopping operations are repeated.)

- "1h. 10 min." indicates 1 hour 10 minutes.
- The battery CGA-DU12 is supplied.

- The times shown in the table are rough estimates. The times indicate the recordable times when the viewfinder is used. The times in parentheses indicate the recordable times when the LCD monitor is used.
- We recommend the Battery Pack CGA-DU12, CGA-DU14 and CGA-DU21 for long time recording (2 hours or more for continuous recording, 1 hour or more for intermittent recording).
- The recordable time will become shorter in the following cases:
 - When you use both the viewfinder and the LCD monitor simultaneously while rotating the LCD monitor frontward to record yourself, using the 0 lux night view function, etc.
 - When you use this camera with the LCD monitor lit up by pressing the [POWER LCD] button.
- The batteries heat up after use or charging. The main unit of the movie camera being used will also heat up. This is normal.
- Along with the reduction of the battery capacity, the display will change: ►►► → ►► → ► → If the battery discharges, then ►► (←) will flash.

Inserting/removing a cassette

1 Slide the [OPEN/EJECT] lever and open the cassette cover.



- When the cover is fully opened, the cassette holder will come out.
- 2 After the cassette holder is opened, insert/ remove the cassette.



- When inserting a cassette, orient it as shown in the figure, and then securely insert it as far as it goes.
- When removing, pull it straight out.

3 Push the [PUSH] mark in order to close the cassette holder.



- 4 Only after the cassette holder is completely housed, close the cassette cover.
- After using, make sure to rewind the cassette completely, remove it, and put it in a case. Store the case in an upright position. (-52-)
- When condensation is formed on the lens or the main unit of the movie camera, even if no condensation alarm is indicated, condensation may have formed on the heads or the cassette tape. Do not open the cassette cover. (-50-)

■ When the cassette holder does not come out

- Close the cassette cover completely, and then open it again completely.
- Check if the battery has run down.

When the cassette holder cannot be housed

- Set the [OFF/ON] switch to [OFF], then to [ON] again.
- Check if the battery has run down.

■ Inserting/removing the cassette

- When the cassette holder is in action, do not touch anything except the [PUSH] mark.
- When inserting a previously recorded cassette, use the blank search function to find the position where you want to continue recording. If you overwrite-record on a previously recorded cassette, be sure to find the position where you continue recording.
- Close the cassette cover tightly.
- When closing the cassette cover, do not get anything, such as a cable, caught in the cover.

Accidental erasure prevention

If the accidental erasure prevention slider ① of a cassette is opened (slide in the direction of the [SAVE] arrow), the cassette cannot be recorded. When recording, close the accidental erasure prevention slider of the cassette (slide in the direction of the [REC] arrow).



Inserting/removing a card

Before inserting/removing a card, be sure to turn the power [OFF].

- If the card is inserted or removed with the power turned on, this camera may malfunction or the data recorded on the card may be lost.
- 1 Open the LCD monitor and then open the card slot cover.



2 Insert/remove the card into/from the card slot.



- When inserting a card, face the label side towards you and push it straight in with one stroke as far as it goes.
- When removing the card, open the card slot cover and press the centre of the card and then pull it straight out.
- 3 Securely close the card slot cover.

■ Concerning the card

- Do not touch the terminals on the back of the card.
- Do not format the card with another movie camera or any personal computer. This operation may make the card unusable.
- Electrical noise, static electricity, or failure of the movie camera or the card may damage or erase the data stored on the card. We recommend saving important data on a personal computer by using a USB cable, PC card adaptor, and USB reader/writer.

Card access lamp



- When the camera accesses the card (reading, recording, playback, erasing, etc.), the access lamp lights up.
- If the following operations are performed when the access lamp is lit, then the card or the recorded data may be damaged or the camera may malfunction.

- Opening the card slot cover and inserting or removing the card.
- Operating the [OFF/ON] switch or the mode dial.

■ SD Memory Card

• The memory capacity indicated on the SD Memory Card label corresponds to the total amount of capacity to protect and manage the copyright and the capacity available as conventional memory for a movie camera, personal computer or other equipment.

Concerning the write protection switch on the SD Memory Card

 
 The SD Memory Card has a write protection switch on it. If the switch is moved to [LOCK], you cannot write to the card, erase the data on it, or format it. If it is moved back, you can.

Turning the camera on

When the camera is turned on with the lens cap fitted, the automatic white balance adjustment may not function properly. Please turn the camera on after removing the lens cap.


■ How to turn on the power

- While pressing the button , set the [OFF/ON] switch to [ON].
 - The power lamp lights up.



■ How to turn off the power

 
- 1 While pressing the button (), set the [OFF/ON] switch to [OFF].
 - The power lamp goes off.



Selecting a mode

Rotate the mode dial to select the desired mode.

 - 1 Rotate the mode dial.
- Set your desired mode to 1.



: Tape recording mode

Use this when you record the image on a tape. (Also, you can simultaneously record still pictures on a card while recording images on a tape.)

Use this to play back a tape.

: Card recording mode

Use this to record still pictures on a card.

: Picture playback mode

Use this to play back the still pictures recorded on a card.

PC: PC mode

You can view or edit the images recorded on a card on your personal computer.

(Refer to the operating instructions for PC connection.)

How to use the joystick

■ Basic joystick operations

Operations on the menu screen and selection of files to be played back on the multi-image display

Move the joystick up, down, left, or right to select an item or file, and then push in the centre to set it



- Select by moving up.
- Select by moving down.
- 3 Select by moving left.
- Select by moving right.
- 6 Determine by pushing the centre.

Joystick and screen display

Push the centre of the joystick, and icons will be displayed on the screen. Each push switches the display as follows depending on the mode. (In the Tape playback mode or the Picture playback mode, the icons will be automatically displayed on the screen.)

 Tape recording mode ([AUTO/MANUAL/FOCUS] switch is set to [AUTO])




▲	(8)	Tele-macro	-25-
•		Soft skin mode	-24-
•	→	Fade	-25-
•	Þ.	Backlight compensation	-24-
▲	さ	Night view/0 Lux night view	-24-
▼		Recording check	-21-

2) Tape recording mode ([AUTO/MANUAL/FOCUS] switch is set to [MANUAL])



▼	•	White balance	-28-
		Shutter speed	
		Iris or gain value	
•	+	Select/Adjust	-28-
◀	_	Select/Adjust	-28-

 3) Tape playback mode



	/ /II	Playback/pause	-31-
▼		Stop	-31-
◀	*	Rewind (review playback)	-31-
•	*	Fast forward (cue playback)	-31-

4) Card recording mode ([AUTO/MANUAL/FOCUS] switch is set to [AUTO])



		Tele-macro	-25-
▼		Soft skin mode	-24-
•	Š	Backlight compensation	-24-

Card recording mode ([AUTO/MANUAL/FOCUS] switch is set to [MANUAL])



▼	•	White balance	-28-
		Shutter speed	
		Iris or gain value	
▶	+	Select/Adjust	-28-
◀	_	Select/Adjust	-28-

6) Picture playback mode



A	%	Playback/stop	-33-
▼	自	Erase	-34-
◀	4	Playback previous picture	-33-
•	*	Playback next picture	-33-

Switching the language

You can switch the language on the screen display or the menu screen.

1 Set [LANGUAGE] >> select the desired language.



Using the menu screen

For each individual menu, please refer to -40-.

1 Press the [MENU] button.



- The menu corresponding to the mode selected by the mode dial is displayed.
- Do not switch the mode dial when the menu is displayed.
- 2 Move the joystick up or down in order to select the top menu.





3 Move the joystick right or press it to set the selection.





4 Move the joystick up or down in order to select the sub-menu.





5 Move the joystick right or press it to set the selection.





6 Move the joystick up or down in order to select the item to be set.





7 Press the joystick to determine the setting.



To exit the menu screen
Press the [MENU] button.

■ To get back to the previous screen Move the joystick left.



 
About the menu setting

 The menu screen does not appear during recording. And you cannot record when the menu screen appears.

Operating with remote control

The menu screen transition is the same as when the buttons on the main unit are used.

1 Press the [MENU] button.



2 Select a menu item.

 Use the direction buttons (▲, ◄, ➤, ▼) and [ENTER] button in place of the joystick on the main unit.



3 Press the [MENU] button to exit the menu screen.



Setting date and time

If the screen shows the incorrect date/time, then adjust it.

- Set to Tape Recording Mode or Card Recording Mode.
- 1 Set [BASIC] >> [CLOCK SET] >> [YES].



- 2 Move the joystick left or right in order to select the item to be set. Then move the joystick up or down to set the desired value.
 - The year will change as follows: 2000, 2001, ..., 2089, 2000, ...
 - The 24-hour clock is used.
- 3 Press the joystick to determine the setting.
- The clock function starts at [00] seconds.

■ About date/time

- The date and time function are driven by a builtin lithium battery.
- Make sure to check the time before recording because the built-in clock is not very accurate.

■ Recharging the built-in lithium battery

• If [S] or [--] is indicated when the camera is turned on, then the built-in lithium battery runs down. Connect the AC adaptor to the camera or place the battery on the camera, and the built-in lithium battery will be recharged. Leave the camera as is for approx. 24 hours, and the battery will drive the date and time for approx. 6 months. (Even if the [OFF/ON] switch is set to [OFF], the battery is still being recharged.)

WARNING

THE LITHIUM BATTERY IN THIS
EQUIPMENT MUST ONLY BE REPLACED
BY QUALIFIED PERSONNEL. WHEN
NECESSARY, CONTACT YOUR LOCAL
PANASONIC SUPPLIER.

Adjusting LCD monitor/viewfinder

- Adjusting the brightness and colour level
- 1 Set [SETUP] >> [LCD SET] or [EVF SET] >> [YES].



 
2 Move the joystick up or down in order to select the item to be adjusted.

[LCD SET]

:Brightness of the LCD monitor

EVF- : Brightness of the viewfinder

- 3 Move the joystick left or right to move the bar indication representing the brightness.
- 4 Press the [MENU] button or the joystick to complete the settings.
- In order to adjust the brightness of the viewfinder, close the LCD monitor, and the viewfinder will be activated.
- When the LCD monitor is rotated by 180° towards the lens, the brightness of the LCD monitor cannot be adjusted.
- These settings will not affect the images actually recorded.
- In order to increase the brightness of the entire LCD monitor
- 1 Press the [POWER LCD] button.




• The [POWER LCD] lamp lights up.

- If the [POWER LCD] button is pressed, the entire LCD monitor will become approx. twice as bright as the normal.
- Press this button again, and the lamp will go off and the brightness will revert back to the original brightness.
- This will not affect the images to be recorded.
- If you turn on the camera when the AC adaptor is used, the [POWER LCD] function will automatically be activated.


Using the remote control

■ Remote control


Using the remote control supplied will enable controlling almost all the functions of this camera to be controlled.

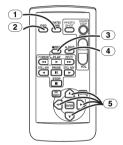

- 1 Date/time button [DATE/TIME] -40-
- 2 On-screen display button [OSD] -33-
- ③ Record button [●REC] (not available)
- 4 Audio dubbing button [A.DUB] -37-
- (5) Direction buttons $[A, <, >, \lor]$ -14-

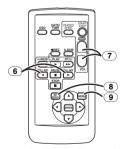

- 6 Slow/frame-by-frame forward button [◄, ▶] (◄: reverse, ▶: forward) -31-
- 7 Zoom/volume button [ZOOM/VOL] *
- (8) Search button [VAR. SEARCH] -32-
- 9 Menu button [MENU] -14-

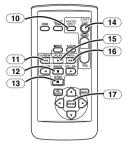

- 10 Photoshot button [PHOTO SHOT] *
- (11) Rewind/review button [◀◀]
- 12 Pause button [II]
- (13) Stop button [■]
- 14 Recording start/stop button [START/STOP] *
- 15 Playback button [▶]
- 16 Fast forward/cue button [▶▶]
- 17 Enter button [ENTER] -14-
- * means that these buttons function in the same manner as the corresponding buttons on the movie camera.

■ Install a button-type battery

Install the button-type battery supplied in the remote control before using it.

1 While pressing the stopper 1, pull out the battery holder.



2 Set the button-type battery with its (+) mark facing upward and get the battery holder back in place.



WARNING

"THE LITHIUM BATTERY IS A CRITICAL COMPONENT (TYPE NUMBER CR2025 MANUFACTURED BY PANASONIC). IT MUST NEVER BE SUBJECTED TO EXCESSIVE HEAT OR DISCHARGE. IT MUST THEREFORE ONLY BE FITTED IN EQUIPMENT DESIGNED SPECIFICALLY FOR ITS USE.

REPLACEMENT BATTERIES MUST BE OF THE SAME TYPE AND MANUFACTURER. THEY MUST BE FITTED IN THE SAME MANNER AND LOCATION AS THE ORIGINAL BATTERY, WITH THE CORRECT POLARITY CONNECTIONS OBSERVED.

DO NOT ATTEMPT TO RE-CHARGE THE OLD BATTERY OR RE-USE IT FOR ANY OTHER PURPOSE. IT SHOULD BE DISPOSED OF IN WASTE PRODUCTS DESTINED FOR BURIAL RATHER THAN INCINERATION?

Remote control usable range

 


 The distance between the remote control and the camera: Within approx. 5 m
 Angle: Approx. 10° up and 15° down, left, and right

■ Selecting the remote control mode

If 2 cameras are used simultaneously, set the mode for one pair of movie camera and remote control to [VCR1] and that of the other pair to [VCR2]. This will prevent interference between the 2 pairs. (The default setting is [VCR1]. When the button-type battery is replaced, the setting will revert to the default [VCR1].)

- 1 Setting on the camera: Set [SETUP] >> [REMOTE] >> [VCR1] or IVCR2].
- 2 Setting on the remote control:



[VCR1]:

Press [▶] and [■] simultaneously. 1

[VCR2]:

 
Press [◄1] and [■] simultaneously. ②

■ Concerning the button-type battery

- When the button-type battery runs down, replace it with a new battery (part number: CR2025). The battery is normally expected to last about 1 year, but it depends on operation frequency.
- Keep the button-type battery out of the reach of children.
- If the remote control mode of the camera and that of the remote control do not match with each other, "REMOTE" will appear. When the remote control is operated for the first time after the camera is turned on, "CHECK REMOTE MODE" (-45-) will appear and operation is impossible. Set the same remote control mode.
- The remote control is intended for indoor operation. Outdoors or under strong light, the movie camera may not operate properly even within the usable ranges.
- Within a 1 metre range, you can operate the remote control from beside the remote control sensor (LCD monitor side) of the movie camera.

Free style remote control


This controller can be used from different high and low angles. It is also handy when a tripod is used. When you do not use the controller, attach the clip to the grip belt. Left-handed users can use this camera more easily.



- 1 Recording start/stop button [REC]
- Zoom lever [W/T]
- 3 Photoshot button [PHOTO SHOT]

■ Connect the free style remote control to the camera

 1 Plug the free style remote control into the [REMOTE] terminal as far as it goes.



■ About the clip (on the backside)



When you move with the clip fitted to your pocket or elsewhere, beware of knocking over the tripod and causing the camera to fall off the table.


- If the pin plug of the control is not inserted securely into the [REMOTE] terminal as far as it will go, normal operation may not be ensured.
- Before using, make sure that the plug is inserted securely into the terminal as far as it will go.

Record mode

Check before recording

Check the following by trying recording before important events such as weddings in order to verify that the image recording and audio recording work properly and that you know how to use the movie camera.

Basic camera holding

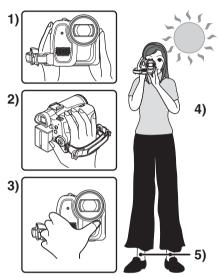

- 1) Hold the camera with both hands.
- 2) Run your hand through the grip belt.
- Do not cover the microphones or sensors with your hands.
- 4) Keep your arms near your body.
- 5) Slightly open your legs.
- When you are in the open air, record pictures with the sunlight as far in the background as possible. If the subject is backlit, it will become dark in the recording.

Check points

• Remove the lens cap. (-7-)

(When the camera is turned on with the lens cap fitted, the automatic white balance adjustment may not function properly. Please turn the camera on after removing the lens cap.)

- Grip belt adjustment (-8-)
- Power supply (-9-)
- Insert a cassette/card (-10-, -11-)
- Setting date/time (-15-)
- Adjustment of LCD monitor/viewfinder (-15-)
- Getting the remote control ready (-16-)
- Setting SP/LP mode (-19-)

About auto mode

- Set the [AUTO/MANUAL/FOCUS] switch to [AUTO], and colour balance (white balance) and focusing will be adjusted automatically.
 - Auto white balance: -54-
 - Auto focusing: -54-
- Colour balance and focus may not be adjusted depending on light sources or scenes. If so, manually adjust the white balance and focus.



- Scene mode setting (-27-)
- White balance setting (-28-)
- Shutter speed setting (-29-)
- Iris/gain value setting (-29-)
- Focus setting (-29-)

■ Recording mode

You can switch the tape recording mode.

- Set to Tape Recording Mode.
- 1 Set [BASIC] >> [REC SPEED] >> [SP] or [LP].

If the LP mode is selected, the recording time will be 1.5 times the SP mode, but some functions will be disabled.

 
- We recommend using the SP mode for important recording.
- In order to fully exhibit the performances of the LP mode, we recommend using Panasonic cassettes marked LP mode.
- It is not possible to dub audio onto image recorded in the LP mode. (-37-)
- In the LP mode, the picture quality will not be degraded in comparison with the SP mode, but mosaic noise may appear on the playback image or some functions may be disabled.
 - Playback on other digital video equipment or on digital video equipment without the LP mode.
 - Playback of the image on other digital video equipment recorded in the LP mode.
 - Slow/frame-by-frame playback.

Recording on a tape


Remove the lens cap. (-7-)

(When the camera is turned on with the lens cap fitted, the automatic white balance adjustment may not function properly. Please turn the camera on after removing the lens cap.)

• Set to Tape Recording Mode.



 1 Press the recording start/stop button to start recording.






2 Press the recording start/stop button again to pause recording.



- ullet For the recording time on a tape, refer to -10-.
- Carry out a recording check (-21-) to verify that the image is recorded properly.
- In order to find the unrecorded section, carry out the blank search (-21-).

On-screen display in the tape recording mode

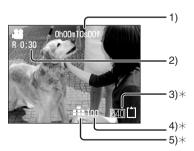

- *These indications are displayed only when the card is inserted.
- 1) Recording time elapse
- 2) Remaining tape indication
- 3) Still picture size
- 4) Number of recordable still pictures (When no picture can be recorded, this indication will flash in red.)
- 5) Quality of still pictures

Concerning the remaining tape time indication on the screen

- The remaining tape time is indicated in minutes. (When it reaches less than 3 minutes, the indication starts flashing.)
- During a 15-second or shorter recording, the remaining tape time indication may not be displayed or the remaining tape time may not be displayed correctly.
- In some cases, the remaining tape time indication may display remaining tape time that is 2 to 3 minutes shorter than the actual remaining tape time.

Recording still pictures on a card while recording image onto a tape

You can record still pictures while recording image onto a tape.

- Set to Tape Recording Mode.
- 1 Press the [PHOTO SHOT] button fully while recording image onto a tape.



- For the number of still pictures to be recorded on a card, refer to -56-.
- When recording pictures onto a card, the recording start/stop button is disabled.
- You can select a picture quality for still pictures to be recorded. (-22-)
- The sizes of pictures to be recorded are [640].
- In order to record still pictures with higher quality, we recommend using the card recording mode.

Check the recording

The last image recorded is played back for 2 to 3 seconds. After checking, the camera will be set to a recording pause.

- Set to Tape Recording Mode.
- 1 Press the joystick during the recording pause until the icon 1 appears.
- 2 Move the joystick down to select the recording check icon [].





Blank search function

Searches for the last part of the image recorded (unused part of the tape).

 
- Set to Tape Recording Mode.
- 1 Set [BASIC] >> [BLANK SEARCH] >> [YES].
- Stopping blank search midway through

Move the joystick down.

- If the cassette tape has no blank part, then the camera will stop at the end of the tape.
- The camera stops at a point approx. 1 second before the end of the last image recorded.
 When you start recording at that point, the image can be recorded seamlessly from the last image.

Recording still pictures onto a card (Photoshot)

Set to Card Recording Mode.




1 Press the [PHOTO SHOT] button.



■ To record still pictures clearly

- •When zooming in on the subject with a magnification of 4× to 10× or higher, it is difficult to reduce the slight shaking from holding the movie camera by hand. We recommend decreasing the zoom magnification and approaching the subject when recording.
- When recording still pictures, hold the movie camera firmly with your hands and keep your arms stationary at your side so as not to shake the movie camera.
- You can record stable pictures without shaking by using a tripod and the remote control.
- For the number of still pictures to be recorded on a card, refer to -56-.
- The sound cannot be recorded.
- While data are recorded on a card, do not operate the mode dial.
- When the access lamp is lit, do not insert or remove a card.
- Another product may degrade or not play back data recorded on this camera.
- If set [PICT. QUALITY] >> [___], mosaic-pattern noise may appear on a playback image depending on the picture content.
- When the [PICTURE SIZE] is set to other than [640], the mega pixel recording mode is set.
- When the picture size setting is other than [640], the scene around the subject can be recorded wider than that in [640].

On-screen display in the card recording mode

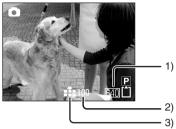

- Still picture size
- Number of recordable still pictures (When no pictures can be recorded, the red light will flash.)
- 3) Quality of still pictures

■ Progressive Photoshot

You can record still pictures with higher picture quality and frames. (You cannot switch the progressive function off/on.)



- In the tape recording mode, the progressive function may be disabled depending on the other functions used. (-46-)
- Select the size of still pictures to be recorded on a card
- 1 Set [BASIC] >> [PICTURE SIZE] >> select the desired picture size.

[1520]: 1520×1152 [640]: 640×480

Select the picture quality for photoshot images

1 Set [BASIC] >> [PICT. QUALITY] >> select the desired picture quality.

[:::]: High picture quality | Normal picture quality

 You can also change the picture quality on [ADVANCE] >> [PICT. QUALITY] in the tape recording mode.

■ Recording with a shutter operation effect

 
You can add a shutter operation simulating sound.

 
1 Set [ADVANCE] >> [SHTR EFFECT] >> [ON].

Zoom in/out function

You can zoom in up to 10× optically.

- Set to Tape/Card Recording Mode.
- 1 Wide-angle recording (zoom out):
 Push the [W/T] lever towards [W].
 Close-up recording (zoom in):
 Push the [W/T] lever towards [T].





- When zooming in and taking a picture while holding the movie camera by hand, we recommend using the image stabilizer function.
- When you are zooming on a faraway subject, a sharper focus is achieved if the recording subject is 1.2 metres or further from the movie camera
- When the zoom speed is high, the subject may not be focused easily.
- When the zoom magnification is 1x, the movie camera can focus on a subject approx. 4 cm distant from the lens

■ Digital zoom function

If the zoom magnification exceeds 10 times, then the digital zoom function will be activated. The digital zoom function allows you to select a magnification from 20× to 500×.

1 Set [ADVANCE] >> [D.ZOOM] >> [20×] or [500×].



[OFF]: Optical zoom only (Up to 10×)

[20 \times]: Up to 20 \times [500 \times]: Up to 500 \times

- The larger the digital zoom magnification, the more the image quality is degraded.
- When the Card Recording mode is used, the digital zoom function cannot be used.

■ To use the zoom microphone function

Interlocked with the zooming operation, the microphone will collect sounds clearly far away with the tele-shot or those in the vicinity with the wide-angle shot.

- Set to Tape Recording Mode.
- 1 Set [ADVANCE] >> [ZOOM MIC] >> [ON].



 
About the variable speed zoom function

- When pushing the [W/T] lever as far as it will go, you can zoom from 1× to 10× in 2.1 second at the maximum
- •The zoom speed varies according to the amount of movement of the [W/T] lever.
- The variable speed zoom function cannot be used with the remote control.

Recording yourself

You can record yourself while viewing the LCD monitor. You can record persons in front of the camera while presenting them the image. The image is horizontally flipped as if you see a mirror image. (The image to be recorded is the same as that recording.)

Rotate the LCD monitor towards the lens side.




- When the LCD monitor is opened, the viewfinder will be automatically turned off. If the LCD monitor is rotated towards the lens side though, then the viewfinder will be activated.
- When the LCD monitor is rotated towards the lens side, the icon will not be displayed even if you push the centre of the joystick.


Quick start

This camera will be put into standby in approx.

 - 1.7 seconds after the power is turned on.
- This is only activated in the following cases.
 - A tape or a card is inserted, while the Tape Recording Mode is set.
 - A card is inserted, while the Card Recording Mode is set.
- 1 Press the [QUICK START] button.



 - The quick start recording lamp lights up. (Press the button again to cancel it.)
- 2 Set the [OFF/ON] switch to [OFF].



- The guick start is now ready.
- 3 Set the [OFF/ON] switch to [ON].
 - This camera will be put into a recording pause in approx. 1.7 seconds after it is turned on.

■ To cancel the quick start when the power is [OFF]

Press and hold the [QUICK START] button for approx. 2 seconds. The lamp will go off and the camera will be completely turned off.

- If the standby continues for approx. 30 minutes, then the lamp will go off and the camera will be completely turned off.
- When you rotate the mode dial or remove the battery, the quick start recording lamp is turned off and the quick start mode is cancelled. If the movie camera is turned on and the Tape/Card Recording Mode is set though, the lamp turns on and the quick start mode is restored.
- When the camera is quick-started with the white balance on automatic, it may take some time until the white balance is adjusted if the scene being recorded has a light source different from the scene last recorded. (When the colour night view function is used, however, the white balance of the scene last recorded is retained.)
- The zoom magnification may differ from when it is in the quick start standby mode and when the recording starts.
- Since about half the power of normal recording is used in quick start standby, using quick start reduces the recordable time.

Backlight compensation function

This protects a backlit subject from being darkened.

- Set to Tape/Card Recording Mode.
- 1 Press the joystick until the icon
 appears.
- 2 Move the joystick right to select the backlight compensation icon [].





 The image on the screen will become brighter.

To return to normal recording

Select the [5.7] icon again.

 If you operate the [OFF/ON] switch or the mode dial, the backlight compensation is cancelled.

Night view functions

This function allows you to record colour subjects in dark locations to stand out against the background.

Attach the camera to a tripod, and you can record images free from vibration.

- Only manual focusing can be used.
- Recorded scene is seen as if frames were missed.

Colour night view function

You can record dark locations brightly in colour.

0 Lux night view function

 
You can record completely dark locations with the light of the LCD monitor.

- Set to Tape Recording Mode.
- 1 Press the joystick until the icon 1 appears.
- 2 Move the joystick up to select the night view icon [**].





- Each upward press switches the modes.
 OFF → Colour night view function → 0 Lux night view function → OFF
- 3 (In the case of 0 lux night view function) Rotate the LCD monitor towards the lens side.



- When the LCD monitor is reversed, the Power LCD Lamp turns on and the screen is lit in white.
- Record the subject while viewing it on the viewfinder.
- The light of the LCD monitor reaches approx. 1.2 m or less.

■ To cancel the colour night view function

Select the night view icon until the night view indication disappear.

- If set in a bright place, the screen may become whitish for a while.
- The night view function makes the signal charging time of CCD up to approximately 25× longer than usual, so that dark scenes invisible to the naked eye can be recorded brightly. For this reason, bright dots that are usually invisible may be seen, but this is not a malfunction.
- •The night view function is canceled when you operate the power switch or the mode dial.

Soft skin mode

This allows the skin colour to be recorded in a softer tone. This is more effective if you record the bust image of a person.

- Set to Tape/Card Recording Mode.
- 1 Press the joystick until the icon 1 appears.
- 2 Move the joystick down to select the soft skin icon [].





■ To cancel the soft skin mode Select the [♠] icon again.

- If the background or anything else in the scene has colours similar to the skin colour, they will also be smoothed.
- If the brightness is insufficient, the effect may not be clear.

Tele-macro function

By focusing only on the subject and blurring the background, the image can be impressive. This camera can focus on the subject at a distance of approx. 40 cm.

- Set to Tape/Card Recording Mode.
- 1 Press the joystick until the icon appears.
- 2 Move the joystick up to select the tele-macro icon [*].





 If the magnification is 10× or less, then it is automatically set to 10×.

- If a sharper focus cannot be achieved, adjust the focus manually.
- In the following cases, the tele-macro function is cancelled.
 - •The zoom magnification becomes lower than 10×
 - The [OFF/ON] switch or the mode dial is operated.

Fade in/fade out function

Fade in

The image and audio gradually appear.

Fade out

The image and audio gradually disappear.

- Set to Tape Recording Mode.
- 1 Press the joystick until the icon appears.
- 2 Move the joystick left to select the fade icon





3 Press the recording start/stop button. Start recording. (fade in)

When you start recording, the image/audio disappeared completely and the image/audio gradually appears.



Pause recording, (fade out)

The image/audio gradually disappears. After the image/audio completely disappears, recording stops.



■ To cancel fading

Select the [] icon again.

■ To select the colour for fade in/out

The colour which appears in fading pictures can be selected.

- 1 Set [SETUP] >> [FADE COLOUR] >> [WHITE] or [BLACK].
- While the fade in/fade out function is selected, it takes several seconds to display the image when you start recording images. Besides, it also takes several seconds to pause recording.

Wind noise reduction function

This reduces the wind noise coming into the microphone when recording.

- Set to Tape Recording Mode.
- 1 Set [BASIC] >> [WIND CUT] >> [ON].



■ To cancel the wind noise reduction function

Set [BASIC] >> [WIND CUT] >> [OFF].

 Reduces the wind noise depending on the wind strength. (If this function is activated in strong winds, the stereo effect may be reduced. When the wind weakens, the stereo effect will be restored.)

Self-timer recording

You can record still pictures on a card using the timer

- Set to Card Recording Mode.
- 1 Set [BASIC] >> [SELF TIMER] >> [YES].
- 2 Press the [PHOTO SHOT] button.



 After the recording lamp and the [☼] indication flashes for approx. 10 seconds, recording will start. After recording, the self-timer will be cancelled.

■ To stop the timer midway through Press the [MENU] button.

- By operating the [OFF/ON] switch or mode dial, the self-timer standby mode is cancelled.
- If the continuous photoshot recording is set, the maximum recordable pictures are recorded.

Recording images for wide-screen TVs

This allows you to record images compatible with wide-screen TVs.

Cinema Function

Images are recorded with a black belt appearing along the top and bottom of the screen so that they look like theatre movies.

- Set to Tape Recording Mode.
- 1 Set [ADVANCE] >>[CINEMA] >> [ON].



■ To cancel the Cinema function Set [ADVANCE] >>[CINEMA] >> [OFF].

- Images played back vary depending on the TV connected. Please refer to the operating instructions for your TV.
- This function does not widen the recording range.
- When images are played back on a TV screen, the date/time indication may be erased in some cases.
- Depending on the TV, the picture quality may deteriorate.
- When a cinema picture is imported into a personal computer, the imported picture may not be displayed correctly, depending on the software in used

Image stabilizer function

Reduces the image shaking due to hand movement when recording.

- Set to Tape Recording Mode.
- 1 Set [ADVANCE] >> [SIS] >> [ON].



To cancel the image stabilizer function Set [ADVANCE] >> [SIS] >> [OFF].

- When a tripod is used, we recommend that you turn the image stabilizer off.
- Under fluorescent lighting, image brightness may change or colours may not look natural.
- When the night view function is used, the image stabilizer function does not work. If so, the [] indication flashes.
- In the following cases, the image stabilizer function may not work effectively.
 - When the digital zoom is used
 - When a conversion lens is used
 - When recording is done in an extremely dark place
 - When the camera is shaken greatly
 - When you record a moving subject while tracking it

Continuous Photoshot

Records still pictures continuously at a certain interval

- Set to Card Recording Mode.
- 1 Set [BASIC] >> [PICTURE SIZE] >> [640].
- 2 Set [ADVANCE] >> [BURST MODE] >> [ON].



3 Press and hold the [PHOTO SHOT] button.



■ To stop continuous photoshot midway through

Release the [PHOTO SHOT] button.

- The camera records up to 10 still pictures at intervals of 0.5 seconds. If the shutter speed is manually set to 1/25, then the still pictures can be recorded at intervals of 0.7 seconds.
- One more still picture may be recorded after you release the [PHOTO SHOT] button.
- If set [SELF TIMER] >> [YES], the movie camera records the maximum number of pictures recordable.
- Intervals between recording pictures may become longer depending on the card. We recommend using a Panasonic SD Memory Card.
- When using the card formatted by other equipment or a card that was recorded and erased repeatedly, the intervals between recording pictures may become longer. If so, back up your important data on a PC, and format your card with this movie camera.

Recording in various situations (Scene mode)

When you record images in different situations, this mode automatically sets optimum shutter speeds and apertures.

- Set to Tape/Card Recording Mode.
- 1 Set the [AUTO/MANUAL/FOCUS] switch to [MANUAL].



2 Set [BASIC] >> [SCENE MODE] >> select the desired mode.











- 1) [*] Sports mode
 - •To record sports scenes or scenes where there are quick motions
- 2) [) Portrait mode
 - To make persons stand out against the background
- 3) [o] Low light mode
 - •To record dark scenes so they are brighter
- 4) [] Spotlight mode
 - To record subjects spotlit in a party or theatre
- 5) [휴개] Surf & snow mode
 - To record images at dazzling places such as ski slopes and beaches
- To cancel the scene mode function
 Set [BASIC] >> [SCENE MODE] >> [OFF] or set
 the [AUTO/MANUAL/FOCUS] switch to [AUTO].

Sports mode

- For slow-motion playback or playback pause of recorded pictures, this mode presents free of camera shakes.
- During normal playback, the image movement may not look smooth.
- Avoid recording under fluorescent light, mercury light or sodium light because the colour and brightness of the playback image may change.

- If you record a subject illuminated with strong light or a highly reflective subject, vertical lines of light may appear.
- If the brightness is insufficient, the sports mode does not function. The [*] indication flashes.
- If this mode is used indoors, the screen may flicker.

Portrait mode

 If this mode is used indoors, the screen may flicker. If so, change the scene mode setting to [OFF].

Low light mode

• Extremely dark scenes may not be able to be recorded finely.

Spotlight mode

 If the recording subject is extremely bright, the recorded image may become whitish and the periphery of the recorded image extremely dark.

Surf & snow mode

 If the recording subject is extremely bright, the recorded image may become whitish.

Recording in natural colours (White balance)

The automatic white balance function may not reproduce natural colours depending on the scenes or lighting conditions. If so, you can adjust the white balance manually.

- Set to Tape/Card Recording Mode.
- 1 Set the [AUTO/MANUAL/FOCUS] switch to [MANUAL].

 


2 Move the joystick down until the white balance indication appears. ([AWB] etc.)





3 Move the joystick left or right in order to select the white balance mode.



Auto white balance adjustment [AWB]

- 3) Outdoor mode [🌣]
- 4) Manual adjustment mode []

■ To restore to the automatic adjustment

Move the joystick left or right until the [AWB] indication appears. Or, set the [AUTO/MANUAL/FOCUS] switch to [AUTO].

- When the camera is turned on with the lens cap fitted, the automatic white balance adjustment may not function properly. Please turn the camera on after removing the lens cap.
- When setting both the white balance and the iris/gain, set the white balance first.
- Whenever recording conditions change, re-set the white balance for correct adjustment.

■ To set the white balance manually Select [] in Step 3. Then, while viewing a white subject on the entire screen, move the joystick up to select the [] indication.

■ About flashing of the [] indication When the manual adjustment mode is selected

 Flashing indicates that the white balance previously adjusted is stored. This setting is stored until the white balance is adjusted again.

When white balance cannot be set in the manual adjustment mode

 White balance may not be adjusted properly in the manual adjustment mode in dark places. If so, use the auto white balance mode.

During setting in the manual adjustment mode

 
• When the setting is completed, it will keep lit.

■ About the white balance sensor

The white balance sensor detects the type of light source during recording.

- Do not cover the white balance sensor during recording, or it may not function properly.
- About the black balance adjustment

This is one of the 3-CCD system functions that automatically adjusts the black when the white balance is set in the manual adjustment mode. When the black balance is adjusted, the screen will temporarily be black.



- Black balance adjustment (Flashes.)
- 2 White balance adjustment (Flashes.)
- 3 Adjustment completed (Lights up.)

Manual focus adjustment

If auto focusing is difficult due to the conditions, then manual focusing is available.

- Set to Tape/Card Recording Mode.
- 1 Set the [AUTO/MANUAL/FOCUS] switch to [MANUAL].



2 Set the [AUTO/MANUAL/FOCUS] switch to [FOCUS].



- •The MNL and the manual focus indication [MF] will be displayed.
- 3 Move the joystick left or right in order to adjust the focus.





- When focused with a wide angle, the subject may not be in focus when zoomed in. First, zoom in on the subject, and then focus on it.
- To restore to the automatic adjustment

Set the [AUTO/MANUAL/FOCUS] switch to [AUTO] or [FOCUS].

Manual shutter speed/aperture adjustment

Shutter Speed

Adjust it when recording fast-moving subjects.

Aperture

Adjust it when the screen is too bright or too dark.

- Set to Tape/Card Recording Mode.
- 1 Set the [AUTO/MANUAL/FOCUS] switch to [MANUAL].



2 Move the joystick down until the shutter speed indication or aperture value indication appears.









- 1) Shutter speed
- 2) (Aperture) Iris/gain value
- 3 Move the joystick left or right in order to adjust the shutter speed or aperture.
- To restore to automatic adjustment Set the [AUTO/MANUAL/FOCUS] switch to [AUTO].

Manual shutter speed adjustment

- Avoid recording under fluorescent light, mercury light or sodium light because the colour and brightness of the playback image may change.
- If you increase the shutter speed manually, the sensitivity lowers and accordingly the gain value increases automatically, which may increase the noises on the screen.
- You may see vertical lines of light in the playback image of a brightly shining subject or highly reflective subject, but this is not a malfunction.
- During normal playback, image movement may not look smooth.
- When recording in the extremely bright place, the colour of the screen may change or flickers.
 If so adjust the shutter speed manually to 1/50 or 1/100.

Manual iris/gain adjustment

- If the value does not become "OPEN", you cannot adjust the gain value.
- If the gain value is increased, the noise on the screen increases.
- Depending on the zoom magnification, there are iris values that are not displayed.

■ Shutter speed range

1/50–1/8000 seconds: Tape Recording Mode 1/25–1/500 seconds: Card Recording Mode The shutter speed closer to 1/8000 is faster.

 
■ Iris/gain value range

CLOSE (Closed), F16, ..., F2.0,
OPEN (Opened) 0dB, ..., 18dB
Value closer to [CLOSE] darken the image.
Value closer to [18dB] brighten the image.
Values with dB are gain values.

Playback mode

Playing back tape

Set to Tape Playback Mode.



1 Operate with joystick.





►/II: Playback/Pause

Rewind/Review playback (Reverts to playback with the ►/II icon.)

►►: Fast forward/Cue playback (Reverts to playback with the ►/II icon.)

 
■: Stop

- During cue/review playback, fast-moving images may show noise as a mosaic.
- Before and after cue/review playback, the screen may become blue for a moment or images may be disturbed.

■ To adjust volume

Adjust the speaker or headphone volume for playback.

1 Move the [- ♣ /VOL+] lever to adjust the volume.



Towards [+]: increases the volume Towards [-]: decreases the volume

(Nearer the bar to [+], larger the volume.)

- On the remote control, press the [T] button to increase the volume or the [W] button to decrease it.
- When the adjustment is completed, the volume indication will disappear.
- If you do not hear the sound, check the settings of [SETUP] >> [12bit AUDIO].

■ Repeat playback

When the tape end is reached, the tape will be rewound and played back again.

1 Set [ADVANCE] >> [REPEAT PLAY] >> [ON].

- The [冷▶] indication appears. (In order to cancel the repeat playback mode, set [REPEAT PLAY] >> [OFF] or set [OFF/ON] switch to [OFF].)
- When you set [USB FUNCTION] >> [WEBCAM] and then connect the USB connection cable, the repeat playback mode is canceled.

Settings on the audio

- If you cannot listen to the desired audio when playing back a tape, check the settings in [SETUP] >> [12bit AUDIO].
- When you record or dub the audio in [12bit] and set [SETUP] >> [12bit AUDIO] >> [MIX], the audio will be played back in stereo sound regardless of the settings in [AUDIO OUT].

Slow-motion playback/ frame-by-frame playback


 Set to Tape Playback Mode. (Slow-motion playback can only be performed by using the remote control.)

Slow-motion playback

If the image is recorded in the SP mode, then it will be played back at a speed approx.1/5 the normal speed.

If the image is recorded in the LP mode, then it will be played back at a speed approx.1/3 the normal speed.

1 Press the [◄] button or the [▶] button on the remote control.

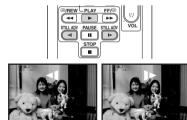

 If the slow-motion playback continues for approx. 10 minutes or more, then the playback will automatically stop. (10 minutes of slow-motion playback is equivalent to approx. 2 minutes in the SP mode or approx. 3 minutes in the LP mode.)

Frame-by-frame playback

- 1 During playback, press the [II] button on the remote control.
- 2 Press the [◄] button or the [▶] button on the remote control.







• Pushing the [── NOL+] lever towards [T] (normal direction) or towards [W] (reversed direction) of this camera during playback pause also turns into the frame-by-frame playback. If you keep pushing the lever, then the images will continuously be played back frame by frame.

■ To return to normal playback

Press the [>] button on the remote control.

Slow-motion playback

• In the reversed slow-motion playback, the time code indication may be unstable.

Frame-by-frame playback

• Press and hold the [◄] or the [▶] button in the playback pause, and then the images will continuously be played back frame by frame.

Variable-speed search function

The speed of cue/review playback can be varied. (This operation is only available when using the remote control.)

- Set to Tape Playback Mode and play back a tape.
- 1 Press the [VAR. SEARCH] button on the remote control.



2 Press the [▲] or [▼] button to vary the speed.



•The speeds for cue/review playback are 1/5× (SP mode slow-motion playback only), 1/3× (LP mode slow-motion playback only), 2×, 5×, 10×. 20×.

■ To return to normal playback


Press the [VAR. SEARCH] button or [▶] button on the remote control.

- Images may be shown in a mosaic-like pattern.
- •The sound is muted during search.
- This function is canceled when the operation icon is displayed.

Playback on TV

Images recorded by this camera can be played back on a TV.

- Insert a recorded tape into this camera.
- 1 Connect the movie camera and a TV.

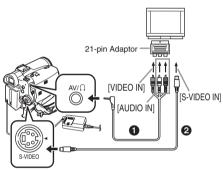

- Connect the movie camera and a TV by using the AV cable .
- If the TV has an S-Video terminal, then also connect an S-Video cable (optional). It allows you to enjoy more beautiful images.
- If your TV is not equipped with AV Input Sockets, the 21-pin Adaptor (purchase separately) is necessary. Consult your dealer.
- 2 Turn on this camera and set the mode dial to the Tape Playback Mode.
- 3 Select the input channel on the TV.
- 4 Move the joystick up to select the [►/II] icon to start playback.
 - The image and audio are output on the TV.
- 5 Move the joystick down to select the [■] icon to stop playback.
- Whenever plugging in the S-Video cable, plug in the AV cable, too.
- Use the AC adaptor to free you from worrying about the battery running down.

If the image or audio from this camera is not output on the TV

- Check that the plugs are inserted as far as they go.
- Check the connected terminal.
- If the image does not appear on the TV even if [BASIC] >> [AV JACK] >> [OUT/♠] are set, then set to [OUT]. (-42-)
- Check the TV's input setting (input switch).
 (For more information, please read the operating instructions for the TV.)

■ To display the on-screen information on the TV

The information displayed on the LCD monitor or the viewfinder (operation icon, time code and mode indication, etc.), date and time can be displayed on the TV.

 
1 Press the [OSD] button on the remote control.



Press the button again to erase the OSD information.

Playing back card

• Set to Picture Playback Mode.



1 Operate with joystick.





◄ Plays back the previous picture.

Plays back the next picture.

►/■: Slide show (Plays back the still pictures on the card in order) start/stop

- While the data on a card are played back, do not operate the mode dial.
- When the access lamp is lit, do not insert or remove a card.
- It takes time to display the file depending on the number of pixels of the file.

- If you attempt to play back file recorded in a different format or file data is defective, the whole display becomes bluish and the "UNPLAYABLE CARD" indication may appear as warning.
- When playing back a file recorded on other equipment, the date and time display is different from when it was recorded.
- When playing back a picture recorded on other equipment, its size and that of this movie camera may appear differently.

■ To display multiple playback files Multiple files on the card (6 files on 1 screen) are displayed.

1 Move the [— ■/VOL+] lever to switch the images.



Towards [+]: Full-screen display (Displays 1 image.)

Towards [-]: Multi-screen display (Displays 6 files on 1 screen.)

- In the multi-screen display,
 - Move the joystick to select a file (The selected file will be encircled by a yellow frame) and press to determine it. The selected file is full-screen displayed.
 - If there are 7 files or more, then move the joystick. The next, or previous multi-screen will be displayed.

■ About the compatibility of still pictures

- The movie camera is compliant with the unified standard DCF (Design rule for Camera File system) established by JEITA (Japan Electronics and Information Technology Industries Association).
- The file format supported by this movie camera is JPEG. (Not all JPEG formatted files will be played back.)
- If an out-of-specs file is played back, the folder/ file name may not be displayed.
- The movie camera may degrade or not play back data recorded or created on another product and another product may degrade or not play back data recorded on the movie camera.

Deleting files recorded on a card

The deleted files cannot be restored.

- Set to Picture Playback Mode.
- Move the joystick left or right to select a file to delete.





- You can select a file in the multi-screen display.
 After selecting the file, press the joystick and display the operation icon.
- 2 Move the joystick down to select [前].





- 3 Move the joystick up or down in order to select [DELETE 1 FILE] and then press it.
- 4 When the confirming message appears, select [YES] and press the joystick.
 - In order to stop deletion, select [NO].

■ To delete all files

Thove the joystick down to select [点].





- 2 Move the joystick up or down in order to select [ALL FILES] and then press it.
- 3 When the confirming message appears, select [YES] and press the joystick.
- •In case of [ALL FILES], the deletion may take time if there are many files on the card.
- When "CARD FULL" is shown during recording, switch to the Picture Playback Mode and then delete unnecessary files.
- If there are not any file to delete, insert a new
- If files conforming to DCF standard are deleted, all the data related to the files will be deleted.

■ Deleting still picture files recorded on a card by other equipment

 A still picture file (other than JPEG) that cannot be played back on the movie camera may be erased.

Formatting a card

Please be aware that if a card is formatted, then all the data recorded on the card will be erased. Store important data on a personal computer, etc.

- Set to Picture Playback Mode.
- 1 Set [ADVANCE] >> [CARD FORMAT] >> [YES].
- 2 When the confirmation message appears, select [YES] and press the joystick in order to format the card.



- In order to stop formatting, select [NO].
- Normally, it is not necessary to format the card.
 If a message appears even though you insert and remove the card several times, format it.
- Cards formatted on other equipment such as personal computers cannot be used or recording takes longer than expected. We recommend formatting your card on this camera.

Protecting files on a card

Files recorded on a card can be locked so that they may not be deleted by mistake. (Even if the files are locked, they will be deleted if the card is formatted.)

- Set to Picture Playback Mode.
- 1 Set [BASIC] >> [PROTECT] >> [YES].
- 2 Move the joystick to select a file to be locked, and then press it.



- [Om] Indication ① appears and the selected file is locked. Press the joystick again, and the lock will be cancelled
- •2 or more files can be locked in succession.

■ To complete the settings

Press the [MENU] button.

Writing the printing data on a card (DPOF setting)

You can write the data of pictures to be printed, number of copies, and other information (DPOF data) onto the card.

- Set to Picture Playback Mode.
- 1 Set [ADVANCE] >> [DPOF SET] >> [SET].
- 2 Move the joystick to select a file to be set, and then press it.



- The number of prints 1 set to be in DPOF is displayed.
- 3 Move the joystick up or down in order to select the number of prints, and then press
 - You can select from 0 to 999. (Selected number of pictures can be printed as you set the number of prints with the printer supporting DPOF.)
 - •2 or more files can be set in succession.
- To complete the settings

Press the [MENU] button.

- DPOF setting made on another camera may not be recognised by this camera. Please perform the DPOF settings on your movie camera.
- To set so that all pictures are not printed

Select [CANCEL ALL] in Step 1.

■ What is DPOF?

DPOF stands for Digital Print Order Format. This enables the printing information to be added to the pictures on the card so that it can be used on a system supporting DPOF.

Edit mode

Recording from a tape onto a card

Still pictures can be recorded on a memory card from scenes that have already been recorded on a cassette.

- Set to Tape Playback Mode.
- Insert a tape which already has recorded contents and a card.
- 1 Start playback.





2 Pause at the scene you wish to record, and press the [PHOTO SHOT] button.




- Audio will not be recorded.
- The size of still pictures recorded on a card becomes [640]. (This is not mega pixel stillpicture recording.)
- If you press the [PHOTO SHOT] button without pausing, blurred pictures may be recorded.
- DV input and wide images recorded on a tape cannot be recorded on a card.

Copying onto a DVD recorder or a VCR (Dubbing)

Pictures recorded by the movie camera can be stored on a DVD-RAM or other such media. Refer to the instructions for the recorder.


- Place a recorded cassette in the movie camera, and an unrecorded DVD-RAM or cassette in the DVD recorder or VCR.
- 1 Connect the movie camera and the recorder.

Connecting with the AV cable

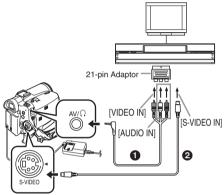

- Connect the movie camera and the recorder by using the AV cable 1.
- If the recorder has an S-Video terminal, then also connect an S-Video cable ② (optional). It allows you to copy clearer image.
- If your recorder is not equipped with AV Input Sockets, the 21-pin Adaptor (purchase separately) is necessary. Consult your dealer.

 Connecting with the optional DV cable (Only for equipment with a DV terminal)



- 2 Turn on the movie camera and set to Tape Playback Mode.
- 3 Select the input channel on the TV set and recorder.
- 4 Move the joystick up to select the [▶] icon to start playback.
 - The image and sound are reproduced.

 
- 5 Start recording.
- 6 Move the joystick down to select the [■] icon to stop playback.
- 7 Stop recording.
- For more information, refer to the operating instructions for your TV set and recorder.
- When you do not need functional indications or date and time indications, press the [OSD] button on the remote control for no indication. (When you connect the movie camera and a recorder with the DV cable, these indications may not appear.)
- When neither image nor sound from the movie camera is output to the TV set
- Check that the plugs are inserted as far as they go.
- Check the connected terminal.
- When no image is presented on the TV even if set [BASIC] >> [AV JACK] >> [OUT/♠], set to [OUT]. (-42-)

Using the DV Cable for Recording (Digital Dubbing)

By connecting other digital video equipment with DV terminal and the movie camera by using the DV cable VW-CD1E (optional) ①, high-image-quality dubbing can be done in digital format.

This model cannot be used as a Recorder.

- Set to Tape Playback Mode. (Player/ recorder)
- 1 Connect the movie camera and digital video equipment with the DV cable.



- 2 Start playback. (Player)
- 3 Start recording. (Recorder)
- 4 Stop playback. (Player)
- Do not plug or unplug the DV cable during dubbing, or the dubbing may not be completed properly.
- Even if you use a device equipped with DV terminals such as IEEE1394, you may not be able to perform digital dubbing in some cases.
 For more information, see the instructions for equipment connected.

- Regardless of the menu settings on the recorder, digital dubbing is carried out in the same mode as the [AUDIO REC] mode of the playback tape.
- The images on the recorder monitor may be disturbed, but it does not affect the recorded images.

Audio dubbing

You can add music or narration to the recorded cassette

- Set to Tape Playback Mode.
- 1 Insert an external microphone securely into the [REMOTE/MIC] terminal as far as it will go.

 


2 Find a scene that you want to add sound to, and press the [II] button on the remote control.






3 Press the [A.DUB] button on the remote control to make audio dubbing ready.





 4 Press the [II] button on the remote control to start audio dubbing.





- Talk into the microphone.
- 5 Press the [11] button on the remote control to stop audio dubbing.



 If a tape has a non-recorded portion when the tape is dubbed, images and sounds may be disturbed when this portion of the tape is played back.

■ Before recording with audio dubbing • Set to Tape Recording Mode.

- When you want to preserve the original sound taken during recording, set [SETUP] >> [AUDIO REC] >> [12bit] to take pictures. (When set [16bit], the sounds taken during recording are erased after recording with audio dubbing.)
- Set [BASIC] >> [REC SPEED] >> [SP] to take pictures.

To play back the sound recorded with audio dubbing

You can switch between the sound recorded with audio dubbing and the original sound.

Set [SETUP] >> [12bit AUDIO] >> [ST2] or [MIX].

[ST1]: It only plays back the original sound.

[ST2]: It only plays back the sound added by audio dubbing.

[MIX]: It simultaneously plays back the original sound and the sound added with audio dubbing.


■ To dub audio while listening to a pre-recorded sound

 When pausing the audio dubbing, set the [12bit AUDIO] on the [SETUP] Sub-Menu to [ST2] and you can check the pre-recorded sound.

Printing pictures by directly connecting to the printer (PictBridge)

To print pictures by directly connecting the movie camera to the printer, use a printer compatible with PictBridge. (Read the operating instructions for the printer.)

- Insert a card and set to Picture Playback Mode.
- 1 Connect the movie camera and the printer with the supplied USB cable.

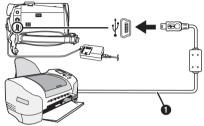

USB cable



- The [PictBridge] indication appears on the screen of the movie camera.
 (When the printer is being recognized, the [PictBridge] indication blinks.)
- When no card is inserted in the movie camera, the [PictBridge] indication does not appear.
 (You cannot print any pictures.)
- When the movie camera and the printer are not connected properly, the [PictBridge] indication keeps blinking. (It will blink for over approx.
 1 minute.) Connect the cable or check the printer.
- We recommend using the AC adaptor as the power supply.
- When images are displayed in multi-screen, they cannot be printed.

2 Select [SINGLE PRINT] or [DPOF PRINT].

- If there is no file with a DPOF setting, you cannot select [DPOF PRINT].
- When you select [DPOF PRINT] for printing, set the number of prints in DPOF setting.
- When [DPOF PRINT] is selected, print after you determine the paper size.

3 Move the joystick left and right to select a desired picture, and then press it.





- 4 Select the desired number of prints.
 - You can set up to 9 prints.
- 5 Select the setting for date printing.
 - If the printer is not capable of date printing, this setting is unavailable.
- 6 Select the paper size.

[STANDARD]: Size specific to the printer

[4×5 INCH]

[5×7 INCH]

[4×6 INCH]

[A4]

- You cannot set paper sizes not supported on the printer.
- 7 Set [PRINT] >> [YES] to start printing.
- When you stop printing halfway Move the joystick down.
- Avoid the following operations during printing.
 These operations disable proper printing.
 - Disconnecting the USB cable
 - Removing the card
 - Switching the mode dial
 - Turning off the power
- Check the settings for the paper size, quality of print, etc. on the printer.
- You cannot print pictures that cannot be played on the movie camera.

Menu

Menu list

Menu figures and illustrations are provided for easy-to-understand explanations, and so they are different from the actual menu indications.

■ ♣ [TAPE RECORDING MENU]



1) [BASIC] [SCENE MODE] -27-[REC SPEED] -19-[BLANK SEARCH] -21-[WIND CUT] -25-[CLOCK SET] -15-

2) [ADVANCE]
[PICT. QUALITY] -22[SIS] -26[CINEMA] -26[USB FUNCTION] (Refer to the operating instructions for PC connection.)
[D.ZOOM] -22[ZOOM MIC] -23[DATE/TIME] -42[INITIAL SET] -43-

3) [SETUP]
[FADE COLOUR] -25[AUDIO REC] -42[REC LAMP] -42[DISPLAY] -42[REMOTE] -17[BEEP SOUND] -42[LCD SET] -15[DEMO MODE] -43[AV JACK] -42[POWER SAVE] -42-

4) [LANGUAGE] -14-



1) [BASIC]
[DATE/TIME] -42[AV JACK] -42[USB FUNCTION] (Refer to the operating instructions for PC connection.)

2) [ADVANCE] [REC DATA] -42-[PICT. QUALITY] -22-[REPEAT PLAY] -31-

3) [SETUP]
[12bit AUDIO] -38[AUDIO OUT] -42[DISPLAY] -42[REMOTE] -17[LCD SET] -15[EVF SET] -15[POWER SAVE] -42-

4) [LANGUAGE] -14-

■ [CARD RECORDING MENU]



- 1) [BASIC] [SCENE MODE] -27-[PICT. QUALITY] -22-[PICTURE SIZE] -22-[SELF TIMER] -26-[CLOCK SET] -15-
- 2) [ADVANCE] [BURST MODE] -27-[SHTR EFFECT] -22-[DATE/TIME] -42-[INITIAL SET] -43-
- 3) [SETUP]
 [REC LAMP] -42[DISPLAY] -42[REMOTE] -17[BEEP SOUND] -42[LCD SET] -15[EVF SET] -15[POWER SAVE] -42-
- 4) [LANGUAGE] -14-

■ [PICTURE PLAYBACK MENU]



- 1) [BASIC] [DATE/TIME] -42-[PROTECT] -34-
- 2) [ADVANCE] [DPOF SET] -35-[CARD FORMAT] -34-
- 3) [SETUP] [DISPLAY] -42-[REMOTE] -17-[LCD SET] -15-[EVF SET] -15-[POWER SAVE] -42-
- 4) [LANGUAGE] -14-

Menus related to taking pictures

■ [DATE/TIME]

This switches between date and time indications.

- The movie camera automatically records the date and time of picture taking on the tape.
- You can also show or change the date/time indication by repeatedly pressing the [DATE/ TIME] button on the remote control.

■ [AUDIO REC]

Switches the audio (PCM audio) recording systems.

[12bit]: Records audio in "12 bit 32 kHz 4 tracks".
(The original audio signals can be kept after the other audio signals are dubbed.)

[16bit]: Records audio in "16 bit 48 kHz 2 tracks". Audio can be recorded in higher quality. (If audio signals are dubbed, then the original audio signals will be erased.)

■ [REC LAMP]

Set to [ON] and this turns the recording lamp on during recording, which indicates that recording is underway. Set to [OFF] and this does not turn on the lamp even when recording is underway.

■ [DISPLAY]

Set to [ON] and the display mode can be switched to all functions. Set to [OFF] and it can be switched to minimum display.

■ [BEEP SOUND]

Set to [ON] and confirmation/alarm beeps are issued as follows.

- 1 Beep
- When you start recording
- When you turn on the power
- 2 Beeps
- When you pause recording
- 2 Beeps for 4 times
- When a cassette with its erasure prevention tab set to [SAVE] is inserted, condensation occurs, and at other times. Check the sentence displayed on the screen.

■ [POWER SAVE]

ĪŌFF1:

When about 5 minutes passed without any operation, the standby mode automatically will be set. In the standby mode, [II] blinks and it takes time more than usual to start recording after you press the recording start/stop button.

[5 MINUTES]: When about 5 minutes passed without any operation, the movie camera automatically turns off to protect the tape or to prevent the battery from running down. When

you use the movie camera, turn it on again.

 In the following cases, the power may not turn off even when set

[POWER SAVE] >> [5 MINUTES].

- When connecting to the AC outlet (When using the AC adapter)
- When connecting the USB cable or the DV cable to a personal computer or other equipment
- When the PC mode

Menus related to playback

■ [AV JACK]

This switches among the output settings of the AV/headphone terminal.

[OUT/\(\hat{\cap}\)]: Automatically switches between AV and headphone output.

[OUT]: Use this setting when image or sound

is not output normally to the TV in $IOUT/\Omega 1$.

 •When using the headphone, set to [SETUP] or [BASIC] >> [AV JACK] >> [OUT/Ω]. If set to [OUT], you may hear noises on the right.

■ [REC DATA]

Set to [ON] and the settings (shutter speed, iris/gain values, and white balance settings (-28-), etc.) used during the recordings are displayed during playback.

- When the [AUTO/MANUAL/FOCUS] switch is set to [AUTO], the indication [AUTO] will appear.
- When there is no data, [---] appears on the display.
- If the camera data of the movie camera are played back on other equipment, the settings information is sometimes not displayed normally.

■ [AUDIO OUT]

This switches the sound to be played back.
[STEREO]: Stereo sound (main sound and sub

[L]: Left channel sound (main sound)
[R]: Right channel sound (sub sound)

Other menus

■ [INITIAL SET]

When there is a menu that cannot be selected depending on a combination of functions, set to [YES] for changing the menu settings back to the initial shipping condition.

(Language setting cannot be back to the initial shipping condition.)

■ [DEMO MODE]

If you set to [DEMO MODE] >> [ON] without inserting a cassette and a card, the movie camera is automatically set to the demonstration mode for introducing its functions. If any button is pressed or operated, the demonstration mode is cancelled. If no operations take place for approx. 10 minutes, the demonstration mode automatically starts. To terminate the demonstration mode, insert a cassette or a card, or set to [DEMO MODE] >> [OFF]. For normal use, set this function to [OFF].

Others

Indications

Various functions and the movie camera status are shown on the screen.

Basic indications

1777 Remaining battery power

0h00m00s00f: Time code

15:30:45: Date/Time indication

Recording indications

R0:45: Remaining tape time

 Remaining tape time is indicated in minutes. (When it reaches less than 3 minutes, the indication starts flashing.)

SP: Standard Play mode

(Recording speed mode) -19-

LP: Long Play mode

(Recording speed mode) -19-

Recording -20-II (Green): Recording pause -20-

■ (Green flash):

Standby mode

II (Red): Fade out

Recording check -21-**□**: CINEMA: Cinema mode -26-Digital zoom -22-Automatic mode -19-AUTO: Manual mode -27-MNL: Manual focus -29-MF:

5×: Zoom magnification indication

-22-

Back light mode -24-<u>کہ</u> : **(1**): Image stabilizer -26-Shutter speed -29-1/500 F2.4: F number -29-6dB: Gain value -29-Soft skin mode -24-**(**) **(P)**: Tele macro -25-**I**→W: Fade (White) -25-Fade (Black) -25-**■**→B:

赵: Colour night view function -24-0 Lux night view function -24-0Lux ঠi: Zoom microphone -23-Z00M (): **≆/**•: Wind noise reduction -25-

***** : Sports mode (Scene mode) -27-Portrait mode (Scene mode) -27-**)** : ٠: Low light mode (Scene mode)

-27-

Spotlight mode (Scene mode) 8 :

요~: Surf & snow mode (Scene mode)

-27-

AWB: Auto white balance -28-

Indoor mode (recording under -**ō**- :

incandescent lamp) -28-

Outdoor mode -28-按:

White balance adjustment mode **.**:

₩EB : WEB CAMERA mode (recording)

-39-

Playback indications

●: Recording underway

▶: Playback -31-11: Pause -31-

>>: Fast-forward/Cue playback -31-**44**: Rewind/Review playback -31-**] / 4 [**: Slow motion playback -31-**II▶/◀II**: Frame-by-frame playback -31-2×▶►: Variable-speed search -33-Repeat playback -31ბ>>:

WEB CAMERA mode (playback) ► WEB:

-39-

A.DUB ●: Audio dubbing -37-A.DUB **II**: Audio dubbing pause -37-B : Blank search -21-

12bit, 16bit: Audio recording mode -42**d**: Volume adjustment -31-

Card

P: Progressive photoshot mode -22-Continuous photoshot recording **-**:

ঠে: Self-Timer recording -26-

[*] (White): Photoshot mode While the card is being read

[*] (Green): While photoshot recording is **-[^**}

activated

(Red): Using the card that cannot be

recognized

Photoshot picture quality -22-***** (*****): 0: Remaining number of photoshot

pictures (When the remaining number of photoshot pictures reaches 0. the red indication

flashes.)

Slide show playback -33-**D**: PictBridge: PictBridge mode -38-Folder/File display 100-0001: No.00: File number

Number of DPOF Setting -35-1:

Lock setting -34-От : 640: [640×480] Image size [1520×1152] Image size 1520:

• For images not recorded with this movie camera, the size display is determined as follows according to the number of horizontal pixels.

2048 or more QXGA:

1600 or more, less than 2048 UXGA: SXGA: 1280 or more, less than 1600 640 pixels.)

Warning/alarm indications

If any one of the following indications lights up or flashes, please check the movie camera.

Confirmatory indications

A cassette with the accidental erasure prevention slider placed in the [SAVE] position is inserted.

No cassette is inserted.

[--]/图:

The built-in battery is low. -15-

The warning/alarm indication appears when you record yourself. Turn the LCD monitor towards the viewfinder and check the warning/alarm indication.

: No card is inserted.

REMOTE:

An incorrect remote control mode has been selected. -17-

തEND:

The tape came to the end during recording.

☼: The video heads are dirty. -51-

Textual indications

DEW DETECT/ EJECT TAPE:

Condensation has occurred. Take out the cassette and wait for a while. It takes some time until the cassette holder opens, but this is not a malfunction. -50-

LOW BATTERY:

The battery is low. Recharge it. -9-

NO TAPE:

No tape is inserted. -10-

TAPE END:

The tape came to the end during recording. CHECK REC TAB:

You are attempting to record pictures on a tape with the accidental erasure prevention slider placed in the [SAVE] position. You are attempting audio dubbing or digital

dubbing on a tape with the accidental erasure prevention slider placed in the [SAVE] position.

CHECK REMOTE MODE:

An incorrect remote control mode has been selected. This is only displayed at the first operation of the remote control after powering-on. -17-

WRONG TAPE FORMAT:

You are attempting to play back a tape

section that has been recorded with a different TV system. This cassette is incompatible.

UNPLAYABLE CARD:

You are attempting to play back data not compatible with this movie camera.

UNABLE TO A.DUB (LP RECORDED):

Audio dubbing cannot be performed because the original recording was in LP mode.

UNABLE TO A.DUB:

You are attempting to perform audio dubbing on a non-recorded tape.

COPY PROTECTED:

Images cannot be recorded correctly because the medium is protected by a copy guard.

CARD ERROR:

This card is not compatible with this movie camera.

You are attempting to format a failed card. It displays, when you attempt to insert the incompatible card to Card Slot.

NO CARD:

No card is inserted.

CARD FULL:

Card does not have sufficient memory remaining.

Select Picture Playback Mode and delete unnecessary files.

NO DATA:

There are not any recorded files on the card.

FILE LOCKED:

You are attempting to erase protected files.

CARD LOCKED:

The write protection switch on the SD Memory Card is set to [LOCK].

NEED HEAD CLEANING:

The video heads are dirty. -51-

PUSH THE RESET SWITCH:

An irregularity in the equipment has been detected. Press the [RESET] button (-6-). This may solve the problem.

CHANGE MODE TO USE USB:

The USB cable is connected to the movie camera in Card Recording Mode.

DISCONNECT USB CABLE:

You are attempting to turn the mode dial in PC mode with the USB cable connected to the movie camera. You are attempting to record pictures on a tape/card with the USB cable connected to the movie camera.

NO INK IN PRINTER:

There is no ink. Check the connected printer.

NO PAPER IN PRINTER:

There is no paper. Check the connected printer.

PRINTER ERROR:

Check the connected printer.

PC DOES NOT SUPPORT USB2.0:

The movie camera is connected to a personal computer that does not support USB2.0.

CAN NOT USE USB:

You are connecting the USB cable with the DV cable connected.

CHANGE TO MANUAL MODE:

You are attempting to select the item on the [SCENE MODE] when the [AUTO/ MANUAL/FOCUS] switch is set to [AUTO].

CAN NOT OPERATE (MOTION DV MODE):

You are attempting to change [D.ZOOM] setting during MotionDV Mode.

REVERSE THE LCD MONITOR:

At the time of 0 Lux night view mode, when LCD monitor is not reversed, it displays. When the LCD monitor is rotated by 180° towards the lens, the brightness of the LCD monitor cannot be adjusted.

Functions cannot be used simultaneously

Some functions in the movie camera are disabled or cannot be selected due to its specifications. The table below shows examples of functions restricted by conditions.

restricted by conditions.					
Functions	Conditions which disable the functions				
● Progressive	●When recording onto a tape and a card simultaneously ●When digital zoom (10× or higher) is used ●When the shutter speed is 1/750 or faster in Tape Recording Mode ●When the gain value is increased in Tape Recording Mode ●When the colour night view function is used ●When the portrait mode of the scene mode is used in Tape Recording Mode				
Digital zoomFade	When the Card Recording mode is used				
•Image stabilizer	When the Card Recording mode is used When the colour night view function is used				
Backlight compensation	When the iris/gain is set When the colour night view function is used				
Soft skin Tele-macro Recording check	While recording to a tape				
Colour Night View	While recording to a tape When the Card Recording mode is used				
Continuous Photoshot	When [PICTURE SIZE] is set to other than [640]				
Zoom microphone Wind noise reduction	• An external microphone is used				

•Scene mode	When setting the [AUTO/MANUAL/FOCUS] switch to [AUTO] When the colour night view function is used
Change of white balance	●When digital zoom (10× or higher) is used •When the colour night view function is used •When a menu is displayed
 Adjusting the shutter speed, iris/gain 	When the colour night view function is used When the scene mode is used
Variable-speed search	During repeat playback
Deleting files	●When the write protect switch on the card is set to [LOCK] •When the file is protected
● Formatting	When the write protect switch on the card is set to [LOCK]
Audio dubbing	The section of a tape recorded in LP mode The blank section of a tape

Before requesting repair (Problems and solutions)

Power/Body

- 1: The movie camera power cannot be turned on
- Is the battery fully charged? Use a fully charged battery.
- The battery protection circuit may have operated. Attach the battery to the AC adaptor for 5 to 10 seconds. If the movie camera still cannot be used, the battery is faulty.
- 2: The movie camera power is turned off automatically.
- If you set [POWER SAVE] to [5 MINUTES] and
 do not operate the movie camera for about
 5 continuous minutes, the power is
 automatically turned off for tape protection and
 power conservation. To resume recording, turn
 the [OFF/ON] switch to [OFF]. Then turn it to
 [ON] again. (-42-)
- 3: The movie camera power does not stay on long enough.
- Is the battery low? If the remaining battery power indication is flashing or the message "LOW BATTERY" is displayed, the battery has run down. Charge the battery or attach a fully charged battery. (-9-)
- Has condensation occurred? When you carry
 the movie camera from a cold place into a
 warm place, condensation may occur inside it.
 If so, the power is turned off automatically,
 disabling all operations except for taking
 cassettes out. Wait until the condensation
 indication disappears. (-50-)
- 4: Battery runs down quickly.
- Is the battery fully charged? Charge it with the AC adaptor. (-9-)
- Are you using the battery in an extremely cold place? The battery is affected by ambient temperature. In cold places, the operating time of the battery becomes shorter.
- Has the battery worn out? The battery has a limited life. If the operating time is still too short even after the battery is fully charged, depending on the usage, the battery has worn out and can no longer be used.
- 5: The movie camera cannot be operated though powered up.
 The movie camera does not operate normally.
- Remove the cassette and then press the [RESET] button. (-49-) If normal conditions are not restored yet, turn off the power. Then, about 1 minute later, turn on the power again. (Conducting the above operation when the

access lamp is on may destroy the data on the card.)

6: The cassette cannot be removed.

- Does the power lamp comes on when opening the cassette cover? (-12-) Make sure that the battery and the AC adaptor are properly connected. (-9-)
- Is the battery in use discharged? Charge the battery and remove the cassette.
- Close the cassette cover completely, and fully open it again. (-10-)

7: No operation other than cassette removal can be performed.

 Has condensation occurred? Wait until the condensation indication disappears, (-50-)

8: The remote control does not function.

- Has the button-type battery of the remote control run out? Replace it with a new buttontype battery. (-16-)
- Is the setting on the remote control correct? If the setting on the remote control is not in agreement with the [REMOTE] setting on the movie camera, the remote control does not operate. (-17-)

Recording

- 1: Recording does not start although power is supplied to the movie camera and the cassette is correctly inserted.
- Is the accidental erasure prevention slider on the cassette open? If it is open (set to [SAVE]), recording cannot be performed. (-11-)
- Is the tape wound to the end? Insert a new cassette.
- Is the recording mode set? When in the playback mode, recording cannot be performed. (-19-)
- Has condensation occurred? No operation other than cassette removal can be performed when condensation occurs. Wait until the condensation indication disappears. (-50-)
- Is the cassette cover open? If the cover is open, the movie camera may not operate normally. Close the cassette cover. (-10-)

2: The screen has changed suddenly.

 Has the demonstration started? In the Tape Recording mode, if you set [DEMO MODE] >> [ON] without inserting a cassette and a card, the demonstration starts. For normal use, set this function to [OFF]. (-43-)

3: A cassette cannot be inserted.

 Has condensation occurred? Wait until the condensation indication disappears.

4: Auto focus function does not work.

 Is manual focus mode selected? If auto focus mode is selected, focus is automatically adjusted.

- There are some recording subjects and surroundings for which the auto focus does not operate correctly. (-54-) If so, use the manual focus mode to adjust the focus. (-29-)
- Is the colour night view function set? When the colour night view function is working, focusing shifts into the manual mode.

Indications

- 1: A sentence is displayed in red or yellow in the screen centre.
- Read the contents and respond to them.
 (-45-)

2: The time code becomes inaccurate.

 The time code indication counter may not be constant in the reversed slow-motion playback, but this is not a malfunction

3: The remaining tape time indication disappears.

- The remaining tape time indication may disappear temporarily during frame-by-frame playback or other operation. If you continue ordinary recording or playback, the indication is restored.
- 4: The remaining tape time Indication does not match the actual remaining tape time.
- If scenes of less than 15 seconds are continuously recorded, the remaining tape time cannot be correctly displayed.
- In some cases, the remaining tape time indication may show remaining tape time that is 2 to 3 minutes shorter than the actual remaining tape time.
- 5: A function indication such as mode indication, remaining tape time indication, or time code indication is not shown.
- If you set [SETUP] >> [DISPLAY] >> [OFF], indications other than the tape running condition, warning, and date indications disappear.

Playback (Sound)

- 1: Sound is not played back from the built-in speaker of the movie camera or the headphones.
- Is the volume too low? During playback, push the [— 1 / VOL+] lever to display the volume indication and adjust it. (-31-)
- 2: Different sounds are reproduced at the same time.
- Have you set [SETUP] >> [12bit AUDIO] >>
 [MIX]? If you set [AUDIO REC] >> [12bit] and
 dub audio to a recorded tape, you can hear the
 sound on recording and the sound dubbed at a

- later time. To hear the sounds separately, set to [ST1] or [ST2]. (-38-)
- Have you set [SETUP] >> [AUDIO OUT] >>
 [STEREO] and reproduced a picture containing
 the main sound and sub sound? Set to [L] to
 hear main sound, and set to [R] to hear the sub
 sound. (-42-)

3: Audio dubbing cannot be performed.

- Is the accidental erasure prevention slider on the cassette open? If it is open (set to [SAVE]), audio dubbing cannot be performed. (-11-)
- Are you attempting to edit a tape portion that was recorded in LP mode? LP mode does not allow audio dubbing. (-19-)

4: The original sound was erased when audio dubbing was performed.

 If you perform audio dubbing on a recording made in [16bit] mode, the original sound will be erased. If you wish to preserve the original sound, be sure to select [12bit] mode when recording.

5: Sounds cannot be played back.

- Although a cassette with no audio dubbing is being played, have you set [SETUP] >> [12bit AUDIO] >> [ST2]? To play back a cassette with no audio dubbing, set [12bit AUDIO] >> [ST1]. (-38-)
- Is the variable speed search function working? Press the [VAR. SEARCH] button on the remote control to cancel the variable speed search function. (-33-)

6: Noise is heard from the right headphone.

Have you set [BASIC] >> [AV JACK] >> [OUT]?
 When you use the headphones, set to [OUT/Ω].

Playback (Pictures)

- 1: Mosaic-pattern noise appears on images during cue or review playback.
- This phenomenon is characteristic of digital video systems. It is not a malfunction.
- 2: Horizontal stripes appear on images during cue and review playback.
- Horizontal stripes may appear depending on the scene, but this is not a malfunction.
- 3: Although the movie camera is correctly connected to a TV, playback images cannot be seen.
- Have you selected video input on the TV?
 Please read the operating instructions of your
 TV and select the channel that matches the
 input terminals used for the connection.

4: Playback picture is not clear.

 Are the heads of the movie camera dirty? If the heads are dirty, playback image cannot be

- clear. Clean the heads by using the head cleaner for digital video (optional). (-51-)
- If the terminal for the AV cable is soiled, noises may appear on the screen. Wipe the soil off the terminal with a soft cloth, and then connect the cable to the AV terminal.
- Is a picture containing a copyright protection signal (copy guard) being recorded? When a protected picture is played back by the movie camera, mosaic-like patterns appear on the picture.

Card

1: Recorded pictures are not clear.

Have you set [BASIC] >> [PICT. QUALITY] >>
 [_**_]? If recording is done with it set to [_**_],
 pictures with fine details may include a mosaiclike pattern. Set [PICT. QUALITY] >> [***_].
 (-22-)

2: A file recorded on a card cannot be deleted.

- Is the file locked? Locked files cannot be deleted. (-34-)
- For the SD Memory Card, if its write protect switch is set to [LOCK], then deletion is disabled. (-12-)

3: Photoshot playback images do not look normal.

- The picture may be damaged. In order to prevent the loss of image data, backing up on a cassette or a personal computer is recommended.
- 4: Even if a card is formatted, it cannot be used.
- Either the movie camera or the card may be damaged. Please consult a dealer.

5: During playback, [UNPLAYABLE CARD] is displayed.

 The image was either recorded in a different format, or data is damaged.

Others

1: The indication disappears, the screen is frozen, or no operation can be performed.

 Turn off the power to the movie camera. If the power cannot be turned off, press the [RESET] button, or detach the battery or AC adaptor and then reattach it. After that, turn on the power again. If normal operation is still not restored, detach the power connected, and consult the dealer who you purchased the movie camera from.

2: "PUSH THE RESET SWITCH" is displayed.

 An irregularity in the movie camera has been automatically detected. Remove the cassette or the card for data protection and then press the [RESET] button with the boss **(A)**. The movie camera will be activated.



- If you do not press the [RESET] button, the power to the movie camera is turned off automatically about 1 minute later.
- Even after you press the [RESET] button, the indication may still appear repeatedly. If so, the movie camera needs repair. Detach the power connected, and consult the dealer who you purchased the movie camera from. Do not attempt to repair the appliance by yourself.
- 3: Even if connected by the USB cable, the movie camera is not recognized by the PC.
- Is the USB driver installed? For information, refer to the operating instructions for PC connection (separate volume).
- 4: When the USB cable is disconnected, an error message will appear on PC.
- To disconnect the USB cable safely, doubleclick the [] icon in the task tray and follow the instructions on the screen.
- 5: The movie camera malfunctions on editing, dubbing from digital video equipment, or using "MotionDV STUDIO 5.3E LE for DV".
- If a tape is recorded in multiple modes such as SP and LP (recording mode), 12bit and 16bit (sound recording mode), normal and wide, recorded and unrecorded parts, the movie camera may malfunction at a point where the mode switches. When you edit, do not record in multiple modes.
- 6: The warning/alarm indication [] appears when the camera is operated in the WEB camera mode.
- Did you press the menu button or the recording start/stop button? You cannot use the menu or record onto the tape/card in the WEB camera mode.
- Is the setting for the remote control correct?Did you attempt to play a tape without inserting
- Did you attempt to play a tape without inserting it? Insert a tape.
- Did you attempt to play a tape with copyright protection (copy guard)? Pictures of the tape with copyright protection (copy guard) cannot be displayed on the PC. (The audio of the tape can be played.)
- Is the video stream driver installed? For details, refer to the operating instructions for PC connection.

Cautions for Use

■ About condensation

If you turn the movie camera on when condensation occurs on the head or the tape, condensation Indication [] (yellow or red) is displayed on the viewfinder or the LCD monitor and the messages [] DEW DETECT] or [] EJECT TAPE] (only when the tape is inserted) appear. If so, follow the procedure below

in yellow:

Dews are slightly adhering on the head or the tape.

in red:

Dews are adhering on the head or the tape.

- 1 Remove the tape if it is inserted.
 - It takes about 20 seconds to open the cassette holder. This is not a malfunction.
- 2 Leave the movie camera with the cassette cover closed to cool or warm it to the ambient temperature.

When [] in yellow

- You cannot use the Tape Recording/ Playback Mode. Leave the movie camera for about 30 minutes.
- However, you can use the Card Recording Mode or Picture Playback Mode when a cassette is not inserted.

When [] in red

- •The power Lamp blinks for about 1 minute and then the movie camera automatically turns off. Leave it for about 2 to 3 hours.
- 3 Turn the movie camera on again, set it to the Tape Recording/Playback Mode and then check if the condensation indication disappears.

Especially in cold areas, moisture may be frozen. If so, it may take more time before the condensation indication disappears.

Watch for condensation even before the condensation Indication is displayed.

 The condensation indication may not appear depending on circumstances. When condensation occurs on the lens or the movie camera, it may also occur on the head and the tape. Do not open the cassette cover.

When the lens is fogged:

Set the [OFF/ON] switch to [OFF] and leave the movie camera in this condition for about 1 hour. When the lens temperature becomes close to the ambient temperature, the fogging disappears naturally.

About dirty heads

If video heads (the parts that closely contact with the tape) become dirty, normal recording and playback are not properly performed. Clean the heads with the digital video head cleaner.

- Insert the head cleaner into the movie camera, set it to the Tape Playback Mode, and play it back for about 10 to 20 seconds. (If you do not stop the playback, it automatically stops about 30 seconds later.)
- We recommend cleaning the heads periodically.
 If the heads become dirty, "NEED HEAD CLEANING" appears during recording. During playback, moreover, the following symptoms appear.
 - Mosaic-like noise appears partially or the sound is interrupted.
 - Black or blue mosaic-like horizontal stripes appear.

When normal playback cannot be performed even after the head cleaning

One possible cause is that normal recording could not be performed because the heads were dirty at the time of recording. Clean the heads, and perform recording and playback again. If normal playback can be performed, the heads are clean. Before an important recording, be sure to conduct a test recording to make sure that normal recording can be performed.

- If the heads become dirty soon after cleaning, the problem may be attributable to the tape. If so, try another cassette.
- During playback, the picture or sound may be interrupted momentarily, but this is not a malfunction of the movie camera. (One possible cause is that the playback is interrupted by dirt or dust that momentarily adheres to the heads.)

About the movie camera

 When the movie camera is used for a long time, the camera body becomes warm, but this is not a malfunction.

Keep the movie camera away from magnetized equipment such as a cellular phones, microwave ovens, TVs, and video game equipment.

- If you use the movie camera on or near a TV, images or sounds may be disturbed due to electromagnetic wave radiation.
- Recordings on the tape may be damaged, or images may be distorted, by strong magnetic fields created by speakers or large motors.
- Electromagnetic wave radiation generated by digital circuits including microprocessor may

- adversely affect the movie camera, causing the disturbance of images and sounds.
- If the movie camera is affected by such equipment and does not function properly, turn off the movie camera power and detach the battery or AC adaptor. Then, connect the battery or AC adaptor again and turn on the movie camera power.

Do not use your movie camera near radio transmitters or high-voltage cables.

 If you record pictures near radio transmitters or high-voltage cables, recorded images or sounds may be adversely affected.

Do not spray insecticides or volatile chemicals onto the movie camera.

- If the movie camera is sprayed with such chemicals, the camera body may become deformed and the surface finish may peel off.
- Do not keep rubber or plastic products in contact with the movie camera for a long time. When you use your movie camera in a sandy or dusty place such as on a beach, do not let sand or fine dust get into the body and terminals of the movie camera. Also, protect the movie camera from getting wet.
- Sand or dust may damage the movie camera or cassette. (Care should be taken when inserting and removing a cassette.)
- If sea water splashes onto the movie camera, wet a soft cloth with tap water, wring it well, and use it to wipe the camera body carefully. Then, wipe it again thoroughly with a soft dry cloth.

While carrying the movie camera, do not drop or bump it.

 A strong impact on the movie camera may break its housing, causing it to malfunction.
 Do not use benzine, paint thinner or alcoho

Do not use benzine, paint thinner or alcohol for cleaning the movie camera.

- Before cleaning, detach the battery or pull out the AC mains lead from the AC mains socket.
- The camera body may be discoloured and the surface finish may peel off.
- Wipe the movie camera with a soft dry cloth to remove dust and fingerprints. To remove stubborn stains, wring well a cloth that is soaked in a neutral detergent diluted with water and wipe the movie camera with it. Afterwards, wipe it with a dry cloth.
- When you use a chemical dust cloth, follow the instructions.

Do not use this movie camera for surveillance purposes or other business use.

 If you use the movie camera for a long time, the internal temperature increases and, consequently, this may cause malfunction. This movie camera is not intended for business use.

About the battery

The battery used in the movie camera is a rechargeable lithium ion battery. This battery is susceptible to temperature and humidity, and the effect of temperature increases with increasing or decreasing temperature. In the low temperature range, the fully charged indication may not appear, or the low battery indication may appear about 5 minutes after the start of use. At high temperature, moreover, the protection function may work, disabling use of the movie camera.

Be sure to detach the battery after use

• If the battery is left attached to the movie camera, a minute amount of current is consumed even when the movie camera power is [OFF]. If the battery is left attached to the movie camera for a long time, over-discharge takes place. The battery may become unusable after it is charged.

Prepare spare batteries when going out for recording.

- Prepare batteries appropriate to 3 to 4 times the period during you want to record pictures in. In cold places such as a ski resort, the period during which you can record pictures is shortened.
- When you travel, do not forget to bring an AC adaptor so that you can recharge the batteries at your destination.

If you drop the battery accidentally, check to see if the terminals are deformed.

 Attaching a deformed battery to the movie camera or AC adaptor may damage the movie camera or AC adaptor.

After use, be sure to take the cassette out and detach the battery from the movie camera or pull out the AC mains lead from AC mains socket.

- The battery should be stored in a cool place free from humidity, with as constant temperature as possible. (Recommended temperature: 15°C to 25°C, Recommended humidity: 40% to 60%)
- Extremely high temperatures or low temperatures will shorten the life of the battery.
- If the battery is kept in a high-temperature, highhumidity, or oily-smoky places, the terminals may rust and cause malfunctions.
- To store the battery for a long period of time, we recommend you charge it once every year and store it again after you have completely used up the charged capacity.
- Dust and other matter attached to the battery terminals should be removed.

Do not throw old battery into fire.

- Heating a battery or throwing it into a fire may result in an explosion.
- If the operating time is very short even after the battery has been recharged, the battery has worn out. Please purchase a new battery.

■ About the AC adaptor

- If the battery is warm, charging requires more time than normal.
- If the temperature of the battery is extremely high or extremely low, the [CHARGE] lamp may continue flashing, and the battery may not be charged. After the battery temperature has decreased or increased sufficiently, recharging starts automatically. So, wait for a while. If the lamp still continues flashing even after the recharging, the battery or AC adaptor may be faulty. If so, please contact a dealer.
- If you use the AC adaptor near a radio, radio reception may be disturbed. Keep the AC adaptor 1 metre or more away from radio.
- When using the AC adaptor, it may generate whirring sounds. However, this is normal.
- After use, be sure to pull out the AC mains lead from the AC mains socket. (If they are left connected, a minute amount of current is consumed.)
- Always keep the electrodes of the AC adaptor and battery clean.

About the cassette

Never place the cassette in a high temperature place.

 The tape may be damaged, producing mosaic-like noise at the time of playback.

When storing the cassette after use, be sure to rewind the tape to the beginning and take it out.

- If the cassette is left for more than 6 months (depending on the storage condition) in the movie camera or stopped midway, the tape may sag and be damaged.
- Once every 6 months, wind the tape to the end and then rewind it to the beginning. If the cassette is left for 1 year or longer without winding or rewinding, the tape may be deformed by expansion or shrinkage attributable to temperature and humidity. The wound tape may stick to itself.
- Dust, direct sunlight (ultraviolet rays), and humidity may damage the tape. Such usage may cause damage to the movie camera and the heads.
- After use, be sure to rewind the tape to the beginning, put the cassette in the case to protect it from dust, and store it upright.

Keep the cassette away from strong magnetism.

 Apparatuses using magnets such as magnetic necklaces and toys have magnetic force that is stronger than expected, and they may erase the contents of a recording or may increase noise.

About the card

When inserting or removing the card, always set the [OFF/ON] switch to [OFF].

When the access lamp is illuminated (During access to the card), do not open the card slot cover to pull out the card, turn off the power, or cause any vibrations or impacts.

Do not leave the card in places where there is high temperature or direct sunlight, or where electromagnetic waves or static electricity are easily generated. Moreover, do not fold or drop the card, and do not strongly vibrate it.

• The card may break or the contents of the card may be destroyed or erased.

After use, be sure to remove the card from the movie camera for storage.

- After use, or when storing or carrying the card, put it in the storage case.
- Do not allow dust, water, or foreign substances to adhere to the terminals on the back of the card. Moreover, do not touch the terminals with your hand.

■ Folder structure of the card The folder structure of the card formatted by the movie camera will be displayed on the PC as the illustration below.



- Up to 999 pictures can be recorded on 100CDPFP folder etc.
- Files with the DPOF settings can be recorded on MISC folder.

■ LCD monitor/viewfinder

LCD monitor

- When the LCD monitor gets dirty, wipe it with a dry soft cloth.
- In a place with drastic temperature changes, condensation may form on the LCD monitor.
 Wipe it with soft dry cloth.
- If your movie camera is extremely cold, the LCD monitor is slightly darker than usual immediately after you turn the power on. However, as the internal temperature increases, it goes back to normal brightness.

Extremely high precision technology is employed to produce the LCD monitor screen featuring a total of approximately 113,000 pixels. The result is more than 99.99% effective pixels with a mere 0.01% of the pixels inactive or always lit. However, this is not a malfunction and does not affect the recorded picture.

Viewfinder

Extremely high precision technology is employed to produce the viewfinder screen featuring a total of approximately 113,000 pixels. The result is more than 99.99% effective pixels with a mere 0.01% of the pixels inactive or always lit. However, this is not a malfunction and does not affect the recorded picture.

 
■ Periodical check-ups

• To maintain the highest image quality, we recommend replacing worn parts such as heads after approx. 1000 hours of use. (This, however, depends on operating conditions including temperature, humidity and dust.)

Explanation of terms

■ Automatic white balance

White balance adjustment recognizes the colour of light and adjusts so the white colour will become a pure white. The movie camera determines the hue of light that comes through the lens and white balance sensor, thereby judging the recording condition, and selects the closest hue setting. This is called automatic white balance adjustment. However, since the movie camera only stores white colour information under several light sources, automatic white balance adjustment does not function normally under the other light sources.



Outside of the effective range of automatic white balance adjustment, the image will become reddish or bluish. Even within the effective range of automatic white balance adjustment, the automatic white balance adjustment may not function properly if there is more than one light source. For light outside the functional auto white balance adjustment range, use the manual white balance adjustment mode.

- The effective range of automatic white balance adjustment on this movie camera
- 2) Blue sky
- 3) TV screen
- 4) Cloudy sky (rain)
- 5) Sunlight
- 6) White fluorescent lamp
- 7) 2 hours after sunrise or before sunset
- 8) 1 hour after sunrise or before sunset
- 9) Halogen light bulb
- 10) Incandescent light bulb
- 11) Sunrise or sunset
- 12) Candlelight

■ White balance

The image recorded by the movie camera may become bluish or reddish under the influence of

light sources. To avoid such phenomena, adjust the white balance.

White balance adjustment determines the white colour under different light sources. By recognizing which is the white colour under sunlight and which is the white colour under a fluorescent lamp, the movie camera can adjust the balance among the other colours. Since white colour is the reference of all colours (light), the movie camera can record pictures in a natural hue if it can recognize the reference white colour.

■ Auto focus

Auto focus automatically moves the focusing lens forward and backward inside the movie camera to bring the subject into focus.

Auto focus has the following characteristics.

- Adjusts so that the vertical lines of a subject are seen more clearly.
- Attempts to bring an object with higher contrast into focus.
- Focuses on the screen centre only.

Due to these characteristics, auto focus does not work correctly in the following situations. Record pictures in the manual focus mode.

Recording a subject with one end located closer to the movie camera and the other end farther away from it

 As auto focus adjusts at the centre of an image, it may be impossible to focus on a subject that is located in both the foreground and background.

Recording a subject behind dirty or dusty glass

 The subject behind the glass will not be focused because the focus is on the dirty glass.

Recording a subject that is surrounded by objects with glossy surfaces or by highly reflective objects

 The recording subject may become blurry because the movie camera focuses on the objects with glossy surfaces or on highly reflective objects.

Recording a subject in dark surroundings

 The movie camera cannot focus correctly because the light information that comes through the lens decreases considerably.

Recording a fast-moving subject

 As the focus lens-inside moves mechanically, it cannot keep up with a fast-moving subject.

Recording a subject with little contrast

 A subject with little contrast, such as a white wall, may become blurry because the movie camera achieves focus based upon the vertical lines of an image.

Specifications

Specifications

Digital Video Camera

Information for your safety

Power source:

DC 7.9/7.2 V

Power consumption:

Recording

3.1 W (When using viewfinder)

3.4 W (When using LCD monitor)

Recording format:

Mini DV (Consumer-use digital video SD format)

Tape used:

6.35 mm digital video tape

Recording/playback time:

SP: 80 min; LP: 120 min (with DVM80)

Recording system:

Digital component

Television system:

CCIR: 625 lines, 50 fields PAL colour signal

Audio

Recording system:

PCM digital recording

16 bit (48 kHz/2ch), 12 bit (32 kHz/4ch)

Image sensor:

1/6-inch 3CCD image sensor

(Effective pixels: moving picture/340 K×3, still picture/340 K×3, Total: 540 K×3)

Lens:

Auto Iris, F1.8, Focal length; 2.45-24.5 mm, Macro (Full range AF)

Filter diameter:

37 mm

Zoom:

10:1 Power zoom

Monitor:

2.5-inch LCD

Viewfinder:

Colour electronic viewfinder

Microphone: Stereo (with a zoom function)

1 round speaker Ø 20 mm

Standard illumination:

1.400 lx

Minimum required illumination:

1 lx (Colour Night View Mode)

Video output level:

1.0 Vp-p. 75 ohm

S-Video output level:

Y Output: 1.0 Vp-p, 75 ohm

C Output: 0.3 Vp-p, 75 ohm

Audio output level (Line):

316 mV, 600 ohm

Mic input:

Mic sensitivity -50 dB (0 dB=1 V/Pa, 1 kHz) (Stereo mini jack)

USB:

Card reader/writer function, USB 2.0 compliant

(Hi-Speed)

No copyright protection support

PictBridge-compliant

Digital interface:

DV output terminal (IEEE1394, 4-pin)

Dimensions:

Approx. 76 mm (W) \times 77 mm (H) \times 120 mm (D)

Weight:

Approx. 420 g (without supplied battery, DV cassette and lens cap)

Approx. 520 g (with supplied battery, DV cassette and lens cap)

Operating temperature:

0°C-40°C Operating humidity:

10%-80%

Card memory functions

Recording media:

SD Memory Card (32 MB/64 MB/128 MB/256 MB/ 512 MB/1 GB)

Still picture recording file format:

JPEG (Design rule for Camera File system, based on Exif 2.2 standard), DPOF corresponding

Still picture size:

Mega pixel recording:

1520×1152

VGA recording: 640×480

WEB camera

Compression:

Motion JPEG

Image size:

320×240 pixels (QVGA)

Frame rate:

Approx. 6 fps

AC adaptor

Information for your safety

Power source:

AC 110-240 V, 50/60 Hz

Power consumption:

19 W

DC output:

DC 7.9 V, 1.4 A (Movie camera operation) DC 8.4 V, 0.65 A (Battery charging)

Dimensions:

61 mm (W) ×32 mm (H) ×91 mm (D)

Weight:


Approx. 110 g

Weight and dimensions are approximate values. Specifications may change without prior notice.

Maximum number of still pictures recordable on an SD Memory Card (optional)

PICTURE SIZE	[640]		[1520]	
PICT. QUALITY	ı		ı	
32 MB	220	440	32	53
64 MB	440	880	68	110
128 MB	880	1760	130	210
256 MB	1760	3520	272	437
512 MB	3520	7040	540	868
1 GB	7040	14080	1082	1739

- The numbers shown in the table are approximations.
- These figures vary depending on the subject being photographed.

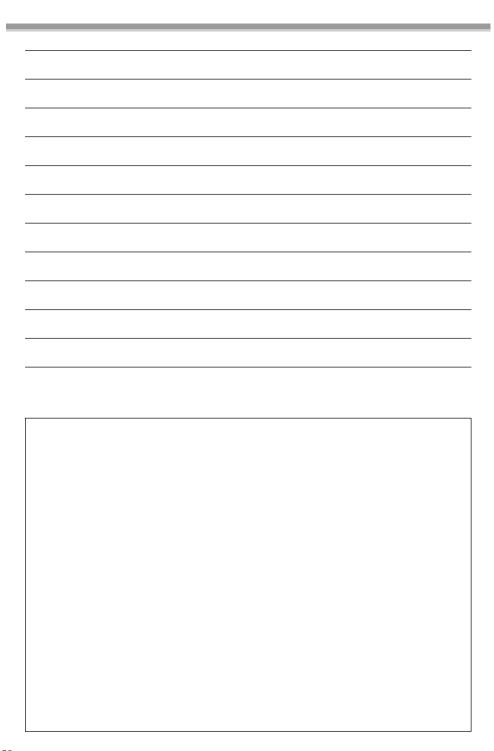

Index

Numerics	
0 Lux Night View Function	24
■ A	
AC Adaptor9	, 52
Aperture	
Audio Dubbing	37
■B	٠.
Backlight Compensation	
Blank Search	
C	
Card Playback	33
Charging the Battery	9
Cinema Function	26
Colour Night View Function	24
Condensation	
Continuous Photoshot	27
D	
Date/Time Setting	
Digital Dubbing	
Digital Zoom	22
Dubbing	
■ E	50
Erasure Prevention Slider	4.4
	11.1
	11
■F	
F Fade	25
Fade	25 34
F Fade	25 34 31
Fade Formatting Frame-by-frame playback Free Style Remote Control	25 34 31 17
F Fade	25 34 31 17
F Fade Formatting Frame-by-frame playback Free Style Remote Control LCD Monitor8 Low Light Mode	25 34 31 17
F Fade Formatting Frame-by-frame playback Free Style Remote Control LCD Monitor	25 34 31 17 , 53
F Fade Formatting Frame-by-frame playback Free Style Remote Control L LCD Monitor Low Light Mode M Manual Focus	25 34 31 17 , 53 27
F Fade Formatting Frame-by-frame playback Free Style Remote Control L LCD Monitor Low Light Mode M Manual Focus Mode Dial	25 34 31 17 , 53 27
F Fade Formatting Frame-by-frame playback Free Style Remote Control L LCD Monitor Low Light Mode M Manual Focus Mode Dial	25 34 31 17 , 53 27
F Fade Formatting Frame-by-frame playback Free Style Remote Control L LCD Monitor Low Light Mode M Manual Focus Mode Dial P Photoshot	25 34 31 17 , 53 27 29 12
F Fade Formatting Frame-by-frame playback Free Style Remote Control LCD Monitor	25 34 31 17 , 53 27 29 12
F Fade Formatting Frame-by-frame playback Free Style Remote Control L LCD Monitor	25 34 31 17 , 53 27 29 12
F Fade Formatting Frame-by-frame playback Free Style Remote Control LCD Monitor	25 34 31 17 , 53 27 29 12
F Fade Formatting Frame-by-frame playback Free Style Remote Control L LCD Monitor	25 34 31 17 , 53 27 29 12
F Fade Formatting Frame-by-frame playback Free Style Remote Control L LCD Monitor N Low Light Mode M Manual Focus Mode Dial Photoshot Portrait Mode Q Quick Start R Recording Check	25 34 31 17 , 53 27 29 12 21
F Fade Formatting Frame-by-frame playback Free Style Remote Control L LCD Monitor M Manual Focus Mode Dial Photoshot Portrait Mode Quick Start Recording Check Recording Speed Remaining Tape Time	25 34 31 17 , 53 27 29 12 21 27
F Fade Formatting Frame-by-frame playback Free Style Remote Control L LCD Monitor M Manual Focus Mode Dial Photoshot Portrait Mode Quick Start R Recording Check Recording Speed Remote Control	25 34 31 17 , 53 27 29 12 21 27 23 21 19 44
F Fade Formatting Frame-by-frame playback Free Style Remote Control L LCD Monitor M Manual Focus Mode Dial Photoshot Portrait Mode Quick Start Recording Check Recording Speed Remaining Tape Time	25 34 31 17 , 53 27 29 12 21 27 23 21 19 44

■ S	
Scene mode	27
Self-Recording	23
Self-timer Recording	26
Shutter Speed	29
Slow Motion Playback	31
Soft Skin Mode	24
Sound Volume	31
SP/LP Mode	19
Sports Mode	27
Spotlight Mode	27
Surf & Snow Mode	27
T	
Tele-Macro Function	25
V	
Variable Speed Search	33
Video Head Clogging	51
Viewfinder9,	
W	
White Balance	28
■ Z	
Zoom	22
Zoom Microphone	



VQT0N57 F1204Ke0 (10000 A)

