


Digital Palmcorder[®]

Panasonic[®]

Digital Video Camcorder
Operating Instructions

Model No. **PV-DV221**

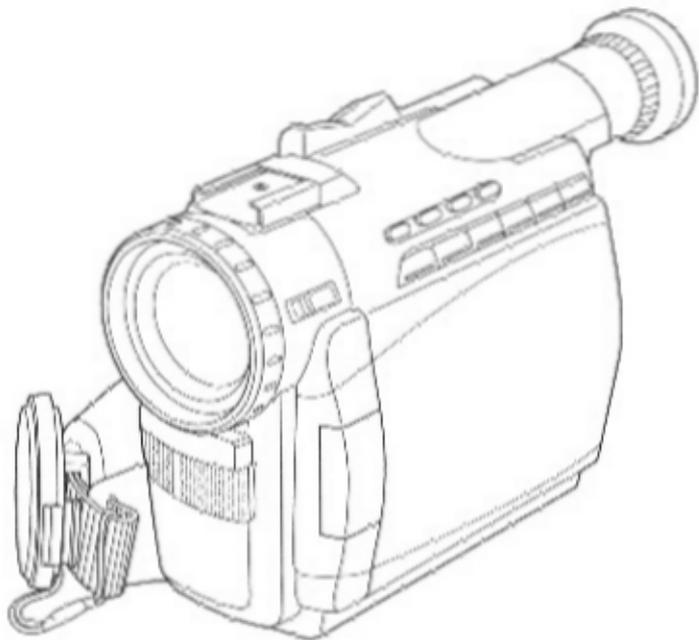

MultiMediaCard™



Mini **DV**

Before attempting to connect, operate or adjust this product, please read these instructions thoroughly.

Spanish Quick Use Guide is included.

Guía para rápida consulta en español está incluida.

For assistance, please call : 1-800-211-PANA(7262) or
send e-mail to : consumerproducts@panasonic.com



LSQT0448A

Things You Should Know

Thank you for choosing Panasonic!

You have purchased one of the most sophisticated and reliable products on the market today. Used properly, we're sure it will bring you and your family years of enjoyment. Please take time to fill in the information below. The serial number is on the tag located on the underside of your Palmcorder. Be sure to **retain this manual** as your convenient Palmcorder information source.

Date of Purchase

Dealer Purchased From

Dealer Address

Dealer Phone No.

Model No.

Serial No.

Safety Precautions

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.

Your ^{Mini} **IN** Palmcorder is designed to record and play back in Standard Play (SP) mode and Long (LP) mode.

It is recommended that only cassette tapes that have been tested and inspected for use in VCR machines with the ^{Mini} **IN** mark be used.

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		
	This symbol warns the user that uninsulated voltage within the unit may have sufficient magnitude to cause electric shock. Therefore, it is dangerous to make any kind of contact with any inside part of this unit.	
	This symbol alerts the user that important literature concerning the operation and maintenance of this unit has been included. Therefore, it should be read carefully in order to avoid any problems.	

The above markings are located on the appliance bottom cover.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when operated in a residential environment.

If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, use the equipment in another location and/or utilize an electrical outlet different from that used by the receiver.

If necessary, consult the dealer or an experienced radio/TV technician for help. You may find the booklet, 'Something About Interference' available from FCC local regional offices helpful.

FCC Warning: To assure continued FCC compliance, use only the provided shielded interface cable when connecting digital video camera to computer in accordance with instruction herein. Also, any unauthorized changes or modifications to this equipment could void the user's authority to operate.


Important Safeguards

1. **Read Instructions** — All the safety and operating instructions should be read before the unit is operated.
2. **Retain Instructions** — The safety and operating instructions should be retained for future reference.
3. **Heed Warnings** — All warnings on the unit and in the operating instructions should be adhered to.
4. **Follow Instructions** — All operating and maintenance instructions should be followed.
5. **Cleaning** — Unplug this video unit from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a dry cloth for cleaning.
6. **Attachments** — Do not use attachments not recommended by the video product manufacturer as they may be hazardous.
7. **Water and Moisture** — Do not use this video unit near water — for example near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like.
8. **Accessories** — Do not place this video unit on an unstable cart, stand, tripod, bracket, or table. The video unit may fall, causing serious injury to a child or adult, and serious damage to the unit. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the video unit. Any mounting of the unit should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
9. **Ventilation** — Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the video unit and to protect it from overheating. These openings must not be blocked or covered. Never place the video unit on a bed, sofa, rug, or other similar surface, or near or over a radiator or heat register. This video unit should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.



10. **Power Sources** — This video unit should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For video units intended to be operated from battery power, or other sources, refer to the operating instructions.

11. **Grounding or Polarization** — This video unit may be equipped with either a polarized 2-wire AC (Alternating Current) line plug (a plug having one blade wider than the other) or 3-wire grounding type plug, a plug having a third (grounding) pin.
The 2-wire polarized plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug still fails to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
The 3-wire grounding type plug will fit into a grounding type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding type plug.
12. **Power-Cord Protection** — Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords of plugs, convenience receptacles, and the point where they exit from the unit.
13. **Outdoor Antenna Grounding** — If an outside antenna or cable system is connected to the video unit, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Part 1 of the Canadian Electrical Code, in USA Section 810 of the National Electrical Code, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

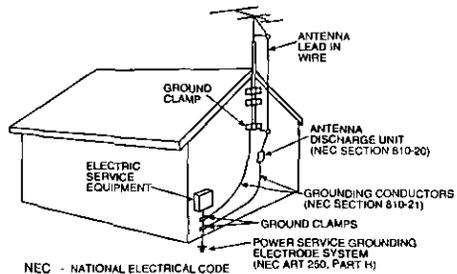

14. **Lightning** — For added protection of this video unit receiver during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the video unit due to lightning and power-line surges.

Important Safeguards

15. **Power Lines** — An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
16. **Overloading** — Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.
17. **Objects and Liquids** — Never push objects of any kind into this video unit through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind onto the video unit.
18. **Servicing** — Do not attempt to service this video unit yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
19. **Damage Requiring Service** — Unplug this video unit from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a. When the power-supply cord or plug is damaged.
 - b. If any liquid has been spilled into, or objects have fallen onto, the video unit.
 - c. If the video unit has been exposed to rain or water.
 - d. If the video unit does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the video unit to its normal operation.
 - e. If the video unit has been dropped or the cabinet has been damaged.
 - f. When the video unit exhibits a distinct change in performance — this indicates a need for service.
20. **Replacement Parts** — When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.
21. **Safety Check** — Upon completion of any service or repairs to this video unit, ask the service technician to perform safety checks to determine that the video unit is in safe operating order.

Precautions

USE & LOCATION

- **TO AVOID SHOCK HAZARD ...** Your Palmcorder and power supply should not be exposed to rain or moisture. Do not connect the power supply or operate your Palmcorder if it gets wet. Your Palmcorder has been designed for outdoor use, however it is not designed to sustain direct exposure to water, rain, sleet, snow, sand, dust, or a direct splashing from a pool or even a cup of coffee. This action could permanently damage the internal parts of your Palmcorder. Do not attempt to disassemble this unit. There are no user serviceable parts inside. Unplug your Palmcorder from the power supply before cleaning.
- **DO NOT AIM YOUR PALMCORDER AT THE SUN OR OTHER BRIGHT OBJECTS**
- **DO NOT LEAVE THE PALMCORDER WITH THE EVF AIMED DIRECTLY AT THE SUN AS THIS MAY CAUSE DAMAGE TO THE INTERNAL PARTS OF THE EVF**
- **DO NOT EXPOSE YOUR PALMCORDER TO EXTENDED HIGH TEMPERATURE ...** Such as, in direct sunlight, inside a closed car, next to a heater, etc... This action could permanently damage the internal parts of your Palmcorder.
- **AVOID SUDDEN CHANGES IN TEMPERATURE ...** If the unit is suddenly moved from a cold place to a warm place, moisture may form on the tape and inside the unit.
- **DO NOT LEAVE YOUR PALMCORDER OR THE POWER SUPPLY TURNED ON WHEN NOT IN USE.**
- **STORAGE OF YOUR PALMCORDER ...** Store and handle your Palmcorder in a manner that will not subject it to unnecessary movement (avoid shaking and striking). Your Palmcorder contains a sensitive pick-up device which could be damaged by improper handling or storage.

CARE

- **TO CLEAN YOUR PALMCORDER ...** Do not use strong or abrasive detergents when cleaning your Palmcorder body.
- **TO PROTECT THE LENS ...** Do not touch the surface of the lens with your hand. Use a commercial Palmcorder lens solution and lens paper when cleaning the lens. Improper cleaning can scratch the lens coating.
- **TO PROTECT THE FINISH OF YOUR PALMCORDER ...** Before handling your Palmcorder, make sure your hands and face are free from any chemical products, such as suntan lotion, as it may damage the finish.

Getting Started

Things You Should Know	2
Important Safeguards	3
Precautions	4
Before Using	6
Quick Guide	9
Supplying Power	11
Setting the Clock	13
Using the Palmcorder Menu	14
MENU OSD	15
Electronic Viewfinder/LCD Monitor Indications	19

Basic Operation

Camera Recording	22
Remote Control (Optional)	26
Playback Your Recordings	27

Special Features

Card Features	32
Dual Digital Electronic Image Stabilization System (D.E.I.S.)	39
Digital Zoom	40
Digital PhotoShot	41
Index Search	41
White Balance	42
Recording Still Pictures	42
MAGICVU/OLUX	42
Program AE	43
Other Digital Functions	44
Picture in Picture (PiP)	45
Strobe Multi Mode	46
Focus	47
Backlight	47
Audio/Video Fade In/Out	48
High Speed Shutter	48
Audio Dubbing using the External or Built-in Microphone	49
Memory-Stop Editing	50
Copying your Tapes to S-VHS or VHS Cassette	51
Copying from Digital Equipment (dubbing)	52
Transferring Your Images	53
Transferring Your Images (i.LINK)	62


For Your Information

Palmcorder Accessory System	64
Palmcorder Accessory Order Form	66
Notes On Operations	67
Specifications	68
Before Requesting Service	69
Request for Service Notice	71
Index of Controls	72
Limited Warranty	76
Servicenter List	77
Spanish Quick Use Guide/Guía Para Uso Rápido	78
Index	Back Cover

Before Using

Unpack your Palmcorder

1 pc. AC Adaptor
(PV-DAC1-1)-with-AC-Cable-and-DC-Cable

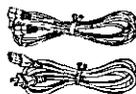

1 pc. Battery Pack
(PV-DBP8A)



1 pc. 8 MB
MultiMediaCard
(LSFT0198A)



1 pc. A/V Cable
(LSJA0280)



1 pc. Lens Cap
(LSYF0478)



1 pc. USB Cable
(LSJA0354)



1 pc. Shoulder
Strap (LSFC0013)



1 pc. CD-ROM of Driver Software for
Windows 98/Windows Me; Palmcorder
USB Device Driver for Windows 98/
Windows Me; CARD LINK (for USB) for
Windows 98/Windows Me; PHOTOVU
LINK/Movie Messenger for Windows 98/
Windows Me (LSFT0266)



Microsoft® and Windows® are registered trademarks of Microsoft in the United States and other countries.

Intel® Pentium® is a registered trademark.
i.LINK and i are trademarks.

IBM is a registered trademark of IBM Company.

MultiMediaCard is a registered trademark.
SD is a trademark.

Record Speed/Playback Time

Use only those tapes having the Mini DV logo indicating the 6.35 mm digital standard.

Cassette type	Record Speed/ Playback time	
	SP	LP
AY-DVM30EA	30 minutes	45 minutes
AY-DVM60EA	60 minutes	90 minutes
AY-DVM80EA	80 minutes	120 minutes


Erase Protection

Cassettes have a sliding record tab to ensure recordings are not accidentally erased.

1 To prevent accidental erasure:
Slide the tab to the left (open).




2 To record again:
Slide the tab to the right (close).

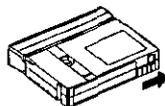

Cassette Insertion/Removal

- If the Palmcorder is connected to a power source, the cassette can be inserted and ejected without turning the Palmcorder on.

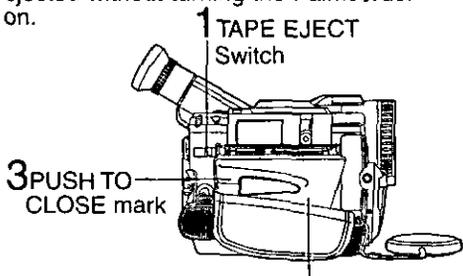

Cassette Compartment Cover

Before you begin

- Connect the Palmcorder to a power source. (See pages 11, 12.)

- 1 Slide **TAPE EJECT** to open the Cassette Compartment Cover.
 - 2 Insert a cassette record tab up, window side facing out.
 - 3 Press **PUSH TO CLOSE** mark to close the Cassette Compartment Cover.
- To remove the cassette...
Slide **TAPE EJECT** to open the Cassette Compartment Cover and pull the cassette tape straight out.

Hint to locate recording position when inserting cassette


- When you insert a partially recorded cassette, use the Edit Search Function (see page 24) to visually confirm the point at which you want to start a new recording. Especially advisable when you want to add a recording to a tape that is already full.

Note

- If hand strap is tight it may prevent Cassette Compartment Cover from fully opening for tape insertion or ejection. Loosen hand strap if necessary.
- When inserting the cassette, make sure it faces in the right direction and then push in completely.

Using the Light (Optional)

To brighten the natural colors in a scene.

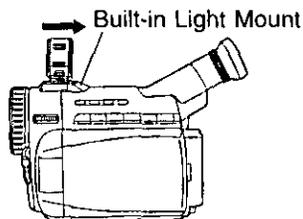


Note

- Using the light will reduce battery operating time.
- Be sure to provide adequate ventilation if using Light in a hot environment for an extended period.
- Be sure **LIGHT** is set to **OFF** when not in use.
- Do not attempt to lift or carry the Palmcorder by holding the Enhancement Light.
- If light bulb needs to be replaced, take Light to your nearest authorized servicenter.

Before you begin

- Connect the Palmcorder to a power source. (See pages 11, 12.)
- Set **POWER** to **CAMERA** or **M-CARD**.

- 1 Slide **Light** into the **Built-in Light Mount**.
Be sure it locks into place.
- 2 Press **LIGHT** to turn **ON** or **OFF**.

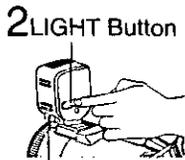

LIGHT RELEASE Button

To remove the Light:

Press **LIGHT RELEASE** and slide the Light out of the mount.



Caution

This light becomes hot during operation. Make sure nothing covers the Light during operation.


Before Using

Attaching the Shoulder Strap


- 1** Undo the two strap ends from their buckles.
- 2** Remove the buckle from one end of the strap.
- 3** Thread the strap (with no buckle) through the Light Holder so that it faces outward. Then, reinsert the buckle.

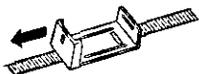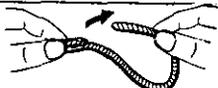

- 4** Thread the strap ends through the Strap Attachment Rings.

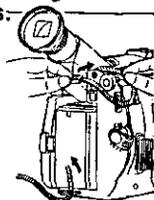


- 5** Reinsert the strap ends through their buckles.
 - Make sure the straps are not twisted.

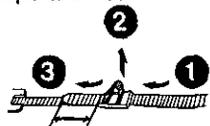


Adjust the Length

- 1** Loosen the strap from the Buckle and create a loop.
- 2** Pull the strap firmly through the Buckle to shorten or lengthen the strap.

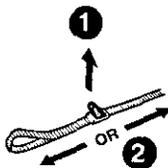

Hand Strap

Adjust the length of the Hand Strap to the size of your hand as illustrated.

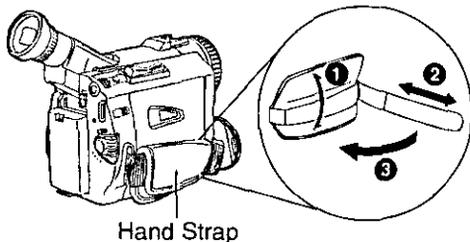

Attach the Light (Optional)


- 1** Insert the Light into the Light Holder for Storage.
- 2** To remove the Light, press **LIGHT RELEASE** and slide Light out of the holder.



Lens Cap

Attaching the Lens Cap Cord to the Hand Strap


Remove the Hand Strap from the front clasp and thread the Strap through the loop in the Lens Cap Cord. Reattach the Hand Strap.

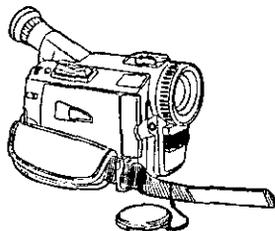

Insert the Battery Pack

Before you begin

- Charge the Battery. (See page 11.)

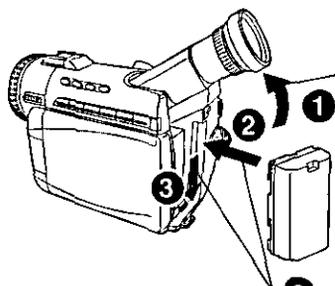


1 Tilt Viewfinder upward.

2 Insert the Battery Pack and slide it down until it locks with a click.

Insert Cassette

1 Set POWER Switch to VCR or CAMERA.

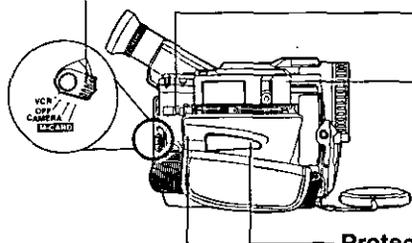

2 Slide TAPE EJECT Switch to open the Cassette Compartment Cover.

3 Insert a cassette record tab up, window side facing out.
• Make sure the record tab is closed. (See page 6.)


4 Press PUSH TO CLOSE mark to close the Cassette Compartment Cover.

Protection Film Note

- Remove the Protection Film before use.

Camera Recording

When the LCD monitor is fully open, the Viewfinder automatically turns OFF.

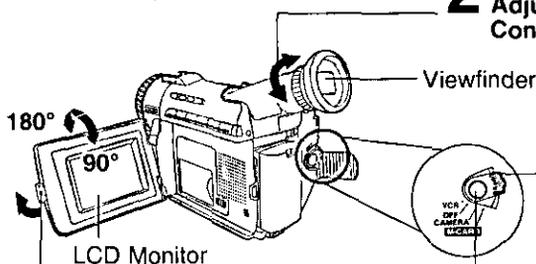

2 Adjust the Vision Adjustment Control to your eyesight.

1 Set POWER Switch to CAMERA.

3 Press LCD-OPEN Button to unlock the LCD monitor. Swing it fully open and adjust the angle.

4 Press REC/PAUSE Button to start recording. Press REC/PAUSE Button again to pause recording.

Quick Guide

Insert Memory Card*

Before you begin

- Charge the Battery. (See page 11.)

*Memory Card: MultiMediaCard or SD Memory Card (See page 64.)

• Be sure to insert the Memory Card before using the Card PhotoShot. (See page 32.)

Below is a list of memory cards which can be used in this Palmcorder.


Memory Card	Capacity
MultiMediaCard (LSFT0198A) (supplied)	8 MB
MultiMediaCard (SanDisk brand)	8 MB, 16 MB
SD Memory Card (optional) (See page 64.)	16 MB, 32 MB, 64 MB

SD Memory Card write protection switch



A write protection switch is located on the SD Memory Card. Sliding the switch to the "LOCK" position prevents writing on or formatting the card.

Write protection switch

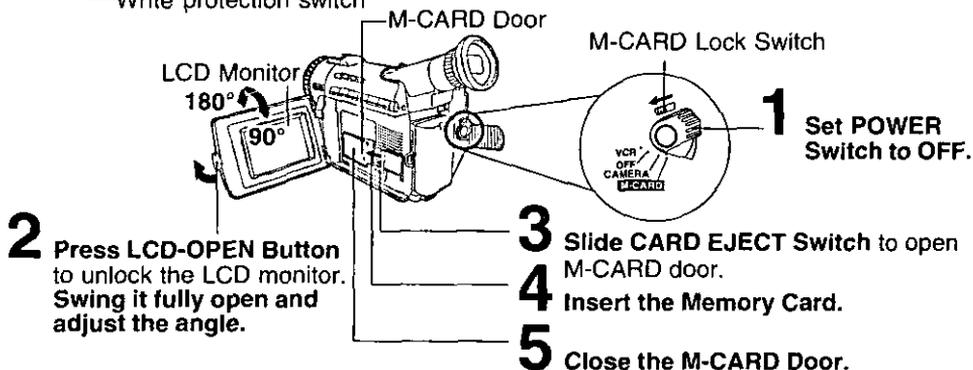


- 2 Press LCD-OPEN Button to unlock the LCD monitor. Swing it fully open and adjust the angle.

- 3 Slide CARD EJECT Switch to open M-CARD door.
- 4 Insert the Memory Card.
- 5 Close the M-CARD Door.

To Watch Playback in the LCD (Liquid Crystal Display)

When the LCD monitor is fully open, the Viewfinder automatically turns OFF.

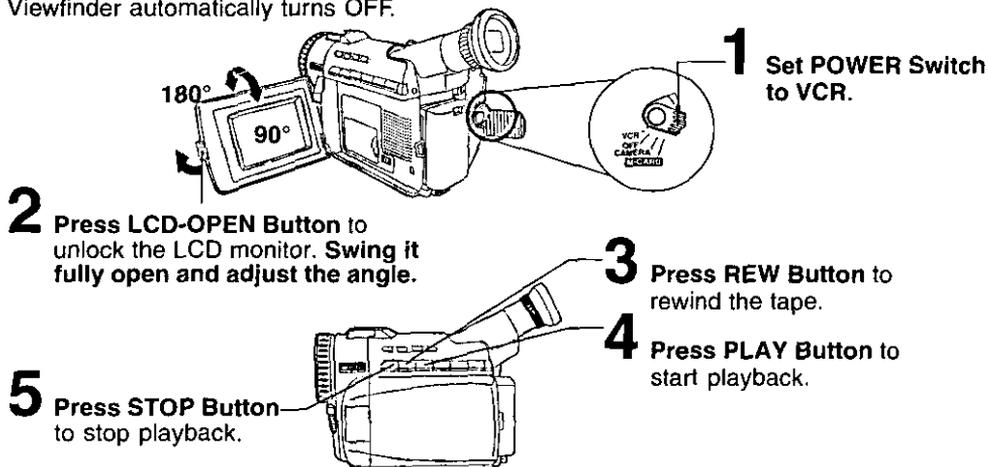

- 2 Press LCD-OPEN Button to unlock the LCD monitor. Swing it fully open and adjust the angle.



Before you begin

- Charge the Battery. (See page 11.)

- 5 Press STOP Button to stop playback.

- 3 Press REW Button to rewind the tape.
- 4 Press PLAY Button to start playback.

Charge the Battery Pack on the AC Adaptor

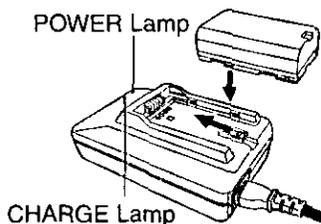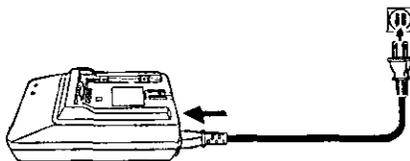

- 1** Connect and plug in the Power Cord as shown.
 - POWER Lamp will light.
 - Remove the DC Cable, if attached, from the adaptor.
- 2** Attach the Battery as shown to charge.
 - CHARGE Lamp lights up. It goes out when charging is complete (approx. 1 hour). Expect approx. 1 hour 30 minutes of operation (EVF usage) when fully charged.
- 3** Remove the Battery. Slide the Battery out and then lift up.

Note


About the Flashing of the CHARGE Lamp

- Charge the Battery within an ambient temperature range of 10 °C and 30 °C.
- If charging is done in extreme low or high temperatures, Battery charge time increases.

CHARGE Lamp flashes when...


- The Battery is being charged, but charging is taking longer than normal.
- Charging is not possible. Remove the Battery once, wait a short time, then re-attach it for charging.

Insert the Battery Pack

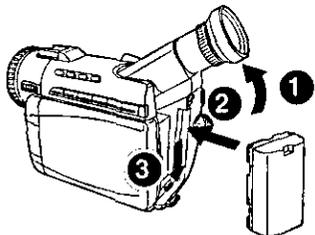

- 1** Tilt Viewfinder upward.
- 2** Insert the Battery Pack and slide it down until it locks with a click.

Remove the Battery Pack

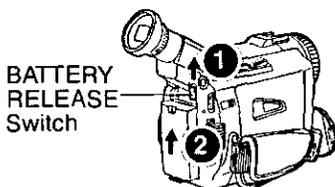

- To remove the Battery Pack:**
Slide the Battery upward while sliding the BATTERY RELEASE Switch.

Supplying Power

Battery Care

Caution:

- Charge only with specified charger.
- Charge the Battery within an ambient temperature range of 32° F (0° C) and 104° F (40° C).
- The Battery may be warm after charging or just after use. This is normal.
- Do not use an insufficiently charged or worn out Battery.
- If charging is done in extreme low or high temperatures, Battery charge time increases.

Safety precautions:

- Do not get the Battery near, or dispose of in fire.
- Do not directly connect (short circuit) the positive (+) and negative (-) terminals.
- Never attempt to disassemble or reassemble the Battery.


To avoid damage to the Battery:

- Do not drop or jar the Battery.
- Use the Battery with specified models only.
- If the Battery is used in extremely high temperatures, a safety device will automatically prevent operation.

To insure longer battery life:

- While not in use, remove Battery from the Palmcorder and AC Adaptor and store in a cool, dark, dry place. If you leave the Battery in the Palmcorder or on the AC Adaptor, the Battery will no longer be rechargeable.
- Keep the Battery terminals clean.

Use AC Adaptor

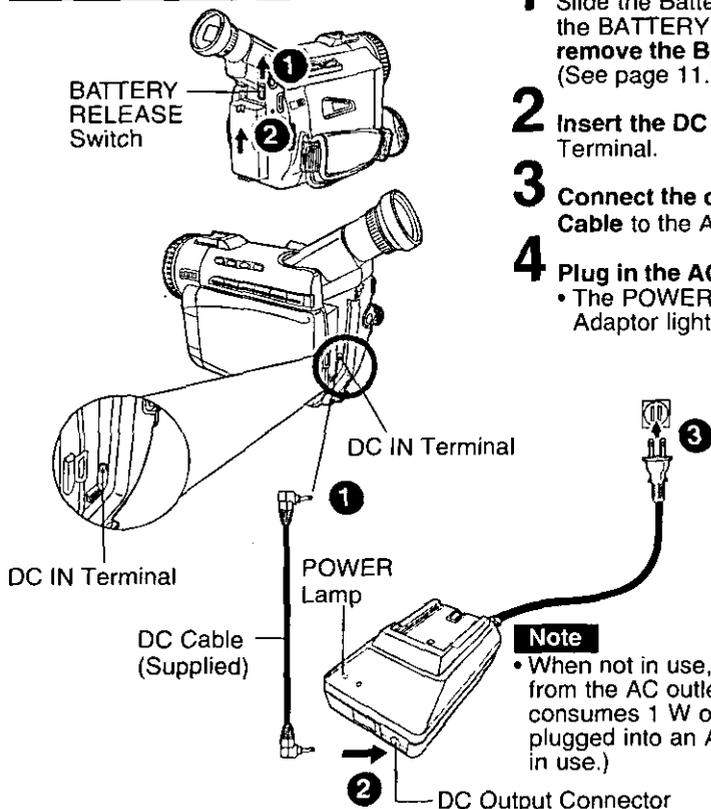

1 Slide the Battery upward while sliding the BATTERY RELEASE Switch to remove the Battery Pack. (See page 11.)

2 Insert the DC Cable into the DC IN Terminal.

3 Connect the other end of the DC Cable to the AC Adaptor as shown.

4 Plug in the AC Adaptor.
• The POWER Lamp on the AC Adaptor lights up.


Note

- When not in use, unplug the AC Adaptor from the AC outlet. (AC Adaptor consumes 1 W of electric power when plugged into an AC outlet even when not in use.)

Setting the Clock

Set the Date and Time

The date and time is calculated, including leap year, up to DEC 31 2089.

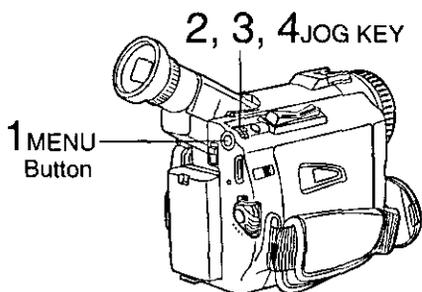

EXAMPLE:

YEAR : 2001

↓  Push

MONTH : JAN

↓  Rotate

MONTH : FEB

Note

- To make corrections, Press JOG KEY repeatedly to move back to an item and correct.
- A built-in Battery maintains clock operation. If the Palmcorder is not connected to a power source for a few months, the built-in battery may discharge and "CLOCK BATTERY" indication appears. (See page 21.)

Before you begin

- Connect the Palmcorder to a power source. (See pages 11, 12).
- Set POWER to CAMERA or VCR.

- 1 Press MENU to display the Camera or VCR mode menu screen. (See page 14.)

[CAMERA MENU] [VCR MENU]

CAMERA MENU

1:FUNCTION
2:ADJUST
3:REC MODE
4:SET-UP
5:DISPLAY SETTING
6:LCD/EVF SETTING
7:PHOTO TITLE

•SELECT: ROTATE JOG KEY
•SET : PUSH JOG KEY
•EXIT : PUSH MENU KEY

VCR MENU

1:PLAY FUNCTION
2:REC MODE
3:PLAY MODE
4:MULTI SETTING
5:DISPLAY SETTING
6:LCD/EVF SETTING

•SELECT: ROTATE JOG KEY
•SET : PUSH JOG KEY
•EXIT : PUSH MENU KEY

- 2 Rotate JOG KEY to select **DISPLAY SETTING**, and then press JOG KEY to display the DISPLAY SETTING menu screen.

- 3 Rotate JOG KEY to select **CLOCK-SET**, and then press JOG KEY to set to ON. (See pages 16, 18.)
 - The DATE/TIME SETTING menu is displayed.

- 4 Rotate JOG KEY to select YEAR, then press JOG KEY to fix and move to the next item. Likewise, set the month, day, hour, and minutes.

DATE/TIME SETTING

YEAR : 2001
MONTH : OCT
DAY : 10
HOUR : 3PM
MINUTE : 0

•SELECT: PUSH JOG KEY
•SET : ROTATE JOG KEY
•EXIT : PUSH MENU KEY

When DATE/TIME setting is completed, press MENU three times to start the clock and exit.


Using the Palmcorder Menu

The Palmcorder features three menu displays: one for CAMERA mode (recording), one for M-CARD (Memory Card Photo Mode) and one for VCR mode (Playback). (See pages 15-18.)

- While the Menu screen is displayed, you cannot record on or play a tape.
- While recording, the Menu screen cannot be displayed.
- During playback, the Menu screen can be displayed.

Before you begin

- Connect the Palmcorder to a power source. (See pages 11, 12.)
- Set POWER to CAMERA or VCR.

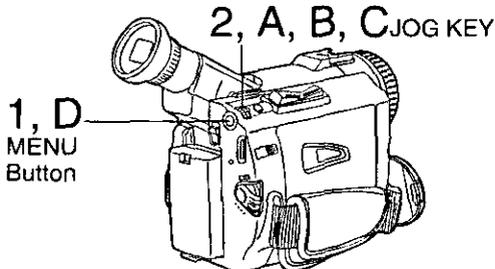

Displaying the MENU

- 1** Press MENU to display the CAMERA or VCR menu (according to the POWER setting).
- 2** Rotate JOG KEY to select a menu item.

Setting the MENU Items (EX. VCR Mode menu)

- A** Press JOG KEY to set your selection.
 - B** Rotate JOG KEY to select a menu item.
- | CAMERA PLAY FUNCTION | VCR PLAY FUNCTION |
|-------------------------|-------------------------|
| D.FUNCTION OFF MIRROR | D.FUNCTION OFF MIRROR |
| STROBE MOSAIC | STROBE MOSAIC |
| SLIM TRAIL | SLIM TRAIL |
| STRETCH | STRETCH |
| D.EFFECT OFF SEPIA | D.EFFECT OFF SEPIA |
| MONO | MONO |
| *SELECT: ROTATE JOG KEY | *SELECT: ROTATE JOG KEY |
| *SET : PUSH JOG KEY | *SET : PUSH JOG KEY |
| *EXIT : PUSH MENU KEY | *EXIT : PUSH MENU KEY |
- C** Press JOG KEY to set your selection.
 - The "●" mark indicates selection.
 - D** Press MENU twice to exit the menu.




CAMERA Main menu

- 1 : D. FUNCTION**
CAMERA FUNCTION menu is displayed. To select one of the 10 digital functions (MIRROR, STROBE, MOSAIC, SLIM, TRAIL, STRETCH, GAIN-UP, WIPE, MIX, PinP).
- 2 : ADJUST**
CAMERA ADJUST menu is displayed. To select PROG. AE, W. BALANCE, or H.S.S. (High Speed Shutter).
- 3 : REC MODE**
CAMERA REC-MODE menu is displayed. To select REC-SPEED, AUDIO-REC, INDEX, SHUTTER, SELF-REC, or WIND-CUT.
- 4 : SET-UP**
CAMERA SET-UP menu is displayed. To select REMOTE, BEEP, or MAGICVU.
- 5 : DISPLAY SETTING**
DISPLAY SETTING menu is displayed. To select DISPLAY, C.RESET, DATE/TIME, or CLOCK-SET.
- 6 : LCD/EVF SETTING**
LCD/EVF SETTING menu is displayed. To select LCD BRIGHTNESS, LCD COLOR or EVF BRIGHTNESS.
- 7 : PHOTO TITLE**
PHOTO TITLE menu is displayed. To select TITLE or MODE.

VCR Main menu

- 1 : PLAY FUNCTION**
VCR PLAY FUNCTION menu is displayed. To select D. FUNCTION or D.EFFECT.
- 2 : REC MODE**
VCR REC MODE menu is displayed. To select REC-SPEED.
- 3 : PLAY MODE**
VCR PLAY MODE menu is displayed. To select INDEX, AUDIO, REMOTE, or B.SEARCH.
- 4 : MULTI SETTING**
MULTI SETTING menu is displayed. To select SPEED.
- 5 : DISPLAY SETTING**
DISPLAY SETTING menu is displayed. To select DISPLAY, C.RESET, DATE/TIME, or CLOCK-SET.
- 6 : LCD/EVF SETTING**
LCD/EVF SETTING menu is displayed. To select LCD BRIGHTNESS, LCD COLOR or EVF BRIGHTNESS.

Camera Mode Menu Screen

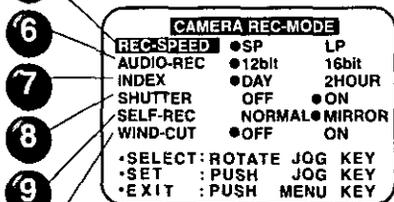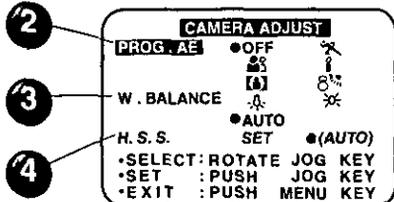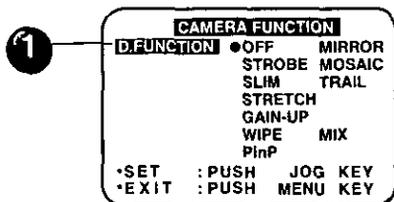

- 1 **DIGITAL FUNCTION** (See page 44.)
To select one of the 10 digital functions.
Setting to OFF cancels the previously selected digital function.
- 2 **PROG. AE** (See page 43.)
To select one of the 5 Program AE modes. Setting to OFF cancels the previously selected Program AE mode.
- 3 **W. BALANCE** (See page 42.)
To select one of the 3 White Balance modes.
- 4 **H. S. S. (High Speed Shutter)** (See page 48.)
To select a desired shutter speed.
- 5 **REC-SPEED** (See page 6.)
SP: Normal recording speed mode.
LP: Recording time is 1.5 times as long as in the SP mode. For example, 120 minutes of recording is possible on a 80 minute tape.
- 6 **AUDIO-REC** (See page 49.)
12 bit: The sound is recorded in the 12 bit/32 kHz mode.
16 bit: The sound is recorded in the 16 bit/48 kHz high-quality mode.
- 7 **INDEX** (See page 30.)
DAY: An index signal is recorded when recording is restarted after the date has changed since the last recording.
2 HOUR: An index signal is recorded when recording is restarted after a lapse of more than 2 hours.
- 8 **SHUTTER** (See page 41.)
When set to ON, still pictures taken in the PhotoShot mode are recorded with a visual shutter effect and click sound.
- 9 **SELF-REC** (See page 23.)
NORMAL: During self-recording, the picture on the LCD Monitor is the same as it will be recorded.
MIRROR: During self-recording, the picture on the LCD Monitor is horizontally reversed.
- 10 **WIND-CUT** (See page 22.)
To reduce sound distortion caused by wind hitting the microphone. However, this slightly deteriorates the sound reproduction in the bass range.

11 **CAMERA SET-UP**

12 **REMOTE** OFF

13 **BEEP** ● VCR1 VCR2

MAGICVU ● OFF ON

● B/W BLUE

GREEN

•SELECT: ROTATE JOG KEY

•SET : PUSH JOG KEY

•EXIT : PUSH MENU KEY

14 **DISPLAY SETTING**

15 **DISPLAY** OFF ● LINEAR

16 **C. RESET** ● MEMORY T. CODE

17 **DATE/TIME** ● OFF ON

● D/T DATE

CLOCK-SET ● OFF ON

•SELECT: ROTATE JOG KEY

•SET : PUSH JOG KEY

•EXIT : PUSH MENU KEY

18 **LCD/EVF SETTING**

LCD BRIGHTNESS

LOW |||||----- HIGH

LCD COLOR

LOW |||||----- HIGH

EVF BRIGHTNESS

LOW |||||----- HIGH

•SELECT: PUSH JOG KEY

•SET : ROTATE JOG KEY

•EXIT : PUSH MENU KEY

19 **PHOTO TITLE**

20 **TITLE** ● OFF SET

MODE ● WIPE MIX

•SELECT: ROTATE JOG KEY

•SET : PUSH JOG KEY

•EXIT : PUSH MENU KEY

- 11** **REMOTE** (See page 26.)
- VCR1:** To receive signals from the Remote Control, set to VCR1.
- VCR2:** To receive signals from the "Remote Control," set to VCR2.
- OFF:** To prevent reception of signals from the Remote Control.

- 12** **BEEP**
- Set to ON to hear beep when starting and stopping camera recording or when unusual conditions occur. To cancel the beep, set to OFF.
- Palmcorder will beep:
Once when you start recording
Twice when you stop recording
Repeatedly when warning of unusual conditions.
(See page 21.)

- 13** **MAGICVU** (See page 42.)
- To select one of the 3 MAGICVU modes slide MAGICVU/OLUX Switch to ON.

- 14** **DISPLAY** (See page 19.)
- To select the desired type of display and counter indication displayed on the LCD Monitor or in the viewfinder.

- 15** **C.RESET** (See page 19.)
- Setting to ON resets the counter to zero.

- 16** **DATE/TIME** (See page 20.)
- The date and time can be set and displayed on the screen.




- 17** **CLOCK-SET** (See page 13.)
- When set to ON, the date and time can be set on the screen.

- 18** **LCD/EVF SETTING** (See page 23.)
- Setting to ON displays the menu for adjusting the LCD brightness, color level, and the EVF brightness.

- 19** **TITLE** (See page 38.)
- Photo Title is recorded.

- 20** **MODE** (See page 38.)
- To select one of the 2 Photo Title modes.

VCR Mode Menu Screen

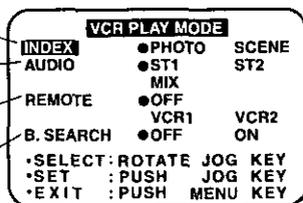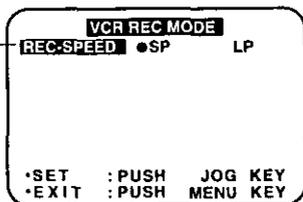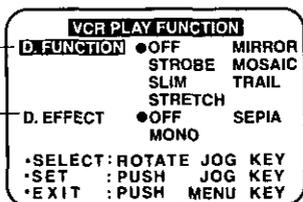

- 1 DIGITAL FUNCTION** (See page 44.)
 To select one of the 6 digital functions. Setting to OFF cancels the previously selected digital function.
- 2 D. EFFECT** (See page 44.)
 To select one of the 2 digital picture effects for playback. Setting to OFF cancels the previously selected digital effect.
- 3 REC-SPEED** (See page 6.)
SP: Normal recording speed mode.
LP: Recording time is 1.5 times as long as in the SP mode. For example, 120 minutes of recording is possible on an 80 minute tape.
- 4 INDEX** (See page 30.)
 To select the desired Index Search function.
PHOTO: To search for Photo shot pictures.
SCENE: To search for scenes marked with Index signal.
- 5 AUDIO** (See page 50.)
 To select the desired audio playback mode after performing audio dubbing in the 12 bit mode (SP mode only).
ST1 : The original sound alone is played back.
ST2 : The dubbed sound alone is played back.
MIX : The original sound and the dubbed sound are played back together.
- 6 REMOTE** (See page 26.)
VCR1 : To receive signals from the Remote Control, set to VCR1.
VCR2 : To receive signals from the Remote Control, set to VCR2.
OFF : To prevent reception of signals from the Remote Control.
- 7 B.SEARCH (Blank Search)**
 (See page 25.)
 Select ON to go directly to a blank portion of the tape.

8 **MULTI SETTING**

SPEED FAST
 ● NORM
 SLOW

•SET : PUSH JOG KEY
 •EXIT : PUSH MENU KEY

9 **DISPLAY SETTING**

10 **DISPLAY** OFF ● LINEAR
 MEMORY T. CODE

11 C. RESET ● OFF ON
12 DATE/TIME OFF DATE
 ● D/T ON
 ● OFF ON

•SELECT: ROTATE JOG KEY
 •SET : PUSH JOG KEY
 •EXIT : PUSH MENU KEY

13 **LCD/EVF SETTING**

LCD BRIGHTNESS
 LOW ||||| ----- HIGH

LCD COLOR
 LOW ||||| ----- HIGH

EVF BRIGHTNESS
 LOW ||||| ----- HIGH

•SELECT: PUSH JOG KEY
 •SET : ROTATE JOG KEY
 •EXIT : PUSH MENU KEY

- 8** **SPEED** (See page 46.)
 In Strobe Multi mode, used to select the interval at which a succession of still-screens are captured from the playback picture.
FAST : Every 0.3 seconds
NORM : Every 0.6 seconds
SLOW : Every 1.0 seconds
- 9** **DISPLAY** (See page 19.)
 To select the desired type of display and counter indication displayed on the LCD Monitor or in the viewfinder.
- 10** **C.RESET** (See page 19.)
 Setting to ON resets the counter to zero.
- 11** **DATE/TIME** (See page 19.)
 The date and time can be set and displayed on the screen.
- 12** **CLOCK-SET** (See page 13.)
 When set to ON, the date and time can be set on the screen.
- 13** **LCD/EVF SETTING** (See page 23.)
 Setting to ON displays the menu for adjusting the LCD brightness, color level, and the EVF brightness.

M-CARD Menu Screen

[Photo Rec Mode Menu Screen]

1 **CARD SETTING**

REC MODE NORMAL ● FINE

•SET : PUSH JOG KEY
 •EXIT : PUSH MENU KEY

[Photo Play Mode Menu Screen]

2 **CARD SETTING**


3 **DISPLAY** ● OFF ON
 DCF NO. ● OFF ON

•SELECT: ROTATE JOG KEY
 •SET : PUSH JOG KEY
 •EXIT : PUSH MENU KEY


- 1** **REC MODE** (See page 32.)
 To select Photo Rec Mode.
- 2** **DISPLAY** (See page 34.)
 Select to OFF to cancel all Displays on the screen.
- 3** **DCF** (See page 34.)
 Select to OFF to cancel DCF No. on the screen.

Electronic Viewfinder/LCD Monitor Indications


Here are some of the basic indications which will appear on the Palmcorder EVF and LCD Monitor. Only Date and Time indications will be recorded onto the tape.

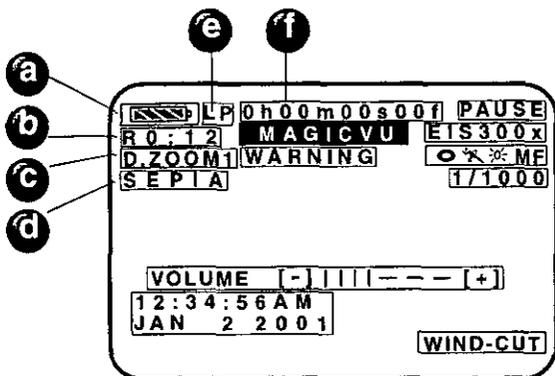

a Battery Remaining

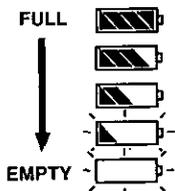

b Tape Remaining

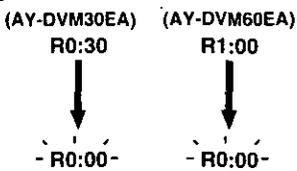

- It will take several seconds for the tape remaining indicator to operate after the tape starts moving.

c Digital Zoom and other Digital Functions (See page 40.)

This display appears when the digital zoom function has been activated.

d Playback Effect (See page 44.)

This display appears when SEPIA or MONO is selected in VCR menu.

e Tape Speed Indication (See page 15.)


Indicates the tape speed (SP or LP).

f Display ON/OFF and Counter/Time Code

The indication switches as shown below when the desired "DISPLAY" mode is selected from the menu. (See pages 16, 18.)

- When OFF is selected, all displays are turned off.

Linear Time Counter Memory Counter

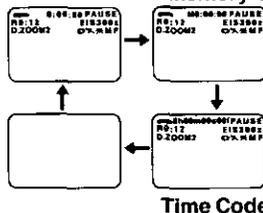

Memory Counter M 0:00:00

The Palmcorder will stop whenever it reaches the point where the counter was previously set to M 0:00:00 during audio dub, fast forward, or rewind.

Time Code 0h00m00s00f


The Palmcorder calculates and displays exactly where you are on any tape in terms of hours, minutes, seconds, and frames (30 frames = 1 second).

- This display can not be reset.

IMPORTANT NOTE:

- Display must be set to ON for MF, AE, W.BALANCE or BACK LIGHT indications to be displayed on the EVF or LCD Panel when selected.
- C.RESET does not work when DISPLAY is set to OFF and T.CODE.


Electronic Viewfinder/LCD Monitor Indications

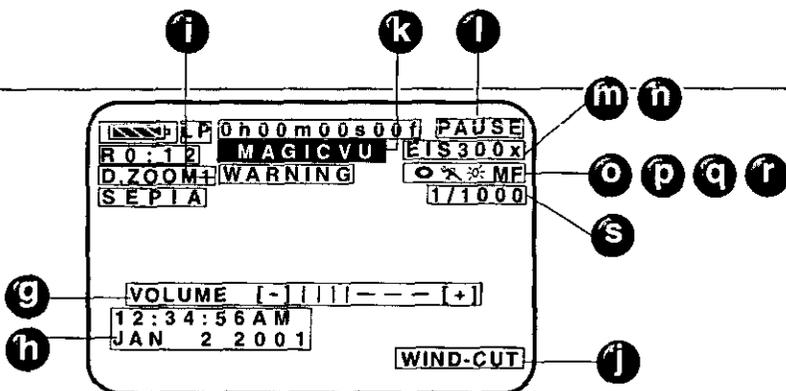

g **Volume Display** (See page 27.)
The volume bar appears when the volume of the built-in speaker is being adjusted.

h **Date and Time Indication**
(See pages 16, 18.)

As shown below, the date and time indication changes each time DATE/TIME is selected from the Palmcorder's MENU (see pages 16, 18) or the DATE/TIME Button is pressed on the remote (optional).

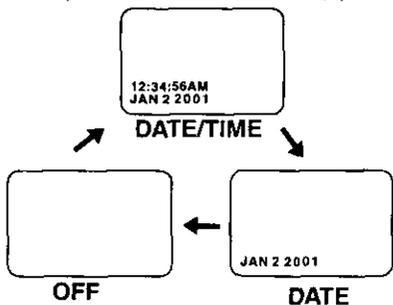

i **WARNING indication**
(See page 21.)
The warning displays appear in the EVF and the LCD monitor.

j **WIND-CUT indication**
(See page 15.)

k **MAGICVU**
(See page 16.)
This display appears when MAGICVU is set to ON.

l **Tape Mode Indications**

REC	Recording.
PHOTO	PhotoShot recording.
PAUSE	Paused during recording.
PLAY	Playback.
R ▷	Repeat Playback.
CHK	Recording Check.
FF	Fast forward.
REW	Rewind.
▷▷	FF Search.
◁◁	REW Search.
BLANK	Blank Search.
SEARCH	Index Search.

m **Digital EIS Indications**
(See page 39.)

n **Zoom Magnification Level**
(See page 40.)

o **Manual Focus Indication**
(See page 47.)

p **White Balance Indication**
(See page 42.)

q **PROGRAM-AE Indication**
(See page 43.)

 

r **Backlight Indication**
(See page 47.)

s **Shutter Mode indication**
(See page 48.)

Electronic Viewfinder/LCD Monitor Indications

The following warning displays appear in the EVF and the LCD monitor.


Getting Started

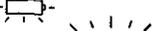Indications	Condition
 TAPE NOT INSERTED	If the Palmcorder is in CAMERA mode without a cassette inserted, "ⓐ" will flash and "TAPE NOT INSERTED" will appear for 5 seconds. Recording will not start.
 CHECK REC TAB	If the Palmcorder is in CAMERA mode with the cassette sliding record tab opened, "ⓐ" will flash and "CHECK REC TAB" will appear for 5 seconds. Recording will not start.
 CANNOT REC	When Audio dub is performed and the sliding record tab is open, or a blank portion of tape is detected, "ⓐ" will flash and "CANNOT REC" will appear for 5 seconds.
 TAPE END	When the tape is about to end in REC mode, "ⓐ END" will flash and "TAPE END" will appear for 5 seconds.
INCOMPATIBLE TAPE	When an incompatible tape is detected, "INCOMPATIBLE TAPE" will appear for 5 seconds.
NEED HEAD CLEANING	If the video heads require cleaning, "NEED HEAD CLEANING" will appear for 5 seconds.
REMOTE	When the Palmcorder and remote are not set to the same mode (VCR1 or VCR2), "CHECK REMOTE MODE" appears for 5 seconds. Also appears when the Palmcorder is first turned on.
CANNOT REC LP-MODE	When an AUDIO DUB is attempted on a pre-recorded LP tape, "CANNOT REC LP-MODE" will appear for 5 seconds.
 DEW DETECTED	If excessive moisture condenses in the unit, "WARNING" will flash, "DEW DETECTED" will appear, and the Palmcorder will automatically turn OFF in 15 seconds. In this case, wait until the indicator no longer flashes when your Palmcorder is turned ON again.
 LOW BATTERY	When a battery recharge is necessary, "WARNING" will flash, "LOW BATTERY" will appear, and the Palmcorder will automatically turn OFF in 15 seconds. (See page 19.)
CLOCK BATTERY	When the built-in lithium clock battery is discharged, "CLOCK BATTERY" will appear. To re-charge the lithium clock battery, connect the AC Adaptor to the Palmcorder. Recharging takes approx. 4 hours. Reset the clock after charging.
INCOMPATIBLE DATA	If you play tape recorded in a format other than NTSC or you try to copy a copy-protected data. "INCOMPATIBLE DATA" will appear.
NO SPACE LEFT	When a still image is transferred from a tape to an already full Memory Card, "NO SPACE LEFT" appears.
DISCONNECT DV CABLE	If the Palmcorder is in M-CARD mode or Photo Title (CAMERA mode) and the DV Interface Cable (i.LINK) is connected, "DISCONNECT DV CABLE" appears. In this case, remove the DV Interface Cable (i.LINK) from the Palmcorder.


Camera Recording

Simple Recording

Remove the lens cap and clip it to the hand strap.

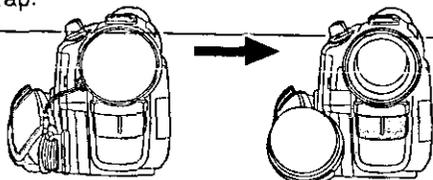


Clip here

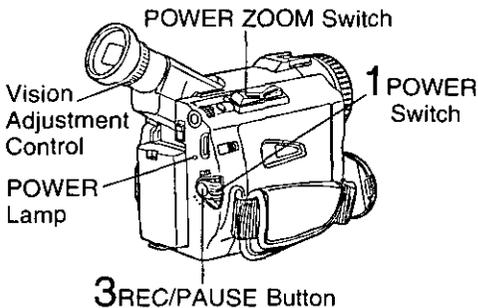

WARNING:

- Do not leave the Palmcorder with the EVF aimed directly at the sun as this may cause damage to the internal parts of the EVF.
- Do not lift, or carry, the Palmcorder by the EVF or the LCD Monitor.

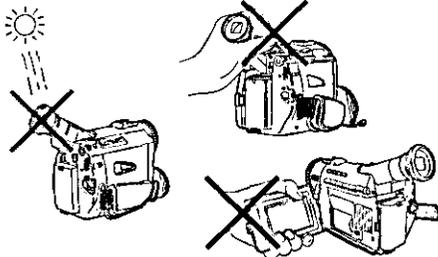

Zoom

You can gradually zoom in for close ups or zoom out for wide angle shots.

Zoom slowly : by lightly pressing the "T" (Telephoto) or the "W" (Wide Angle) side of the POWER ZOOM Switch.

Zoom quickly : by applying more pressure.

Note

- The zooming speed ranges from a slow 22 seconds to a fast 2 seconds according to the amount of pressure applied to the POWER ZOOM Switch.

22

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

Before you begin


- Connect the Palmcorder to a power source. (See pages 11, 12.)
- Insert a cassette with record tab closed. (See page 6.)

1

Set POWER to CAMERA.

- The POWER Lamp lights red.
- Be sure POWER is fully turned to CAMERA position.

EVF

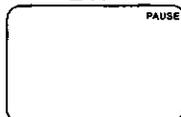

REC/PAUSE mode

2

With the Viewfinder Eye Cup up to your eye, adjust the Vision Adjustment Control to your eyesight. (See page 9.)

3

Press REC/PAUSE to start recording.

• "REC" is displayed on the screen.

Press REC/PAUSE again to pause recording.

- To reduce microphone wind noise, set the WIND-CUT to ON. (See WIND-CUT on page 15.)


- When the Palmcorder is aimed at excessively bright objects, or bright lights, a vertical bar may appear in the picture. This is a normal characteristic of the CCD pick-up device. Try to avoid this whenever possible.

To conserve power

After 5 minutes, the Record/Pause mode will automatically change to Standby mode. To resume recording, set POWER to OFF and then ON again.

Using the LCD Monitor


The LCD (Liquid Crystal Display) monitor can be used while recording.

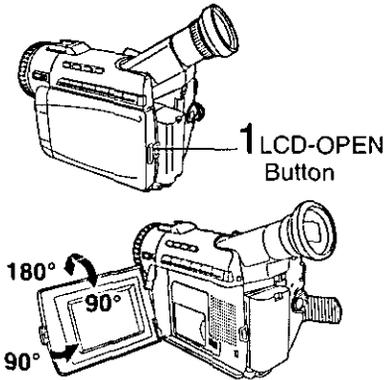

To adjust the LCD BRIGHTNESS or COLOR

- A** Press **MENU** to display the main menu screen.
- B** Rotate **JOG KEY** to select **LCD/EVF SETTING** from the main menu screen. (See pages 16, 18.)
- C** Press **JOG KEY** to display the LCD/EVF SETTING screen.
- D** Press **JOG KEY** to select **LCD BRIGHTNESS** or **LCD COLOR**, then rotate **JOG KEY** to adjust.
- E** Press **MENU** twice to exit this mode.

Self Recording

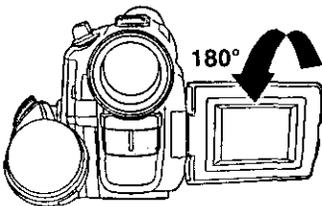

Before you begin

- Connect the Palmcorder to a power source. (See pages 11, 12.)
- Insert a cassette with record tab closed. (See page 6.)

1 Press **LCD-OPEN** to unlock the LCD monitor.

2 Swing the LCD monitor fully open and adjust the viewing angle.

- The LCD monitor will automatically turn on.
- When the LCD monitor is completely closed, it will shut off automatically to save power.
- Adjust the LCD Brightness and/or color of the LCD monitor if necessary. Please refer to "To adjust the LCD BRIGHTNESS or COLOR" below.

3 Start recording. (See page 22.)

Note

- Using the LCD monitor will reduce battery operating time.
- Close the LCD monitor completely when not in use.

LCD/EVF SETTING	
LCD BRIGHTNESS	LOW ---- HIGH
LCD COLOR	LOW ---- HIGH
EVF BRIGHTNESS	LOW ---- HIGH
	LOW ---- HIGH
•SELECT: PUSH	JOG KEY
•SET	: ROTATE JOG KEY
•EXIT	: PUSH MENU KEY

Rotate the LCD monitor 180 degrees so it faces the same direction as the lens to record yourself (CAMERA mode).


The picture in the LCD monitor will appear reversed.

Set **SELF-REC** to MIRROR (see page 15) in the Camera mode menu screen to see the picture as it is actually being recorded.

Recording Check

To playback the final few seconds of the last recorded scene in the REC/PAUSE mode.

1 EDIT SEARCH ◀◀

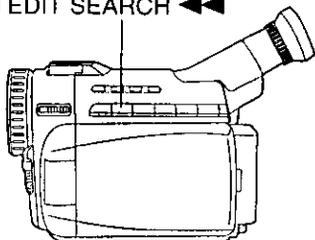

1 Press **EDIT SEARCH** ◀◀ briefly in the REC/PAUSE mode.

The [CHK] indication appears. After checking, the Palmcorder returns to the REC/PAUSE mode.


- For Recording Check, the Palmcorder must be in the same mode (SP or LP) as was used for recording, otherwise the playback picture is distorted.



Edit Search

You can visually search for scenes in CAMERA mode to maintain proper continuity when taping.

1 POWER Switch

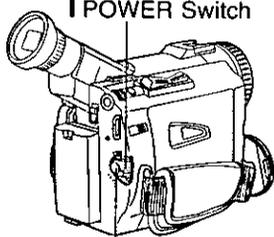

2, 3 REC/PAUSE Button

1 Set **POWER** to **CAMERA**.

- The POWER Lamp lights red.
- Be sure POWER is fully turned to CAMERA position.

2 In **REC/PAUSE** mode, hold down **EDIT SEARCH** ▶▶ to perform a forward visual search or **EDIT SEARCH** ◀◀ to perform a reverse visual search. Releasing the button stops the search.



3 Press **REC/PAUSE** to continue recording.

Note

- During Edit Search, the picture will become mosaic in both ◀◀ and ▶▶ search, the sound will be muted in reverse visual search.
- Make sure the SP/LP tape speed setting is the same as the recording to eliminate distortion during edit search.


2 EDIT SEARCH ◀◀

2 EDIT SEARCH ▶▶

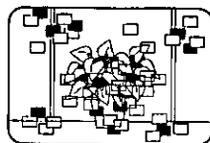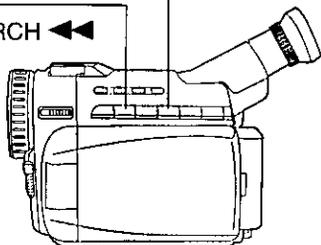


Blank Search

You can go directly to a blank portion of tape and start recording exactly where you left off.

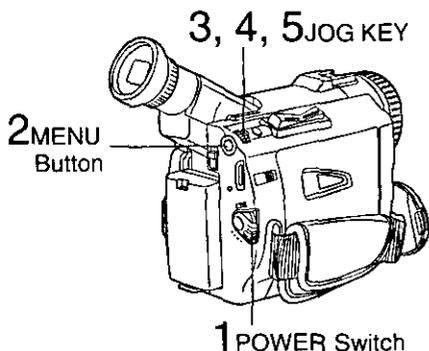

- 1** Set the **POWER** to **VCR**.
 - The **POWER** Lamp lights red.
 - Be sure **POWER** is fully turned to **VCR** position.
- 2** Press **MENU** to display the **VCR** mode menu screen.
- 3** Rotate **JOG KEY** to select **PLAY MODE**, then press **JOG KEY** to display the **VCR PLAY MODE** menu screen.
- 4** Rotate **JOG KEY** to select **B.SEARCH** in the **VCR PLAY MODE** menu. (See page 17.)
- 5** Press **JOG KEY** to select **ON**.
 - "BLANK" will appear on the screen.

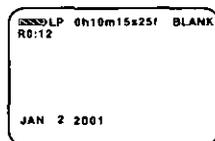

Remote Control (Optional, page 64)



You can operate the major functions of your Palmcorder from up to approximately 16 feet (5 m) away (indoors). Aim the IR Remote Control toward the front of the Palmcorder and press the desired buttons (Remote Sensor is located under the lens).

To operate Camera functions:

Set **POWER** to **CAMERA**.

To operate VCR functions:

Set **POWER** to **VCR**.

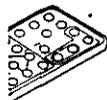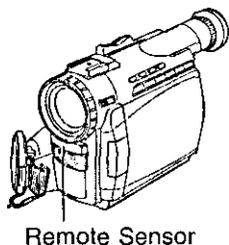

Controlled Functions

- Rec/Pause (See page 22.)
- Tele (Zoom) (See page 22.)
- Wide (Zoom) (See page 22.)
- Date/Time (See page 20.)
- Reset (See page 50.)
- PhotoShot (See page 41.)
- Display On TV (See page 31.)
- Counter/Time Code (See page 19.)
- Audio Dubbing (See page 49.)
- Record (See page 52.)
- Menu (See page 14.)
- Play (See page 27.)
- FF/Search (See page 28.)
- REW/Search (See page 28.)
- Pause/Select (See pages 14, 28.)
- Stop/Set (See pages 14, 27.)
- Slow/Frame Advance (Forward) (See pages 28, 29.)
- Slow/Frame Advance (Backward) (See pages 28, 29.)
- Index Search (Forward) (See page 30.)
- Index Search (Backward) (See page 30.)
- Speaker Volume (See page 27.)

Basic Operation


Remote Control (Optional)

Remote Controlling Two Palmcorders

You can control any two Panasonic Palmcorders-with-one-Remote-control (Optional, page 64). In order for the remote to distinguish between the two units, it is necessary to set one of the Palmcorders to VCR 2. On the remote, press VCR 1 or VCR 2 to control the desired Palmcorder.

Optional

For VCR 2 :
Press these buttons at the same time.

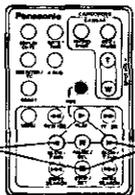

For VCR 1 :
Press these buttons at the same time.

Note

• When the Palmcorder and remote are not set to the same mode (VCR1 or VCR2), "CHECK REMOTE MODE (REMOTE)" will appear.




- 1 Set the POWER to VCR or CAMERA.**
 - The POWER Lamp lights red.
 - Be sure POWER is fully turned to VCR or CAMERA position.
- 2 Press MENU** to display the VCR or CAMERA mode menu screen.
- 3 Rotate JOG KEY** to select **CAMERA SET-UP** in the CAMERA mode menu screen or **VCR PLAY MODE** in the VCR mode menu screen, then **press JOG KEY** to display the CAMERA SET-UP or VCR PLAY MODE menu screen.
- 4 Rotate JOG KEY** to select **REMOTE**, and then press JOG KEY to select VCR 2. (See pages 16, 17). Leave the other Palmcorder set to VCR 1.
- 5 Set the Remote Control (Optional, page 64) to VCR 1 or VCR 2** to correspond with the Palmcorder you wish to control. (See above left.)

• After replacing the Remote Control Battery, the remote will default to VCR 1.

Replace the Battery

Optional

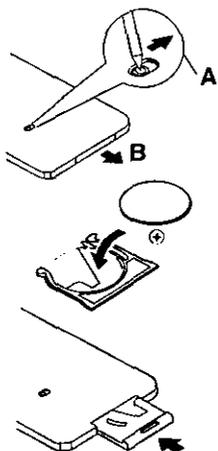



- 1** Insert a slender pointed object, such as the tip of a ball-point pen into the slot so that it fits into the hole (as shown A). Then, while sliding to the right, pull the Battery Tray out with your fingernail.
- 2** Insert the battery into the Battery Tray with the \oplus mark facing down.
Do not reverse the polarity.
- 3** Insert the Battery Tray.

Replace battery with Panasonic PART NO. VSBW0004 (CR2025) only. Use of another battery may present a risk of fire or explosion. Caution: battery may explode if mistreated. Dispose of used battery properly. Keep away from children. Do not recharge, disassemble or dispose of in fire.


Playback Your Recordings

Playback using the LCD Monitor

You can also use the LCD monitor to playback your recording.

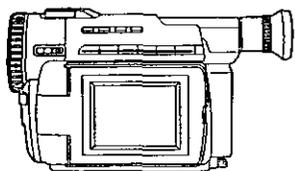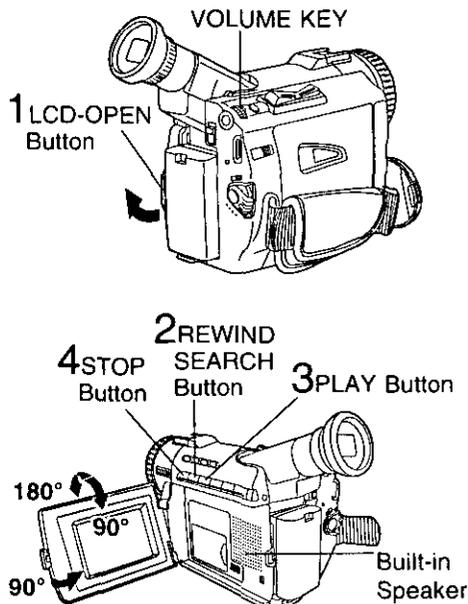

You can place the Palmcorder on a table, etc. for viewing. Rotate the LCD Monitor 180° and swing it up against the Palmcorder body as shown.

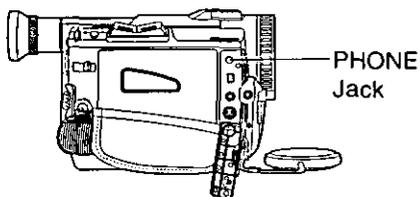

Before you begin

- Connect the Palmcorder to a power source. (See pages 11, 12.)
- Insert a recorded cassette.
- Set POWER to VCR.

- 1** Press **LCD-OPEN** to unlock the LCD monitor and swing open.
- 2** Press **REWIND/SEARCH** to rewind the tape.
- 3** Press **PLAY** to start playback.

To adjust the volume:

- A** Hold down **VOLUME KEY** until the volume setting screen appears. (See page 20).
- B** Rotate **VOLUME KEY** to adjust the volume of the built-in speaker. To remove the volume setting screen, hold down **VOLUME KEY** again.

- Adjust the picture on the LCD monitor if needed. (See page 23.)

- 4** Press **STOP** to stop playback.
 - When the tape reaches its beginning during rewind or rewind search, it will stop automatically.
 - If you press **PLAY** for more than 5 seconds, the Palmcorder will go into Repeat Playback mode when the tape reaches its end. The letter "R ▷" will appear in the EVF and LCD monitor. To exit the Repeat Playback mode, turn the Palmcorder OFF.



Note


- When a tape recorded in LP mode on another digital video camera is played back on this unit, the picture may appear mosaic.
- Using the LCD monitor reduces battery operating time.
- You can connect earphones (not supplied) to the PHONE Jack.

Playback Your Recordings

Special Effect Features During Playback

Note

- Sound is muted during all special effects.

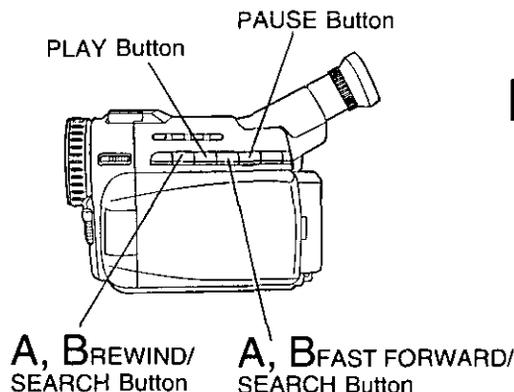

Rapid Visual Search

A During playback, hold down **FAST FORWARD/SEARCH** or **REWIND/SEARCH**.

The search will continue for as long as the button is held down.

OR


B Press **FAST FORWARD/SEARCH** or **REWIND/SEARCH** once for a continuous rapid visual search. Press **PLAY** to release.

Note

- When executing a rapid visual search, the picture may become bluish for an instant or mosaic. This is normal during this mode.



Optional

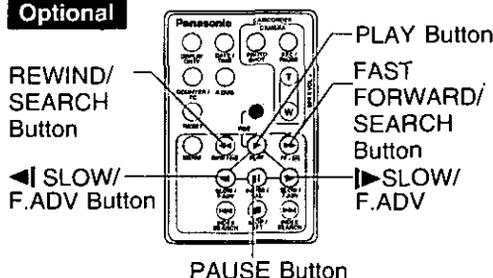

STILL Picture

Press **PAUSE** during playback. Press **PLAY** or **PAUSE** to release.

Note

- To protect the tape and video heads, your Palmcorder's operating modes will revert as follows:

STILL → STOP (after 3 minutes.)

Fast Forward/Rewind Check

Monitor normal picture playback during fast forward or rewind.

- Hold down **FAST FORWARD/SEARCH** during fast forward.
- Hold down **REWIND/SEARCH** during rewind.
- The picture will appear for as long as the button is held down.

Slow Motion Playback

Optional Remote Control Only (See page 64)

Forward Slow = Press **▶ SLOW/F.ADV** during play.

Reverse Slow = Press **◀ SLOW/F.ADV** during play.

Press **PLAY** to release. (During reverse slow motion playback, time code indication may not change regularly.)

Note



- Palmcorder will automatically STOP when in slow motion for more than 10 minutes.
- During slow motion playback, picture may move up and down. This is normal.
- When you start or stop slow motion playback, the picture may become bluish for an instant.

Playback Your Recordings


Special Effect Features During Playback (Continued)

Note

- Sound is muted during all special effects.

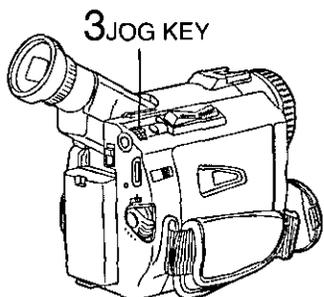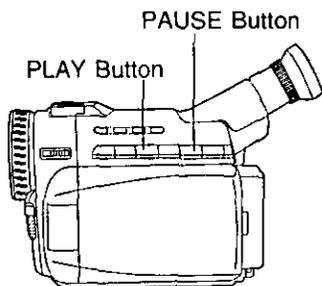

Optional

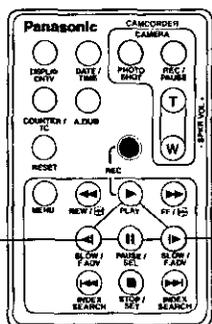

Variable Speed Search

- 1 Press **PLAY** to start playback.
- 2 Press **PLAY** again.
- 3 Rotate **JOG KEY** to adjust the playback speed.
 - Rotate **JOG KEY** downward for forward playback.
 - Rotate **JOG KEY** upward for reverse playback.

To return to normal playback:

Press **PLAY**. Playback will continue at normal speed.

Note

- The Variable Speed Search function offers a choice of six playback speeds (1/5X, 1X, 2X, 5X, 10X, 20X) both in forward and reverse directions.
- The review playback at the 1X speed is playback in reverse direction.
- During the Variable Speed Search (at a speed other than 1X), mosaic-like patterns will appear in the picture.
- During the Variable Speed Search, sound is muted.

Jog Frame by Frame Search

(Palmcorder only)

During Still mode, rotate **JOG KEY** to advance or reverse the picture one frame at a time.

Frame by Frame Advance

Optional Remote Control Only (See page 64)

Press **PAUSE** during playback.

Press **▶ SLOW/F.ADV** to do a frame by frame advance.

Press **◀ SLOW/F.ADV** to do a frame by frame reverse.

Press **PLAY** to release.

Note


- If you hold down **SLOW/F.ADV**, you can see a continuous series of still images at a slower speed than normal slow mode.
- During frame by frame advance, a few frames may move automatically, and the picture may become bluish for an instant.

Playback Your Recordings


Special Effect Features During Playback (Continued)

Note

- Sound is muted during all special effects.

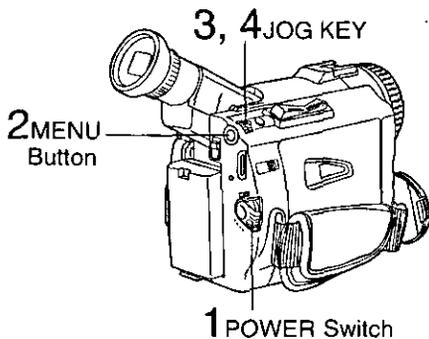

Optional

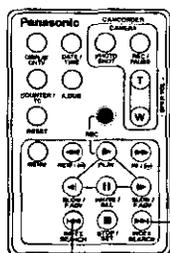

B INDEX SEARCH (rewind) Button

Top Scan

If you hold down INDEX SEARCH more than 2 seconds, the Palmcorder will scan for scenes (or PhotoShots) and playback the first few seconds of each.

To cancel this function, press PLAY or STOP.

Note

- Search will not work if there is a succession of PhotoShots.

Index Forward/Reverse Search

Optional Remote Control Only
(See page 64)

Search for a particular scene by using the electronic index marks placed at the beginning of each recording.


- 1** Set the **POWER** to **VCR**.
 - The **POWER** lamp lights red.
 - Be sure **POWER** is fully turned to **VCR** position.
- 2** Press **MENU** to display the **VCR** mode menu screen.
- 3** Rotate **JOG KEY** to select **PLAY MODE**, then press **JOG KEY** to display the **VCR PLAY MODE** menu screen.
- 4** Rotate **JOG KEY** to select **INDEX**, and then press **JOG KEY** to select **PHOTO** or **SCENE**. (See page 17.)

- A** Place the Palmcorder in the **VCR STOP** mode.
- B** Press **INDEX SEARCH** fast forward or rewind the number of recordings (indexes) forward or back you want to view. The Palmcorder will advance or rewind to the desired recording and automatically start playback.
 - The number of times you pressed the button is displayed in the EVF and the LCD monitor if you set **INDEX** on the **VCR** menu to **SCENE**. (See page 17.) (Ex., if you press the button three times, "S3" will appear.)
 - If the interval between scenes is less than 1 minute, index search may not operate properly.
 - Response time from pressing the button and change in the scene number is quite slow. Do not press **INDEX SEARCH** rapidly and continuously.
 - During Reverse Index Search mode, playback will not begin when a tape rewinds all the way to the beginning.

Playback Your Recordings


View Recording/Playback on your TV

[TV with AUDIO/VIDEO IN Jacks]

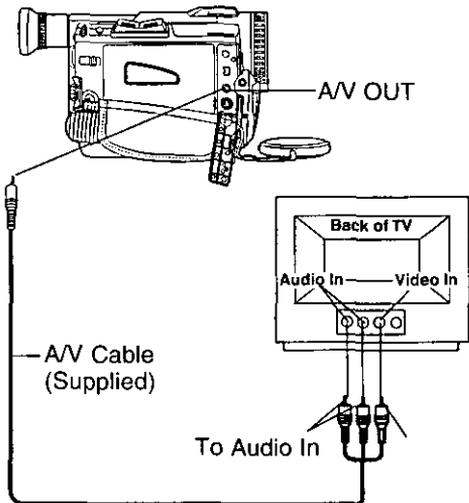

[TV with S-VIDEO IN Jacks]

For best Chrominance and Luminance, use the S-VIDEO connection if available on your TV.

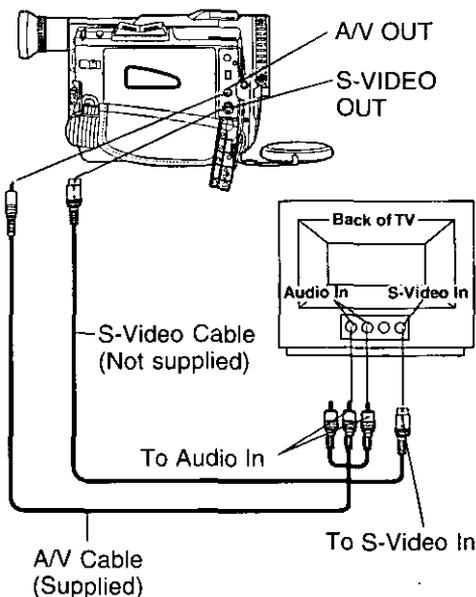

1 Set **POWER** to **CAMERA** or **VCR**.
To view what the Palmcorder is recording or to playback a tape on your TV.

2 Turn your TV **ON** and set it to **LINE INPUT** or **S-VIDEO**.
Check your TV operating instructions for further information.

3 Start playback or begin a recording.


Note

- Make sure the Palmcorder and TV are turned off while connecting.
- Please connect the A/V Cable securely.

Optional Remote Control Only (See page 64)

You can display the various EVF and LCD indications on your TV by pressing **DISPLAY ON TV** on remote control. Press again to remove the indications.

DISPLAY ON TV Button

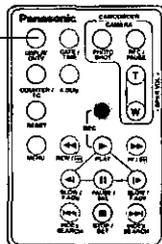

CATV System Installer

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC in USA (and to the Canadian Electrical code in Canada) that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Basic Operation

Card Features

Card PhotoShot

You can record still images to a Memory Card.

Warning

- Memory Card will not work when DV interface Cable (i.LINK) is connected.

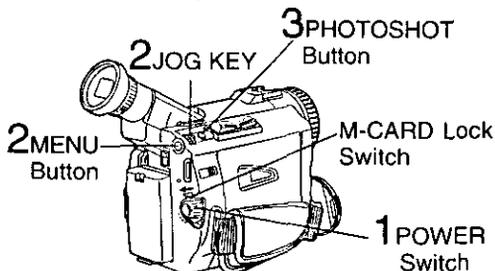


Image Resolution and Capacity
(supplied 8 MB MultiMediaCard)

REC Mode	Image Resolution	Capacity
FINE	640 x 480	Approx. 60 images
NORMAL	320 x 240	Approx. 240 images

- The number of images given for each mode applies when all images are taken in same mode.
- You can change recording modes at any time before capturing an image.
- The number of images that can be captured may differ depending on the subject. After capturing an image, the number may not decrease, or it may decrease by two. This is normal.

Warning

- While "PROCESSING" is displayed, **DO NOT turn off the Palmcorder or unplug the AC Adaptor** (supplied) because this will cause irreversible damage to the memory.


Cautions for the Memory Card

- While Memory Card data is being read, do not remove it, turn off the power, or subject unit to vibrations and shocks.
- Do not leave the Memory Card in a place with high temperature, exposed to direct sunlight, or where electromagnetic waves and static electricity can be generated.
- Electromagnetic waves, static electricity, malfunction of the Palmcorder or of the Memory Card itself could erase the data recorded on it. To prevent the loss of picture data, we recommend that you make a backup copy on the computer.
- Do not bend or drop the Memory Card as this could damage it or the captured contents.
- Do not touch the connector on the rear edge of the Memory Card with your fingers and take care that no dirt, dust or water enters it.
- Do not affix other labels to the Memory Card face or back as Card insertion/removal may become impossible.


Before you begin

- Connect the Palmcorder to a power source. (See pages 11, 12.)
- Set POWER to OFF before inserting a Memory Card. (See page-10.)

- 1 Slide the M-CARD Lock Switch to unlock, then set POWER to M-CARD.
 - The POWER lamp lights red.
 - Be sure POWER is fully turned to M-CARD position.
 - "PLAY: PUSH PLAY KEY" is displayed for 10 seconds. (See page 33.)
- 2 Press MENU to display CARD SETTING menu, then press JOG KEY to select **NORMAL** or **FINE**.

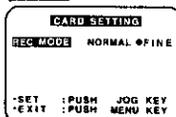

- 3 Press MENU to exit this menu.
- 3 Press PHOTOSHOT to record an image.

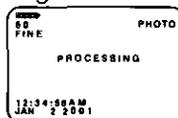


- The PhotoShot image is recorded to the Memory Card.
- When SHUTTER is set to ON (see page 15), still pictures are recorded with a visual shutter effect and click sound. If set to OFF, the still image will be displayed only.

Recording images From a Tape


You can record still images from a cassette tape to a Memory Card.

Warning

- Memory Card will not work when DV interface Cable (i.LINK) is connected.

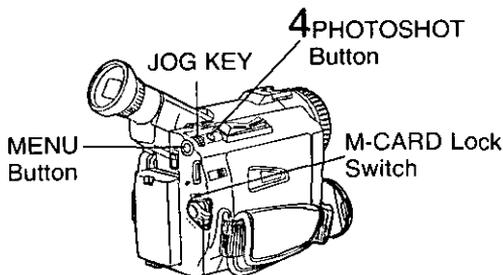


2 POWER Switch

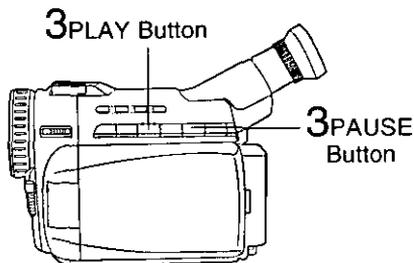

Playback Still Images

You can view the images on the Memory Card.

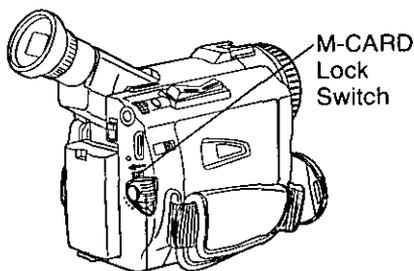

1 POWER Switch

Before you begin

- Connect the Palmcorder to a power source. (See pages 11, 12.)
- Set POWER to OFF before inserting a Memory Card. (See page 10.)

- 1 Repeat steps 1 and 2 on page 32.
- 2 Set POWER to VCR.
 - The POWER lamp lights red.
 - Be sure POWER is fully turned to VCR position.
- 3 Press PLAY to start playback of the cassette tape. And then, press PAUSE to select an image.

- 4 Press PHOTOSHOT to record the desired image to the Memory Card.



- When PHOTOSHOT is pressed in PLAY or SLOW mode, the screen goes to STOP mode.
- To playback the images of the Memory Card, see pages 33~34.
- When Variable Speed Search is done (see page 29), this feature can not be used.

- 5 Repeat steps 3~4 to record another image to the Memory Card.


Before you begin

- Connect the Palmcorder to a power source. (See pages 11, 12.)
- Set POWER to OFF before inserting a recorded Memory Card. (See pages 32, 33.)


- 1 Slide the M-CARD Lock Switch to unlock, then set POWER to M-CARD.
 - The POWER lamp lights red.
 - Be sure POWER is fully turned to M-CARD position.
 - "PLAY: PUSH PLAY KEY" is displayed for 10 seconds.



(Continued on next page.)

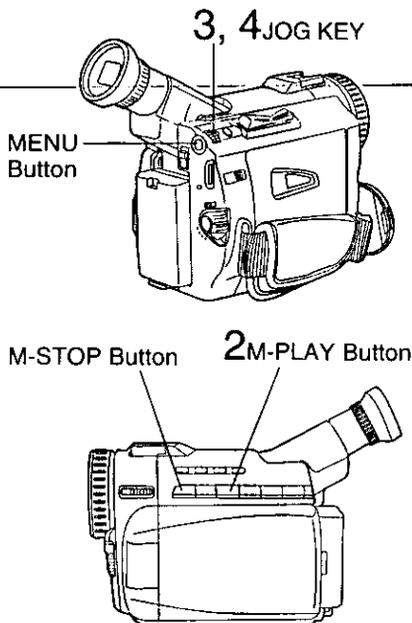

- 2** Press **M-PLAY** to display the Multi playback screen.
- "PLEASE WAIT" appears on-screen.
 - Rotate **JOG-KEY** to scroll through Multi image screen pages (6 images per page) and select an image.
 - The selected image is underlined in green.

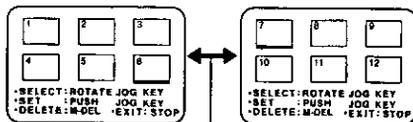


"PLEASE WAIT" is displayed.

- Press **MENU** to display **CARD SETTING** menu screen.
- Press **M-STOP** to return to the Card PhotoShot REC Mode. (See page 32.)

- 3** Press **JOG KEY** to display the selected image as a full-size screen.
- "PLEASE WAIT" appears on-screen.


- 4** Rotate **JOG KEY** to select **BACK** (previous image), **MULTI** (Multi Image screen), or **NEXT** (next image).

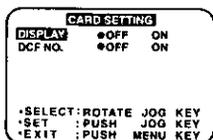

- DISPLAY** : Select OFF to remove all displays from the screen.
- DCF (Design rule for Camera File system)**
: Select OFF to cancel DCF No. on the screen.

Note

- If the file number is changed, the Palmcorder cannot read the file data.
- This product is compliant with DCF (Design rule for Camera File System). Images saved on the Memory Card using other Digital Still Cameras that are compliant with DCF can be viewed on this product.

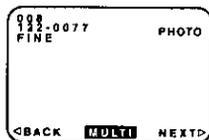

- Press **M-STOP** to return to the Multi Playback screen.

Warning

- While "PLEASE WAIT" is displayed, **DO NOT** turn off the Palmcorder or unplug the **AC Adaptor (supplied)** because this will cause irreversible damage to the memory.

Delete Specific Images

You can delete unwanted images and increase the remaining image memory.

Warning:

Once deleted, images cannot be restored.

DELETE PAGE



Delete specific images from a page.

DELETE ALL

Delete all images. (See page 36.)

FORMAT

Delete all data. (See page 37.)

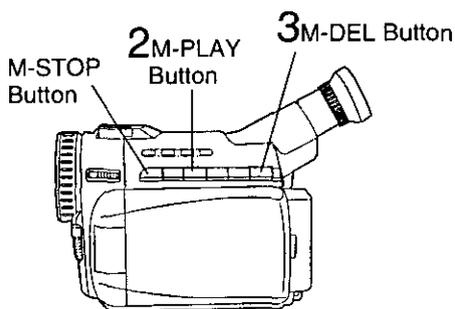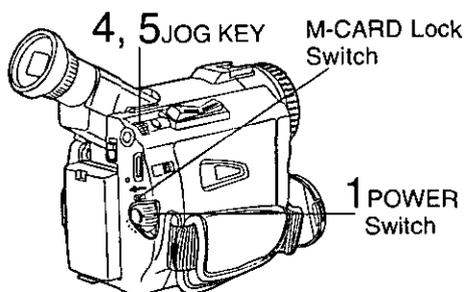


Warning

- While deleting image, **DO NOT** turn off the Palmcorder or unplug the AC Adaptor (supplied) because this will cause irreversible damage to the memory, resulting in reduced image storage capacity.


Before you begin

- Connect the Palmcorder to a power source. (See pages 11, 12.)
- Set POWER to OFF before inserting a recorded Memory Card. (See pages 32, 33.)


- 1 Slide the M-CARD Lock Switch to unlock, then set POWER to M-CARD.
 - The POWER lamp lights red.
 - Be sure POWER is fully turned to M-CARD position.
 - "PLAY: PUSH PLAY KEY" is displayed for 10 seconds.
- 2 Press M-PLAY to display the Multi playback screen.
 - "PLEASE WAIT" appears on-screen.
- 3 Press M-DEL to display the DELETE menu, then rotate and press JOG KEY to select **PAGE**.

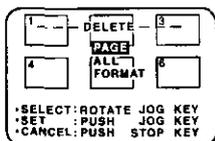

- DELETE PAGE menu is displayed.

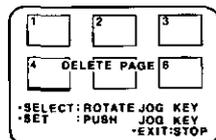

- 4 Rotate and press JOG KEY to select and set the image to be deleted.
 - The selected image is underlined in pink.

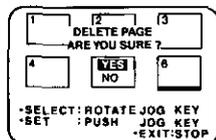

- 5 Rotate JOG KEY to select **YES**, and press JOG KEY to delete the selected image.
 - To cancel delete, press M-STOP or rotate and press JOG KEY to select NO.
 - "PLEASE WAIT" appears on-screen.
 - To delete other images, repeat steps 4-5.

Card Features

Delete All Image Pages


You can delete all images from the Memory Card easily with this operation.

Warning:

Once deleted, images cannot be restored.


Before you begin

- Connect the Palmcorder to a power source. (See pages 11, 12.)
- Set POWER to OFF before inserting a recorded Memory Card. (See pages 32, 33.)


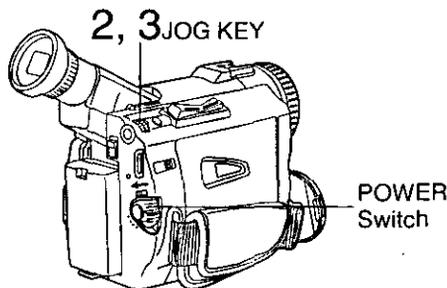


1 Do steps 1 and 2 on page 35.

2 Press M-DEL to display the DELETE menu. Then, rotate and press JOG KEY to select **ALL**.

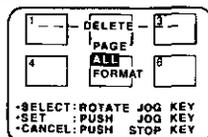


- The screen below is displayed.
- To cancel delete, press M-STOP or rotate and press JOG KEY to select NO.

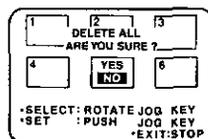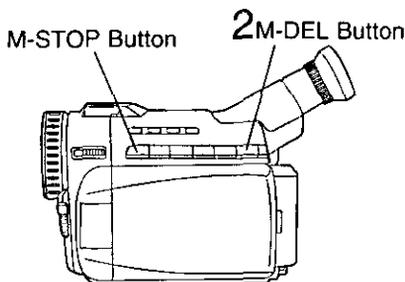

3 Rotate and press JOG KEY to select **YES**.

- "PLEASE WAIT" is displayed on the screen, and then "NO PICTURE" is displayed.

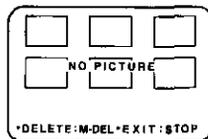

- Press M-STOP to return to the Card PhotoShot REC Mode screen. (See page 32.)

Warning



- While deleting image, **DO NOT** turn off the Palmcorder or unplug the AC Adaptor (supplied) because this will cause irreversible damage to the memory, resulting in reduced image storage capacity.

Format the Memory Card

You can easily format your Memory Card using this operation.

Warning:

Formatting permanently removes all image data.

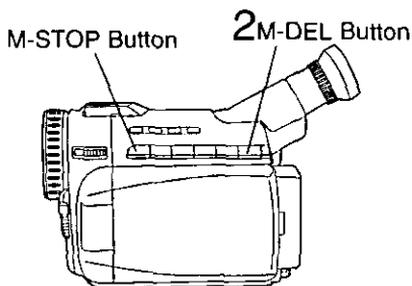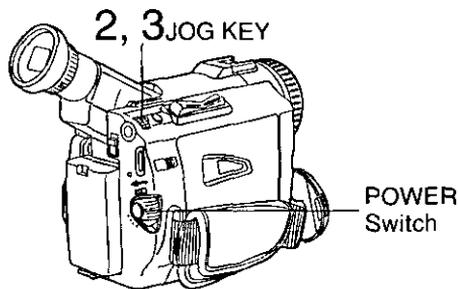


Before you begin


- Connect the Palmcorder to a power source. (See pages 11, 12.)
- Set POWER to OFF before inserting a recorded Memory Card. (See pages 32, 33.)

1 Do steps 1 and 2 on page 35.

2 Press M-DEL to display the DELETE menu, then rotate and press JOG KEY to select **FORMAT**.

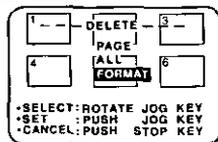


- The screen below is displayed.
- To cancel format, press M-STOP or rotate and press JOG KEY to select NO.

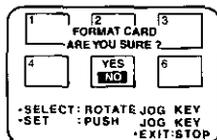

3 Rotate and press JOG KEY to select **YES**.

- "PLEASE WAIT" is displayed on the screen as all image data is deleted from Memory Card. Deletion is complete when "NO PICTURE" is displayed.

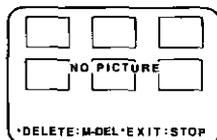

- Press M-STOP to return to the Card PhotoShot REC Mode screen. (See page 32).

Warning

- While deleting image, **DO NOT** turn off the Palmcorder or unplug the AC Adaptor (supplied) because this will cause irreversible damage to the memory, resulting in reduced image storage capacity.

Card Features

Photo Title

You can record PhotoShot images from a Memory Card to a cassette to be used as a **WIPE** or **MIX** effect.


-Note-

When Photo Title is set to ON, the selected image and Title will appear before each recording is made.

WIPE : The Photo title is replaced with the current scene in a wiping motion.



MIX : The photo title is replaced with the current scene in a gradual mixing effect.

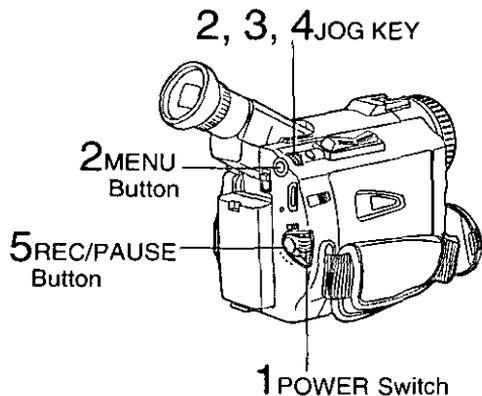


Before you begin

- Connect the Palmcorder to a power source. (See pages 11, 12.)
- Set **POWER** to **OFF** before inserting a recorded Memory Card. (See pages 32, 33.)


- 1** Set **POWER** to **CAMERA**.
 - The **POWER** lamp lights red.
 - Be sure **POWER** is fully turned to **CAMERA** position.
- 2** Press **MENU** to display the **CAMERA** menu screen. Then **rotate and press JOG KEY** to select **PHOTO TITLE**.



- 3** Rotate and press **JOG KEY** to select and set **MODE** and then **TITLE**.
 - 1st : Select and set **MODE** (**WIPE** or **MIX**).
 - 2nd : Select and set **TITLE** to "SET".

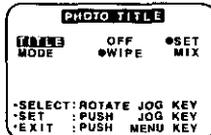


- "PLEASE WAIT" appears on-screen.
- The Multi image screen is displayed.

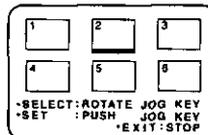

- 4** Rotate and press **JOG KEY** to select and set an image.
 - "PLEASE WAIT" is displayed while image is processed. Then, "PHOTO TITLE SET" is displayed for approx. 3 seconds, and the screen goes back to the Camera mode screen.
 - After Photo Title is performed, Digital Function turns off.
 - There are 12 pre-installed files.
- 5** Press **REC/PAUSE** to start recording with Photo Title.
 - **WIPE** or **MIX** screen is displayed at beginning of the recording. Then the Photo Title setting will be cleared automatically.


Dual Digital Electronic Image Stabilization System (D.E.I.S.)

This feature helps compensate for any unintentional hand or body movement. It can be used in both the Recording and Playback (VCR) modes.

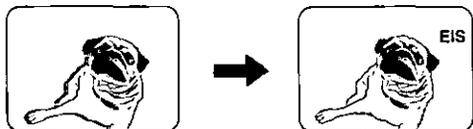

NORMAL

EIS ON

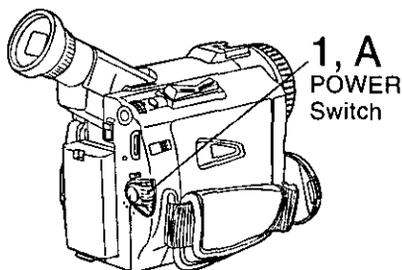


1, A
POWER
Switch

3 REC/PAUSE Button

2, 4, C, D
EIS Button

B PLAY Button

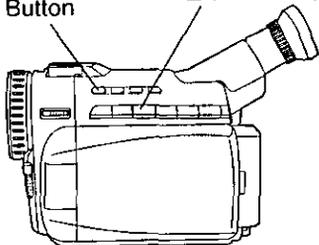

Note

- Other Digital Functions are turned off automatically when the EIS and Digital Zoom are selected.

CAMERA mode

- 1** Set **POWER** to **CAMERA**.
 - The **POWER** lamp lights red.
 - Be sure **POWER** is fully turned to **CAMERA** position.
- 2** Press **EIS** to stabilize the picture.
 - Picture flicker may be observed when taping under fluorescent lighting conditions.
 - The **EIS** indicator flashes when the light level is inadequate.
 - Turn **D.E.I.S. OFF** during recording when using a tripod.
- 3** Press **REC/PAUSE** to start recording.
- 4** Press **EIS** again to cancel.
 - Be sure that **D.E.I.S.** is turned off when not needed.

D.E.I.S. may not function when...

- Palmcorder movement is too extreme.
- Recording a subject with distinct horizontal or vertical stripes.
- Recording in low light situations.
- Recording a subject under a great amount of fluorescent light.
- Recording a scene with very fast motions.

VCR mode



- A** Set **POWER** to **VCR**.
 - The **POWER** lamp lights red.
 - Be sure **POWER** is fully turned to **VCR** position.
- B** Press **PLAY** to start playback.
- C** Press **EIS** to stabilize the picture.
- D** Press **EIS** again to cancel.
 - Be sure that **D.E.I.S.** is turned off when not needed.

Note


- When using **D.E.I.S.** in **VCR** mode, the image size is slightly larger.

Special Features

Digital Zoom

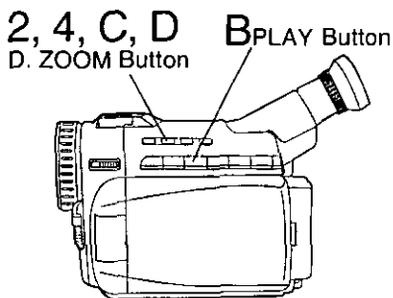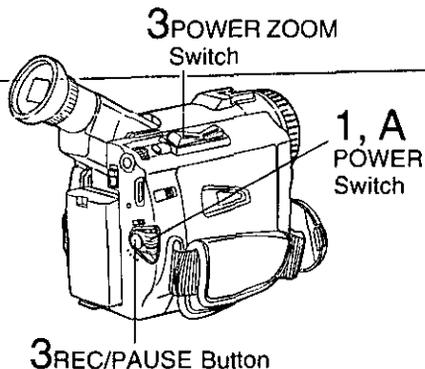

Zoom In ("T")

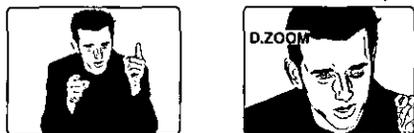

Zoom Out ("W")

Note

- Other Digital Functions are turned off automatically when the EIS and Digital Zoom are selected.

CAMERA mode

- 1 Set POWER to CAMERA.**
 - The POWER lamp lights red.
 - Be sure POWER is fully turned to CAMERA position.
- 2 Press D. ZOOM to select D.ZOOM1 or D.ZOOM2.**
 - once** : D.ZOOM1 (from 20X to 40X)
 - twice** : D.ZOOM2 (from 20X to 300X)
 - three times** : Turn off D.ZOOM
- 3 Press REC/PAUSE to start recording and press POWER ZOOM to zoom in or zoom out.**
 - The magnification level is always displayed in the EVF or the LCD monitor when DISPLAY is set to ON. (See pages 16, 18.)
- 4 Press D.ZOOM to turn off Digital Zoom so that no indication appears.**

Note

- The normal optical zoom functions from 1X to 20X.
- Because the image is enlarged digitally, the picture may become distorted when higher magnification levels are used.
- When the level falls below 20X, the normal zooming function will resume.
- Focus distance becomes 4 feet (1.2 m) if the lens is in full telephoto.


VCR mode

- A Set POWER to VCR.**
 - The POWER lamp lights red.
 - Be sure POWER is fully turned to VCR position.
- B Press PLAY to start playback.**
- C Press D.ZOOM.**
 - The center portion of the image doubles in size.
- D Press D.ZOOM again for normal image size.**

Special Features

White Balance


Auto White Balance automatically maintains optimum color balance in most lighting conditions. However, when using Digital Functions, etc., you may get better results using the manual adjustment.

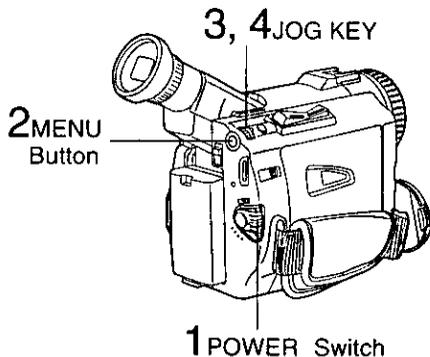

- 1 Set **POWER** to **CAMERA**.
 - The **POWER** lamp lights red.
 - Be sure **POWER** is fully turned to **CAMERA** position.
- 2 Press **MENU** to display the menu screen.
- 3 Rotate **JOG KEY** to select **ADJUST**, and then press **JOG KEY** to display the **CAMERA ADJUST** menu screen.
- 4 Rotate **JOG KEY** to select **W.BALANCE**, and then press **JOG KEY** repeatedly to select **AUTO**, Indoor halogen lamp "☀", or Outdoors "☀".
 - ☀ : When the source illumination is a halogen lamp.
 - ☀ : When shooting outdoors on a sunny day.**AUTO** : Automatically maintains optimum color balance in most lighting conditions.

Recording Still Pictures


You can record still pictures of any desired duration together with sound.

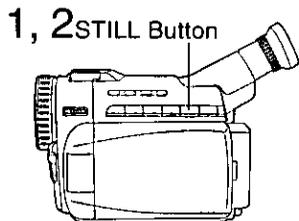

- 1 While in **RECORD** mode, press **STILL** and hold for **2 seconds** to capture a still picture. The captured still picture will be recorded together with sound.
- 2 Press **STILL** once again to release the still picture. The camera will resume recording real-time pictures.

MAGICVU/OLUX

MAGICVU allows you to record subjects in comparatively dark places.

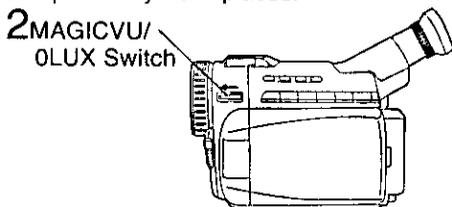

- 1 Set **POWER** to **CAMERA**.
 - The **POWER** lamp lights red.
 - Be sure **POWER** is fully turned to **CAMERA** position.
- 2 Slide **MAGICVU/OLUX** to **ON**.
 - A black and white image appears.
 - You can select the color of image: B/W, green, or blue. (See page 16.)
 - To cancel this feature, slide **MAGICVU/OLUX** to **OFF**.

Note



- The subject can be up to 3 m (9 feet) away.

Program AE

The Auto Exposure feature can be used to make quality recordings in a variety of scene situations.

Note

- When MAGICVU is ON, Program AE and H.S.S. cannot be set in the menu.

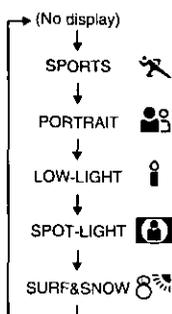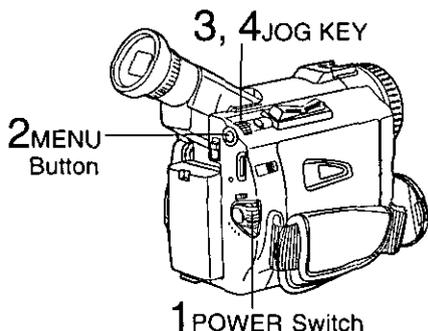

Note

SPORTS mode

- The recorded images will not be so blurred when they are viewed later using slow or still picture playback.
- When playing back a sports mode recording, the movement may appear slightly jerky.
- Do not use this mode when recording under fluorescent, mercury, or sodium lighting. These types of lights will affect the color and brightness of the images.
- A vertical band of light might appear when recording objects that are brightly illuminated or which are highly reflective.
- If the amount of light is insufficient, the SPORTS "X" indicator will flash in the EVF or the LCD monitor.
- The image may flicker if this mode is used indoors.

- 1
- 2
- 3
- 4
- 5

Set **POWER** to **CAMERA**.

- The **POWER** lamp lights red.
- Be sure **POWER** is fully turned to **CAMERA** position.

Press **MENU** to display the menu screen.

Rotate **JOG KEY** to select **ADJUST**, and then press **JOG KEY** to display the **CAMERA ADJUST** menu screen.

Rotate **JOG KEY** to select **PROG.AE**, then press **JOG KEY** repeatedly to select one of the five modes shown below.

Repeat steps 2~4 to select **OFF** to cancel this feature.

Mode	Indication
	For recording fast action scenes.
	For recording only subjects in the foreground, while ignoring subjects in the background.
	For recording in extreme low light conditions.
	Recording in situations where subjects are under a spotlight(s).
	For recording in locations with a high degree of "Dazzle," such as snow slopes and the seashore.

PORTRAIT mode

- The image may flicker if this mode is used indoors.

LOW-LIGHT mode

- Scenes recorded in extremely low light levels may not come out properly.

SPOT-LIGHT mode

- If the recorded subject is extremely bright, the picture may appear whitish.

SURF&SNOW mode


- If the recorded subject is extremely bright, the picture may appear whitish.
- It is not possible to select the SPORTS mode or PORTRAIT mode together with the GAIN UP in the Digital function camera menu.

Special Features

Special Features

Other Digital Functions

Use the following features to add interest and professionalism to your recordings or playback. Select from twelve special effects.

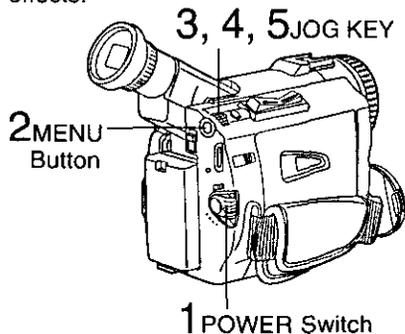

Types of Digital Functions

MIRROR

Symmetrical image from the current camera picture.

STROBE

The recording appears as a sequence of still frames.

MOSAIC

The picture appears in a mosaic pattern.

SLIM

The picture is expanded vertically.

TRAIL

The subject being recorded creates a trail when in motion.

STRETCH

The picture is expanded horizontally.

GAIN UP (Not available during playback)

Picture sensitivity is increased.

- Only Manual Focus is available.

WIPE

Successive scenes are separated in a way which simulates the drawing of a curtain.

MIX

The current scene is mixed in with the following scene during scene changes.

PinP

PinP (Still image) is displayed on the Main Picture.

SEPIA (Only available during playback)

The picture is played back in sepia, a brownish color, giving it an antique look.

MONO (Monotone) (Only available during playback)

The picture is played back in black-and-white.

44

1 Set **POWER** to **CAMERA** or **VCR**.

- The **POWER** lamp lights red.
- Be sure **POWER** is fully turned to **CAMERA** or **VCR** position.

2 Press **MENU** to display the menu screen.

3 Rotate **JOG KEY** to select **D.FUNCTION** in the **CAMERA** mode menu screen or **PLAY FUNCTION** in the **VCR** mode menu screen, then press **JOG KEY** to display the **CAMERA FUNCTION** or **VCR PLAY FUNCTION** menu screen.

4 Rotate **JOG KEY** to select **D.FUNCTION**, and then press **JOG KEY** repeatedly to select one of the Digital Functions listed on the left.

5 To cancel the Digital Function, press **JOG KEY** repeatedly to select **OFF**.

Note

- The **EIS** and **Digital Zoom** features are turned off automatically when one of the Digital Functions listed at left is selected.

To use the WIPE function

- In Camera mode, set the "D.FUNCTION" item in the main menu screen to "WIPE". (See page 15.)
- Press **REC/PAUSE** to start recording.
- Press **REC/PAUSE** to pause the recording. The last scene will be memorized.
- Press **RECORD/PAUSE** to start recording again. The new scene will take the place of the memorized scene.

To use the MIX function

- In Camera mode, set the "D.FUNCTION" item in the main menu screen to "MIX" (see page 15). Then, perform steps b-d above.

The memorized scene and the new scene will appear mixed as the scene changes from one to the other.

Note




- When **Photo Title** is set, **WIPE/MIX** mode becomes **Photo Title**. When **Photo Title** is finished, Digital Function turns **OFF**.

Picture in Picture (PinP)

You can display a PinP (still image) screen on the Main Picture.

Note

- PinP position is fixed at the bottom right of the screen.

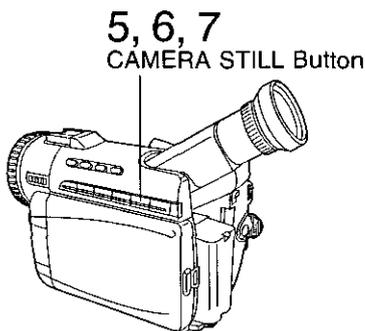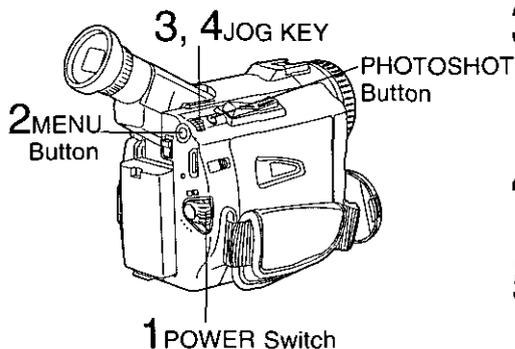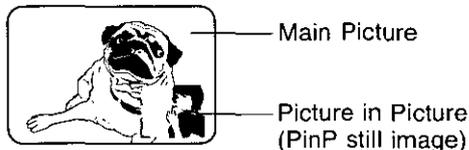

Before you begin



- Connect the Palmcorder to a power source. (See pages 11, 12.)

- 1 Set POWER to CAMERA.**
 - The POWER lamp lights red.
 - Be sure POWER is fully turned to CAMERA position.
- 2 Press MENU** to display the menu screen.
- 3 Rotate JOG KEY repeatedly** to select **D.FUNCTION**, then **press JOG KEY** to display the CAMERA FUNCTION menu screen.
- 4 Press JOG KEY** to select **PinP**.
 - Press MENU twice to exit this menu.
- 5 Aim at the scene you wish to place as PinP**, then **press CAMERA STILL** to freeze the image.
- 6 Press CAMERA STILL again** to place the frozen image as PinP.
- 7 Press REC/PAUSE** to record a scene with PinP image.
 - Press PHOTOSHOT to record a scene with PinP image in PhotoShot mode.
 - Press CAMERA STILL again to remove PinP image.



Strobe Multi Mode

In Strobe Multi Mode, you can select the rate at which a succession of still screens are captured from the playback picture.

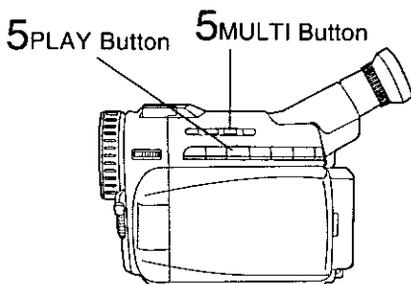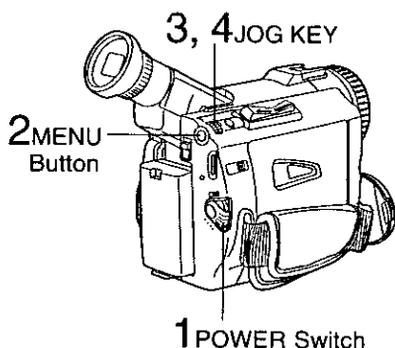

Note

- A Multi Image Playback screen cannot be output from the DV terminal or Digital Still Image terminal.
- A Multi screen will have slightly lower image quality.

Before you begin

- Connect the Palmcorder to a power source. (See pages 11, 12.)


- 1** Set **POWER** to **VCR**.
 - The **POWER** lamp lights red.
 - Be sure **POWER** is fully turned to **VCR** position.
- 2** Press **MENU** to display the menu screen.
- 3** Rotate and press **JOG KEY** to select and set **MULTI SETTING**.
- 4** Press **JOG KEY** to select **SPEED**, then press repeatedly to set desired speed.

Strobe Speeds

Strobe Speeds	9 screen capture time
FAST	Every 0.3 seconds
NORM	Every 0.6 seconds
SLOW	Every 1.0 seconds

- Press **MENU** twice to exit.

- 5** Press **PLAY** to start playback. Press **MULTI** at the point you want to start capturing.
 - A succession of 9 screens will be captured, and playback will stop.

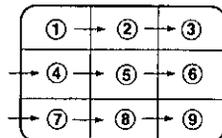

- Press **MULTI** to return to the normal **STILL** screen.
Press **PLAY** to start playback.
Press **STOP** to stop playback.

Auto Focus

The Palmcorder automatically adjusts the focus over the entire zoom range.


Manual Focus

Use Manual Focus (MF) when recording ...

- a subject through glass.
- a scene where the subject is far from the Palmcorder and there are objects in the foreground.
- a subject with distinct horizontal stripes.
- a subject not centered in the Viewfinder.
- subjects with shiny surfaces.
- an obliquely angled subject.
- a bright, flat subject such as a white wall.
- in low light situations.
- a scene with fast motions, like a golf swing.

Re-focusing may be required

- when your Palmcorder is aimed at a new scene.

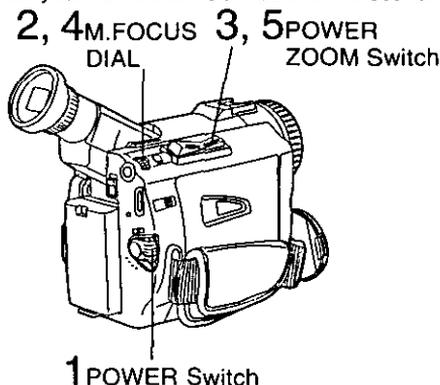


Macro Focus (for close-ups)

Press the "W" side of POWER ZOOM to the maximum wide angle position.

Auto Focus will function with the subject as close as 1 inch (25 mm) in front of the lens.

Backlight

Use when recording a subject that is darker than the surrounding scene, in a shadowed area, or when the light source is in back of your subject.

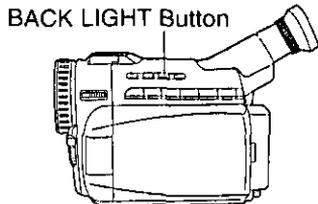

- 1 Set POWER to CAMERA.**
 - The POWER lamp lights red.
 - Be sure POWER is fully turned to CAMERA position.
- 2 Press M.FOCUS DIAL** so that "MF" (Manual Focus) appears in the EVF or the LCD monitor.
- 3 Press and hold POWER ZOOM "T" side (Telephoto)** until the lens is at maximum zoom in.
- 4 Turn M.FOCUS DIAL** until the picture is in focus.
 - It may be necessary to back away from the subject to focus the image properly.
- 5 Press POWER ZOOM to "W" or "T" as desired.**
 - The subject will remain in focus over the entire zooming range.
 - It may be necessary to back away from the subject to focus the image properly.

Note

- DISPLAY must be set to ON for MF, AE, W.BALANCE, or BACK LIGHT to be displayed on the LCD or EVF.


Press BACK LIGHT in Record mode to activate the Backlight feature.

The Indicator "⊙" will appear in the EVF or LCD monitor.

Press BACK LIGHT again to cancel the Backlight feature.

Note

- The Indicator "⊙" will not appear in the EVF or LCD monitor when OFF is selected in the DISPLAY menu.

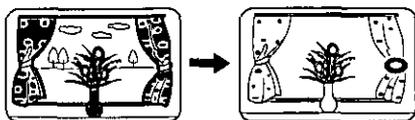

EVF or LCD monitor indication.

Special Features

High Speed Shutter


To record high speed motion (e.g. tennis stroke) for improved STILL or SLOW MOTION playback when watching the tape on this Palmcorder.

Auto Shutter

In the AUTO mode (no indication in the EVF and LCD monitor), the Palmcorder will automatically adjust the shutter speed (up to 1/350).

- AUTO mode is automatically selected whenever the POWER Switch is set to CAMERA.

Manual Selection


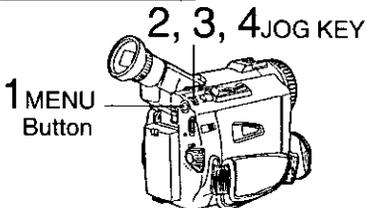


Note

- For proper color reproduction, it is recommended that you use this feature outdoors. For indoor High Speed Shutter recording, additional halogen or tungsten light should be provided. Fluorescent light will degrade the picture quality.
- This feature requires ample light. More light is required for the fastest shutter speeds.
- The Auto Focus system may not operate properly in insufficient light when using the High Speed Shutter.
- When PROG.AE is ON, you cannot manually select the shutter speed.
- When MAGICVU is ON, Program AE and H.S.S. cannot be set in the menu.

Audio/Video Fade In/Out


You can make smoother scene transitions for a more professional look.

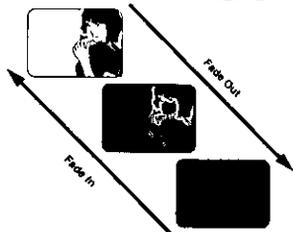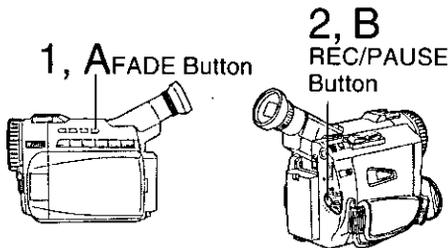

Before you begin

- Connect the Palmcorder to a power source. (See pages 11, 12.)
- Set POWER Switch to CAMERA.
- Insert a cassette with record tab. (See page 6.)

- 1 Press **MENU** to display the Camera mode menu in the EVF or the LCD monitor.
- 2 Rotate and press **JOG KEY** to select **ADJUST**, then rotate and press **JOG KEY** to select **H.S.S.**
- 3 Press **JOG KEY** to select **SET**.
 - SHUTTER SPEED menu is displayed.
- 4 Rotate **JOG KEY** to choose one of the following shutter speeds.
 - Press **MENU** three times to exit.

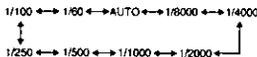

Fade In

Starting the first scene with "fade in" is very effective.

- 1 In REC/PAUSE mode, hold down **FADE** until the picture fades out.
- 2 Press **REC/PAUSE** to start recording.
- 3 Release **FADE** and the picture will gradually fade in.

Fade Out


Use to create a soft ending or (together with fade in) for a soft transition from one scene to the next.

- A** During recording, hold down **FADE** until the picture fades out.
- B** Press **REC/PAUSE** to pause the recording.

Audio Dubbing using the External or Built-in Microphone


The original sound can be replaced with new sound using the built-in Palmcorder microphone or an external microphone.

External Microphone with M3 connector (not supplied)

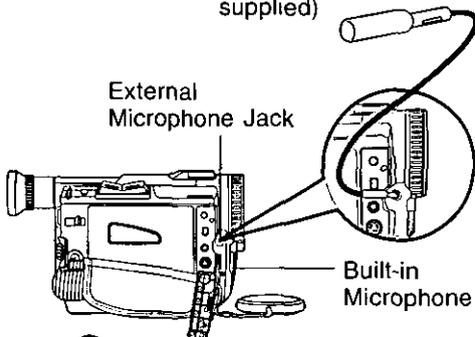


External Microphone Jack

Built-in Microphone

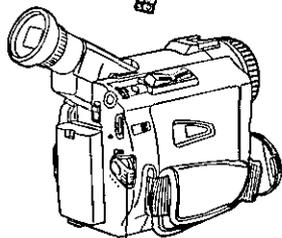

1 POWER Switch

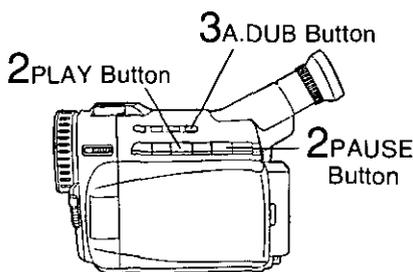


2 PLAY Button

3 A.DUB Button

2 PAUSE Button

Optional

3 A.DUB Button

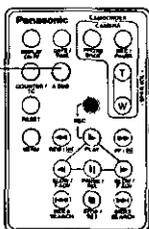

Before you begin

- Connect the external Microphone (if used).
- Turn on the Palmcorder.
- Insert a pre-recorded tape to be dubbed.

The AUDIO-REC setting in CAMERA MENU mode should be as follows:

12 bit	The original sound is recorded on ST (Stereo) 1, and the new sound will be recorded on ST (Stereo) 2.
16 bit	The original sound is replaced with the new sound.

- Select 12 bit if you do not want the original sound to be completely replaced during an audio dub.
- If you dub over a tape which has both 12 bit and 16 bit audio recordings on it, keep in mind that the original 16 bit audio portion will be completely replaced.

1

Set POWER to VCR.

- The POWER lamp lights red.
- Be sure POWER is fully turned to VCR position.
- If you have the Optional Remote Control, you can set the Palmcorder to stop automatically at a specified point on the tape. See "Memory-Stop Editing" on page 50.

2


Press PLAY.

Then press PAUSE where you want dubbing to begin.


3

Press A.DUB on this unit (for 3 seconds) or on the remote control (optional, page 64) to put the Palmcorder in the Audio Dub mode.

- "A.DUB" flashes in the EVF or the LCD monitor.

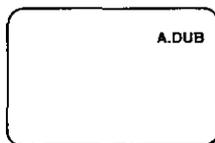

Special Features

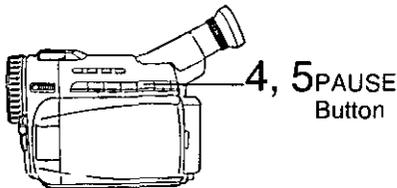

To listen to the desired audio sound, set the AUDIO setting of the VCR mode MENU (see page 17) as follows:

AUDIO:The following selections are available for 12 bit AUDIO dubbed recordings only (sound recorded in SP mode only).

ST 1	Set this position to listen to the original sound.
ST 2	Set this position to listen to the audio dubbed sound.
MIX	Set this position to listen to both the original sound and the audio dubbed sound.

Note


- 16 bit dubbed sound completely erases the original 16 bit recorded sound.
- If you dubbed using 12 bit AUDIO recording and then selected AUDIO-MIX in the menu for playback, the sound will be stereo regardless of the AUDIO-OUT setting.
- If you recorded in LP mode, you cannot use the A.DUB feature.

Memory-Stop Editing (Optional Remote Control Only, page 64)

You can set an automatic Dubbing stop point.

Optional

D RESET Button
A MENU Button

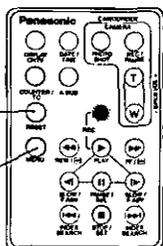

- 4** Press **PAUSE** to start Audio Dubbing.
- Connect the Palmcorder to the TV in order to monitor the sound. (See page 31.)

INCOMPATIBLE
TAPE

Only NTSC (National Television Standards Committee) recorded tapes can be audio dubbed. The following screen appears if the tape was not recorded in NTSC format.

- 5** Press **PAUSE** to stop Audio Dubbing.

- If the microphone used for dubbing gets too near the speaker of your TV, a howling noise (feedback) may occur.
- If the tape position is in or was started in a blank section, you cannot use the A.DUB feature.

- A** Press **MENU** to display the VCR menu screen.

- B** Rotate **JOG KEY** to select **DISPLAY SETTING**, and then press **JOG KEY** to display the DISPLAY SETTING menu.


- C** Rotate **JOG KEY** to select **DISPLAY**, and then press **JOG KEY** to set to **MEMORY**.

- D** Press **MENU** two times to exit MENU mode. Then, press **RESET** on the remote control to reset the Counter Memory to M 0:00:00.

Now, rewind to the editing start point, and continue with steps 2-5. The tape will now stop automatically at "M 0:00:00".

Copying your Tapes to S-VHS or VHS Cassette

Source (Playing)
Palmcorder

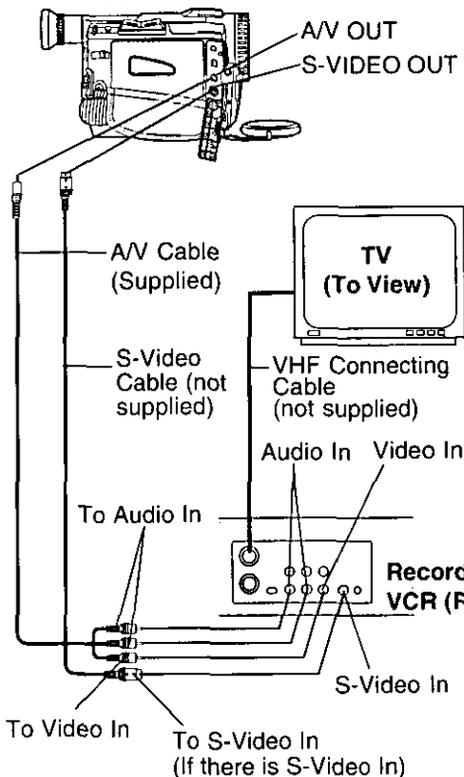

Before you begin

- Connect both Palmcorder and VCR to their power sources.
- Connect the Palmcorder to a VCR as illustrated left.
- Turn ON both units.
- Set the recording VCR's Input Signal Selector to **LINE**.
- Set the Palmcorder POWER Switch to VCR.

- 1** Insert a pre-recorded tape into the source (playing) Palmcorder and a blank tape, with record tab in place, into the target VCR (Recorder).
- 2** Press **PLAY** on the Palmcorder. When the tape reaches the point you want to start dubbing, press **PAUSE**.
- 3** Place the VCR into **REC/PAUSE** mode. (See VCR manual.)
- 4** Simultaneously, press **PAUSE** on both units to begin copying.
- 5** Press **STOP** on both units when copying is completed.

Note

- For technical reasons, dubbing a tape may reduce its quality.
- Press **DISPLAY ON TV** on the Palmcorder remote control (optional, page 64) to eliminate EVF/LCD Monitor indications.
- If the Time Code is displayed in the EVF or LCD monitor, it cannot be reset.
- Only the **DATE/TIME**, when displayed, will be recorded on the tape.

Monitor with your TV

- Turn the TV ON and select its VCR channel (either CH3 or CH4).
- Set the VCR/TV Selector on the recording VCR to VCR.

CAUTION:



Unauthorized exchanging and/or copying of copyrighted recordings may be copyright infringement.

Special Features


Copying from Digital Equipment (dubbing)

High quality digital-to-digital copying can be accomplished if both Palmcoders incorporate the DV Input/Output (i.LINK) Connector (DV interface cable (i.LINK) is not supplied).

Source (Playing) Palmcorder

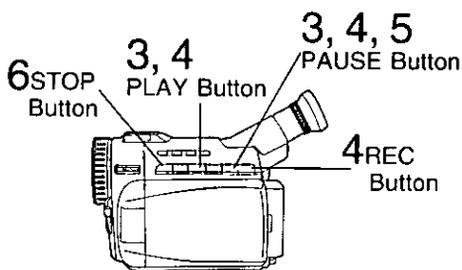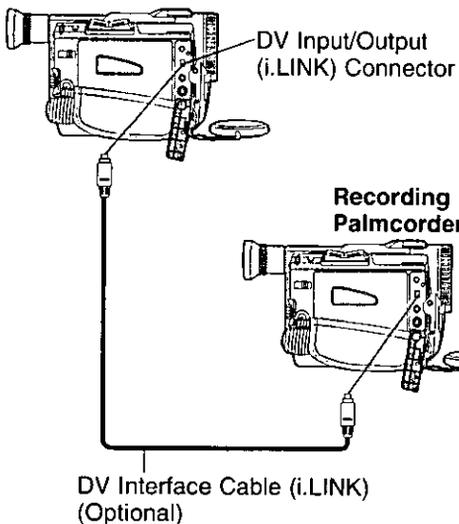

Optional

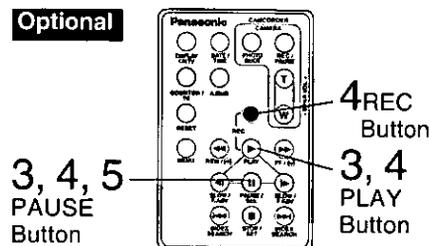

Before you begin

- Connect both Palmcoders to their power sources.
- Connect the two Palmcoders using the DV interface cable (i.LINK) (4-pin to 4-pin).
- Turn both Palmcoders ON.

- 1** Insert a pre-recorded tape into the source (playing) Palmcorder, and set **POWER** to **VCR**.
- 2** Insert a blank tape with the record tab closed into the target (recording) Palmcorder and set **POWER** to **VCR**.
- 3** Press **PLAY** on the source Palmcorder. When the tape reaches the point you want to start dubbing, press **PAUSE**.
- 4** Hold down **REC** and press **PLAY** on the target (recording) Palmcorder or on the remote control (optional, page 64). Press **PAUSE** to pause the tape at the starting point of the dub.
- 5** Simultaneously, press **PAUSE** on both units to begin dubbing.
- 6** Press **STOP** on the recording unit, and then press **STOP** on the playing unit to end dubbing.

Note

- When two Palmcoders are used for dubbing, it is recommended that the remote control VCR1 or VCR2 setting be used to avoid improper-operation.
- When two Palmcoders are connected using the DV interface cable (i.LINK) (not supplied), a Video Editing Controller cannot be used.
- Do not connect both an S-Video Cable or A/V Cable and a DV Interface Cable (i.LINK).

CAUTION:

Unauthorized exchanging and/or copying of copyrighted recordings may be copyright infringement.

Transferring Your Images

You can transfer images from your Palmcorder tape to your PC (Personal Computer).

System Requirements:

- IBM PC/AT or compatible
- Intel Pentium II Processor: 266 MHz or more
- Windows 98/Me preinstalled PC with USB port
- RAM: 64 MB or more
- High color (16 bit) or more
- Resolution 800 x 600 (SVGA) or more
- 15 MB minimum available hard disk space (for CARDLINK (for USB) or PHOTOVU LINK/Movie Messenger)
- 120 MB minimum available hard disk space (for USB Motion image capture)
- CD-ROM drive (for installation)
- Mouse or other pointing device

Palmcorder USB Device Driver : Software to connect your Palmcorder and your PC using USB Cable.

PHOTOVU LINK/Movie Messenger : Software to transfer images from your Palmcorder to your PC.

CARD LINK (for USB) : This software to transfer images between the Memory Card and your PC.

Note

- The Windows 2000 driver is currently not available, but will be available in the future on our website at www.panasonic.com/video.

Software Installation (Windows 98/Me)


Caution

- Please install Palmcorder USB Device Driver first before connecting the Palmcorder and your PC using USB Cable. Once Palmcorder USB Device Driver is installed, you must restart your computer for installation to take effect.

1 Turn on the PC (Personal Computer) and start up Windows 98/Me.

2 Insert the supplied Software CD-ROM into the CD-ROM drive.

3 Select and click the icon you want to install.

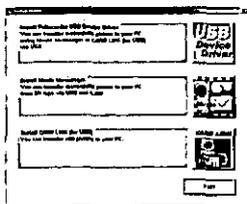

Palmcorder USB Device Driver : Click 

PHOTOVU LINK/Movie Messenger : Click 

CARD LINK (for USB) : Click 

4 Follow the instructions as they appear on your PC screen.

Note

- If a window does not appear automatically, click the "Start" button on your desktop and then click "Run". When the Run box is open, type in "D:\InstMenu.exe" where "D:" is the drive letter of your CD; then click "OK".
- If you attempt to install the next Software before the previous Software installation is completed, "Error" may appear. In this case, click [OK] and install the next Software from the menu.

Transferring Your Images

Notes on PHOTOVU LINK/Movie Messenger and CARD LINK (for USB) operation

- For PHOTOVU LINK/Movie Messenger, do not connect the i.LINK and USB terminals to the Palmcorder at the same time.
- Make sure Palmcorder power is not shut off during use, your PC system may become unstable, therefore it is recommended that the AC Adaptor be used as the power source. (Be especially careful when recording in M-CARD or CAMERA mode as the power eventually shuts off automatically if a tape is inserted.)
- For PHOTOVU LINK/Movie Messenger, if the play, stop, fast forward, and rewind functions are operated using the Palmcorder buttons, the image may not be captured properly. Use Palmcorder Operation Buttons displayed on the PC screen.

Uninstalling Application Software


- 1 Click "Start," "Settings," and "Control Panel."
- 2 Double-click on "Add/Remove Programs" in the "Control Panel."
- 3 Select the application software you want to remove, and then click [Add/Remove].

Note

- Before uninstalling CARD LINK (for USB), right-click on the CARD LINK (for USB) Monitor, then left-click on "Exit" to close CARD LINK (for USB) Monitor.
- If the "Locked File Detected" dialog box appears while uninstalling the CARD LINK (for USB), close CARD LINK (for USB) Monitor as described above, then click on [Retry].



Connection

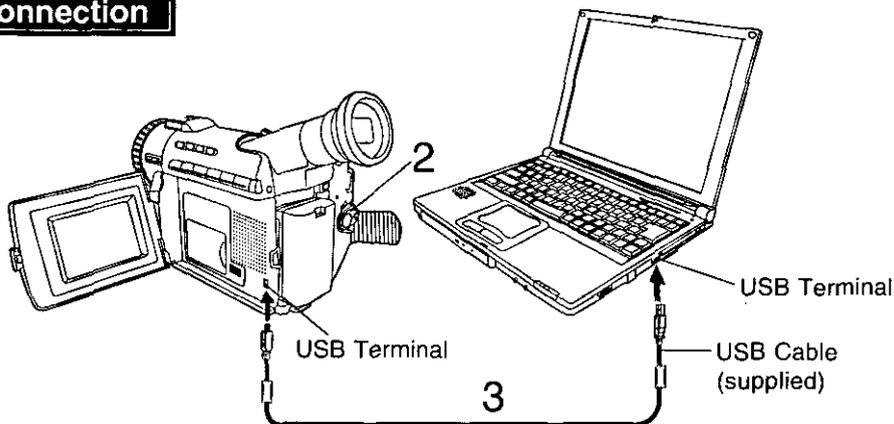

- 1 Turn on your PC.
- 2 Set the Palmcorder POWER to VCR.
- 3 Connect the Palmcorder to your PC (Windows) using the USB Cable (supplied).

Note


- For extended use, it is recommended to use the AC Adaptor as a power source.

One Touch Transfer

The images stored on the Memory Card can easily be transferred to the PC by pressing the TRANSFER Button.

Note

- Before using this feature, make sure the CARD LINK (for USB) monitor icon is displayed.
- Double clicking the CARD LINK Monitor icon displays a dialog box in which the save location for the collective transfer can be changed.

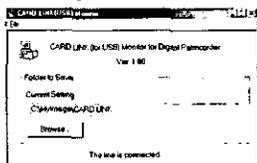

3 TRANSFER Button



Before you begin

- Set POWER to OFF before inserting a recorded Memory Card. (See pages 32, 33.)
- Turn your PC on.


- 1 Set Palmcorder POWER to CAMERA or slide M-CARD Lock Switch to unlock and set to M-CARD.** (See pages 9, 10.)
- 2 Connect the Palmcorder to your PC (Windows) using the USB Cable (supplied).** (See page 54.)
 - "CONNECT WITH PC" is displayed on the LCD monitor.
- 3 Press TRANSFER.**
 - CARD LINK (for USB) application is run automatically and images stored on the memory card are transferred to your PC and saved. (If an image to be transferred already exists, that image will be skipped over and not transferred.)

Note

- JPEG image format (only image data that can be played back on Palmcorder) can be transferred from the PC to the Palmcorder.

Running the CARD LINK (for USB)

You can transfer images between the Memory Card and your PC.

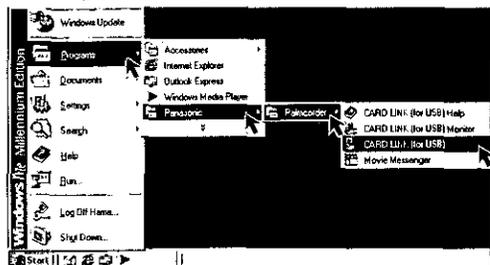

- 1 Repeat steps 1 and 2 above.**
- 2 Click on "Start," "Programs," "Panasonic," "Palmcorder," then "CARD LINK (for USB)."**
- 3 "CARD LINK (for USB)" is opened.**

Note

Refer to Help for information about application operations and Error messages.

While CARD LINK (for USB) is running, do not perform the following operations...


The PC system may become unstable.

- Change the screen area or color pallet in the Display Properties window.
- Turn the Palmcorder power switch ON or OFF while connecting the Palmcorder to your PC using the USB Cable.
- Connect/disconnect the USB Cable.
- Insert/remove a Memory Card.

Transferring Your Images

Using Memory Card Image Data (CARD LINK (for USB))

Pictures captured with Palmcorder can be transferred to your PC.

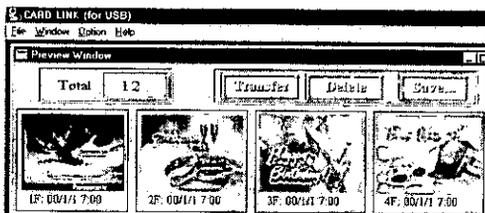


Note

- If, while transferring the image to your PC, the displayed picture appears abnormal, restart the PC application and turn Palmcorder POWER off, and then back on.

Using PC Image Data (CARD LINK (for USB))

You can use JPEG or Bitmap files from your computer for Photo Title (see page 38) by transferring them to the Palmcorder via PC connection.

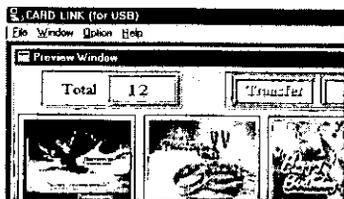

Before you begin

- Set POWER to OFF before inserting a recorded Memory Card. (See pages 32, 33.)
- Make Palmcorder-PC connections. (See page 54.)
- Turn your PC on. (See page 54.)
- Set Palmcorder POWER to M-CARD. (See page 10.)
- Repeat steps 1 and 2 to run the CARD LINK (for USB). (See "Running the CARD LINK (for USB)" on page 55.)

- 1 **Select the image data you want to transfer to your PC.**
 - The selected image will be underlined in green.

- 2 **Click on:**
Transfer

- The picture image is transferred to your PC and displayed. Transfer Dialog will appear on the PC. The image is captured when the full screen image appears on the PC.

Delete

- Confirmation Dialog will appear on the PC. Click "OK". The selected images of the Memory Card are deleted.

Save


- The picture image is transferred to your PC and displayed. [Save as] dialog box will appear.

- 1 **Click on "File," then Click on "Open."**

- At your PC, please select and open the data (.jpg or .bmp) you want to transfer to the Palmcorder.

- 2 **Click on "File," select "Data out to camera," then select Fine or Normal mode.**



- Your computer image data is transferred to the Palmcorder.

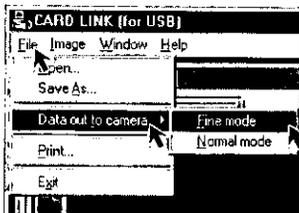

Transferring Your Images

Running the PHOTOVU LINK/Movie Messenger

You can transfer Motion images and Still images from your Palmcorder tape to a PC.

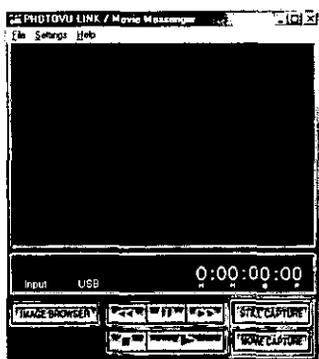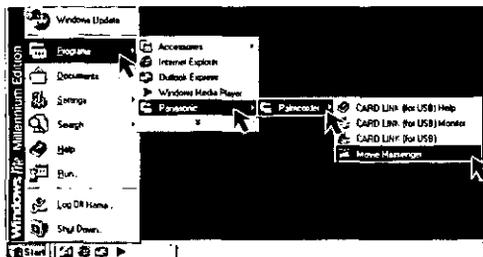

Before you begin

- Insert a recorded tape. (See page 9.)

- 1 Set Palmcorder POWER to VCR.
- 2 Connect the Palmcorder to your PC using the USB Cable (supplied) or DV interface Cable (i.LINK). (See pages 54, 62.)
- 3 Click on "Start," "Programs," "Panasonic," then "Movie Messenger."
- 4 "PHOTOVU LINK/Movie Messenger" is opened.

Note

Refer to Help for information about application operations and Error messages.

How to insert the USB Cable or DV Interface Cable (i.LINK)

- A Set Palmcorder POWER to VCR.
- B Connect the Palmcorder to your PC using the USB Cable (supplied) or DV interface Cable (i.LINK).
- C Start up the PHOTOVU LINK/Movie Messenger.

How to remove the USB Cable or DV Interface Cable (i.LINK)

- A Close the PHOTOVU LINK/Movie Messenger.
- B Remove the USB Cable or DV Interface Cable (i.LINK) from the Palmcorder.
- C Set Palmcorder POWER to OFF.

While PHOTOVU LINK/Movie Messenger is running, do not perform the following operations...


The PC system may become unstable.

- Change the screen area or color pallet in the Display Properties window.
- Turn the Palmcorder power switch ON or OFF while connecting the Palmcorder to your PC using the USB Cable or DV Interface Cable (i.LINK).
- Change the Palmcorder mode (VCR/CAMERA).
*Close the application before changing the Palmcorder power switch.
- Connect/disconnect the DV Interface Cable (i.LINK).
- Connect/disconnect the USB Cable.

Transferring Your Images

Using Tape Image Data (PHOTOVU LINK/Movie Messenger) (USB)

By connecting the Palmcorder and PC with the USB Cable, you can transfer Motion images and Still images saved on the DV Tape directly to your PC.

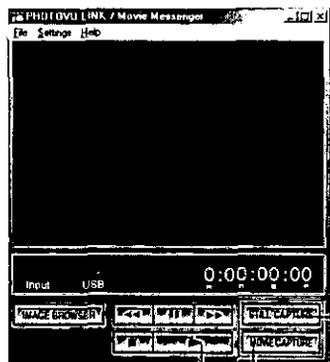

2 PLAY Button

3 STILL
CAPTURE

3 MOVIE
CAPTURE



To capture Still images

- 3 Click on [STILL CAPTURE] at the point you wish to capture an image.
 - Repeat step 3 to continue capturing images.
 - Captured Still images are saved to the PC, and you can playback the saved images on the Image Browser. (See page 59.)

Before you begin

- Insert a recorded tape. (See page 9.)
- Make Palmcorder-PC connections. (See page 54.)
- Turn your PC on. (See page 54.)
- Set Palmcorder POWER to VCR.

- 1 Repeat steps 1-4 on page 57 to run the PHOTOVU LINK/Movie Messenger.

Note

- When the USB Cable is connected, the input display will automatically become USB. If it is not USB, please confirm the connection. Then, close and restart the software.

- 2 Click ► (PLAY) on PC screen to playback the DV tape.
 - The playback screen cannot be viewed on the PC. Please use the LCD monitor on the Palmcorder for confirmation.

To capture Motion images

- 3 Click on [MOVIE CAPTURE] at the start point you wish to capture a Motion image.
- 4 Click [MOVIE CAPTURE] or [STOP] to end capture.
 - "Now Searching" is displayed.
 - The DV Tape is rewound to the point at which the capture was started. The Motion image is then transferred to the PC.
 - "Data transfer is now in progress" is displayed on the PC screen.
 - The maximum capture time is approx. 30 seconds. Capture stops automatically at the end of 30 seconds.


Note

- Motion images cannot be captured if data contains the following...
 - A change between 12 bit and 16 bit.
 - A change between SP and LP mode.
- During transfer to the PC, the Motion images will not be displayed on the PC screen.
- Transfer takes from about 30 to 50 seconds for every 1 second of the Motion image.

- 5 To capture other Motion images, repeat steps 3-4.


Playing back the saved Motion and Still images (PHOTOVU LINK/Movie Messenger)

You can playback the saved Motion images and Still images (see page 58) for confirmation.

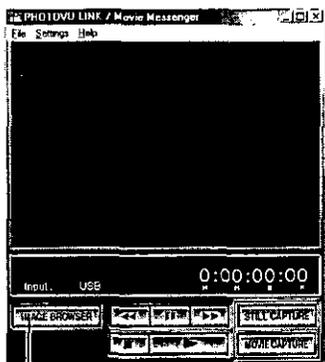


2 IMAGE BROWSER

3 Pictures

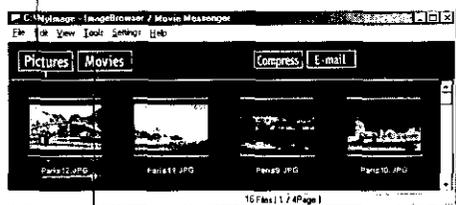

3 Movies

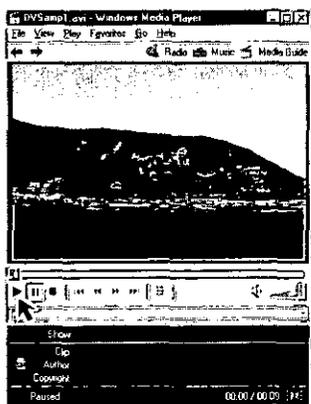

1 Repeat steps 1-4 on page 57 to run the PHOTOVU LINK/Movie Messenger.

2 Click [IMAGE BROWSER] to display the Image Browser screen.

To view Motion images

3 Click on [Movies].

- The first part of each Motion image will be displayed as a list.

4 Double click on the desired Motion image to display the playback screen.

- Click ► to start Motion image playback.

To view Still images

3 Click on [Pictures] to display the Still image list.

4 Double Click on the desired image to open it.

Note

- If the image cannot be opened, please refer to the software Help menu.

Transferring Your Images

To select the e-mail Software (PHOTOVU LINK/Movie Messenger)

You can transfer and compress your Motion images and Still images as attachments to your e-mail easily.


Note

The e-mail Software must support MAPI (Messaging Application Programming Interface).


Below are some e-mail Software which support MAPI:

Microsoft Outlook, Microsoft Outlook Express, Netscape Messenger:

- Outlook(R) Express 5x, Outlook97, Outlook98, Outlook2000
- Outlook Express 4x
- Other MAPI applications [Netscape(R) Messenger 4.5x and so on]

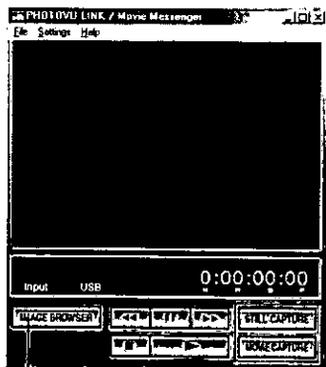

2 IMAGE BROWSER

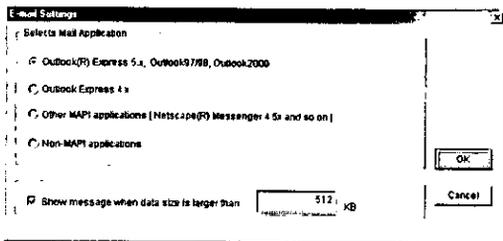

Before you begin


- Insert a recorded tape. (See page 9.)
- Make Palmcorder-PC connections. (See page 54.)
- Turn your PC on. (See page 54.)
- Set Palmcorder POWER to VCR.

- 1** Repeat steps 1~4 on page 57 to run the PHOTOVU LINK/Movie Messenger. (See Note below.)
- 2** Click [IMAGE BROWSER] to display the Image Browser screen.
- 3** Select "E-mail Settings" from "Settings".
- 4** Select the e-mail software you are using, then click [OK].

Note

- If the e-mail software does not support MAPI, clicking on [E-mail] of Movie Messenger will not automatically run the e-mail software. Please run the e-mail software before doing step 1 above.



Attaching captured Motion and Still images to your e-mail

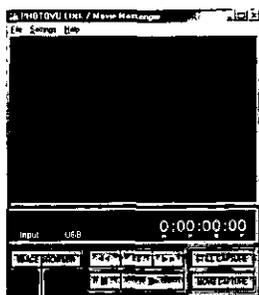

2 IMAGE BROWSER

4 Compress

4 E-mail

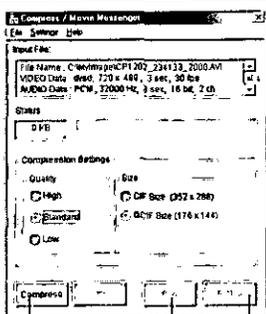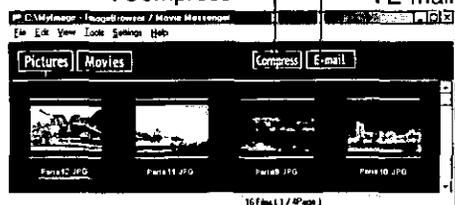

5 Compress 5 Play 6 E-Mail

Attaching Still images to e-mail

- 3 Click on [Pictures] to display the Still image list.
- 4 Select the image to be attached, then click on [E-mail].
 - The e-mail software will be run automatically and the selected image will be attached to the e-mail. (See Note right.)

Before you begin

- Insert a recorded tape. (See page 9.)
- Make Palmcorder-PC connections. (See page 54.)
- Turn your PC on. (See page 54.)
- Set Palmcorder POWER to VCR.

- 1 Repeat steps 1-4 on page 57 to run the PHOTOVU LINK/Movie Messenger.
- 2 Click [IMAGE BROWSER] to display the Image Browser screen.

Attaching Motion images to e-mail

- 3 Click on [Movies] to display a Motion image list.
- 4 Select the Motion image to be attached, then click on [Compress].
 - Follow the menu to perform the compression settings.
- 5 Clicking on [Compress] will compress the selected image.
 - "Successfully Done" is displayed on the PC screen.
 - Click [Play] to open the Movie Messenger Player screen. You can confirm the compressed Motion image by clicking on [Play].
- 6 Clicking on [E-Mail] will automatically attach the compressed Motion image to your e-mail. (See Note below.)
 - When the recipient opens the file you sent, this Movie Messenger Player screen appears. By clicking [Play], they can view the Motion Image.

Movie Messenger Player screen



Note

- Movie Messenger Player works with Windows 95, 98, or Me only.
- If your e-mail software is not supported by MAPI, pressing the [E-Mail] button will automatically open the folder containing the compressed file. To attach, drag and drop the file into your e-mail.

Transferring Your Images (i.LINK)

PC Connection with DV Interface Cable (i.LINK)

A live image can be transferred directly to your PC (Personal Computer) via a DV Interface Cable (i.LINK) (not supplied) using products and software from a number of editing software companies including Digital Origin, Canopus, and Pinnacle.


Using Products from these companies allows you to capture and edit live images onto your PC using the DV interface (i.LINK).

For more detailed information regarding editing software products from these companies, please visit their websites at:

www.digitalorigin.com

www.justedit.com

www.pinnaclesys.com

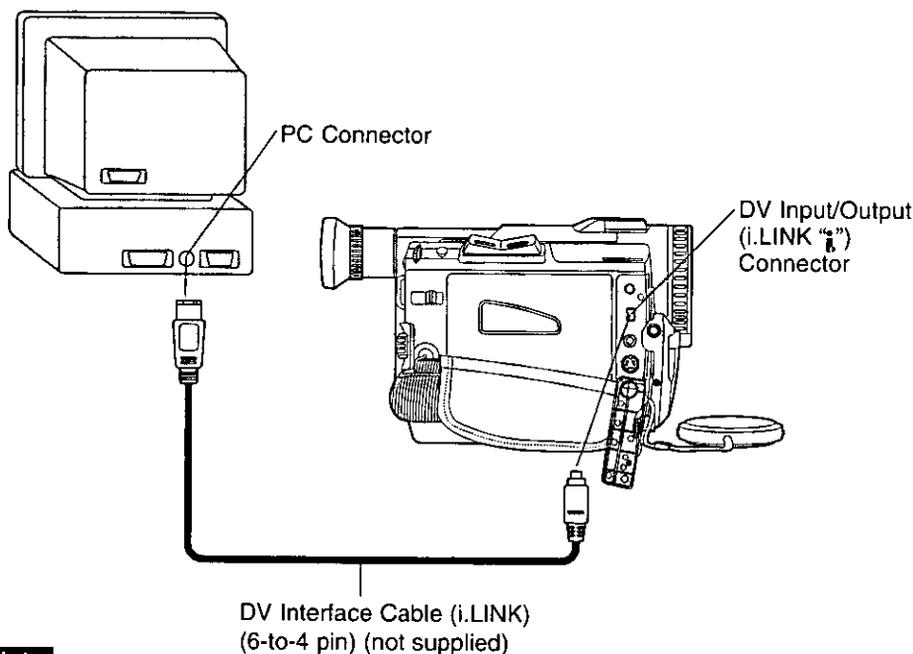

Note

- PC must be equipped with an i.LINK terminal.
- During Palmcorder playback, do not disconnect the DV Interface Cable (i.LINK) or turn the Palmcorder off as this may cause PC hang-up error to occur.
- For PHOTOVU LINK/Movie Messenger, do not use 2 i.LINK terminals on your PC at the same time.
- PHOTOVU LINK/Movie Messenger i.LINK (DV) operates normally with Windows 98SE or later operating system.
- PHOTOVU LINK/Movie Messenger i.LINK connection may not work with some DV Interface boards. In this case, use the software included with the board.
- 1394 (i.LINK) interface must conform to OHCI (Open Host Controller Interface Specification).


Transferring Your Images (i.LINK)

Using Tape Image Data (PHOTOVU LINK/Movie Messenger)

By connecting the Palmcorder and PC with the DV Interface Cable (i.LINK), you can transfer Motion images and still images saved on the DV Tape directly to your PC.

Note

- If PHOTOVU LINK/Movie Messenger does not work, please refer to page 62.

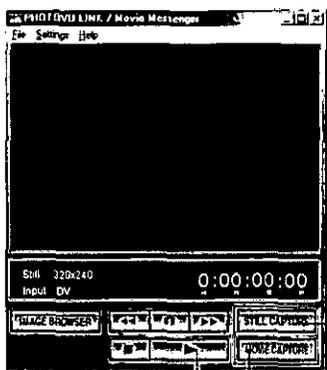

2 PLAY Button

3 MOVIE CAPTURE

3 STILL CAPTURE

Before you begin

- Insert a recorded Tape. (See page 9.)
- Make Palmcorder-PC connections. (See page 62.)
- Turn your PC on.
- Set Palmcorder POWER to VCR.
- **Run the Software after the DV Interface Cable (i.LINK) has been connected to the Palmcorder.**

- 1 Repeat steps 1~4 on page 57 to run the PHOTOVU LINK/Movie Messenger.

Note

- When the DV Interface Cable (i.LINK) is connected, the input display will automatically become DV. If it is not DV, please confirm the connection. Then, close and restart the software.

- 2 Click **PLAY** button on PC screen to playback the DV tape.
 - Please use the LCD monitor on the Palmcorder or PC screen for confirmation.





To capture Motion images

- 3 Click on **[MOVIE CAPTURE]** at the point you wish to capture a Motion image. Click on **[STOP]** to end capture.
 - The image is recorded to the PC in real time.
 - The maximum capture time is approx. 3 minutes.
 - When capturing data containing changes between 12 bit and 16 bit and/or between SP and LP mode, a separate file will be made for each mode.
 - Please refer to pages 59~61 for other functions.

To capture Still images

- 3 Click on **[STILL CAPTURE]** at the point you wish to capture an image.
 - Repeat step 3 to continue capturing images.
 - Captured Still images are saved to the PC, and you can playback the saved images on the Image Browser.

Palmcorder Accessory System

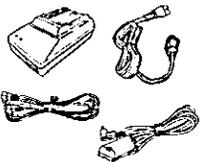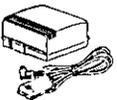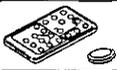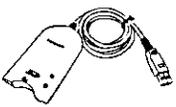Accessory #	Figure	Description	Price
PV-DAC11A		AC Adaptor with AC Cable and DC Cable	\$120.00
CGR-D08A/1B (Replaces CGR-D120A/1B)		800mAh / 1 h 30 min, Battery Pack	\$69.95
CGR-D16A/1B (Replaces CGR-D220A/1B)		1600mAh / 3 h, Battery Pack	\$99.95
CGP-D28A/1B		2800mAh/ 5 h, Battery Pack	\$129.95
CGR-D53A/1K (Replaces CGR-D815A/1B)		5300mAh / 9 h, Battery Pack	\$229.95
PV-DDC9		DV Interface Cable (i.LINK) (4-pin to 4-pin)	\$55.00
PV-DLT9		Color Enhancement Light	\$39.95
PV-DRC9		IR Remote Control	\$29.95
PV-H150		Carrying Case	\$49.95
PR-SD064 PR-SD032 PR-SD016		64 MB SD Memory Card 32 MB SD Memory Card 16 MB SD Memory Card	\$179.95 \$119.95 \$79.95
BN-SDCAPU/1B		SD USB Reader/Writer (compatible with MultiMediaCard)	\$79.95
BN-SDABPU/1B		SD PCMCIA Adaptor (compatible with MultiMediaCard)	\$79.95

Palmcorder Accessory System

Concerning the MultiMediaCard and SD Memory Card

MultiMediaCard

The MultiMediaCard is a compact, lightweight and removable external memory card. A great many fun-filled titles (preset titles) have been recorded on the supplied MultiMediaCard. These preset titles will also be erased when the Card is formatted.

SD Memory Card

The SD Memory Card (optional), which is the same size as the MultiMediaCard, is an external memory card with an even bigger memory capacity. It has a write protect switch to prevent the data writing and card formatting, and it comes with a copyright protection function that complies with the SDMI (Secure Digital Music Initiative) standard. Music play is possible only with an SD Memory Card.

- SD Logo is a trademark.
- Portions of this product are protected under copyright law and are provided under license by ARIS/SOLANA/4C.

Palmcorder Accessory Order Form

Please photocopy this form when placing an order.

1. Palmcorder Model # _____

2. Items Ordered

Accessory #	Description	Price Each	Quantity	Total Price
Subtotal				
Your State & Local Sales Tax				
Shipping & Handling				6.95
Total Enclosed				

3. Method of payment (check one)

- Check of Money Order enclosed (NO C.O.D.SHIPMENTS)
- VISA Credit Card # _____
- MasterCard Expiration Date _____
- Discover Customer Signature _____

Make Check or Money Order to: PANASONIC ACCESSORIES

(Please do not send cash)

4. Shipping information (UPS delivery requires complete street address)

Ship To:

Mr.

Mrs.

Ms. _____

First

Last

Phone #:

Day () _____

Street Address _____

Night () _____

City _____

State _____

Zip _____

TO OBTAIN ANY OF OUR PALMCORDER ACCESSORIES YOU CAN DO ANY OF THE FOLLOWING:

VISIT YOUR LOCAL PANASONIC DEALER

OR

CALL PANASONIC'S ACCESSORY ORDER LINE AT 1-800-332-5368


[6 AM-5 PM M-F, 6 AM-10:30 AM SAT. PACIFIC TIME]

OR

MAIL THIS ORDER TO: PANASONIC SERVICES COMPANY ACCESSORY ORDER OFFICE

20421 84th Avenue South Kent, WA. 98032

Cleaning EVF (Electronic Viewfinder)

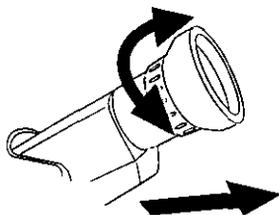

- 1** Turn the Eyepiece counterclockwise 1/8 of a turn.
- 2** Pull the Eyepiece free.
Remove any lint or dust particles with a soft, clean cloth being careful not to scratch the glass surfaces.
- 3** **To re-install the Eyepiece**
Line up the marks on the Eyepiece with the grooves inside the EVF shaft and attach. Turn it clockwise 1/8 of a turn to lock in place.

Approximate Brightness Values

Your Palmcorder has been designed for normal scene illumination of 150 footcandles (1500 lx). However, the Palmcorder may be used at F1:1.6, if illumination is more than 0.5 footcandles (5 lx).

The table below shows the color temperature for reference.

PALMCORDER SETTINGS	NATURAL LIGHT CONDITIONS	KELVIN COLOR TEMPERATURE	ARTIFICIAL LIGHT SOURCE	COLOR TINT MIXTURE
<div style="display: flex; flex-direction: column; align-items: center;"> <div style="margin-bottom: 10px;">↑ (Amber Filter Range)</div> <div style="margin-bottom: 10px;">- - - "OUTDOOR"</div> <div style="margin-bottom: 10px;">"AUTO"</div> <div style="margin-bottom: 10px;">- - - "INDOOR"</div> <div style="margin-bottom: 10px;">↓ (Blue Filter Range)</div> </div>	• Fair weather, blue sky	— 10,000	• Color television	Bluish
	• Slightly cloudy sky	— 8,000		
	• Cloudy or rainy sky	— 7,000	• Fluorescent lamp (Daylight)	
		— 6,500	• Camera flash bulb	
	• Sunlight in clear weather at midday	— 6,000		
	• Average sunlight in clear weather	— 5,500	• Blue lamp for photography	
	• Sunlight 2 hours after sunrise and before sunset	— 5,000		
		— 4,500	• Fluorescent lamp (White)	Whitish
		— 4,000	• Normal flash bulb	
	• Sunlight 40 min. after sunrise and before sunset	— 3,500	• Fluorescent lamp (Off-white)	
		— 3,200	• Tungsten lamp for photography	
	• Sunlight 30 min. after sunrise and before sunset	— 2,800	• Halogen lamp	
• Sunlight 20 min. after sunrise and before sunset	— 2,000	• Iodine lamp		
	— 2,000	• Tungsten lamp	Yellowish	
		• Acetylene lamp		
		• Kerosene lamp		
		• Candlelight	Reddish	

Specifications


Power Source:	Palmcorder: 7.2 V DC (Battery) 7.8 V DC (AC Adaptor) AC Adaptor: 110/120/220/240 V AC, 50/60 Hz Battery: Lithium-Ion Type DC 7.2 V
Power Consumption:	Palmcorder: 7.2 V DC 6.5 W (Max. 9.5 W) AC Adaptor: 18 W 1 W (when not in use.)
Digital Interface	USB/i.Link (IEEE1394)
Video Signal:	EIA Standard (525 lines, 60 fields) NTSC color signal
Video Recording System:	2 rotary heads. helical scanning system
Audio:	12 bit (32 kHz) 4 tracks 16 bit (48 kHz) 2 tracks
Pick-Up System and Device:	One integral color filter Charge Coupled Device (CCD)
Lens:	20:1 zoom lens, F1:1.6 with auto iris control Focal length: 3.6 mm - 72 mm Power zoom function Lens filter diameter: 43 mm
Viewfinder:	0.4 inch (10.2 mm) Electronic Viewfinder
LCD Monitor:	2.5 inch (63.5 mm) Liquid Crystal Display
Minimum Illumination Required:	5 lx (F1:1.6) 0.5 footcandles 0 lx (MAGICVU/0LUX ON)
Image Storage (supplied 8 MB MultiMediaCard)	320 x 240 pixels (NORMAL mode) 640 x 480 pixels (FINE mode) Approx. 240 images (NORMAL mode) Approx. 60 images (FINE mode)
Image Format	JPEG (Design Rule for Camera File System)
Operating Temperature:	32 °F~104 °F (0 °C~40 °C)
Operating Humidity:	10 %~75 %
Weight:	Palmcorder: 1.50 lbs. 0.68 kg AC Adaptor: 0.35 lbs. 0.16 kg
Dimensions:	Palmcorder: 3-3/8 (W) x 4-1/4 (H) x 7-1/2 (D) inch 85 (W) x 107.5 (H) x 191 (D) mm AC Adaptor: 2-3/4 (W) x 1-3/4 (H) x 4-1/2 (D) inch 70 (W) x 45 (H) x 115 (D) mm

Weight and dimensions shown are approximate.

Designs and specifications are subject to change without notice.

Before Requesting Service

Cleaning Care for Video Heads

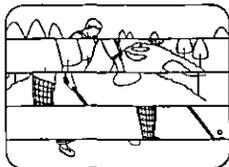

Clogged Video Head

(a) Video Head Cleaning: Normally, your Palmcorder will not require head cleaning. However, it is possible that the heads may become clogged due to dust in the air, playing damaged tapes, long term use, etc. If "NEED HEAD CLEANING" appears for 5 seconds in the EVF or LCD monitor, the heads may require cleaning.

(b) Cleaning the Heads: It is recommended that head cleaning be performed by a qualified service technician. Please contact your nearest Panasonic Servicenter. An alternate solution is to obtain a head cleaning cassette. Please use Panasonic cleaning cassette (AY-DVMCL). Be sure to follow the cleaning instructions carefully. Excessive use of the head cleaning cassette could shorten video head life.

Use this cassette only when a head clogging symptoms occur.

Refer servicing to qualified service personnel.

Tape Operations Caution

- When you go from function to function (PLAY, FF, REW etc.), please note that the unit will not accept a new function operation until the previous operation is complete.
- The POWER Button and all function buttons, (PLAY, FF, REW, etc.) are only operational after the tape has been completely loaded.

Lens Hood Area Operation Caution

When the following accessories are attached and the zoom is set to maximum wide angle, the four corners of the screen may appear darker:

- Wide or Telephoto conversion lens (optional).
- A filter (optional), etc. and then the lens hood.
- Two filters (optional).

Self Diagnostic System

If any of the following numbers appear on-screen, the Palmcorder may need service. Do not remove the battery (if attached) and write down the displayed number on page 71.

Then, take the Palmcorder to a servicenter for repair.

Error No.	Description
U11	Card Error
U12	Card Error
U13	Card Error
U14	Card/Palmcorder Dialogue Error
U15	No Card Memory
U16	Captured image limit exceeded
U17	Captured image limit exceeded
U30	Error other than above

Before Requesting Service

If you have a problem with your Palmcorder, it may be something you can correct yourself.

Check the list below for symptoms and corrections.

Symptom	Correction
No picture in the EVF or LCD Monitor...	<ul style="list-style-type: none">• Make sure the Power Source is connected. (pp. 11, 12)• Make sure the POWER switch is set to VCR or CAMERA. (pp. 22, 27)• Check the Dew Indicator. (p. 21)• Make sure the Battery is fully charged. (p. 11)• Make sure all necessary cables are connected correctly and firmly. (p. 12)• Make sure the Lens Cap is removed. (p. 22)
Video cassette cannot be inserted...	<ul style="list-style-type: none">• Make sure the Power Source is connected. (pp. 11, 12)• Insert the cassette record tab up, window side facing out. (p. 9)
Video cassette cannot be removed...	<ul style="list-style-type: none">• Make sure the Power source is connected. (pp. 11, 12)
No operation starts when operation buttons are pressed...	<ul style="list-style-type: none">• Check the Dew Indicator. (p. 21)
Recording cannot be done...	<ul style="list-style-type: none">• Make sure the record tab is closed. (p. 6)• Check the Battery Indication. (p. 19)
Auto Focus does not operate...	<ul style="list-style-type: none">• Make sure FOCUS is set to AUTO. (p. 47)• Make sure the unit is ON and set to CAMERA mode. (p. 22)
Sound from microphone cannot be monitored...	<ul style="list-style-type: none">• Make sure the unit is set to REC or REC/PAUSE mode.
Sound cannot be heard...	<ul style="list-style-type: none">• Make sure the Audio on the VCR MENU is set to ST1. (pp. 17, 50)

Request for Service Notice

Please photocopy this form when making a request for service notice.

Request for Service Notice:

In the unlikely event this product needs service.

- Please include your **proof of purchase**.
(Failure to do so will delay your repair.)
- To further speed your repair, please provide an explanation of what is wrong with the unit and any symptom it is exhibiting.

Mail this completed form and your Proof of Purchase along with your unit to:

Panasonic Services Company

1705 N. Randall Road


Elgin, IL 60123-7847

Attn: Camcorder Repair


Please write the displayed Self Diagnostic number here. (See page 69.)

Index of Controls

Front View

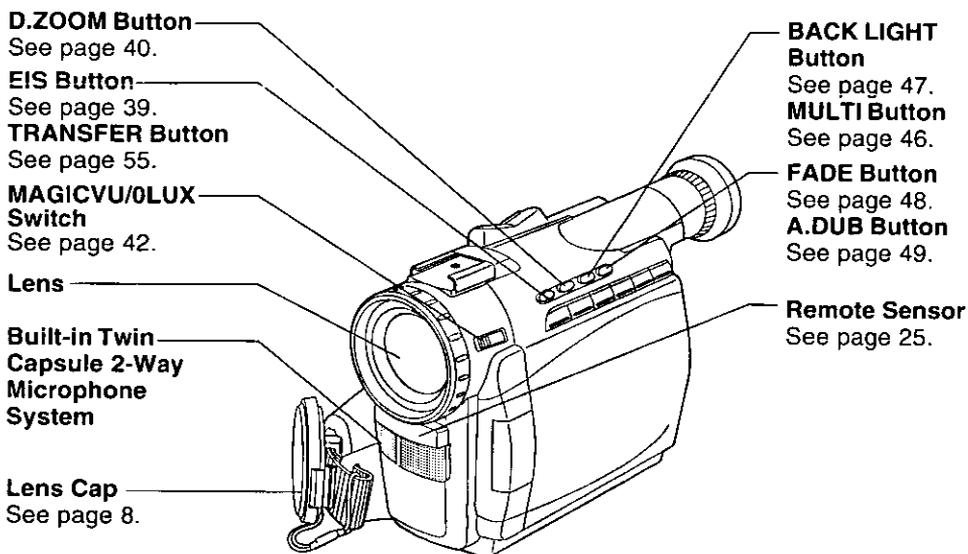

Side View

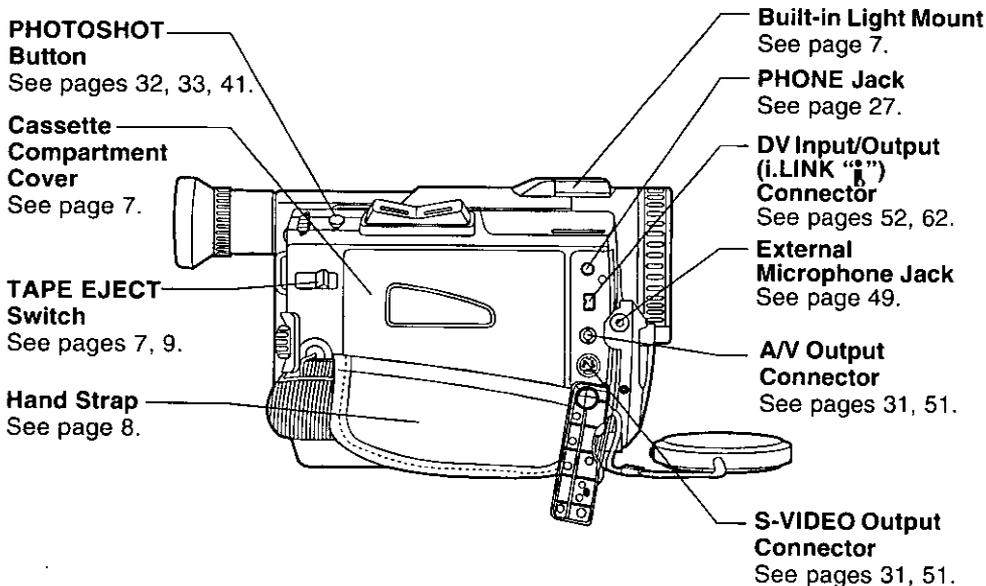

Rear View

Vision Adjustment Control
See pages 9, 22.

Electronic Viewfinder (EVF)
See page 9.

Menu Button
See pages 13, 14.

Battery Release Button
See pages 11, 12.

POWER Lamp
See page 22.

REC/PAUSE Button
See pages 9, 22.

Shoulder Strap Attachment Ring
See page 8.


JOG KEY
See pages 13, 14.
VOLUME KEY
See page 27.
M.FOCUS DIAL
See page 47.

POWER ZOOM Button
See pages 22, 40.

Shoulder Strap Attachment Ring
See page 8.

M-CARD Lock Switch
See page 10.

POWER Switch (CAMERA•VCR•OFF•M-CARD)
See pages 9, 10.

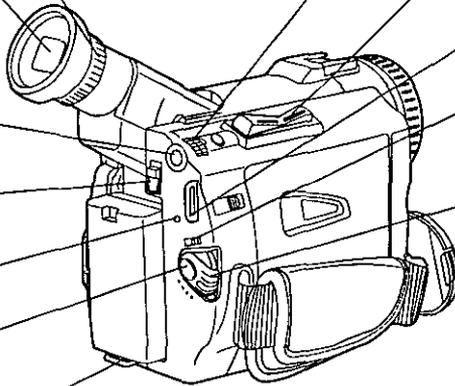

Rear View

LCD (Liquid Crystal Display) Monitor
See pages 9, 10, 23, 27.

LCD-OPEN Button
See pages 9, 10, 23, 27.


CARD EJECT Switch
See page 10.

M-CARD Door
See page 10.

Built-in Speaker
See page 27.

DC IN Terminal
See page 12.

USB Terminal
See page 54.

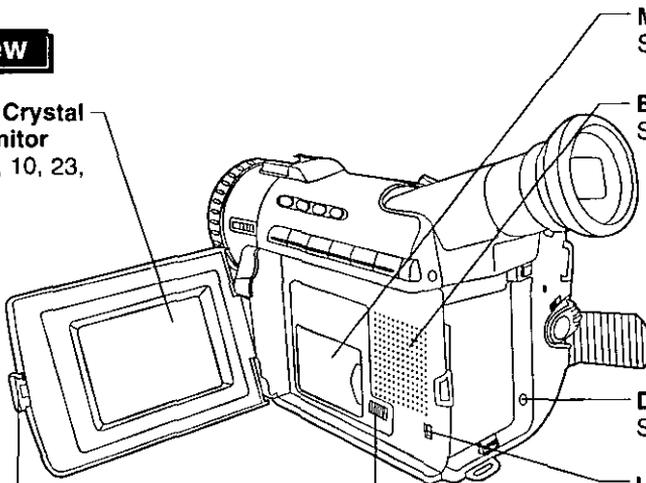

Index of Controls

Side View

REW Button
See pages 10, 27.
EDIT SEARCH Button
See pages 24.


STOP Button
See pages 10, 27.
M-STOP Button
See pages 34, 35, 36, 37.

PLAY Button
See pages 10, 27.
M-PLAY Button
See pages 34, 35.


FF Button
See page 28.
EDIT SEARCH Button
See page 24.

PAUSE Button
See pages 28, 29, 49, 50, 51, 52.
CAMERA STILL Button
See pages 45.

REC Button
See page 52.
M-DEL Button
See pages 35, 36, 37.

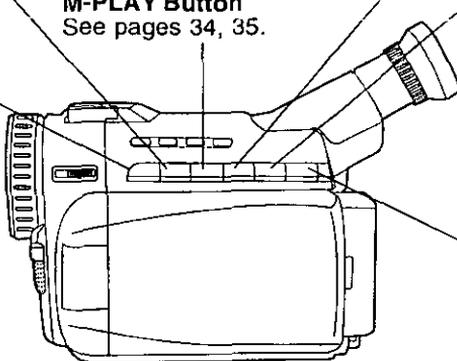

Underside View

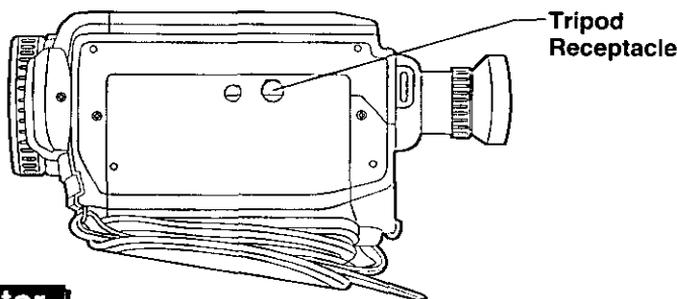


AC Adaptor

POWER Lamp
See pages 11, 12.

AC Power Cord
See pages 11, 12.

CHARGE Lamp
See page 11.


VCR DC Output Connector
See page 12.

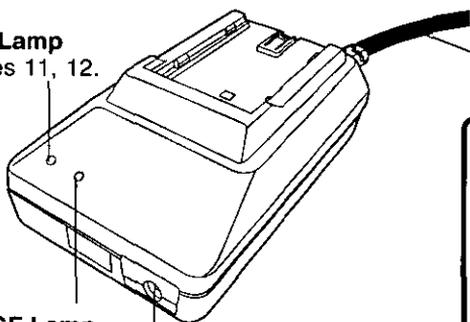


CAUTION:

This unit will operate on 110/120/220/240 V AC. An AC plug adaptor may be required for voltages other than 120V AC. Please contact either a local or foreign electrical parts distributor for assistance in selecting an alternate AC plug. We recommend using the accessory power plug adaptor (VJSS0070) in an area which has special AC outlets.

Color Enhancement Light (Optional)

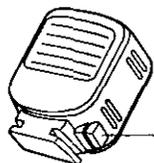

LIGHT RELEASE Button
See page 7.

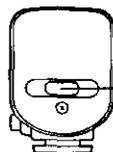

LIGHT Button
See page 7.

Remote Control (Optional)

DATE/TIME Button
See pages 20, 25.

DISPLAY ON TV Button
See pages 25, 31.

A.DUB Button
See pages 25, 49.

COUNTER/TC Button
See pages 19, 25.

RESET Button
See pages 25, 50.

REWIND/SEARCH Button
See pages 25, 28.

MENU Button
See pages 13, 14, 50.

REVERSE SLOW/ F. ADV Button
See pages 25, 28, 29.

REVERSE INDEX SEARCH Button
See pages 25, 30, 41.

STOP Button
See pages 25, 27.

SET Button
See pages 13, 14, 25.

PHOTOSHOT Button
See pages 25, 41.

REC/PAUSE Button
See pages 22, 25.

POWER ZOOM Switch
See pages 22, 25.

SPKR VOL +/-
See pages 25, 27.

VIDEO REC Button
See pages 25, 52.

FAST FORWARD/ SEARCH Button
See pages 25, 28.


PLAY Button
See pages 25, 27, 52.

FORWARD SLOW/ F. ADV Button
See pages 25, 28, 29.

FORWARD INDEX SEARCH Button
See pages 25, 30, 41.

PAUSE Button
See pages 25, 28, 52.

SEL Button
See pages 13, 14, 25.

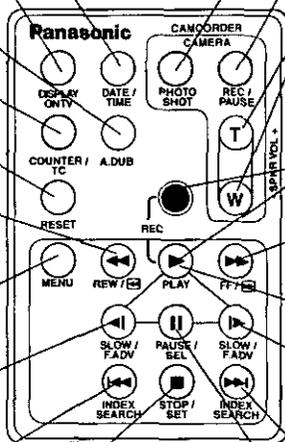

Limited Warranty

Panasonic Consumer Electronics Company,
Division of Matsushita Electric Corporation
of America, One Panasonic Way
Secaucus, New Jersey 07094

Panasonic Sales Company,
Division of Matsushita Electric of Puerto Rico, Inc.
AVE. 65 de Infantería, Km. 9.5 San Gabriel
Industrial Park, Carolina, Puerto Rico 00985

PANASONIC/QUASAR Video Products Limited Warranty

Panasonic Consumer Electronics Company or Panasonic Sales Company (collectively referred to as "the Warrantor") will repair or replace this product with new or refurbished parts or equivalent product, free of charge, in the USA or Puerto Rico, in the event of a defect in materials or workmanship as follows (all time periods commence from the date of the original purchase):

PRODUCT	PARTS	LABOR	SERVICE	CONTACT NUMBER
CAMCORDER	ONE (1) YEAR, EXCEPT CCD IMAGE SENSOR CCD IMAGE SENSOR -SIX (6) MONTHS	NINETY (90) DAYS NINETY (90) DAYS	Carry-In or Mail-In	1-800-211-PANA(7262)
DVD/VCR DECK	ONE (1) YEAR	NINETY (90) DAYS	Carry-In or Mail-In	1-800-211-PANA(7262)
DIGITAL STILL CAMERA	ONE (1) YEAR, EXCEPT CCD IMAGE SENSOR CCD IMAGE SENSOR -SIX (6) MONTHS	NINETY (90) DAYS NINETY (90) DAYS	Carry-In or Mail-In	1-800-272-7033
AV MIXER	ONE (1) YEAR	NINETY (90) DAYS	Carry-In or Mail-In	1-800-211-PANA(7262)
TV/VCR, TV/DVD/VCR COMBINATION	ONE (1) YEAR, EXCEPT CRT CRT - TWO (2) YEARS	NINETY (90) DAYS CRT - NINETY (90) DAYS	Carry-In: 21" CRT and Smaller In-Home or Carry-In: 22" CRT and Larger	1-800-211-PANA(7262)
TV/HDR COMBINATION	ONE (1) YEAR, EXCEPT CRT CRT - TWO (2) YEARS	NINETY (90) DAYS CRT - NINETY (90) DAYS	In-Home or Carry-In	1-888-843-9788

Batteries (if included) - New rechargeable batteries in exchange for defective rechargeable batteries for ten (10) days. Non-rechargeable batteries are not warranted.

Tape (if included) - New video cassette tape in exchange for a defective video cassette tape for five (5) days.

Memory cards (if included) - Exchange defective item for new one for ninety (90) days.

In-home, carry-in or mail-in service, as applicable, in the USA can be obtained during the warranty period by contacting a Panasonic Services Company (PASC) Factory Servicenter listed in the Servicenter Directory. Or call toll free contact number listed above, to locate an authorized PASC Servicenter. Carry-in or mail-in service in Puerto Rico can be obtained during the warranty period by calling the Panasonic Sales Company telephone number listed in the Servicenter Directory.

This warranty is extended only to the original purchaser. A purchase receipt or other proof of the date of the original purchase is required before warranty service is rendered.

This warranty only covers failures due to defects in materials and workmanship, which occur during normal use and does not cover normal maintenance, including, but not limited to, video and audio head cleaning. The warranty does not cover damage which occurs in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accident, misuse, abuse, neglect, mishandling, misapplication, alteration, modification, faulty installation, set-up adjustments, improper antenna, inadequate signal pickup, maladjustment of consumer controls, improper operation, power line surge, improper voltage supply, lightning damage, commercial use such as hotel, office, restaurant, or other business or rental use of the product, or service by anyone other than a PASC Factory Servicenter or a PASC authorized Servicenter, or damage that is attributable to acts of God.

LIMITS AND EXCLUSIONS

There are no express warranties except as listed above.

THE WARRANTOR SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING, WITHOUT LIMITATION, DAMAGE TO RECORDING MEDIA) RESULTING FROM THE USE OF THIS PRODUCTS, OR ARISING OUT OF ANY BREACH OF THE WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE, ARE LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you.

This warranty gives you specific legal rights and you may also have other rights, which vary, from state to state. If a problem with this product develops during or after the warranty period, you may contact your dealer or Servicenter. If the problem is not handled to your satisfaction, then write to the Consumer Affairs Department at the Panasonic Consumer Electronics Company address above.

SERVICE CALLS WHICH DO NOT INVOLVE DEFECTIVE MATERIALS OR WORKMANSHIP AS DETERMINED BY THE WARRANTOR, IN ITS SOLE DISCRETION, ARE NOT COVERED. COSTS OF SUCH SERVICE CALLS ARE THE RESPONSIBILITY OF THE PURCHASER.

warvid 02/12/2001

For Product Information, Operating Assistance, Literature Request, Dealer Locations, and all Customer Service inquiries please contact:
1-800-211-PANA(7262), Monday-Friday 9am-9pm Saturday-Sunday 9am-7am, EST.
or send e-mail : consumerproducts@panasonic.com

Web Site: <http://www.panasonic.com>

You can purchase parts, accessories or locate your nearest servicenter by visiting our Web Site.

Accessory Purchases:

1-800-332-5368 (Customer Orders Only)

Panasonic Services Company 20421 84th Avenue South, Kent, WA 98032

(6 am to 5 pm Monday - Friday; 6 am to 10:30 am Saturday; PST)

(Visa, Master Card, Discover Card, American Express, Check)

Product Repairs

Centralized Factory Servicenter

Panasonic Services Company

MAIL TO : 1705 N. Randall Road,
Elgin, IL 60123-7847

Attention: Digital Camera Repair

Please carefully pack and ship, prepaid and insured, to the Elgin centralized repair Factory Servicenter. While there will be added handling delays, you may bring your unit to one of the following locations who will then forward the unit to Elgin for repair.

Customer's in Puerto Rico, please ship or carry in to location below ("Service in Puerto Rico").

Factory Service Center Locations

CALIFORNIA

6550 Katella Avenue
Cypress, CA 90630

800 Dubuque Avenue
S. San Francisco,
CA 94080

3878 Ruffin Road
Suite A
San Diego, CA 92123

COLORADO

1640 South Abilene
Street Suite D
Aurora, CO 80012

FLORIDA

3700 North 29th Avenue
Suite 102
Hollywood, FL 33020

GEORGIA

8655 Roswell Road
Suite 100
Atlanta, GA 30350

ILLINOIS

9060 Golf Road
Niles, IL 60714
1703 North Randall Road
Elgin, IL 60123
(Pick-up / Drop-off only)

MARYLAND

62 Mountain Road
Glen Burnie MD 21061

MASSACHUSETTS

60 Glacier Drive,
Suite G
Westwood, MA 02090

MINNESOTA

7850-12th Avenue South
Airport Business Center
Bloomington, MN 55425

OHIO

2236 Waycross Road
Civic Center Plaza
Forest Park, OH 45240

PENNSYLVANIA

2221 Cabot Blvd. West
Suite B
Langhorne, PA 19047

TEXAS

13615 Welch Road
Suite 101
Farmers Branch,
TX 75244

WASHINGTON

20425-84th Avenue
South
Kent, WA 98032

HAWAII

99-859 Iwaiwa Street
Aiea, Hawaii 96701
Phone (808) 488-1996
Fax (808) 486-4369

Service in Puerto Rico


Matsushita Electric of Puerto Rico, Inc. Panasonic Sales Company/ Factory Servicenter:

Ave. 65 de Infanteria. Km. 9.5 San Gabriel Industrial Park Carolina, Puerto Rico 00985

Phone (787) 750-4300 Fax (787) 768-2910

Spanish Quick Use Guide/Guía Para Uso Rápido

Inserte de la batería

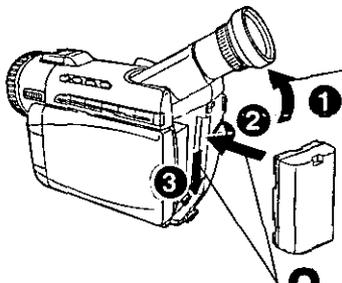

Antes de comenzar


- Cargue la batería. (Página 11.)

1 Incline el visor hacia arriba.

2 Coloque la batería y deslicela hacia abajo hasata que quede bloqueada con un clic.

Inserte el Cassette

1 Ajuste el interruptor de alimentación (POWER) a la posición VCR o CAMERA.

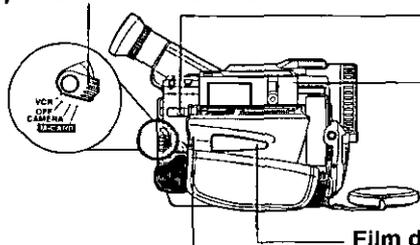

2 Deslice el interruptor de expulsión de cinta (TAPE EJECT) para abrir la tapa del compartimento del cassette.

3 Introduzca un cassette con la parte de la ventana hacia arriba.
• Asegúrese de que la lengüeta de grabación esté cerrada. (Página 6.)

4 Presione la marca PUSH TO CLOSE (EMPUJAR PARA CERRAR) para cerrar la tapa del compartimento del cassette.

Film de protección


Nota

- Retire la película protectora antes de utilizarlo.

Grabación con la cámara

Cuando el monitor LCD se encuentra totalmente abierto, el visor se DESACTIVA automáticamente.

2 Ajuste el control de ajuste de visión según lo desee.

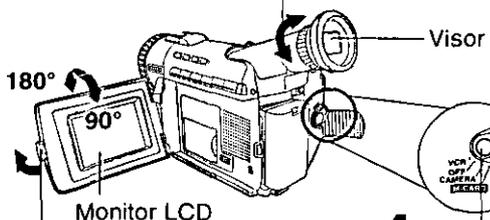

1 Ajuste el interruptor de alimentación (POWER) a la posición CAMERA.

3 Presione el botón de apertura del LCD (LCD-OPEN) para desbloquear el monitor LCD. Balancee abriéndolo completamente y ajuste el ángulo.

4 Presione el botón de grabación/pausa (REC/PAUSE) para iniciar la grabación. Vuelva a pulsar el botón de grabación/pausa (REC/PAUSE) para hacer una pausa en la grabación.

Introducir la Tarjeta de memoria*

Antes de comenzar

- Cargue la batería. (Página 11.)

*Tarjeta de Memoria: Tarjeta MultiMedia o Tarjeta de Memoria SD (Página 64.)

• Asegúrese de introducir la Tarjeta de memoria antes de utilizar la tarjeta PhotoShot. (Página 32.)

A continuación se indican una lista de Tarjetas de Memoria soportadas por esta unidad.

Tarjeta de memoria	Capacidad
Tarjeta MultiMedia (LSFT0198A) (suministrado)	8 MB
Tarjeta MultiMedia (Marca de fábrica SanDisk)	8 MB, 16 MB
Tarjeta de Memoria SD (opcional) (Página 64.)	16 MB, 32 MB, 64 MB

Monitor LCD

Puerta de M-CARD

Botón para interrumpir el cambio al M-CARD

1 Ajuste el interruptor de alimentación (POWER) a la posición OFF.

2 Presione el botón de apertura del LCD (LCD-OPEN) para desbloquear el monitor LCD. **Balancée** abriéndolo completamente y ajuste el ángulo.

3 Deslice el CARD EJECT Switch (interruptor de EJECUCIÓN DE TARJETA) para abrir la puerta de M-CARD.

4 Introducir la Tarjeta de memoria.

5 Cierre la puerta de M-CARD.

Para ver la reproducción en el LCD (pantalla de visualización de cristal líquido)

Cuando el monitor LCD se encuentra totalmente abierto, el visor se DESACTIVA automáticamente.

Antes de comenzar

- Cargue la batería. (Página 11.)

180°

1 Ajuste el interruptor de alimentación (POWER) a la posición VCR.

2 Presione el botón de apertura del LCD (LCD-OPEN) para desbloquear el monitor LCD. **Balancée** abriéndolo completamente y ajuste el ángulo.

3 Presione el botón de rebobinado (REW) para rebobinar la cinta.

4 Presione el botón de reproducción (PLAY) para reproducir la cinta.

5 Presione el botón de parada (STOP) para detener la reproducción.

Index

A		
AC Adaptor	6, 11, 12, 64	
Accessories (Optional)	64	
Accessories (Supplied)	6	
A/V Cable	6, 31, 51	
Audio/Video Fade In/Out	48	
Auto Focus	47	
B		
Backlight	47	
Battery Pack	6, 9, 11, 64	
Battery Remaining Indication	19	
Battery Warning	21	
Before Requesting Service	69, 70	
Blank Search	25	
C		
CARD EJECT Switch	10	
Camera Recording	22, 23, 24, 25	
Cleaning Care for Video Heads	69	
Clock Battery	21	
Clock Set	13	
Color Enhancement Light	7, 64	
Copying from Digital Equipment	52	
Copying your Tapes	51	
D		
Date and Time Indication	20	
DC Power Cable	6, 12, 64	
DEW Indication	21	
Digital E.I.S.	39	
Digital Functions	44	
Digital PhotoShot	41	
Digital Video Cassette Tape	6	
Digital Zoom	40	
Dubbing over Audio (Microphone)	49, 50	
DV Interface Cable (i.LINK)	52, 62, 64	
E		
Edit Search	24	
Erase Protection Tab	6	
EVF/LCD Monitor Indications	19, 20, 21	
H		
Hand Strap	8	
High Speed Shutter	48	
J		
Jog Search	29	
L		
Lens Cap	6, 8, 22	
Limited Warranty	76	
M		
Macro Focus	47	
MAGICVU/OLUX Switch	42	
Manual Focus	47	
Memory Counter	19	
MENU OSD	14, 15, 16, 17, 18	
Memory Card	6, 10, 64	
M-CARD Door	10	
P		
PC Cable	6, 54	
PC Connection	54, 62	
Picture in Picture (PinP)	45	
PLAY Indicator	20	
Playback	27, 28, 29, 30, 31	
Power Supply	11, 12	
Program AE	43	
R		
REC Indicator	20	
Recording Still Pictures	42	
Remote Control	25, 26, 64	
Request for Service Notice	71	
S		
Safety Precautions	2	
Servicenter List	77	
Set the Date and Time	13	
Shoulder Strap	6, 8	
Special Effects Playback	28, 29, 30	
Specifications	68	
STILL Picture	28	
Strobe Multi Mode	46	
T		
Tape Remaining Indications	19	
Tape Speed	6	
Tape Warning	21	
V		
VHF Connecting Cable	51	
Volume Display	27	
W		
White Balance	42	
Z		
Zoom In/Out	22	

**Panasonic Consumer Electronics
Company, Division of Matsushita
Electric Corporation of America**

One Panasonic Way Secaucus,
New Jersey 07094

**Panasonic Sales Company ("PSC"),
Division of Matsushita Electric of
Puerto Rico, Inc.**

Ave. 65 de Infantería, Km. 9.5
San Gabriel Industrial Park
Carolina, Puerto Rico 00985



Printed in Japan
LSQT0448A
S0301A0