

FM Stereo/AM Radio


Operating Instructions
Manual de instrucciones
使用説明書
사용설명서




©2012 Sony Corporation Printed in China

http://www.sony.net/


SRF-18

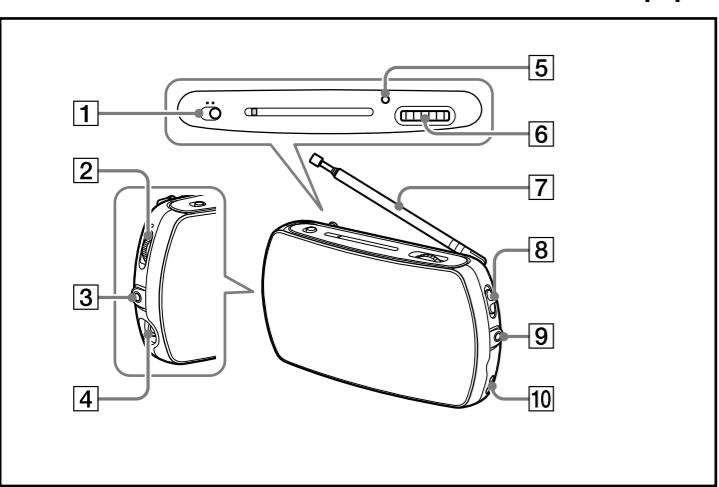

A

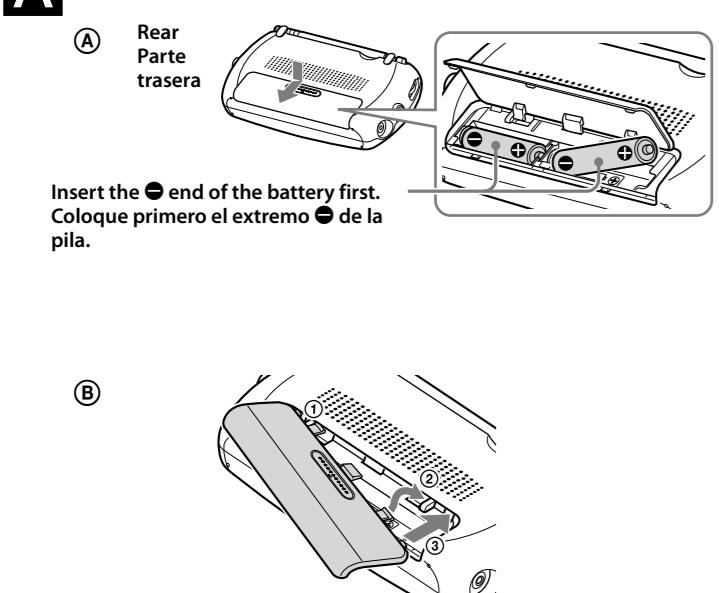


B

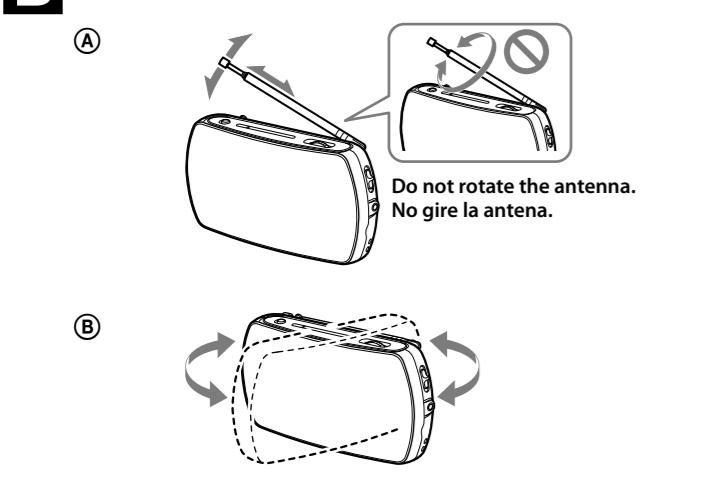

C



D

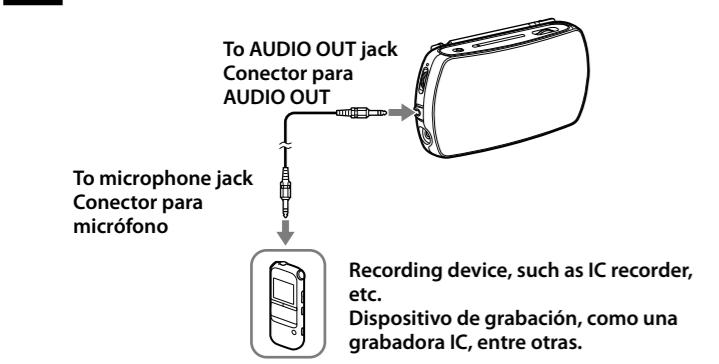

English

WARNING

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Features

- TUNE indicator for easy tuning
- AUDIO IN jack for connecting to optional components such as "WALKMAN", etc.
- AUDIO OUT jack which is convenient for radio recording

Identifying Parts

- 1 FM/AM switch
- 2 VOL dial*
- 3 AUDIO OUT jack
- 4 ♦ (headphones) jack
- 5 TUNE indicator
- 6 TUNING dial
- 7 Telescopic antenna
- 8 POWER switch (RADIO/AUDIO IN/OFF)
- 9 AUDIO IN jack
- 10 Holes for hand strap

* There is a tactile dot beside the VOL dial to show the direction to turn up the volume.

Installing the Batteries (See fig. A-①)

- 1 Open the battery compartment lid.
 - 2 Insert two Sony size AA (R6) batteries (not supplied) with the ♦ and ♦ marks oriented correctly.
 - 3 Close the lid.
- Battery life** (when using the speakers) (JEITA*)
(approx. hours)
- | When using | FM | AM | AUDIO input |
|----------------------------|----|----|-------------|
| Sony alkaline size AA (R6) | 45 | 49 | 74 |
| Sony size AA (R6) | 14 | 16 | 26 |
- * Measured by JEITA (Japan Electronics and Information Technology Industries Association) standards. The actual battery life may vary depending on the circumstance of the unit.

When to replace the batteries

When the batteries become weak, the sound becomes weak or distorted, or the TUNE indicator becomes dim. In this case, replace both batteries with new ones.

Notes on batteries

- Do not charge the dry batteries.
- Do not carry the dry batteries with coins or other metallic objects. It can generate heat if the positive and negative terminals of the batteries are accidentally contacted by a metallic object.
- Do not use different types of batteries at the same time.
- When you replace the batteries, replace all with new ones.
- When you are not going to use the unit for a long time, remove the batteries to avoid damage from battery leakage and corrosion.

To attach the battery compartment lid if it is accidentally detached (See fig. A-②)

The battery compartment lid is designed to come off when opened with excessive force. To put it back on, see the following and fig. A-③.

- ① Insert the left hook of the lid into the left hole in the unit.
- ② Hang the right hook on the right part of the compartment where the lid fits.
- ③ Slide the right hook into the right hole in the unit.

Playing the Radio

- 1 Set the POWER switch to RADIO.
- 2 Set the FM/AM switch to FM or AM.
- 3 Tune in to a station using TUNING. The TUNE indicator lights up when a station is tuned in.
- 4 Adjust the volume using VOL.

To turn off the radio

Set the POWER switch to OFF.

To listen by headphones (not supplied)

Connect the headphones to the ♦ (headphones) jack. The speakers are muted when headphones are connected.

This unit cannot be used with the headphones supplied with a "WALKMAN" that has the Noise Canceling function.

Note: When listening to the radio, disconnect the audio connecting cable from the AUDIO IN jack of the unit, or noise may be heard.

Improving the Reception (See fig. B)

FM:

Extend the telescopic antenna and adjust the angle for the optimum reception (See fig. B-①).

- Adjust the direction of the antenna by holding the bottom of it. Note that the antenna may be damaged if you move it with excessive force.

A: The radio has a built-in ferrite bar antenna. Rotate the unit horizontally for optimum reception (See fig. B-②).

• In vehicles or in buildings, radio reception may be difficult. Try listening near a window.

Connecting Optional Components (See fig. C)

You can connect an optional component, such as a portable music player, "WALKMAN", etc., to the unit using the supplied audio connecting cable.

- 1 Connect the AUDIO IN jack to the headphone jack of the component using the supplied audio connecting cable.
- 2 Set the POWER switch to AUDIO IN.
- 3 Turn on the connected component. Start playing sound and adjust the volume of the connected component.
- 4 Adjust the volume using VOL of the unit.

If the volume is too low, increase the volume of the connected component.

To turn off the unit

Make sure to set the POWER switch to OFF after listening. If the connected component is not playing back (no sound from speakers), the unit will not turn off when the POWER switch is set to AUDIO IN.

Note:
• If a connected portable music player, such as "WALKMAN", has a bass boost function, set to soft. This may cause distortion.
• If connected to the monaural output jack of a connected component, sound may not come through the right speaker of the unit.
• If connected to a fixed output such as the LINE OUT jack of the connected component, distortion may occur. If the sound is distorted, connect to the headphone jack instead.
• If the volume of the connected component is too high, the sound may be distorted.

Recording the Radio (See fig. D)

You can record the sound of the radio to a recording device, such as an IC recorder, etc.

- 1 Connect the recording device using the supplied audio connecting cable (See fig. D).
 - 2 Set the POWER switch to RADIO, and tune in a desired station.
 - 3 Start recording on the recording device.
- For details about recording and the connecting cable, refer to the operating instructions of the recording device.
- Notes**
- Keep the unit away from the recording device while recording. Noise may be heard in the recorded sound.
 - Do not touch the unit, the audio connecting cable or the recording device while recording. Noise may be heard in the recorded sound.
 - The AUDIO OUT jack outputs only radio signal received by this unit. The sound from the component connected to the AUDIO IN jack will not be output.
 - Depending on the recording device, if the sound is recorded for more than 2 seconds, recording may pause automatically and the recording device may emit sound detection status. When sound is detected again, recording may resume from a new track.
 - The volume level output from the AUDIO OUT jack is fixed, and not affected by the VOL dial.
 - 4 When you have finished recording, stop recording on the connected device.

Listening to the Radio from External Equipment

You can connect the AUDIO OUT jack to the AUDIO IN jack or LINE IN jack of external equipment using the audio connecting cable. Radio signal received by the unit can be listened to through the connected equipment. Sound is also output from the speakers of the unit. Adjust the volume using VOL.

Note: Due to interference from the connected equipment, radio signal may not be received, or the sensitivity of the unit may be lower.

Attaching the Hand Strap (See fig. E)

For convenient carrying, attach the hand strap to the unit. Thread the hand strap through the holes in the side of the unit.

Precautions

- Operate the unit only on 3 V DC with two size AA (R6) batteries.
- The nameplate indicating operating voltage, etc., is located on the bottom exterior.
- Avoid extreme temperature extremes, direct sunlight, moisture, sand, dust or mechanical shock.
- Never leave in a car parked under the sun.
- Should anything fall into the unit, remove the batteries, and have the unit checked by qualified personnel before operating it any further.
- In vehicles or buildings, radio reception may be difficult or noisy. Try listening near a window.
- Since a strong magnet is used for the speakers, keep personal credit cards using magnetic coding or spring wound watches away from the unit to prevent possible damage from the magnet.
- When the casing becomes soiled, clean it with a soft dry cloth moistened with mild detergent solution. Never use abrasive cleaners or chemical solvents, as they may deform the casing.
- Do not use solvents such as benzine, thinner, commercially available cleaners or anti-static sprays intended for vinyl LPs.

On placement

- Do not leave the unit in a location near heat sources, in a place subject to direct sunlight, excessive dust or mechanical shock, or in a car subject to the direct rays of the sun.
- Do not place the unit on an inclined or unstable surface.

If you have any questions or problems concerning your unit, consult your nearest Sony dealer.

Troubleshooting

There is no sound from the radio.

- Make sure the batteries are inserted correctly.
- The batteries are weak. When using rechargeable batteries, charge the batteries. When using dry cell batteries, replace them all with new ones.
- The volume level is set to minimum. Turn up the volume of the unit.
- The audio is weak or poor quality.
- The batteries are weak. When using rechargeable batteries, charge the batteries. When using dry cell batteries, replace them all with new ones.
- The radio signal is weak. Listen to the radio near a window since the signal may be weak inside buildings or in vehicles.
- Someone is using a cell phone or other equipment that emits radio waves near the unit. Move the phone, etc., away from the unit.
- Move the unit away from possible sources of interference, such as a nearby TV.

There is noise, or distorted sound when the audio signal is input from a connected component.

- Turn down the volume of the connected component.
- If a connected component has a bass boost function, set to off.
- The batteries are weak. When using rechargeable batteries, charge the batteries. When using dry cell batteries, replace them all with new ones.
- Make sure the connecting cable is securely connected.
- If connected to the LINE OUT jack of a connected component, connect to the headphone jack instead.
- The sound is low, or there is no sound while audio signal is input from a connected component.
- If the POWER switch is set to OFF, set to AUDIO IN.
- The volume level is set to minimum. Turn up the volume of the unit.
- The volume level of the connected component is set to minimum. Turn up the volume of the connected component.
- Make sure the connecting cable is securely connected.
- The batteries are weak. When using rechargeable batteries, charge the batteries. When using dry cell batteries, replace them all with new ones.
- Make sure the component connected is not going to use the volume control.
- The setting of the recording device is not correct. See notes in "Recording the radio" or refer to the Operating Instructions of the recording device.

Specifications

Frequency range:

FM: 87.5 MHz - 108 MHz

AM: 530 kHz - 1,710 kHz

Speaker:

Approx. 3.6 cm (1 1/4 inches) dia, 7.2 Ω (2)

Input:

AUDIO IN jack (Φ 3.5 mm stereo minijack) (1)

Outputs:

1 (headphones) jack (Φ 3.5 mm stereo minijack) (1)

AUDIO OUT jack (Φ 3.5 mm stereo minijack) (1)

Power output:

80 mW + 80 mW (JEITA*)

Power requirements:

3 V DC, two size AA (R6) batteries

Dimensions: Approx. 155 mm × 78.5 mm × 32.5 mm (6 1/4 inches × 3 1/4 inches × 1 1/4 inches)

(width, projecting parts not included) Approx. 155.4 mm × 80.3 mm × 34.2 mm (6 1/4 inches × 3 1/4 inches × 1 1/4 inches) (width, projecting parts included) (JEITA*)

Mass:

Approx. 198 g (7 oz) (batteries included)

* JEITA (Japan Electronics and Information Technology Industries Association) standards.

Supplied accessories

Operating Instructions (1)

Audio connecting cable (stereo mini plug ↔ stereo mini plug) (1)

Design and specifications are subject to change without notice.

On Copyrights

"WALKMAN" and "WALKMAN" logo are registered trademarks of Sony Corporation.

Español

ADVERTENCIA

RADIO AM/FM PORTATIL

Por favor lea detalladamente este manual de instrucciones antes de conectar y operar este equipo.

Recuerde que un mal uso de su aparato podría anular la garantía.

Se le advierte que cualquier cambio o modificación no autorizada expresamente en este manual podrá anular la garantía que usted tiene para utilizar este equipo.

Toda alteración o cambio que no se apruebe, de manera expresa, a través del presente manual podría anular sus facultades para operar el presente equipo.

Características

- Indicador TUNE para lograr una fácil sintonización.
- Conector AUDIO IN para conectar el equipo a componentes opcionales como un "WALKMAN", entre otros.
- Conector AUDIO OUT que es útil para grabar radio.

Identificación de las piezas

1 Interruptor FM/AM

2 Perilla VOL*

3 Conector AUDIO OUT

4 Conector ♦ (auriculares)

5 Indicador TUNE

6 Perilla TUNING

7 Antena telescópica

8 Interruptor POWER (RADIO/AUDIO IN/OFF)

9 Conector AUDIO IN

10 Orificios para correa de mano

* Al lado del perilla VOL hay un punto táctil para mostrar la dirección en la que se sube el volumen.

Cómo colocar las pilas (consulte la figura A-①)

1 Abra la tapa del compartimiento de las pilas.

2 Inserte dos pilas R6 Sony (tamaño AA) (no suministradas) con las marcas ♦ orientadas correctamente.

3 Cierre la tapa.

Duración de la pila (cuando use los altavoces) (JEITA*)


Cuando use

FM

AM

Entrada de audio

S

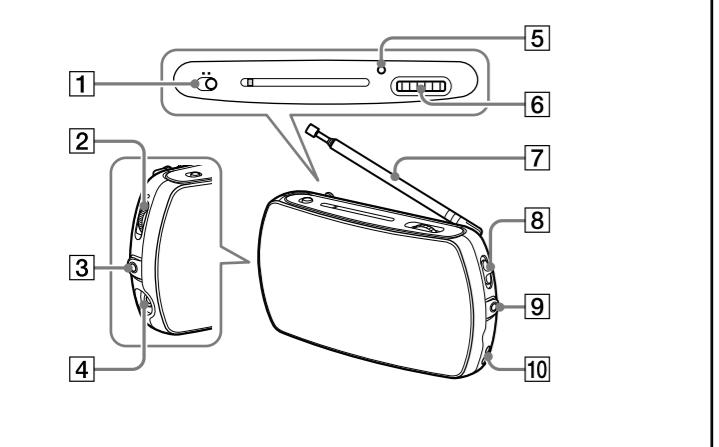

安裝電池 (見圖 A-①)

- 打開電池蓋。
 - 將兩顆Sony R6 (AA尺寸) 電池 (不附送的) 的●和●標誌以正確方向裝入。
 - 關上電池蓋。
- 電池持續使用時間 (使用揚聲器時) (JEITA*)**
(大約時數)
- | 使用 | FM | AM | 聲音輸入 |
|-------------------------|----|----|------|
| Sony 線性電池 LR6
(AA尺寸) | 45 | 49 | 74 |
| Sony R6
(AA尺寸) | 14 | 16 | 26 |
- * 根據JEITA (Japan Electronics and Information Technology Industries Association) 標準測得。實際電池持續使用時間會隨本機的情況而異。

更換電池的時間

當電池快沒電時，聲音會變弱或失真，或者TUNE指示燈會變暗。在此情況下，請將新的電池換新。

電池的注意事項

- 切勿充乾電池充電。
- 切勿將乾電池與硬幣或其他金屬物放在一起攜帶。如果電池的正負端子意外接觸到金屬物，則會產生熱量。
- 切勿同時使用不同類型的電池。
- 更換電池時，請將電池全部換新。
- 當您打算長時間不使用本機時，請取出電池，以免因電池漏液和腐蝕而損壞本機。

若要安裝不小心鬆落的電池艙蓋 (見圖 A-②)

電池艙蓋設計為用於開啟時會鬆落。若要放回電池艙蓋，請參見以下說明和圖A-②。

- 將電池艙蓋的左掛鉤插入本機的左孔。
- 將右掛鉤掛在對應蓋的右半部電池艙蓋上。
- 將右掛鉤滑入本機的右孔。

使用收音機

- 將POWER開關設定為RADIO。

- 將FM/AM開關設定為FM或AM。

- 使用TUNING調入電臺。

- 使用VOL調整音量。

若要關閉收音機

- 將POWER開關設定為OFF。

若要用耳機 (非附件) 聆聽

將耳機連接至(耳機)插孔。

連接耳機時，揚聲器將靜音。

本機無法與有消除噪音功能的“WALKMAN”隨附的耳機一起使用。

附註

收聽收音機時，將音訊連接線與本機的AUDIO IN插孔斷開，否則可能會聽到噪音。

改善接收效果 (見圖 B)

FM:

拉出伸縮式天線並調整角度以獲得最佳的接收效果 (見圖B-④)。

• 頂部天線旋鈕調整天線方向。請注意，如果您移動天線時過度用力，天線可能會損壞。

連接選購裝置 (見圖 C)

您可以使用隨附的音訊連接線，將便攜式音樂播放器、“WALKMAN”等選購裝置連接至本機。

您也可以透過本機的揚聲器從選購裝置欣賞聲音。

- 使用隨附的音訊連接線，將AUDIO IN插孔連接至裝置的耳機插孔。

- 將POWER開關設定為AUDIO IN。

- 開啟連接的裝置。開始播放聲音，並調整所連接裝置的音量。

- 使用本機的VOL調整音量。

如果音量太小，請增大所連接裝置的音量。

若要關閉本機

收聽後，務必將POWER開關設定為OFF。當POWER開關設定為AUDIO IN時，如果連接的裝置未在播放 (揚聲器沒有聲音)，本機將不會關閉。

錄製收音機 (見圖 D)

您可以將收音機的音訊錄製到IC錄音器等錄製裝置。

- 使用隨附音訊連接線連接錄製裝置 (見圖D)。

附註

• 使用Sony IC錄音器時，將外部輸入選擇為“Audio IN”。如果選擇“MIC IN”，錄製的聲音將失真。

• 如果使用錄音機的麥克風輸入插孔，錄製的聲音將失真。使用外部輸入插孔。

- 如果連接至錄音機的麥克風輸入插孔，聲音可能不會從本機右側揚聲器傳出。

- 如果連接至所連接裝置的LINE OUT插孔等固定輸出，可能會發生失真。如果聲音失真，則連接至耳機插孔。

- 若所連接裝置的音量太大，聲音可能會失真。

錄製完成時，停止所連接裝置的錄製。

從外接設備聆聽收音機

您可以使用音訊連接線，將AUDIO OUT插孔連接至外接設備的AUDIO IN插孔或LINE IN插孔，可以透過連接的設備聆聽本機收到的收音機訊號。聲音也會從本機的揚聲器輸出。

附註

由於受到所連接設備的干擾，可能無法收到收音機訊號，或是本機的靈敏度可能會降低。

連接手腕帶 (見圖 E)

為了方便攜帶，請將手腕帶連接到本機。

將手腕帶穿過本機側面的孔洞。

使用須知

• 本機只能用兩顆R6 (AA尺寸) 電池，在3V DC下使用。

• 標示僅位於外殼底部，註明操作電壓等資訊。

• 請避免讓裝置暴露在極度高溫、直射陽光、潮氣、沙塵、灰塵中，或受到機械撞擊的影響。

• 切勿將裝置留置在停放在陽光下的車內。

• 如果有其他物體掉入本機中，請取出電池，並經合格的專業人員檢查以後，方可繼續使用。

• 在車輛建築物內，收音機訊號可能難以接收或出現雜訊。嘗試在靠近窗戶的前方收聽。

• 因為收音機部分採用有強力的磁鐵，故凡使用有磁鐵的個人信用卡，或發條手鍊，都請遠離本機以免受磁力影響而受損。

• 如果有擦屏膜，請用柔軟的乾布沾中性清潔劑進行清潔。

• 切勿使用擦洗劑或化學溶劑，這些都可能損壞外殼。

• 切勿使用汽油、稀釋劑、市售清潔劑等溶液，或用於乙烯LP的防靜電噴霧劑。

• 對於放置

• 請勿將本機放置在靠近熱源，或可直接照射到太陽、特別多塵或會受到機械撞擊的地方。

• 請勿將本機放在傾斜或不穩定的地方。

如果有關於本機的任何疑問或問題，請與附近的Sony經銷商聯絡。

故障排除

收音機沒有聲音。

• 確認電池是否正確插入。

• 電力不足。使用充電池時，請為電池充電。使用乾電池時，請將電池全部換新。

• 音量級級設定為最小。調高本機音量。

• 電力不足。使用充電池時，請為電池充電。使用乾電池時，請將電池全部換新。

• 收音機訊號微弱。由於建築物或車輛內訊號可能微弱，因此請在窗戶附近收聽收音機。

• 有人在本機附近使用手機或其他會發射無線電波的設備。請把手機等移離本機。

• 將本機移離可能的干擾源，如附近的電視機。

從連接的裝置輸入聲音訊號時，發出噪音或聲音失真。

• 調低連接裝置的音量。

• 若連接的裝置有低音加強功能，請設定為關閉。

• 電力不足。使用充電池時，請為電池充電。使用乾電池時，請將電池全部換新。

• 確認連接線的連接點是否牢固。

• 若果連接至所連接裝置的LINE OUT插孔，請連接至耳機插孔。

從連接的裝置輸入聲音訊號時，聲音太小或沒有聲音。

• 如果POWER開關設定為OFF，請設定為AUDIO IN。

• 音量級級設定為最小。調高本機音量。

• 確認連接線的連接點是否牢固。

• 電力不足。使用充電池時，請為電池充電。使用乾電池時，請將電池全部換新。

• 請參見“錄製收音機失真，或是產生噪音”。

• 錄製的音量設置不正確。請參見“錄製收音機”中的附註或參閱錄製裝置的使用說明書。

規格

頻率範圍：

FM: 87.5 MHz - 108 MHz

AM: 530 kHz - 1710 kHz

振盪器：

直徑3.6 cm, 7.2 Ω (2)

輸入：

AUDIO IN插孔 (Φ 3.5 mm立體聲迷你插孔) (1)

输出：

□ (耳機) 插孔 (Φ 3.5 mm立體聲迷你插孔) (1)

功率輸出：

80 mW + 80 mW (JEITA*)

電源要求：

3 V DC, 兩顆R6 (AA尺寸) 電池

尺寸：

約155 mm × 78.5 mm × 32.5 mm (寬/高/深，不包括突出部分)

約155.4 mm × 80.3 mm × 34.2 mm (寬/高/深，包括突出部分)

(JEITA*)

重量：

約198 g (含電池)

* JEITA (Japan Electronics and Information Technology Industries Association) 標準。

• 根據JEITA (Japan Electronics and Information Technology Industries Association) 標準測得。實際電池持續使用時間會隨本機的情況而異。

• 根據IEC 60068-2-29標準測得。

• 本機的音量級級設定為最小。

• 本機的音量級級設定為最小。</p