# SONY

# VAIO® C1 PictureBook® Computer User Guide

PCG-C1X



#### Notice to Users

© 1999 Sony Electronics Inc. All rights reserved. This manual and the software described herein, in whole or in part, may not be reproduced, translated, or reduced to any machine-readable form without prior written approval.

SONY ELECTRONICS INC. PROVIDES NO WARRANTY WITH REGARD TO THIS MANUAL. THE SOFTWARE, OR OTHER INFORMATION CONTAINED HEREIN AND HEREBY EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE WITH REGARD TO THIS MANUAL, THE SOFTWARE, OR SUCH OTHER INFORMATION. IN NO EVENT SHALL SONY ELECTRONICS INC. BE LIABLE FOR ANY INCIDENTAL. CONSEQUENTIAL, OR SPECIAL DAMAGES. WHETHER BASED ON TORT. CONTRACT. OR OTHERWISE. ARISING OUT OF OR IN CONNECTION WITH THIS MANUAL. THE SOFTWARE. OR OTHER INFORMATION CONTAINED HEREIN OR THE USE THEREOF.

Sony Electronics Inc. reserves the right to make any modification to this manual or the information contained herein at any time without notice. The software described herein is governed by the terms of a separate user license agreement.



As an ENERGY STAR
Partner, Sony Corporation
has determined that this
product meets the ENERGY
STAR guidelines for energy
efficiency.

The International ENERGY STAR Office Equipment Program is an international program that promotes energy saving through the use of computers and other office equipment. The program backs the development and dissemination of products with functions that effectively

reduce energy consumption. It is an open system in which business proprietors can participate voluntarily. The targeted products are office equipment such as computers, displays, printers, facsimiles and copiers. Their standards and logos are uniform among participating nations. ENERGY STAR is a U.S. registered mark.

Sony, VAIO, the VAIO logo, PictureBook, DVgate, i.LINK, Mavica, and PictureGear and are trademarks of Sony Corporation. ImageStation and Sony VAIO Direct are service marks of Sony Electronics Inc. Windows and the Windows 98 logo are registered trademarks of Microsoft Corporation. Intel, MMX, and Pentium are trademarks of Intel Corporation.

All other trademarks are trademarks of their respective owners.

# Safety Information

#### Owner's Record

The model number and serial number are located on the bottom of your VAIO C1 PictureBook Computer. Record the serial number in the space provided here. Refer to the model and serial number when you call your Sony Service Center.

Model Number: PC0	G-CIX
Serial Number:	

#### WARNING

- To prevent fire or shock hazard, do not expose your notebook computer to rain or moisture.
- ☐ To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.
- Never install modem or telephone wiring during a lightning storm.
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch uninsulated telephone wire or terminals unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.
- Avoid using the modem during an electrical storm.
- Do not use the modem or a telephone to report a gas leak in the vicinity of the leak
- ☐ A socket outlet should be as close as possible to the unit and easily accessible.

#### AVERTISSEMENT

- Pour prévenir tout risque d'incendie ou d'électrocution, garder cet appareil à l'abri de la pluie et de l'humidité.
- Pour prévenir tout risque d'électrocution, ne pas ouvrir le boîtier.
   Confier l'entretien de cet appareil exclusivement à un personnel qualifié.
- L'appareil doit être le plus près possible d'une prise murale pour en faciliter l'accès.

# Regulatory Information

#### Declaration of Conformity

Trade Name: SONY

Model No: PCG-C1X

Responsible Party:

Sony Electronics Inc.

#### Address:

1 Sony Drive Park Ridge, NJ 07656

Telephone No.: 201-930-6970

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving
- Increase the separation between the equipment and the receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Only peripherals (computer input/output devices, terminals, printers, etc.) that comply with FCC Class B limits may be attached to this computer product. Operation with non-compliant peripherals is likely to result in interference to radio and television reception.

All cables used to connect peripherals must be shielded and grounded. Operation with cables, connected to peripherals, that are not shielded and grounded, may result in interference to radio and television reception.

#### FCC Part 68

This equipment complies with Part 68 of the FCC rules. On the bottom of this equipment is a label that contains, among other information, the FCC equivalence number (REN) for this equipment. If requested, this information must be provided to the telephone company.

This modem uses the USOC RJ-11 telephone jack.

The REN is used to determine the quantity of devices which may be connected to the telephone line. Excessive RENs on the telephone line may result in the devices not ringing in response to an incoming call. In most, but not all areas, the sum of the RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to the line, as determined by the total RENs, contact the telephone company to determine the maximum REN for the calling area.

If the terminal equipment (PictureBook Computer PCG-C1X) causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice is not practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operations of the equipment. If this happens, the telephone company will provide advance notice in order for you to make the necessary modifications in order to maintain uninterrupted service.

If trouble is experienced with this equipment (VAIO C1 PictureBook Computer PCG-C1X), please contact 1-888-4SONYPC (1-888-476-6972), or write to the Sony Customer Information Center, One Sony Drive, Park Ridge, NJ 07656, for repair and/or warranty information. If the trouble is causing harm to the telephone network, the telephone company may request you to remove the equipment from the network until the problem is resolved.

Repair of this equipment should be made only by a Sony Service Center or Sony authorized agent. For the Sony Service Center nearest you, call 1-888-4SONYPC (1-888-476-6972).

This equipment cannot be used on public coin service provided by the telephone company. Connection to Party Line Service is subject to state and possible provincial tariffs. (Contact the state or provincial utility service commission, public service commission or corporation commission for information.)

# Telephone Consumer Protection Act of 1991 (United States)

The Telephone Consumer Protection Act of 1991 makes it unlawful for any person to use a computer or other electronic device to send any message via a telephone facsimile machine unless such message clearly contains, in a margin at the top or bottom of each transmitted page or on the first page of the transmission, the date and time it is sent and an identification of the business, other entity, or individual sending the message, and the telephone number of the sending machine or such business, other entity, or individual.

In order to program this information into your facsimile machine, see your fax software documentation.

# Telephone Consumer Guidelines (Canada)

Please refer to your telephone directory under 'Privacy Issues' and/or 'Terms of Service.' For more detailed information, please contact:

#### CRTC

Terrasses de la Chaudiére. Tour centrale 1 promenade du Portage, 5 étage, Hull PQ K1A 0N2.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la class B est conforme à la norme NMB-003 du Canada.

# DISPOSAL OF LITHIUM ION **BATTFRY**

You can return your unwanted lithium ion batteries to your nearest Sony Service Center or Factory Service Center.



In some areas the disposal of lithium ion batteries in household or business trash may be prohibited.

For the Sony Service Center nearest you, call 1-888-476-6972 in the United States, or 1-800-961-7669 in Canada.

- Do not handle damaged or leaking lithium ion batteries.
- Ne pas manipuler les batteries au lithium-ion qui fuient ou sont endommagées.

- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.
- Une batterie non conforme présente un danger d'explosion. La remplacer seulement par une batterie identique ou de type équivalent recommandé par le fabricant. Évacuer les batteries usées selon les directives du fabricant.
- The battery pack used in this device may present a fire or chemical burn hazard if mistreated. Do not disassemble, heat above 212°F(100°C) or incinerate. Dispose of used battery promptly. Keep away from children.
- La manutention incorrecte du module de batterie de cet appareil présente un risque d'incendie ou de brûlures chimiques. Ne pas démonter, incinérer ou exposer à une température de plus de 100°C. Évacuer promptement la batterie usée. Garder hors de portée des

enfants.

#### INDUSTRY CANADA NOTICE

NOTICE: The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective, operational and safety requirements as prescribed in the appropriate Terminal Equipment Technical Requirements document(s). The Department does not guarantee the equipment will operate to the user's satisfaction.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection.

The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be coordinated by a representative designated by the supplier. Equipment malfunctions or any repairs or alterations made by the user to this equipment may give the telecommunications company cause to request the user to disconnect.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

Caution: Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

NOTICE: The Ringer Equivalence Number (REN) assigned to each terminal device provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of

any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Number of all the devices does not exceed 5.

# AVIS DE L'INDUSTRIE CANADA

AVIS: L'étiquette d'Industrie Canada identifie le matériel homologué.

Cette étiquette certifie que le matériel est conforme aux normes de protection, d'exploitation et de sécurité des réseaux de télécommunications, comme le prescrivent les documents concernant les exigences techniques relatives au matériel terminal. Le Ministère n'assure toutefois pas que le matériel fonctionnera à la satisfaction de l'utilisateur.

Avant d'installer ce matériel, l'utilisateur doit s'assurer qu'il est permis de le raccorder aux installations de l'entreprise locale de télécommunication. Le matériel doit également être installé en suivant une méthode acceptée de raccordement. L'abonné ne doit pas oublier qu'il est possible que la conformité aux conditions énoncées ci-dessus n'empêche pas la dégradation du service dans certaines situations.

Les réparations de matériel homologué doivent être coordonnées par un représentant désigné par le fournisseur. L'entreprise de télécommunications peut demander à l'utilisateur de débrancher un appareil à la suite de réparations ou de modifications effectuées par l'utilisateur ou à cause de mauvais fonctionnement.

Pour sa propre protection, l'utilisateur doit s'assurer que tous les fils de mise à la terre de la source d'énergie électrique, des lignes téléphoniques et des canalisations d'eau métalliques, s'il y en a, sont raccordés ensemble. Cette précaution est particulièrement importante dans les régions rurales.

Avertissement: L'utilisateur ne doit pas tenter de faire ces raccordements lui-même; il doit avoir recours à un service d'inspection des installations électriques, ou à un électricien, selon le cas.

AVIS: L'indice d'équivalence de la sonnerie (IES) assigné à chaque dispositif terminal indique le nombre maximal de terminaux qui peuvent être raccordés à une interface.

La terminaison d'une interface téléphonique peut consister en une combination de quelques dispositifs, à la seule condition que la somme d'indices d'équivalence de la sonnerie de tous les dispositifs n'excède pas 5.

# **Contents**

Welcome	
Ergonomic Considerations	2
Using Your C1 PictureBook Computer	
Locating the Controls and Connectors	5
Front	
Left	
Right	
Bottom	
Connecting a Power Source	8
Using the AC Adapter	
Using Battery Power	9
Starting Your C1 PictureBook Computer	12
Shutting Down Your C1 PictureBook Computer	13
Registering Windows® 98	
Registering Your Computer	15
Using the Keyboard	
Combinations and Functions with the Windows 98 Key	
Indicators	19
Combinations and Functions with the Fn Key	20
Using the Pointing Device	21
Using the Floppy Disk Drive	23
Using PC Cards	
Using Infrared Communication Devices	
Using Power Saving Modes	
Normal Mode	
System Suspend Mode	
System Hibernation Mode	

Connecting Peripheral Devices	
Connecting a Phone Line	34
Connecting a Printer	35
Connecting an External Display	
Connecting an External USB Mouse	
Connecting the CD-ROM Drive	
Connecting a Digital Video Camera Recorder	
Customizing Your C1 PictureBook Computer	
Displaying the Sony Notebook Setup Screen	43
To display the Sony Notebook Setup screen	
Notebook Setup Tabs	
Controlling Power Management	45
Power Management Profiles	45
Power Management Commands	
Displaying Battery Information	
Activating BatteryScope	
Battery Icon Descriptions	49
Displaying Detailed Battery Information	
Starting Your Favorite Software with Programmable Pow	er
Key (PPK) Setup	
Using the Programmable Power Key with Other Keys	51
Selecting the Display Mode	52
Using the Dual Display Function	53
Selecting dual display mode	
Setting the colors and resolution for each display	54
Customizing the virtual desktop	
Releasing the dual display setting	54
Changing the Pointing Device settings	55
Using the Press-select function	55

Using the Smart Utilities	
Using Smart Capture	57
Capturing a still image	57
To send a still image via e-mail using a MAPI-compliant	
e-mail software such as Microsoft <sup>®</sup> Outlook <sup>®</sup> 98 To send a still image via e-mail if you use America Online <sup>®</sup>	60
To send a still image via e-mail if you use America Online	
or other non-MAPI-compliant e-mail software	
Capturing a video clip	
To play back captured video clips	63
To send a video clip via e-mail using a MAPI-compliant	
e-mail software such as Microsoft® Outlook® 98	64
To send a video clip via e-mail if you use America Online®	
or other non-MAPI-compliant e-mail software	
Using Smart Write	
Using Smart Publisher	68
Using Smart Label	
C	
Getting Help	
Troubleshooting	73
Using the System and Application Recovery CDs	
Using the System Recovery CD(s)	80 80
Using the Application Recovery CD(s)	82
Using the Application Recovery CD(s)	02
Notes on Use	22
Notes on osc	03
Limited Warranty Statement	
C1 PictureBook Computer Warranty	20
GARANTIE RESTREINTE	91
Battery Limited Warranty	
GARANTIE RESTREINTE	
· · · · · · · · · · · · · ·	
Indov	OF

# Welcome


Congratulations on your purchase of the VAIO $^{\$}$  C1 PictureBook $^{\text{TM}}$  Computer with integrated digital camera. Sony has combined leading-edge technology in audio, video, computing, and communications to provide you with state-of-the-art personal computing.

This manual offers a quick introduction and reference to your Sony computer.

- □ **Using Your VAIO C1 PictureBook Computer** shows you how to use the standard components of your system.
- □ **Connecting Peripheral Devices** explains how you can add functionality by connecting various peripherals.
- ☐ **Getting Help** explains the support options available to you and offers basic troubleshooting tips.
- Notes on Use provides facts and advice about using your notebook computer.
- ☐ **Limited Warranty Statement** provides your product warranty statement and explains how to extend your warranty for an additional nine months.

# **Ergonomic Considerations**

You will be using your C1 PictureBook Computer as a portable device in a variety of environments. Whenever possible, you should attempt to apply the following ergonomic considerations to both stationary and portable environments.

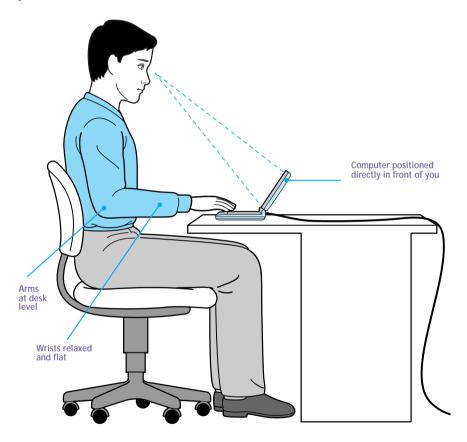

Position of your computer – Place the computer directly in front of you as you work. Keep your forearms horizontal, with your wrists in a natural, comfortable position while using the keyboard, pointing device, or external mouse. Let your upper arms hang naturally at your sides. Take breaks during sessions with your computer. Excessive use of the computer may strain muscles or tendons.


- □ **Furniture and posture** Sit in a chair with good back support and armrests. Adjust the level of the chair so your feet are flat on the floor. A footrest may make you more comfortable. Sit in a relaxed, upright posture and avoid slouching forward or leaning far backward.
- □ **Viewing angle of the computer's display** Use the display's tilting feature to find the best position. You can reduce eye strain and muscle fatigue by adjusting the tilt of the display to the proper position and by adjusting the brightness settings of the display.
- □ **Lighting** Choose a location where windows and lights do not create glare and reflection on the display. Use indirect lighting to avoid bright spots on the display. You can also purchase accessories for your display that help reduce glare. Proper lighting adds to your comfort and work effectiveness.
- □ **Placement of an external display** When using an external display, set the display at a comfortable viewing distance. Make sure the display screen is at eye level or slightly lower when you are sitting in front of the LCD screen.

# Using Your C1 PictureBook Computer


This section describes how to start using your computer and how to use your computer's internal and external devices, such as the pointing device and floppy disk drive.

# Locating the Controls and Connectors

#### **Front**

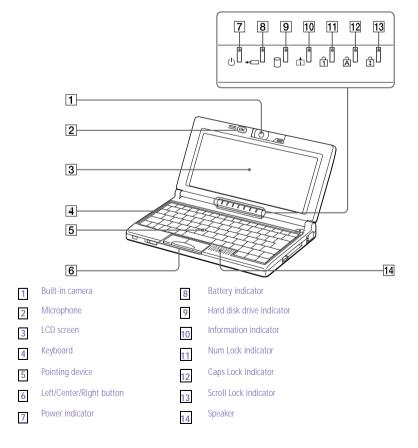

# Left

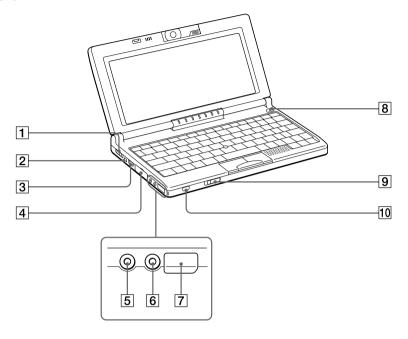

1 Power switch


- 6 Headphone connector
- 2 **S200** i.LINK™ (IEEE1394)
- 7 Infrared port

3 Y USB connector

8 CAPTURE button


- 4 Monitor connector
- 9 LCD lock lever
- 5 Microphone connector
- 10 Programmable Power Key (PPK)

# Right

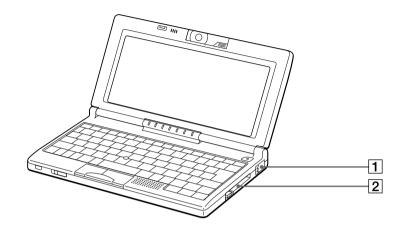

- 1 Phone line jack (page 34)
- 2 PC card slot (page 25)

# **Bottom**

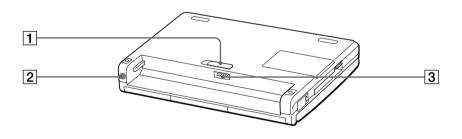


- 1 Battery release lever (page 11)
- 3 Battery connector

# Connecting a Power Source

You can use either AC power or a rechargeable battery pack as a power source.

# Using the AC Adapter

- Plug the cable attached to the AC adapter into the DC In connector on the computer.
- Pull the prong on the AC adapter upwards and plug it into an AC outlet.

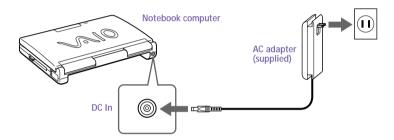

#### To remove the AC adapter

- Unplug the AC adapter from the AC outlet and the adapter cable from the DC In connector on the computer.
- Align the adapter cable with the groove on the AC adapter and wrap the cable around the AC adapter.



# Using Battery Power


You can use a battery pack as a source of power. The PCGA-BP11 battery pack that comes with your computer is not fully charged at the time of purchase. Follow the steps below to insert and charge the battery pack.



You can also purchase the high-capacity PCGA-BP12 battery pack as a separate option. See "Using Power Saving Modes" on page 30 for power management information.

## To insert the battery pack

Align the grooves on the battery with the notches on the back of the computer, and then slide the battery towards the computer until it clicks into place.

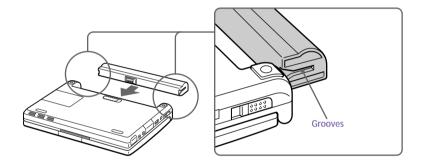


#### To charge the battery pack

- 1 Connect the AC adapter to the computer.
- 2 Insert the battery pack.

The computer automatically charges the battery (the battery indicator light flashes in a double blink pattern as the battery charges). When the battery is 85% full, the battery indicator light turns off. This process takes approximately one and one half hours. To charge the battery completely, continue charging for an additional hour.

The →□ battery indicator above the keyboard indicates the status of the battery pack.

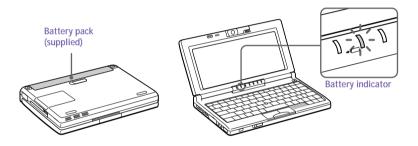

Battery Indicator	Magning	
Light Status	Meaning	
On	The computer is using battery power.	
Single blink	The battery is running out of power.	
Double blink	The battery is charging.	
Off	The computer is using AC power.	



Both the battery and power indicators blink when the battery is running out of power.

Keep the battery pack in the computer while it is directly connected to AC power. The battery pack continues to charge while you are using the computer.

If your battery level falls to less than 10%, you should either attach the AC adapter to recharge the battery or shut down your computer and insert a fully charged battery.

You can extend battery life by changing the power management modes in the PowerPanel utility. See "Using Power Saving Modes" on page 30.


The battery pack supplied with your computer is a lithium ion battery and can be recharged at any time. Charging a partially discharged battery does not affect battery life.

The battery indicator light is on while you use the battery pack as a power source. When battery life is nearly depleted, the battery indicator starts flashing.

For some software applications and some peripheral devices, your computer may not enter system hibernation mode when the battery life is low. To avoid loss of data when using battery power, you should save your data frequently and manually activate a power management mode, such as system suspend or system hibernation.

#### To remove the battery pack

 
- Turn off the computer.
- Slide the release lever to the UNLOCK position and slide the battery away from the computer.

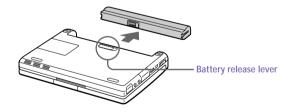

A You may lose data if you remove the battery pack while the computer is on and not connected to the AC adapter or if you remove the battery while the computer is in System Suspend mode.

# Starting Your C1 PictureBook Computer

Slide the LCD lock lever in the direction of the arrow, and lift the cover.

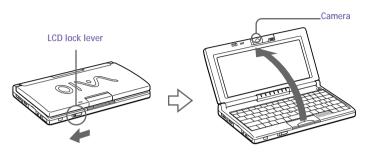

Be careful not to grab the camera lens when lifting the cover.

2 Slide the power switch on the left side toward the front of the computer until the green power indicator light turns on.



If you hold the power switch in the On position for more than four seconds, the computer turns off.


If necessary, adjust the brightness controls for the LCD display. To decrease the brightness, press Fn+F5 and then the down or left arrow key. To increase the brightness, press Fn+F5 and then the up or right arrow key.

# Shutting Down Your C1 PictureBook Computer

 - To avoid potential loss of data, follow these steps to shut down your computer.
- Click the Start button on the Windows 98 taskbar.
- Click Shut Down at the bottom of the Start menu to display the Shut Down Windows dialog box.



- 3 Select Shut down
- 4 Click OK.
  - Respond to any prompts warning you to save documents.
- 5 Wait for your computer to turn off automatically. The power indicator turns off
- Turn off any peripherals connected to your computer.

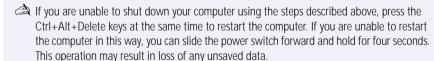

During a period of inactivity, you can conserve battery life by using System Suspend mode. See "Controlling Power Management" on page 45.



Be sure to turn the camera lens toward you before closing the cover.

# Registering Windows® 98

The first time you turn on your computer, you need to complete a few steps to register and configure the Windows 98 software that is already installed on your computer.

A You must register Windows 98 before you can use the computer.

The on-screen instructions guide you through the registration and configuration process. The following is an overview of the process.

1	Gathering information:		
		Enter your name.	
		Read and accept the License Agreement.	
		Enter your Certificate of Authenticity number located on the cover of the Microsoft Windows 98 <i>Getting Started</i> manual.	
2		ndows 98 setup: click the Finish button on the Windows 98 Setup zard screen.	
3	Selecting your computer settings: if necessary, change the Time Zor Date and Time on the Date/Time Properties screen.		
4	Registering your computer: for details on registering your computer see "Registering Your Computer" on page 15. You can also sign up for your 100 free hours of Internet service at this time.		
5	Learning about Windows 98:		
		If you choose, take the tour of Windows 98.	

# Registering Your Computer

You can take advantage of Sony's commitment to quality customer support and receive the following benefits by registering your computer with Sony:

- **Extended Limited Warranty** Protect your investment. Extend your Warranty nine months for a total of 12 months from the original date of purchase when you register your computer.
- **Express service** Provides convenient resolution of problems.
- ☐ Free Internet access Use the Internet for up to 100 free hours when you sign up with GTE (no credit card necessary). Free access expires 100 hours or 60 days after signing up, whichever occurs first.

If you have not already registered, follow these steps to use your computer's online registration service.




You must connect your phone line before using any online services, including the online registration service. See "Connecting a Phone Line" on page 34.

- Click the registration icon on the VAIO desktop.
- Enter the information requested on the first online registration form. Press the Tab key to move from box to box.
- 3 Click the Next button to advance to the next form.
- Complete the remaining forms by clicking the Next button each time 4 you complete a form.

The computer automatically transfers your registration information using your built-in modem and a toll-free telephone number.

# Using the Keyboard

Your keyboard is very similar to a typewriter's, but the keyboard has additional keys that perform specific computer-related tasks.

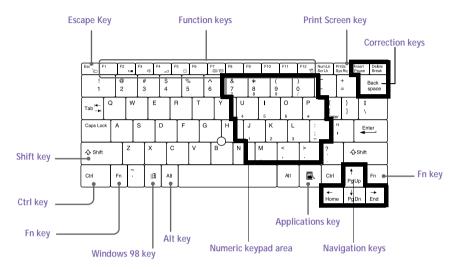

Key	Description	
Numeric keypad area	Contains the keys found on a typical calculator. Use the numeric keypad area to type numbers or to perform mathematical calculations such as addition and subtraction. Numbers appear on the front beveled edge of the numeric keys. Note that you must press the Num Lock key to activate the numeric keypad. (When you do so, the Num Lock light will be on.)	
Navigation keys	Several keys are devoted to moving the cursor on the screen (the four arrow keys which also function as the Home, End, Page Up, and Page Down keys).	
Correction keys	The Insert, Backspace, and Delete keys enable you to make corrections in your documents.	
Function keys	The twelve function keys along the top of the keyboard are used to perform designated tasks. For example, in many applications, F1 is the Help key. The task associated with each function key may vary from one application to the next.	

Key	Description
Escape key	The Esc (Escape) key is used to cancel commands.
Print Screen key	The Print Screen key takes an electronic snapshot of the screen and places it in the Windows Clipboard. You can then paste the screen shot into a document and print it.
Operator keys	Several keys are always used with at least one other key: Ctrl, Alt, and Shift. When held down with another key, the Ctrl (Control) and Alt (Alternate) keys offer another way to give commands. For example, in many applications, instead of choosing the Save command from a menu, you can hold down Ctrl and press S (referred to as Ctrl+S). The Shift key operates the same way as on a typewriter; it's used to produce capital letters or special symbols such as @ and \$.
Windows 98 key	The key with the Windows logo displays the Windows 98 Start menu; it's the equivalent of clicking the Start button on the task bar. See "Combinations and Functions with the Windows 98 Key" on page 18.
Fn key	The Fn key is used in combination with other keys to issue commands. The Fn keys at the left and right sides both work the same. See "Combinations and Functions with the Fn Key" on page 20.
Applications key	The Applications key displays a shortcut menu of context-sensitive choices; pressing this key is the equivalent of clicking the right mouse button.

# Combinations and Functions with the Windows 98 Key

=
Function
Displays Windows Help.
Switches the selected button on the taskbar.
Displays Windows Explorer.
Displays the Windows Find: All Files window to find a file or folder. This is the equivalent of selecting Find and then Files or Folders from the Start menu.
Displays the Windows Find: Computer window where you can locate other computers. This is the equivalent of selecting Find and then Computer from the Start menu.
Minimizes all displayed windows.
Returns all minimized windows to their previous size.
Displays the Run window. This is the equivalent of selecting Run from the Start menu.
Displays the Properties window. This is the equivalent of double-clicking the System icon in the Control Panel.

# Indicators

Indicator	Function	
Information	Turns on when the PPK Timer is set. Turns off when the PPK Timer is not set or the PPK Timer setting is inactive. (Such as when the computer's power is off or in System Hibernation mode.)	
Battery	Indicates the status of the battery attached at the rear of the computer.	
Power (¹)	Lights when the power to the computer is turned on. Flashes in System Suspend mode. Turns off when the computer is in System Hibernation mode or powered off.	


Light	On	Off
Hard disk	Data is being read from or written to the hard drive. Do not enter System Suspend mode or turn off the computer when this indicator light is on.	The hard drive is not being accessed.
Num Lock	The number keys area in the numeric keypad are active.	The alphanumeric character keys in the keypad area are active.
Caps Lock 阖	The letters appear in uppercase as you type. The Shift key lowers the case of typed letters when Caps Lock is on.	Letters appear in lower case as you type (unless you hold down the Shift key).
Scroll Lock	The screen scrolls differently. (Exactly how it scrolls depends on the specific application. It has no effect in many applications.)	Information moves across the display normally.

# Combinations and Functions with the Fn Key

Combinations/ Feature	Functions
Fn+ $\stackrel{z_2,}{\longrightarrow}$ (ESC) System Suspend	Puts the system into System Suspend mode, a power management state. To return the system to the active state, press any key or press the power switch on your computer.
Fn+ (F2) Display power status	Displays the power status, as in the example below:  Using AC power Charging a battery pack Charging a battery pack
Fn+ <sup>1</sup> (F3) Speaker switch	Toggles the built-in speaker off and on.
Fn+ (F4) Speaker volume	Adjusts the built-in speaker volume.  To increase volume, press Fn+F4, then ↑ or →.  To decrease volume, press Fn+F4, then ↓ or ←.
Fn+ : Ö (F5) Brightness control	Adjusts the brightness of the LCD.  To increase light intensity, press Fn+F5 and then  ↑ or →.  To decrease light intensity, press Fn+F5 and then  ↓ or ←.
Fn+ (F7) Switch to the external display	Toggles through the LCD, external display (connected to the ☐ Monitor connector), and both LCD and external display.  Only LCD → LCD and external display Only external display
Fn+ <sup>z</sup> :뒨 (F12) System Hibernation	Provides for the lowest level of power consumption. When you execute this command, the state of the system and state of the peripheral devices are written to the hard disk and the system power is turned off. To return the system to the original state, use the power switch to turn on power.
Fn+D Video standby	Turns off the LCD in order to save power.

# Using the Pointing Device


The pointing device on the keyboard allows you to point to, select, drag, and scroll objects on the screen.

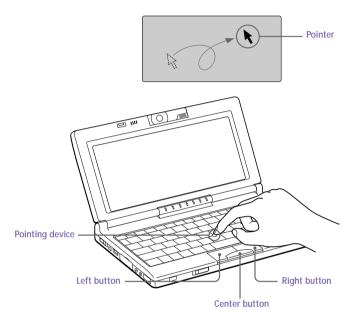

Action	Description	
Point	Press the pointing device in a direction to place the pointer on an item or object.	
Click	Press the left button once.	
Double-click	Press the left button twice.	
Right-click	Press the right button once. In many applications, this action displays a shortcut menu of context-sensitive choices.	
Drag	Press the pointing device in a direction to place the pointer on an item or object. While holding the left button, press the pointing device, then release it at the desired point.	
Scroll	Press the pointing device while pressing the center button.	

## To replace the pointing device cover

You can take off the pointing device cover and replace it with the additional pointing device cover supplied with your computer.

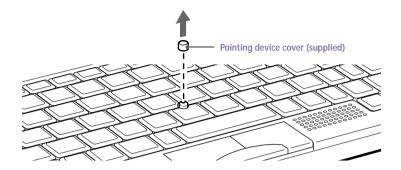


# Using the Floppy Disk Drive

You can connect the floppy disk drive to the USB connector on your computer.


#### To connect the floppy disk drive

Plug one end of the USB cable into the  $\Psi$  USB connector on the computer and the other end into the USB connector on the floppy disk drive. When using the disk drive, the VAIO logo should face up.

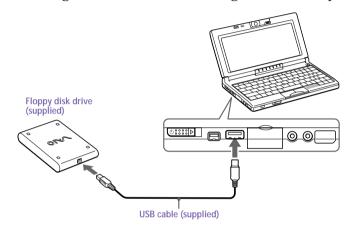


#### To insert a diskette

 - Hold the diskette with the label side facing up.
- 2 Gently push the diskette into the drive until it clicks into place.

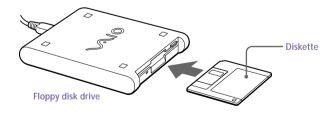

#### To remove a diskette

 ☐ When you finish using a diskette, wait until the LED indicator turns off and then press the Eject button to remove the diskette.

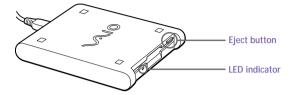

### Using PC Cards

Your computer includes a PC card slot. PC cards allow you to connect portable external devices, such as a CD-ROM drive, or to connect to a network.



The PC card slot can accommodate one Type II PC card. This slot is compatible with Card Bus and ZV (Zoomed Video) port.

Some PC cards may require that you disable idle devices when using the PC card. You can use Sony Notebook Setup to disable devices. See "Displaying the Sony Notebook Setup Screen" on page 43 for details.

Be sure to use the most recent software driver provided by the PC card manufacturer.

If an "!" mark appears on the Device Manager tab in the System Properties dialog, remove the software driver and then reinstall it.


You may not be able to use some PC cards or some of the functions of a PC card with this computer.

#### To insert a PC card




You do not need to shut down the computer before inserting or removing a PC card.


Pull the PC card release button up away from the computer and push it in towards the computer.

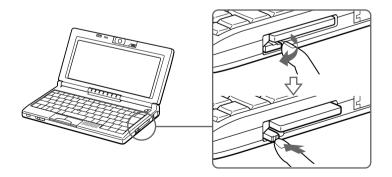

Remove the PC card slot protector.

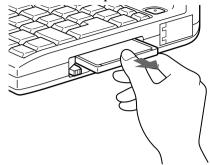

Insert the PC card into the PC card slot, front label facing up. Gently push the card into the slot until the card is fixed into the connector. The release button comes out.

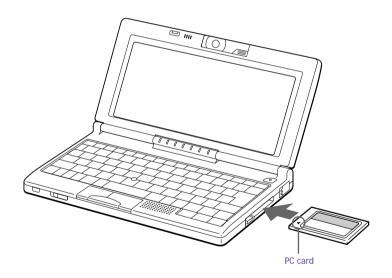

Do not force a card into the slot. It may damage the connector pins.


If you have difficulty inserting a card, check that you are inserting the card with the correct orientation.

See the manual that came with your PC card for more information on its use.

For some PC cards, if you alternate between normal power operation and the system suspend or system hibernation power management modes while the card is inserted, you may find that a device connected to your system is not recognized. Reboot your system to correct the problem.

#### To remove a PC card

- Close any applications that use the PC card. Otherwise data may be lost.
- 2 Click the PC card icon in the taskbar and close the card.
- 3 Pull the PC card release button up and press it in towards the computer.

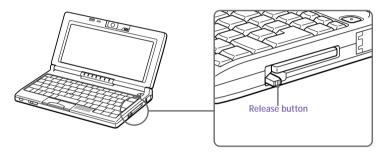


- 4 Gently grasp the card and pull it out.
- 5 Insert the PC card slot protector into the empty slot.

### Using Infrared Communication Devices

Your computer includes an infrared port, located on the left side of the computer. You can use this port to communicate with other infraredequipped devices with compatible protocols, such as a digital still camera or other computers.


To use infrared communication with a digital still camera

Align the infrared ports on the computer and the digital camera so that they are in a direct line.

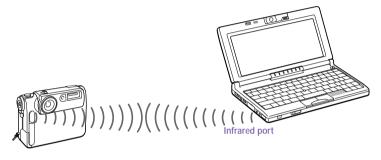

To use infrared communication with another computer

Align the infrared ports on the two computers so that they are in a direct line.

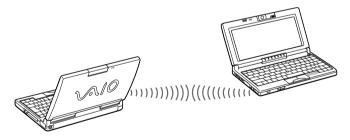

(a) Infrared communication capability can be turned on and off. By default, it is not enabled when your system is shipped. To enable infrared use, click the Infrared icon in the Windows Control Panel, and select the Enable infrared communication checkbox on the Options tab.

You can disable infrared communication when you are not using it to conserve battery life.

Use the Infrared icon in the Windows Control Panel to enable and disable infrared communication. Do not use the icon in the taskbar.

When you transfer files directly from devices other than the internal hard disk drive, such as a CD-ROM drive or hard disk drive on a network, set the System Suspend and System Hibernation timers to off.

Check the Status tag of the Infrared Monitor in the Windows Control Panel to determine if the infrared device is detected.


If the two devices are too far apart or too close together, data transfer may be interrupted or there may be noise in the transmission.

Do not cover the infrared ports with your hand or any other objects.

Avoid direct sunlight, fluorescent light, or flashing incandescent light near the infrared ports.

See the manual that came with your digital still camera or other infrared communication device for more information on installation and use.

The active area of infrared transmission extends about 39  $^{3}$ / $_{8}$  inches (1m) with a radius of 15 degrees.

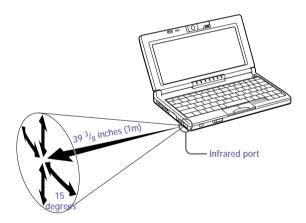

### Using Power Saving Modes

When you use a battery as the source of power for your computer, you can take advantage of power management settings to conserve battery life. In addition to the normal operating mode, which allows you to turn off specific devices, your computer has two distinct power saving modes: System Suspend and System Hibernation. When using battery power, you should be aware that the computer automatically enters System Hibernation mode when the remaining battery charge drops below 7%, regardless of the power management setting you select.



If your battery level falls to less than 10%, you should either attach the AC adapter to recharge the battery or shut down your computer and insert a fully charged battery.

#### Normal Mode

This is the normal state of your computer when it is in use. The green power indicator light is on in this mode. To save power, you can turn off a specific device such as the LCD or the hard disk.



For details, see "Controlling Power Management" on page 45.

#### System Suspend Mode

The computer saves the current state of the system in RAM and switches off power to the CPU. The amber power indicator light flashes in this mode.

#### To activate System Suspend mode

Press Fn+Esc, or you can slide the power switch forward and release the switch immediately. You can also use the PowerPanel utility to enter System Suspend mode.

#### To return to normal mode

Press any key.

#### System Hibernation Mode

The state of the system is saved on the hard drive and power is turned off. The power indicator light is off in this mode.

#### To activate System Hibernation mode

Press Fn+F12. You can also use the PowerPanel utility to enter System Hibernation mode.

#### To return to normal mode.

Turn on the computer by sliding the power switch forward. The computer returns to its previous state.



When returning from System Hibernation mode, the system status stored on the hard disk is erased and the computer starts normally if you slide the power switch forward and hold for more than four seconds.

- Time to return to normal mode: System Suspend requires less time than System Hibernation.
- Power consumption: System Suspend uses more power than System Hibernation.

## Connecting Peripheral Devices

You can add functionality to your computer by connecting any of these peripherals:

- Phone line (page 34)
- Printer (page 35)
- External display (page 36)
- External mouse (page 38)
- CD-ROM drive (page 39)
- Digital video camera recorder (page 42)

Before you connect peripherals, turn off the computer and all peripherals.

Connect the AC adapter only after connecting all cables.


Turn on the computer only after turning on all peripherals.

### Connecting a Phone Line


You need to connect a phone line to take advantage of online services and the Internet.

In order to register your VAIO C1 PictureBook Computer or register your software online, you must connect to a phone line. You must register your computer to receive the extended warranty.

Open the phone line jack cover. The cover opens only to a 45 degree angle.

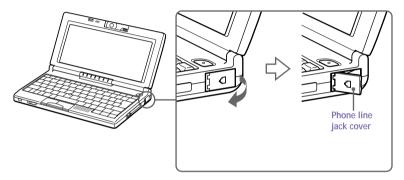

- 2 Plug one end of the phone cable into the jack on the inside of the phone line jack cover. Make sure you insert the phone cable from the rear of the computer and that the modular jack clicks into place.
- 3 Plug the other end into the wall jack.

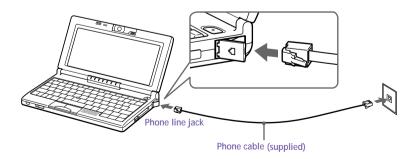


Your computer does not work with party lines, cannot be connected to a coin-operated telephone, and may not work with multiple phone lines or a private branch exchange (PBX). Some of these connections might result in excess electrical current and could cause a malfunction in the internal modem.

### Connecting a Printer

You can connect a Windows 98-compatible printer or other parallel port device to your computer.

#### To connect a printer

Plug the USB printer cable (optional) into the  $\psi$  USB connector.

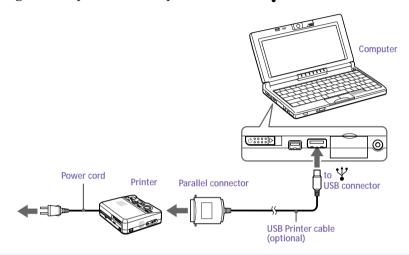

See the manual that came with your printer for more information on installation and use.


### Connecting an External Display

You can connect an external display to your VAIO C1 PictureBook Computer. For example, you can use the computer with either of the following:

- Computer display (monitor) (page 36)
- Projector (page 37)


#### To connect a computer display

- Use the □ symbol to locate the Monitor connector. Connect the supplied adapter to the Monitor connector, then plug the display cable into the adapter.
- If necessary, plug one end of the display power cord into the display, and the other end into an AC outlet.
- Before connecting an external display, open the external display connector cover on the left side.

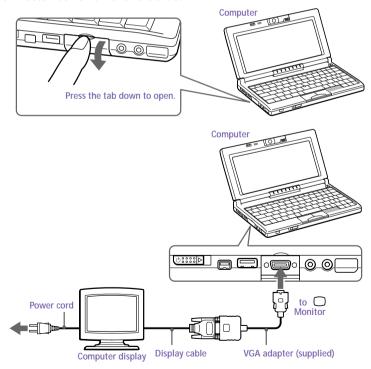

#### To remove the VGA adapter

 
Turn off your computer and then press both sides of the connector of the VGA adapter.

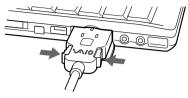

#### To connect a projector

You can use a projector as an external display, such as the Sony LCD Projector.

- Use the □ symbol to locate the Monitor connector. Plug the RGB signal cable to a VGA adapter and into this connector.
- Use the  $\Omega$  symbol to locate the Headphone connector. Plug the audio cable into this connector.

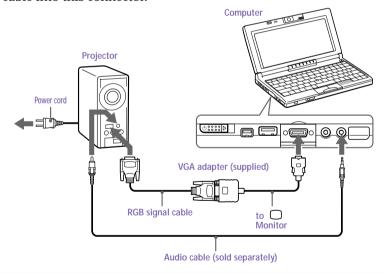

See the manual that came with your projector for more information on installation and use.

#### To select a display


When you connect an external display to the monitor connector, you can press Fn+F7 to toggle the output between the Liquid Crystal Display (LCD), the external monitor, or both devices. See "Selecting the Display Mode" on page 52 for more information.

### Connecting an External USB Mouse

You can connect an external USB mouse PCGA-UMS1 (optional) to your computer.

To connect an external mouse

Plug the mouse cable into the USB connector.

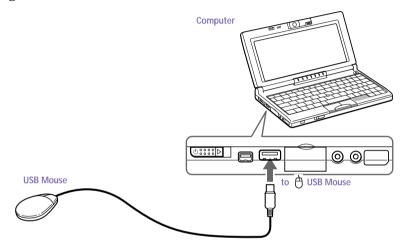


A See the manual that came with your mouse for more information on installation and use.

### Connecting the CD-ROM Drive


You can use the optional PCGA-CD5 CD-ROM drive with your computer.

#### To connect the CD-ROM drive


- Remove the PC card slot protector from the PC card slot. See "Using PC Cards" on page 25 for details.
- Connect the CD-ROM drive cable to the PC card supplied with the CD-ROM drive.

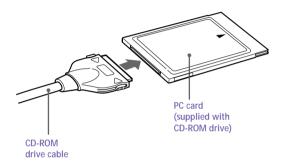

3 Connect the CD-ROM drive AC power adapter to the CD-ROM drive and plug the AC adapter into an AC outlet. Turn on the computer by sliding the power button forward.

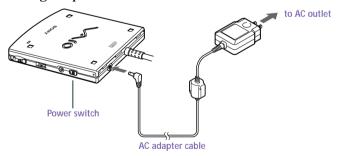

Insert the PC card into the PC card slot with the label side facing up. See "Using PC Cards" on page 25 for details.

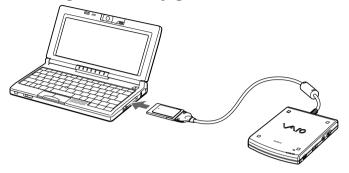


The pick-up cover is attached to the lens of the CD-ROM drive at the factory. Before using the CD-ROM drive, remove the pick-up cover.

#### To insert a CD-ROM

Slide the Open button in the direction of the arrow to open the CD-ROM drive lid.




Place the CD-ROM in the tray with the label side facing up. Push the disc onto the hub until the disc clicks into place.

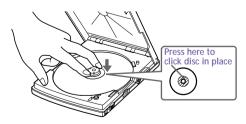

Be sure to seat the CD-ROM firmly over the CD-ROM drive hub fingers. If you do not seat the disc firmly, you could damage your CD-ROM drive and you may not be able to open the CD-ROM drive lid.

### Gently press on the CD-ROM drive lid until it clicks shut.

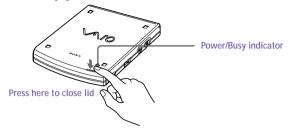


### Connecting a Digital Video Camera Recorder

The VAIO C1 PictureBook Computer includes an i.LINK (IEEE 1394) connector, which you can use to connect to a digital video camera recorder

#### To connect a digital video camera recorder

Plug one end of an i.LINK cable into the S200 L connector on the left side of the computer and the other end into the DV In/Out connector on the digital video camera recorder.

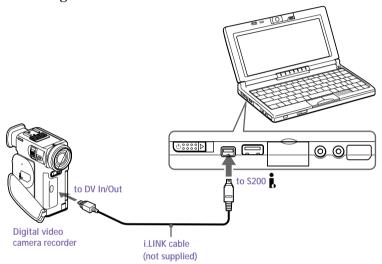

The Sony digital video camera recorder (DCR-PC7) is pictured; your digital video camera recorder may need to be connected differently.

On Sony digital video cameras, connectors labeled "DV In/Out" or "i.LINK" are compatible.

See the manual that came with your digital video camera recorder for more information on installation and use.

The i.LINK connector does not supply power to external devices. If the external device requires power from the i.LINK connector, you cannot use the device with your computer.

The C1 PictureBook Computer supports transfer rates up to 200 Mbps; however, the actual transfer rate is the lowest transfer rate of the external device.

The i.LINK features available may vary depending on the software applications you use. See the documentation that came with your software for more information.

# Customizing Your C1 PictureBook Computer

You can customize the settings of your C1 PictureBook Computer. The following sections briefly describe how to change your computer's default settings. You can also refer to the Sony Notebook Setup Help for more detailed information.

### Displaying the Sony Notebook Setup Screen

### To display the Sony Notebook Setup screen

- Click the Start button on the Windows 98 taskbar.
- 2 Point to VAIO and then click Sony Notebook Setup.
- 3 Select the tab for the item you want to change. See "Notebook Setup Tabs" on page 44.
- 4 After you finish, click OK.

### Notebook Setup Tabs

Tab	Descriptions
About This Computer	Display system information, including memory capacity, serial number, and BIOS version.
Power On Device Sequence	Select the order of drives and devices from which you want to load the operating system.
Power On Password	Set the password to secure your computer.
Enable Ports	To change the audio, infrared, and modem settings, click Advanced on the Basic/Advanced tab.
Basic/Advanced	Toggle between Advanced mode (additional screens with advanced settings) and Basic mode of display. Advanced mode includes Audio, Built-in Modem, Infrared, Enable Ports, and View Resources tabs.

For more information about each option, click Help on the Sony Notebook Setup screen to display the help file.

### Controlling Power Management

The PowerPanel utility allows you to control the power management of your computer and provides key information about system activity and battery life. The following sections briefly describe how to conserve your computer's battery power. You can also refer to the PowerPanel Help for more detailed information.

### Power Management Profiles

PowerPanel provides several predefined power management profiles. Each profile consists of a group of specific power management settings that are designed to meet specific power management goals — ranging from maximum power management to no power management. You can change the settings for any of the predefined profiles or you can create your own profile to suit your portable computing needs. The predefined profiles are:

#### Icon

#### Description



**Maximum Battery Life** – Provides power-saving features to give you maximum battery life and good performance. It slows the computer and puts it into System Suspend mode after a specified period of inactivity.



**Power Management Off** – Turns off all power management features such as System Suspend and System Hibernation modes.



**AC Profile** – The power management state when AC power is in use. Similar to the Power Management Off setting. PowerPanel automatically loads the AC profile unless you disable this feature.



**Presentation** – Keeps the display on at all times while it conserves power. This option is ideal for slide show presentations. You can establish settings for LCD (Video) Standby, Hard Disk Sleep, and System Suspend to optimize power management for your system.



**Camera** - Provides the best system performance while using the built-in camera.



**Word Processing** – Optimizes power management with longer timeouts on the hard disk and display screen. You can also establish settings for LCD (Video) Standby, Hard Disk Sleep, and System Suspend to optimize power management for your system.

#### Icon

#### Description



**Communications** – Extends battery life by initiating a quick display timeout. The Internal modem remains powered. You can also establish settings for LCD (Video) Standby, Hard Disk Sleep, and System Suspend to optimize power management for your system.

#### Power Management Commands

PowerPanel also provides power management commands that you can use to activate specific power management functions and to control power for a specific device. You might use these commands when you want to override a profile setting or initiate an immediate action, such as putting the system into Video Standby mode before the Video Standby timer expires.

#### Icon

#### Description



**System Suspend** – Puts the system into System Suspend mode, a power management state that saves the state of the system and peripheral devices in memory (RAM). Power consumption reduces to a minimum, and the system remains on. To return the system to the active state, press any key or the power switch on your computer.



**System Hibernation** – Provides for the lowest level of power consumption. The system writes the state of the system and peripheral devices to the hard disk and turns off the system power. To return the system to the original state, use the power switch to turn on power. The system saves the data in the Save to Disk Partition on the hard drive.



**LCD (Video) Standby** – Turns off the LCD to save power. If you turn off the Video Standby timer, the display remains active except when the system enters System Suspend mode. The video display system is one of the largest consumers of power in the system.



**Hard Disk Sleep** – Turns off the hard disk spindle motor. Although you can manually turn off the power to the hard disk through this command, any system request to the hard disk turns on the power to the hard disk.



**Speed Controller** - Controls the speed at which the CPU performs. Click this button to open the Speed Control dialog box. When you select the Auto checkbox, the CPU performs at full speed while the system is active and at 25% of full speed during periods of inactivity. Auto is the recommended option. You can also choose to run the CPU at 100%, 75%, 50%, or 25% of full speed regardless of whether the system is active or inactive. Using this command can help conserve battery power.

#### Icon Description



PC Card- Controls the PC card sockets. Click this button to open the PC Card (PCMCIA) Properties dialog box. You can view the properties for the PC cards.

#### To activate PowerPanel

Double-click the ₩ (PowerPanel) icon on the taskbar.

The Profiles toolbar appears. When you move the pointer over the atom icon on the taskbar, a tooltip with the name of the active power management profile appears.



Click the button you want to set.

The power management settings associated with the profile you select become active.



To display the Commands toolbar, right-click an empty portion of the toolbar and select Commands from the shortcut menu. Refer to the PowerPanel Help for information on customizing the PowerPanel toolbars.

When you use the battery pack to power your computer, your system selects the Maximum Battery Life power management profile by default. If you select a different power management profile while using battery power, that profile is selected automatically the next time you use the battery pack to power your computer.

### Displaying Battery Information

You can display detailed information for the battery in your computer. The following sections briefly describe how to display your computer's general battery information. You can also refer to the BatteryScope Help for more detailed information.

#### Activating BatteryScope

#### To activate BatteryScope

- 1 Click the Start button on the Windows 98 taskbar.
- 2 Point to VAIO and then click BatteryScope.

When you move the pointer over the battery icon on the taskbar, a tooltip appears indicating the total capacity remaining in the battery and the estimated time until the battery fully discharges.

You can also view battery gauges on the shared PowerPanel and BatteryScope toolbar.



### Percentage indicator

Displays the percentage of the remaining capacity.

#### ■ Time indicator

Displays estimated time (hours/minutes) remaining before the battery fully drains, also referred to as the time-to-empty.

### Battery Icon Descriptions


Battery icon	Battery status
	Discharging
<b>S</b>	Charging
	No battery

### Displaying Detailed Battery Information

You can obtain detailed information about the batteries.

 Double-click the battery icon on the toolbar to display the BatteryScope window.

The screen appears displaying the Battery tab, which contains information such as the estimated time-to-empty and charging time.

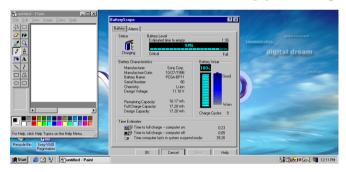

#### To customize the BatteryScope toolbar and alarm system

You can customize the BatteryScope toolbar to suit your portable computing needs, including modifications to the alarm settings. Refer to the BatteryScope Help for more information.

### Starting Your Favorite Software with Programmable Power Key (PPK) Setup

 
The PPK Setup software enables you to start your favorite software by simply pressing the programmable power key.



This section briefly describes how to use the programmable power key. You can also refer to the PPK Setup Help for more detailed information.

#### To use the PPK Setup screen

- Double-click the PPK Setup icon on the taskbar. The PPK Setup screen appears.
- 2 Select the software title you want PPK to launch automatically from the Registered Files list and right-click. The Setup options screen appears.
- 3 Click Set as PPK launch file. The appears next to the selected software title.
- 4 Click OK.

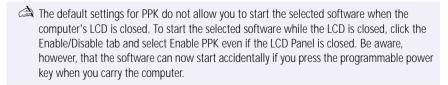

### Using the Programmable Power Key with Other Keys

You can also choose to start other applications by pressing the programmable power key in combination with the Alt, Ctrl, or Shift keys.

To select the key combination, right-click the application you want to start and select an item from the menu. When you select Set as PPK launch file, you can turn on the power and start the selected application by just pressing the programmable power key. When you select Set as Alt+PPK launch file, Set as Ctrl+PPK launch file, or Set as Shift+PPK launch file, you need to turn on the computer to use these functions.

#### Using the internal timer

You can use the internal timer to start software at a specific time. You can use this feature when the computer is on or in System Suspend mode.



(a) If the computer's LCD is closed, you cannot use the internal timer to start software using the default settings. To start software while the LCD is closed, click the Enable/Disable tab and select the checkbox next to Enable Timer launch even if the LCD Panel is closed. It may take some time to actually start the software. It is advised that you confirm the time your selected software takes to start.

When selecting software that uses a phone line, the computer may not be able to disconnect the phone line due to communication and server conditions. Be sure to monitor the status of the software when running PPK Setup, and manually disconnect the phone line if you notice a malfunction. Furthermore, when using the timer to start the software, it is advised that you set the computer to enter System Suspend or System Hibernation mode after a certain time. This allows the computer to disconnect the phone line if the computer fails to disconnect the line normally. However, the computer cannot disconnect the phone line when it enters System Suspend mode unless the internal modem ring resume is set to On.

### Selecting the Display Mode

When you connect an external display, you can toggle the display mode between the LCD on your computer and an external display.

- Click the Start button on the Windows 98 taskbar.
- 2 Point to Settings and click Control Panel.
- 3 Click Display.
- 4 Click the Settings tab.
- 5 Click the Advanced button.
- 6 Click the NeoMagic® tab.
- 7 Deselect the LCD checkbox.
- 8 Assure the CRT/Projector checkbox is selected.
- 9 Check Apply.

Display mode	Function
Monitor/LCD	Displays simultaneously both the LCD and an external display connected to the Monitor.




You can adjust the refresh rate when you select Monitor as the display mode.

Some displays do not support using both the computer's LCD and an external display simultaneously.

To use the Monitor and Monitor/LCD display modes, an external display must be connected to the monitor connector on the port replicator.

### Using the Dual Display Function

The dual display function allows you to distribute portions of your desktop across separate displays. For example, if you have an external monitor attached to the monitor connector, your LCD display and the monitor can function as a single desktop. You can move the cursor off one display and onto the other. This allows you to drag objects, such as an open application window or a toolbar, from one display to the other. This configuration of a single desktop distributed across separate displays is referred to as a virtual desktop.

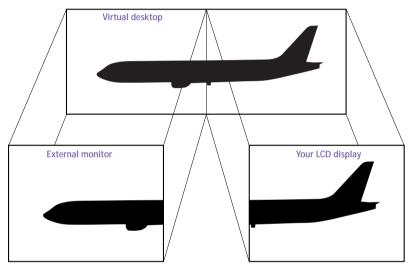

### Selecting dual display mode

You must restart Windows to use dual display mode. Save your work and close any open applications before changing to dual display mode, then follow these steps:

- Click the Start button on the Windows 98 taskbar.
- Point to Settings and click Control Panel.
- 3 Click the Display icon.
- 4 Click the Settings tab.
- 5 Click the Advanced button.
- 6 Click the NeoMagic tab.

- 7 Check the Set Dual-Display option and click OK. The System Settings Change dialog box appears.
- 8 Click Yest to restart your system.
- 9 Repeat steps 1 to 3 to display the Display Properties.
- 10 Click the display icon number 2.
- 11 Click Yes.
- 12 Click OK.

#### Setting the colors and resolution for each display

You can set the display colors and resolution for each display that is part of a virtual desktop.

Follow steps 1 to 4 above to display the Display Properties screen. Select the display you wish to change (1 or 2) by clicking on the icon of the display. You can change colors by selecting an option from the Colors list. Use the slider in the Screen area to change the resolution. Click OK or Apply. Click OK to confirm that you want to make the changes.

### Customizing the virtual desktop

You can customize dual display mode by changing the position of the two desktops that comprise the virtual desktop.

In the Display Properties screen, drag the icons of display 1 or display 2, moving them to a new position relative to each other. The two display icons must be connected to create a virtual desktop. Click OK to apply the change.

#### Releasing the dual display setting

You must restart Windows to return to single display mode. Save your work and close any open applications before returning to single display mode. Follow the steps in the section above on Selecting dual display mode. In step 7, remove the check from the Set Dual-Display option. You must restart Windows before the change takes effect.

### Changing the Pointing Device settings

### Using the Press-select function

You can depress the pointing device to indicate click or right-click, instead of using the left or right button.

- Click the Start button on the Windows 98 taskbar.
- 2 Point to Settings and click Control Panel.
- 3 Double-click Stick.
- 4 Click the tab Press-select.
- 5 Check the box Use Press-select.
- 6 Click OK.

#### Adjusting the pointing device sensitivity

- Click the Start button on the Windows 98 taskbar.
- 2 Point to Settings and click Control Panel.
- 3 Double-click Stick.
- 4 Click the tab Sensitivity.
- 5 Adjust the pointing device sensitivity.
- 6 Click OK.

#### Using the scroll/zoom function

- Click the Start button on the Windows 98 taskbar.
- 2 Point to Settings and click Control Panel.
- 3 Double-click Stick.
- 4 Click the tab Scroll.
- 5 Check Scroll or Zoom, or Not used.
- 6 Click OK.

- Scroll: You can scroll by moving the pointing device while holding down the center button, without using the scroll bar.
- Zoom: To drag the zoomed picture, move the pointing device while holding down the center button. To change the zoom percentage, click while holding down the center button. To change the zoom size, right-click while holding down the center button.
- Not used: Check when neither of the functions is used.



When you set the pointing device sensitivity to high, the pointer may move across the screen on its own. This is called a "drift" and is not a malfunction. The pointer stabilizes if you do not touch the pointing device for a few seconds.

# Using the Smart Utilities

### **Using Smart Capture**


Your computer includes an integrated digital camera. You can use the camera to capture still images and record video clips.

Do not touch the camera lens.

Do not point the camera at the sun.


### Capturing a still image

Press the CAPTURE button to start Smart Capture.

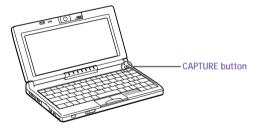




### 2 Turn the lens toward the subject.

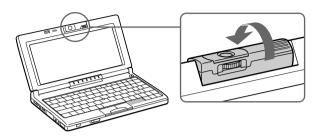

3 Adjust the focus using the focus ring.

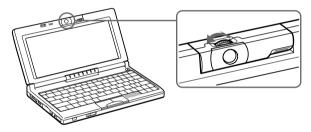

4 Press the CAPTURE button halfway down. The image freezes for a moment. To select a different image to capture, release the CAPTURE button and press it again.



#### Depress the CAPTURE button fully. The still image appears in the still viewer window.



When the lens is pointed towards you, Smart Capture is in mirror mode. In mirror mode, you can take a picture of yourself. A mirror-image appears in the Smart Capture window of the display while you are viewing. The captured image, however, will not be reversed.

See the Smart Capture online help for more information on use.

You can capture still images in the following resolutions: 640 x 480, 320 x 240, 160 x 120, 80 x 60, and 40 x 30.

The captured image in  $640 \times 480$  resolution may appear blurred, as it is produced from a  $480 \times 240$  resolution image. The viewing image in small resolutions, such as  $80 \times 60$ , may also appear blurred.

A gap may appear when an object in rapid movement is viewed. This is not a malfunction.

#### To exit Smart Capture

 $\square$  Click the  $\boxtimes$  (Close) button.

#### To close Still Viewer

□ Click the **I** (Close) button.

You can capture still images using i.LINK compatible devices. Refer to "Connecting a Digital Video Camera Recorder" on page 42 for information on connecting the device. You should also refer to the Smart Capture help file.

You can create a panorama view using the panorama assist function in Smart Capture. See the online help for more information.

You can capture still images and video clips from a digital video camera using Smart Capture.

When you use applications that use the internal camera, set the power management profile to AC Profile or Camera in PowerPanel.

# To send a still image via e-mail using a MAPI-compliant e-mail software such as $Microsoft^{\otimes}$ Outlook 98

- Make sure your e-mail software is compatible with the Messaging Application Programming Interface (MAPI). See the manual that came with your e-mail software to determine if it is MAPI compliant.
- 2 Make sure your e-mail software is set up to send and receive mail.
- 3 Click the Start button on the Windows 98 taskbar.
- 4 Point to Programs, point to Smart Capture Application, and then click Still Viewer.
- 5 Choose the still image you want to send using the ◄ or ▶ button. To capture a new still image, press the CAPTURE button in the upper right corner of the keyboard. For details on capturing still images, see "Capturing a still image" on page 57.
- 6 Click MAIL.



- Address the e-mail and write your message. The still image is automatically attached as a file.
- 8 Send the e-mail.

See the manual that came with your e-mail software for more information on sending e-mail.

Note: If you use Microsoft® Outlook® 98 as your e-mail software, check your mail in order to send the messages in your out box.

# To send a still image via e-mail if you use America Online<sup>®</sup> or other non-MAPI-compliant e-mail software


If you use an online service provider such as America Online® or other non-MAPI-compliant e-mail software, you should not use the MAIL button to send still images. You can send still images by attaching the still image file to your e-mail message.

- In the Smart Capture application, capture a new still image or choose a previously captured image to send. To capture a new still image see "Capturing a still image" on page 57. To choose a previously captured still image, use the ◄ or ► button.
- 2 Click the Save button to save the image as a file.
- 3 Create your e-mail message and attach the file to your message.

### Capturing a video clip

You can capture video clips using the built-in camera, view them, and send them via e-mail.


Press the CAPTURE button to start Smart Capture.

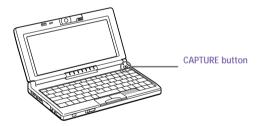


2 Click the drop down bar and select Movie Player.




3 Turn the camera lens toward the subject.

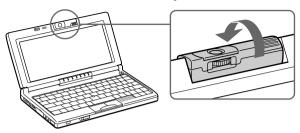

4 Adjust the focus using the focus ring.

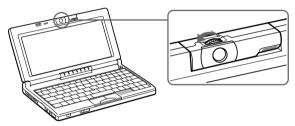

5 Hold down the CAPTURE button to import the video clip. Video is recorded while the button is depressed. You can import up to 60 seconds of video.

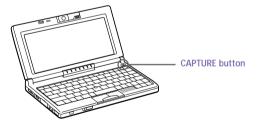

### 6 Release the CAPTURE button when finished.



### The captured video clip appears in the video window.

When the lens is pointed towards you, Smart Capture is in mirror mode. In mirror mode, you can take a picture of yourself. A mirror-image appears in the Smart Capture window of the display while you are viewing. The captured image, however, will not be reversed.

You can capture video images in the following formats:

Non-compressed: Video 160 x 120, 24 bits, maximum 10 frames/sec. Audio PCM, 11.025kHz, 16 bits, monaural.

Compressed: Video VDOWave SV-512, 160 x 112, 24 bits, maximum 10 frames/sec. Audio GSM 6.10, 11.025kHz, monaural.

A gap may appear when an object in rapid movement is viewed. This is not a malfunction.

### To play back captured video clips

Start the Movie Player software. Click ► to play back the images. Click ■ to pause, ■ to stop playback.

### To end Smart Capture

□ Click the **I** (Close) button.

### To end Movie Player

□ Click the **I** (Close) button.

# To send a video clip via e-mail using a MAPI-compliant e-mail software such as Microsoft<sup>®</sup> Outlook<sup>®</sup> 98

Note that if this is the first time you are sending a video clip to an individual, you must also attach a VDO Codec to your message as described in step 9 below.

- Make sure your e-mail software is compatible with MAPI. See the manual that came with your e-mail software to determine if it is MAPI compliant.
- Make sure your e-mail software is set up to send and receive mail.Click MAIL.
- 3 Click the Start button on the Windows 98 taskbar.
- 4 Point to Programs, point to Smart Capture Application, and then click Movie Player.
- 5 Send the previously recorded video clip that appears in the video image display area or record a new one. To record a new video clip, see "Capturing a video clip" on page 61.
- 6 Click MAIL.
- 7 Select the Attach decoder check box the first time you send someone a video clip.
- 8 Choose the compression rate by dragging the slider to the left or the right. The higher the compression rate, the more the image quality will deteriorate.



Move the slider to the right for high compression or to the left for low compression

- 9 Click Start compression.
- 10 Select Yes to confirm the compressed file size.

- 11 Address your e-mail, compose your message, and then send the e-mail. The video clip is attached as a compressed AVI file (file extension .AVI). The VDO Codec is attached as an executable file (file extension .exe).
- 12 The recipient of your video clip can execute the VDO Codec by double clicking on the VDODecode30.exe file.

See the manual that came with your e-mail software for more information on sending e-mail. Note: If you use Microsoft® Outlook® 98 as your e-mail software, check your mail in order to send the messages in your out box.

### To send a video clip via e-mail if you use America Online $^{\otimes}$ or other non-MAPI-compliant e-mail software

If you use an online service provider such as America Online<sup>®</sup> or other non-MAPI-compliant e-mail software, you should not use the MAIL button to send video clips. You can send a video clip by attaching the video clip file to your e-mail message.

- Record your video clip as described in "Capturing a video clip" on page 61.
- Click the Save button.
- 3 Select the destination folder where you wish to save the video clip file.
- 4 Select Compressed from the drop down list box.
- 5 Click Save.
- Choose the compression rate by dragging the slider to the left or the right. The higher the compression rate, the more the image quality will deteriorate.
- Select the Start compression bar from the Compression Settings dialog box.
- Select Yes to confirm the compressed file size. The file is saved to your destination folder on your hard drive.
- 9 Open your e-mail program, address the e-mail, and compose your message.

- 10 Attach the VDO Codec to your message if this is the first time you have sent this e-mail recipient a video clip. The VDO Codec is located at C:/Program Files/Sony/Smart Capture/Decoder. The file name is VDODecode30.exe.
- 11 The recipient of your video clip can execute the VDO Codec by double clicking on the VDODecode30.exe file.

Note: For more information about Smart Capture, see the Smart Capture online help.

### Using Smart Write

Smart Write allows you to create document memos that include sound and video.

- Click the Start button on the Windows 98 taskbar.
- 2 Point to VAIO and then click Smart Write.
- 3 Type your memo using the keyboard.

### To insert an image

- 1 Click 😐
- 2 Turn the camera lens toward the subject, and click or press the CAPTURE button.

### To record your voice

- Click
- 2 Click Record and speak into the microphone.
- 3 Click Stop when you are finished.
- 4 Click OK.

To delete the memos, press the Backspace key or the Delete key.

To end Smart Write, select Close from the File menu.

### Using Smart Publisher

Smart Publisher allows you to send memos to the Internet.

You must be connected to the Internet before you can send a memo.

- Click the Start button on the Windows 98 taskbar.
- 2 Point to VAIO, point to Stationary, and then click Smart Publisher.
- 3 Click New.
- 4 Enter information in the profile window and click Next when finished.
- 5 Enter information in the communication window and click Next when finished.
- 6 Click OK.
- 7 Start Smart Write.
- 8 Click the File menu and point to Internet, then click Send.
- 9 Choose the profile and click OK.

See the Smart Publisher help file for more information.

### Using Smart Label

Smart Label allows you to create memos on your desktop that include sound and video.

### To create a voice memo

- Click the Start button on the Windows 98 taskbar.
- Point to VAIO and then click Smart Label.
- 3 Double-click an on the bottom right corner of the display, and speak into the microphone. The label appears as you record your voice. You can record up to 60 seconds of audio.



4 Click ■ when finished.



A See the Smart Label help file for more information.

### To play back a voice memo

Click the label, then click ▶ to play. Click ■ to pause, ■ to stop.

### To import images using the camera

- Right-click 🏜 at the bottom right corner of the display.
- 2 Click Use camera.
- 3 Turn the camera lens toward the subject, and press the CAPTURE button.

A label appears to represent the imported image.

To display the imported image in the original size, right-click the label you want to display. Select Bitmap from the pop-up menu, then select Original size from the submenu.

To delete the memo, right-click the label you want to delete. Click Delete.

To close Smart label, right-click 🕮 and then click Exit.

# Getting Help

Sony provides several support options for your Sony computer. When you have questions about your computer and the preinstalled software, check these sources for answers, in the following sequence:

1	VAIO C1 PictureBook Computer Read Me First	Contains a complete list of the items that ship with your computer, product specifications, software support information, and the most up-to-date information on using your computer.
2	VAIO C1 PictureBook Computer User Guide	Explains how to use your C1 PictureBook Computer and connect peripheral devices.
3	Online User Guide	This electronic document contains additional information on the preinstalled software titles. You can access this guide from the Windows Start menu by selecting Programs/VAIO Documentation.
4	Manuals and online help files that may accompany your preinstalled software	Most of the manuals for preinstalled software are located on your hard disk drive as online help files. You can access the online help files from the Help menu in the specific application. A printed manual is available for some applications.
5	Knowledge Database	Provides instant access to information on commonly encountered problems. Enter a description of your problem and the Knowledge Database searches for the corresponding solutions online. You can access the Sony Knowledge Database at: http://www.sony.com/pcsupport

6	Sony Fax-on-Demand	This service provides you with answers to commonly asked questions. You can use this automated service to request a list of available topics and then select the topics that you want to receive. To contact the Sony fax-on-demand service, call 1-888-4SONYPC (1-888-476-6972). (Requires a fax machine or your fax software.)
7 Calling Sony Customer Support Support Computer by cal (1-888-476-6972)		You can call and speak with a Sony Customer Support Representative without using your computer by calling 1-888-4SONYPC (1-888-476-6972). Software support is available free of charge for 90 days after the original date of purchase.

### **Troubleshooting**

This section describes how to solve common problems you may encounter when using your computer.

	/	$\overline{}$	s
٢		-	Ş

When you reconnect devices, be sure to turn off the computer as described in "Shutting Down Your C1 PictureBook Computer" on page 13. Turning off the computer using other methods may result in data loss.

### My computer won't start

- □ Check that the computer is plugged into a power source and that it is turned on. Check that the power indicator on the front panel of the computer indicates that the power is on.
- □ Check that the battery is inserted properly and that it is charged.
- ☐ Make sure there is no diskette in the floppy disk drive.
- □ Confirm that the AC adapter and all cables are connected firmly, as described in "Connecting Peripheral Devices" on page 33.
- ☐ If you plugged the computer into a power strip or UPS, make sure the power strip or UPS is turned on and working.
- ☐ If you are using an external display, check that it is plugged into a power source and turned on. Check that the brightness control is adjusted correctly. See the manual that came with your display for details.
- ☐ Moisture condensation may have occurred. Do not use the computer for at least one hour and then turn on the computer.

When I turn on my computer, the message "Operating system not found" appears and Windows does not start

- ☐ Check the floppy disk drive to see if a non-bootable diskette is in the drive.
- ☐ If a non-bootable diskette is in the drive, turn off the computer, remove the diskette, and then turn on the computer again. Confirm that Windows starts properly. If Windows still does not start, follow the procedure below to initialize the BIOS.
- ☐ If the floppy disk drive is empty or contains a bootable diskette, use the following procedure to initialize the BIOS:

- 1 Turn off the computer.
- 2 Remove the floppy disk drive, PC card, and any other peripheral devices from the computer.
- 3 Turn the computer on again.
- 4 Press the F2 key when the Sony logo appears. The BIOS setup menu screen appears.
- 5 Press the arrow keys to select the Exit menu.
- 6 Press the arrow keys to select Get Default Values and then press the Enter key. The message "Load default configuration now?" appears.
- 7 Check that [Yes] is selected, then press the Enter key.
- 8 Press the arrow keys to select Exit (Save Changes) and then press the Enter key. The message "Save configuration changes and exit now?" appears.
- 9 Check that [Yes] is selected, then press the Enter key. The computer restarts.

### My LCD does not display anything

- Check that the computer is plugged into a power source and that it is turned on. Check that the power indicator on the front panel of the computer is on.
- □ Check that the battery pack is inserted properly and that it is charged.
- ☐ The computer may be in LCD (Video) Standby mode. Press any key to activate the display.
- ☐ The video output may be directed to an external display. Press Fn+F7 until video output appears on the LCD.

The screen image on my external display is not centered or sized properly Use the controls on your external display to adjust the image. See the manual supplied with your display for more information.

### The pointer moves across the screen on its own

This is called a "drift" and is not a malfunction. The pointer stabilizes if you do not touch the pointing device for a few seconds.

When I press the pointing device without pressing the left button, it clicks

Check that you have not selected the press-select function. See "Changing the Pointing Device settings" on page 55 for details.

My com	outer "i	lock	(S U	p"
--------	----------	------	------	----

- Try restarting the computer. On the Windows taskbar, click the Start button, click Shut Down, and then click Restart the computer.
- If you cannot restart as described in the preceding step, you can restart the computer by pressing Ctrl+Alt+Delete.
- If the previous step does not work, slide the power switch toward the front and hold it for four seconds. This turns off the power.
- If your computer locks up while playing a CD-ROM, stop the CD-ROM, and restart the computer by pressing Ctrl+Alt+Delete.



Pressing Ctrl+Alt+Delete or turning off the computer with the power switch may result in data loss in files that are currently open.

### My software program "locks up" or crashes

Contact the software publisher or designated provider for technical support.

### Movements of the displayed images are awkward (not smooth)

In PowerPanel, select Change CPU Speed. Remove the check from Auto. and set Speed Control to 100%. See "Controlling Power Management" on page 45 for details.

### I cannot play a CD-ROM

- Make sure the label of the CD-ROM is facing up.
- If the CD-ROM requires software, make sure the software is installed according to the program's instructions.
- Moisture condensation may have occurred. Disconnect the CD-ROM drive and disconnect the power to the drive for at least one hour.
- Make sure the CD-ROM drive is properly connected. See "Connecting the CD-ROM Drive" on page 39.
- Clean the CD-ROM.
- Check the speaker volume.

	en I click an application icon a message appears, such as "You must insert application CD into your CD-ROM drive," and the software does not start Some titles require specific files that are located on the application's CD-ROM. Insert the disc and try starting the program again.
My □	floppy disk drive cannot write to a diskette  The diskette is write-protected. Disable the write-protect feature or use a diskette that is not write-protected.
	Check that the diskette is properly inserted into the floppy disk drive
Му	speaker has no sound
	The built-in speaker is turned off. Press Fn+F3 to turn on the speaker.
	The speaker volume is turned to the minimum. Press $fn+F4$ , and then press $\uparrow$ or $\rightarrow$ to increase the volume.
	If your computer is powered by the battery, check that the battery is connected properly and that it is charged.
	If you are using an application that has its own volume control, check that the volume is turned up.
	Check the volume controls in Windows 98.
	If you have connected a headphone or an audio cable to the Headphone connector, disconnect the cable.
Wh	en I press Fn+F3. I see the message "Sound Disabled"

Click the System icon in the Control Panel. Change the settings under Device Manager so that sound is enabled.

### My modem does not work

- Check that the phone line is plugged into the line jack. See "Connecting a Phone Line" on page 34 for details.
- Check that the phone line is working. You can check the line by plugging in an ordinary phone and listening for a dial tone.

	Check that the phone number the program is dialing is correct.  Check that the software you are using is compatible with the computer modem. (All preinstalled programs are compatible.) Call the software publisher.
The influence on moo	modem connection is slow computer's modem uses K56flex <sup>TM</sup> technology/V.90. Many factors uence modem connection speed, including telephone line noise or npatibility with telephone equipment (such as fax machines or other dems). If you think your modem is not connecting properly to other based modems, fax machines, or your Internet Service Provider, check following:
	Have your phone company check that your phone line is free from any line noise.
	If your problem is fax-related, check that there are no problems with the fax machine you are calling and that it is compatible with fax modems.
	If you are having a problem connecting with your Internet Service Provider, check that the ISP is not experiencing technical problems.
	If you have a second phone line available, try connecting the modem to that line.
Mv	mouse does not work
	If you are using an external mouse, check that the mouse is plugged into the USB connector. See "Connecting an External USB Mouse" on page 38 for details.
I cai	nnot use DV devices and messages appear on the screen
	Check that the DV device is turned on and that the cables are

- properly connected.
- If you are using multiple i.LINK devices, the combination of the connected devices may cause unstable operation. In this case, turn off the power to all connected devices and disconnect unused devices. Check the connection, then turn on the power again.

### My computer does not shut down

It is best to shut down your computer using the Shut Down command on the Windows 98 Start menu. Using other methods, including those listed here, may result in loss of unsaved data. If the Shut Down command does not work properly, follow these steps:

- Restart the computer by pressing Ctrl+Alt+Delete. If this does not work, slide the power switch forward and hold it for four seconds.
- □ Unplug the computer from the AC adapter and remove the battery pack from your computer.

### My PC card is not working

- Make sure the PC card is compatible with Windows 98.
- Use the Sony Notebook Setup utility to disable devices you are not currently using.

### The game images or video images are not clear

Right-click the application bar of the PowerPanel software, choose CPU speed settings, and remove the check from the Auto box. Then set the speed control to 100%. See the online help of the PowerPanel help file for details.

There is a vertical line when shooting a bright subject with a dark background using the camera

☐ This is a phenomenon called "smear." This is not a malfunction.

### The image in the viewfinder of "Smart Capture" is grainy

- ☐ If you are shooting an image of minimum size, such as 40 x 30, the image may appear grainy.
- If you are shooting a subject that is moving rapidly, there may be a gap. This is not a malfunction.

The	images captured with the camera are not clear
	Shooting under fluorescent light may produce reflections.
	Red or green noise may occur if the captured images include dark portions.
	If you import a still image of resolution $640\ x$ $480$ , the image may appear grainy.
	The viewing image and the captured image may differ when you import a still image of size $640 \times 480$ .
	Check that the lens of the camera lens is clean.
	Use the focus ring to adjust the focus.
The	re are picture gaps and sound gaps when importing video images
	If you are shooting using a battery pack, use the AC profile in PowerPanel. See the PowerPanel software help file for details.
	Gaps may occur due to the effect settings in the Smart Capture software. See the online help of the Smart Capture help file for details.
The	camera does not show any images
	Check that you are not using any other application, such as Smart Capture, which is using the camera. If the camera still does not show any images, restart your computer.
	Pressing Ctrl+Alt+Delete or turning off the computer with the power switch may result in data loss in files that are currently open.
I ca	nnot record using Smart Capture, Smart Write, or Smart Label
1	Double-click 🏜 in the task tray.
2	Select Properties from the Option menu.
3	Check Record and Microphone, and click OK.
4	Uncheck "Mute" in microphone if it is checked.

Smart Write and Smart Label do not start

Reinstall the software using the Application Recovery CD.

### Using the System and Application Recovery CDs

The following sections describe how to use the System Recovery and Application Recovery utilities. You need to connect the optional PCGA-CD5 CD-ROM drive to use the System and Application Recovery CDs.

### Using the System Recovery CD(s)

You can reinstall software titles that shipped with your computer if they are corrupted or accidentally erased. You may not need to recover the entire contents of your hard drive. If you experience a problem with your computer, reinstalling an individual device driver or software title may correct the problem. Use the Application Recovery CD(s) to reinstall individual applications or device drivers. See "Using the Application Recovery CD(s)" on page 82.

The System Recovery CD(s) contain a backup copy of all the software originally installed on your hard disk drive. It can be used only to recover the hard disk of the computer you purchased.

The System Recovery utility gives you three options:

- □ Full Restore without Format restores all the software titles that originally came with your computer without formatting the hard disk.
- **Full Restore with Format** formats the hard disk drive and then restores all the original software.
- Operating System Only restores the Windows 98 operating system, the computer utility programs, and the device drivers that shipped with your computer.
  - If you choose the Full Restore with Format or Operating System Only option, your hard disk will be formatted, which removes all the information on the hard disk drive. You will lose any software you have installed and any other files you have created since you started to use your computer. This means you will have to reinstall any applications that were not included with the computer when you purchased it. If you choose the Full Restore without Format option, you may need to reinstall applications that were not included with the computer when you purchased it. If you have any questions on using the System Recovery CD(s), contact Sony Customer Support.

### To use the System Recovery CD(s)



The optional PCGA-CD5 CD-ROM drive must be connected to the computer to use the System Recovery CD(s).

You need to complete the Windows<sup>®</sup> 98 registration process when you use the System Recovery CD. Make sure you have the product ID number located on the cover of your Microsoft Windows 98 Getting Started manual. You will need this number to complete the recovery process.

- Insert the Sony System Recovery CD in the CD-ROM drive.
- 2 Shut down your computer as described in "Shutting Down Your C1 PictureBook Computer" on page 13.
- 3 Wait four seconds and turn on your computer.
- 4 Click OK to signify you have read and accept the Microsoft End-User License Agreement.
- 5 When the System Recovery menu appears, follow the on-screen instructions to complete the recovery process.



Your system may include one or two System Recovery CDs. If you have two System Recovery CDs, insert the first CD to run the System Recovery program. You are prompted to insert the second CD once the information from the first CD has ben installed.

The recovery process takes between 30 to 60 minutes to complete.

### If your computer does not start from the Recovery CD

- Slide the power switch forward and hold it for more than four seconds to turn off the computer.
- Turn on the computer and press the F2 key when the Sony logo appears. The BIOS setup menu screen appears.
- Press the arrow keys to select the Exit menu.
- 4 Press the arrow keys to select Get Default Values and then press the Enter key. The message "Load default configuration now?" appears.
- 5 Check that [Yes] is selected, then press the Enter key.
- Press the arrow keys to select Exit (Save Changes) and then press the Enter key. The message "Save configuration changes and exit now?" appears.
- Check that [Yes] is selected, then press the Enter key. The computer restarts from the Recovery CD.

### Using the Application Recovery CD(s)

The Application Recovery CD(s) allow you to reinstall individual applications and device drivers if they are corrupted or accidentally erased. Reinstalling an individual device driver or software title may correct a problem you are experiencing with your computer, and you may not need to recover the entire contents of your hard drive. If you do need to reinstall all the software titles that shipped with your computer, use the System Recovery CD(s). See "Using the System Recovery CD(s)" on page 80.



A You must be in Windows to run the Application Recovery CDs. The application will not run from DOS. If you have any questions on using the Application Recovery CDs, contact Sony Customer Support.

Some applications on the Application Recovery CDs must be decompressed before the installation process begins. Your screen does not change while the files are decompressed. The time to decompress an application varies and may be as long as 30 minutes.

### To use the Application Recovery CD(s)

- Turn on your computer. If your computer is already on, close all applications.
- When the Windows desktop appears, insert the first Sony Application Recovery CD in the CD-ROM drive. The Application Recovery utility loads automatically.
- When the Application Recovery menu appears, follow the on-screen instructions to complete the recovery process.



A You may be prompted to insert the second CD, depending on the application you want to restore.

Your system may include one or two Application Recovery CDs. If you have two Application Recovery CDs, insert the first CD to run the Application Recovery program. You may be prompted to insert the second CD, depending on the application you wish to restore.

For a list of the contents of the Application Recovery CD(s), see the online version of Read Me First.

## Notes on Use

This section describes safety guidelines and precautions to help protect your computer from potential damage.

On	Handling the LCD Screen
	Do not leave the LCD facing the sun as it can damage the LCD. Be careful when using the computer near a window.
	Do not scratch the LCD. Do not exert pressure on the LCD or on the top of the computer. This could cause malfunction.
	Using the computer in low temperature conditions may produce a residual image on the screen. This is not a malfunction. When the computer returns to normal temperature, the screen returns to normal.
	A residual image may appear on the screen if the same image is displayed for a lengthy period of time. The residual image disappears in a while. You can use a screen saver to prevent residual images.
	The screen becomes warm during operation. This is normal and does not indicate a malfunction.
	The LCD is manufactured using high-precision technology. You may, however, see tiny black points and/or bright points (red, blue, or green) that continuously appear on the LCD. This is a normal result of the manufacturing process and does not indicate a malfunction.
On	the Power Source
	Your computer operates on 100V-240V AC 50/60 Hz.
	Do not share the AC outlet with other power-consuming equipment, such as a copying machine or shredder.
	You can purchase a power strip with a surge protector. This device may prevent damage to your computer caused by sudden power surges such as those that may occur during an electrical storm.

Do not place heavy objects on the AC adapter or its cord.

	To disconnect the cord, pull it out by the plug. Never pull the cord itself.		
	Unplug your computer from the wall outlet if you will not be using the computer for a long time.		
	When the AC adapter is not used, unplug it from the AC outlet.		
	Use only the supplied AC adapter. Do not use any AC adapter not specifically designed for the computer.		
On	Clean the cabinet with a soft, dry cloth or a soft cloth lightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder, or solvent such as alcohol or benzine as these may damage the finish of your computer.		
	Should any solid object or liquid fall into the computer, shut down your computer and then unplug it. You may want to have the computer checked by qualified personnel before operating it any further.		
	Do not drop the computer or place heavy objects on top of the computer.		
On	Installation		
	Do not place your computer in a location subject to:		
	<ul> <li>Heat sources, such as radiators or air ducts</li> </ul>		
	□ Direct sunlight		
	□ Excessive dust		
	☐ Moisture or rain		
	<ul><li>Mechanical vibration or shock</li></ul>		
	□ Strong magnets or speakers that are not magnetically shielded		
	□ Ambient temperature of more than 95° F (35° C) or less than 50° F (10° C)		
	☐ High humidity		
	Do not place electronic equipment near your computer. The computer's electromagnetic field may cause a malfunction.		
	Provide adequate air circulation to prevent internal heat build-up. D not place your computer on porous surfaces such as rugs or blankets or near materials such as curtains or draperies that may block its ventilation slots. Leave a space of at least 8 inches behind the back panel of the computer.		

	The computer uses high-frequency radio signals and may cause interference to radio or TV reception. Should this occur, relocate the computer a suitable distance away from the set.	
	Use only specified peripheral equipment and interface cables; otherwise, problems may result.	
	Do not use cut or damaged connection cables.	
	Your computer will not work with party lines, cannot be connected to a coin-operated telephone, and may not work with multiple phone lines or a private branch exchange (PBX).	
	If the telephone company makes a service call to your home or office and determines that your computer is responsible for a problem, the telephone company may bill you for the service call. Also, if you do not disconnect your computer when it is adversely affecting the telephone line, the telephone company has the right to disconnect your service until you correct the problem.	
On Moisture Condensation  If the computer is brought directly from a cold location to a warm one, moisture may condense inside your computer. In this case, allow at least an hour before turning on your computer. If any problems occur, unplug your computer, and contact your Sony Service Center.		
On	ir computer, and contact your Sony Service Center.	
	Upgrading the System  It is recommended that your memory upgrade be performed by an authorized Sony Service Center or a qualified technician.	
	Upgrading the System It is recommended that your memory upgrade be performed by an	
On	Upgrading the System It is recommended that your memory upgrade be performed by an authorized Sony Service Center or a qualified technician.  Handling Diskettes Do not open the shutter manually and touch the surface of the	
<i>On</i>	Upgrading the System It is recommended that your memory upgrade be performed by an authorized Sony Service Center or a qualified technician.  Handling Diskettes Do not open the shutter manually and touch the surface of the diskette.  Keep diskettes away from magnets.	

### On Cleaning CD-ROMs

<ul> <li>Fingerprints and dust on the surface of a disc may car Proper care of the disc is essential to maintain its relia use solvents such as benzine, thinner, commercially a cleaners, or anti-static spray, as they may cause dama.</li> <li>For normal cleaning, hold the disc by its edge and use wipe the surface from the center out.</li> <li>If the disc is badly soiled, moisten a soft cloth with wa well, and use it to wipe the surface of the disc from the Wipe off any remaining moisture with a dry soft cloth.</li> <li>On Using Batteries</li> <li>Never leave the battery pack in temperatures above 1 such as in a car parked in the sun or under direct sund.</li> <li>Battery life is shorter in a cold environment. This is do battery efficiency at low temperatures.</li> <li>Charge the batteries at temperatures between 50° F ar to 30° C). Lower temperatures require a longer chargi.</li> <li>While the battery is in use or being discharged, the battery. This is normal and is not cause for concern.</li> <li>Keep the battery pack away from all sources of heat.</li> <li>Keep the battery pack dry.</li> <li>Do not open or try to disassemble the battery pack.</li> <li>Do not expose the battery pack to any mechanical shours.</li> <li>If you are not using the computer for an extended per stream of the surface of the</li></ul>	
<ul> <li>wipe the surface from the center out.</li> <li>If the disc is badly soiled, moisten a soft cloth with wa well, and use it to wipe the surface of the disc from the Wipe off any remaining moisture with a dry soft cloth.</li> <li>On Using Batteries</li> <li>Never leave the battery pack in temperatures above 1 such as in a car parked in the sun or under direct sund battery life is shorter in a cold environment. This is do battery efficiency at low temperatures.</li> <li>Charge the batteries at temperatures between 50° F are to 30° C). Lower temperatures require a longer chargi.</li> <li>While the battery is in use or being discharged, the battery. This is normal and is not cause for concern.</li> <li>Keep the battery pack away from all sources of heat.</li> <li>Keep the battery pack dry.</li> <li>Do not open or try to disassemble the battery pack.</li> <li>Do not expose the battery pack to any mechanical shows</li> </ul>	ıbility. Do not vailable
<ul> <li>well, and use it to wipe the surface of the disc from the Wipe off any remaining moisture with a dry soft clother.</li> <li>On Using Batteries</li> <li>Never leave the battery pack in temperatures above 1 such as in a car parked in the sun or under direct sund battery life is shorter in a cold environment. This is do battery efficiency at low temperatures.</li> <li>Charge the batteries at temperatures between 50° F are to 30° C). Lower temperatures require a longer chargi</li> <li>While the battery is in use or being discharged, the bar up. This is normal and is not cause for concern.</li> <li>Keep the battery pack away from all sources of heat.</li> <li>Keep the battery pack dry.</li> <li>Do not open or try to disassemble the battery pack.</li> <li>Do not expose the battery pack to any mechanical shows</li> </ul>	e a soft cloth to
<ul> <li>Never leave the battery pack in temperatures above 1 such as in a car parked in the sun or under direct sund</li> <li>Battery life is shorter in a cold environment. This is do battery efficiency at low temperatures.</li> <li>Charge the batteries at temperatures between 50° F are to 30° C). Lower temperatures require a longer chargi</li> <li>While the battery is in use or being discharged, the battery. This is normal and is not cause for concern.</li> <li>Keep the battery pack away from all sources of heat.</li> <li>Keep the battery pack dry.</li> <li>Do not open or try to disassemble the battery pack.</li> <li>Do not expose the battery pack to any mechanical shows</li> </ul>	e center out.
<ul> <li>such as in a car parked in the sun or under direct such Battery life is shorter in a cold environment. This is do battery efficiency at low temperatures.</li> <li>Charge the batteries at temperatures between 50° F ar to 30° C). Lower temperatures require a longer chargi</li> <li>While the battery is in use or being discharged, the batup. This is normal and is not cause for concern.</li> <li>Keep the battery pack away from all sources of heat.</li> <li>Keep the battery pack dry.</li> <li>Do not open or try to disassemble the battery pack.</li> <li>Do not expose the battery pack to any mechanical shows</li> </ul>	
<ul> <li>battery efficiency at low temperatures.</li> <li>Charge the batteries at temperatures between 50° F ar to 30° C). Lower temperatures require a longer chargi</li> <li>While the battery is in use or being discharged, the bat up. This is normal and is not cause for concern.</li> <li>Keep the battery pack away from all sources of heat.</li> <li>Keep the battery pack dry.</li> <li>Do not open or try to disassemble the battery pack.</li> <li>Do not expose the battery pack to any mechanical shows</li> </ul>	
<ul> <li>to 30° C). Lower temperatures require a longer chargi</li> <li>While the battery is in use or being discharged, the bat up. This is normal and is not cause for concern.</li> <li>Keep the battery pack away from all sources of heat.</li> <li>Keep the battery pack dry.</li> <li>Do not open or try to disassemble the battery pack.</li> <li>Do not expose the battery pack to any mechanical shows</li> </ul>	ue to decreased
<ul> <li>up. This is normal and is not cause for concern.</li> <li>Keep the battery pack away from all sources of heat.</li> <li>Keep the battery pack dry.</li> <li>Do not open or try to disassemble the battery pack.</li> <li>Do not expose the battery pack to any mechanical shows the pack of t</li></ul>	
<ul> <li>Keep the battery pack dry.</li> <li>Do not open or try to disassemble the battery pack.</li> <li>Do not expose the battery pack to any mechanical shows the pack to any mechanical shows the</li></ul>	ttery pack heats
<ul> <li>Do not open or try to disassemble the battery pack.</li> <li>Do not expose the battery pack to any mechanical shows the battery pack.</li> </ul>	
□ Do not expose the battery pack to any mechanical sho	
If you are not using the computer for an extended nor	ock.
remove the battery pack from the computer to preven battery.	

- If, after fully charging the battery pack, the battery power is still low, the battery pack may be reaching the end of its life and should be replaced.
- You do not need to discharge the battery before recharging.
- ☐ If you have not used the battery pack for a considerable amount of time, recharge the battery.

### On Maintenance

- ☐ Make sure to disconnect the AC adapter before cleaning the computer.
- ☐ Avoid rubbing the LCD screen as this can damage the screen. Use a soft, dry cloth to wipe the LCD screen.
- ☐ Clean the computer with a soft cloth lightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder, or solvent, such as alcohol or benzine.

## Limited Warranty Statement

### C1 PictureBook Computer Warranty

The limited warranty on your C1 PictureBook Computer covers parts and labor against defects in material or workmanship for a period of three months from the original date of purchase. You can extend the warranty period for an additional nine months by registering your computer. See "Registering Your Computer" on page 15. Once you register your computer, the limited warranty period is twelve months from the original date of purchase.

There is a separate warranty for the battery included with your computer. See "Battery Limited Warranty" on page 93.

For the purpose of this Limited Warranty "SONY" means SONY ELECTRONICS INC. for Products purchased in the United States of America and Sony of Canada Ltd. for Products purchased in Canada. SONY warrants this computer hardware product ("the Product") against defects in material or workmanship as follows:

- 1. Labor: For a period of ninety (90) calendar days from the original date of purchase from SONY or a SONY authorized reseller, SONY will repair defects in material or workmanship in the Product at no charge, or pay the associated labor charges to a SONY authorized personal computer service facility. The ninety (90) day warranty period is extendible only to the original purchaser, for an additional period of nine (9) months, for a total of twelve (12) months from date of purchase when the Product is registered electronically prior to the expiry of ninety (90) days from the original date of purchase. After the applicable period you must pay for all labor charges.
- 2. Parts: For a period of ninety (90) calendar days from the original date of purchase from SONY or a SONY authorized reseller, SONY will supply, at no charge, new or rebuilt, at SONY's option, replacement parts in exchange for defective parts. Any replacement parts will be warranted for the remainder of the original warranty period or ninety (90) calendar days from installation by SONY's authorized personal computer service facility, whichever is longer. The ninety (90) day warranty period is extendible only to the original purchaser, for an additional period of nine (9) months, for a total of twelve (12) months from date of purchase when the Product is registered electronically prior to the expiry of ninety (90) days from the original date of purchase. All defective parts replaced under this Limited Warranty will become the property of SONY.

This Limited Warranty covers only the hardware components packaged with the Product. It does not cover technical assistance for hardware or software usage and it does not cover any software products whether or not contained in the Product; SONY excludes all warranties express or implied in respect of any software provided with the product and any such software is provided "AS IS" unless expressly provided for in any enclosed software limited warranty. Please refer to the End User License Agreements included with the Product for your rights and obligations with respect to the software.

This Limited Warranty is non-transferable. Proof of purchase in the form of a bill of sale (which is evidence that the Product is within the warranty period) must be presented to obtain warranty service. In addition, if replacement parts are required and you wish to receive the most expedient service available, you will be required to provide SONY with a credit card authorization to bill your credit card in the event you fail to return the original parts in the postage-paid envelope we provide. The credit card will only be charged for SONY's list price for the part if the original part has not been returned within thirty (30) days.

In respect of certain components you may be entitled to express warranty service during the warranty period, subject to certain restrictions. Please contact SONY as indicated below for further information.

With respect to all service provided, it is your responsibility prior to Product service to backup the contents of your hard drive, including any data you have stored or software you have installed on the hard drive. It is likely that the contents of your hard drive will be lost or reformatted in the course of service and SONY will not be responsible for any damage to or loss of any programs, data or other information stored on any media or any part of any Product serviced hereunder or any consequential damages resulting therefrom.

IF DURING THE REPAIR OF THE PRODUCT THE CONTENTS OF THE HARD DRIVE ARE ALTERED, DELETED, OR IN ANY WAY MODIFIED, SONY IS NOT RESPONSBILE WHATSOEVER. YOUR PRODUCT WILL BE RETURNED TO YOU CONFIGURED AS ORIGINALLY PURCHASED (SUBJECT TO AVAILABILITY OF SOFTWARE).

Be sure to remove all third party hardware, software, features, parts, options, alterations, and attachments not warranted by SONY prior to sending the Product to SONY for service. SONY is not liable for any loss or damage to these items.

This Limited Warranty does not cover any consumable items (such as batteries) supplied with this Product; cosmetic damages; damage or loss to any software programs, data, or removable storage media; or damage due to (1) acts of God, accident, misuse, abuse, negligence, commercial use or modifications of this Product; (2) improper operation or maintenance of this Product; (3) connection to improper voltage supply; or (4) attempted repair by any party other than a SONY authorized personal computer service facility. This Limited Warranty does not apply when the malfunction results from the use of this Product in conjunction with accessories, products or ancillary or peripheral equipment, or where it is determined by SONY that there is no fault with this Product itself. This Limited Warranty is valid only in the United States of America and Canada. This Limited Warranty is invalid if the factory applied serial number has been altered or removed from the Product.

Repair or replacement of defective parts or hardware as provided under this Limited Warranty is the exclusive remedy of the consumer. SONY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR OTHER DAMAGES INCLUDING BUT NOT LIMITED TO, LOSS OF PROFITS, LOSS OF REVENUE, LOSS OF DATA, LOSS OF USE OF THE PRODUCT OR ANY ASSOCIATED EQUIPMENT, DOWN TIME AND PURCHASER'S TIME. FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, BREACH OF CONTRACT, NEGLIGENCE, STRICT LIABILITY OR ANY OTHER LEGAL THEORY RELATED TO THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states or provinces do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This Limited Warranty gives you specific legal rights, and you may have other rights which vary from state to state, or province to province.

Technical Support: Although technical support is not provided free of charge under this Limited Warranty, SONY has established a telephone number for technical support. Charges may apply for technical support, unless and to the extent that free technical support for a limited period is provided in writing as a feature of your Product. Prior to placing your call, please have available the model and serial number for your Product, date of purchase, a list of all options installed in your Product and a detailed description of the problem.

For Product support, online knowledge base, frequently asked questions, and free updates via the Internet: http://www.sony.com/pcsupport/

For Product information, service assistance, resolution of a service problem, or technical assistance, call: 1-888-4SONYPC (476-6972)

Save this for future reference.

© 1999 Sony Electronics Inc. and Sony of Canada Ltd. Reproduction in whole or in part without written permission is prohibited. All rights reserved. SONY is a registered trademark of Sony.

### GARANTIF RESTREINTE

SONY DU CANADA LTÉE ("SONY") garantit comme suit ce Produit d'ordinateur ("le Produit") contre tous vices de matières premières et de fabrication:

- 1. Main-d'oeuvre : Pendant une période de quatre-vingt-dix (90) jours à compter de la date d'achat originale chez SONY ou chez un de ses revendeurs autorisés, SONY réparera le Produit à ses frais ou en remboursera les frais de main-d'oeuvre au centre de réparation d'ordinateur personnel autorisé SONY. La période de garantie de quatre-vingt-dix (90) jours peut être prolongée au bénéfice de l'acheteur original pour une période additionnelle de neuf (9) mois, soit un total de douze (12) mois à compter de la date d'achat, lorsque le Produit est enregistré électroniquement. Après la période applicable, l'acheteur doit payer tous les frais de main-d'oeuvre.
- 2. Pièces : Pendant une période de quatre-vingt-dix (90) jours à compter de la date d'achat originale chez SONY ou chez un de ses revendeurs autorisés, SONY fournira à ses frais des pièces de rechange neuves ou reconstruites, à sa discrétion, en échange des pièces défectueuses. Ces pièces de remplacement seront garanties pour le reste de la période originale de garantie ou pour quatre-vingt-dix (90) jours à compter de leur installation par un centre de service d'ordinateur personnel autorisé SONY, au plus long des deux termes. La période de garantie de quatre-vingt-dix (90) jours peut être prolongée au bénéfice de l'acheteur original pour une période additionnelle de neuf (9) mois, soit un total de douze (12) mois à compter de la date d'achat, lorsque le Produit est enregistré électroniquement. Toutes les pièces défectueuses remplacées au titre de cette garantie restreinte deviennent la propriété de SONY.

Cette garantie restreinte couvre uniquement les composants physiques emballés avec le Produit. Elle n'inclut pas l'assistance technique en rapport avec l'utilisation du matériel ou du logiciel et ne couvre aucun logiciel, qu'il soit ou non fourni avec le Produit. Les logiciels sont fournis "TELS QUELS" à moins d'être expressément couverts par une autre garantie restreinte spécifique. Veuillez vous reporter aux Contrats de licence d'utilisation accompagnant le Produit quant à vos obligations en rapport avec les logiciels.

Cette garantie restreinte est incessible.

Pour vous prévaloir du service au titre de la garantie, vous devrez présenter une preuve d'achat sous forme de facture de vente attestant que le Produit est couvert par la garantie en vigueur. Par ailleurs, si des pièces doivent être remplacées et que vous désirez obtenir le service le plus rapide possible, vous devrez fournir à SONY une autorisation lui permettant d'en porter le montant à votre carte de crédit advenant que vous négligiez de retourner les pièces originales dans l'enveloppe affranchie qui vous est fournie. Seul le prix courant de SONY pour cette pièce sera porté à votre carte de crédit si la pièce ne lui est pas retournée dans un délai de trente (30) jours.

Vous pouvez avoir droit au service de garantie exprès durant la période de garantie, sous réserve de certaines restrictions. Pour tout renseignement, veuillez communiquer avec SONY de la façon indiquée ci-après.

Vous avez l'entière responsabilité de faire une copie de sauvegarde du contenu du disque dur, incluant toute donnée en mémoire ou tout logiciel que vous y avez installé. Il est fort probable que le contenu du disque dur sera reformaté ou perdu en cours de service et SONY ne pourra être tenue responsable d'aucun dommage ni de la perte des programmes, des données ou de toute autre information gardée en mémoire sur tout support d'information ou sur toute partie de tout Produit en réparation.

SI, DURANT LA RÉPARATION DU PRODUIT, LE CONTENU DU DISQUE DUR EST ALTÉRÉ, SUPPRIMÉ OU MODIFIÉ, SONY N'EN SERA AUCUNEMENT RESPONSABLE. LE PRODUIT VOUS SERA RETOURNÉ TEL QU'IL ÉTAIT CONFIGURÉ QUAND VOUS L'AVEZ ACHETÉ (SOUS RÉSERVE DE LA DISPONIBILITÉ DU LOGICIEL).

Avant d'envoyer le Produit à SONY pour le faire réparer, assurez-vous d'en retirer tous produits de tierce partie, logiciels, caractéristiques, pièces, options, altérations et accessoires non garantis par SONY car SONY n'est pas responsable de la perte ou de l'endommagement de ces articles.

Cette garantie restreinte exclut les articles consommables (comme les batteries) fournis avec le Produit ; les dommages cosmétiques ; l'endommagement ou la perte des logiciels, données et supports informatiques amovibles ; les dommages dus à 1) un cas fortuit, un accident, une mauvaise utilisation, un abus, une négligence, une utilisation commerciale ou une modification du Produit ; 2) l'utilisation ou l'entretien incorrect du Produit ; 3) le branchement à une source électrique non conforme ; ou 4) toute tentative de réparation par tout autre qu'un centre de service d'ordinateur personnel autorisé SONY. Cette garantie restreinte ne s'applique pas si la défectuosité est causée par l'utilisation du Produit en conjonction avec des accessoires, articles ou équipements périphériques ou connexes, ou si SONY détermine que le Produit lui-même ne comporte aucun défaut. Cette garantie restreinte n'est valide qu'au Canada.

Cette garantie restreinte est nulle si le numéro de série appliqué en usine a été modifié ou enlevé du Produit.

La réparation ou le remplacement du matériel ou des pièces défectueuses tel que prévu au titre de cette garantie est le seul recours de l'acheteur. SONY NE SERA AUCUNEMENT RESPONSABLE DE TOUT DOMMAGE INDIRECT OU CONSÉCUTIF POUR DÉROGATION À TOUTE GARANTIE EXPRESSE OU TACITE, RUPTURE DE CONTRAT, NÉGLIGENCE, RESPONSABILITÉ STRICTE OU TOUTE AUTRE THÉORIE JURIDIQUE EN RAPPORT AVEC CE PRODUIT. DE TELS DOMMAGES INCLUENT, ENTRE AUTRES, LE TEMPS DE L'ACHETEUR, LA PERTE DE PRODUCTIVITÉ, DE REVENUS ET DE PROFITS, ET LA PERTE DE DONNÉES OU D'UTILISATION DU PRODUIT OU DE TOUT ÉQUIPEMENT CONNEXE. SAUF DANS LA LIMITE OÙ LA LOI APPLICABLE L'INTERDIT, TOUTE GARANTIE TACITE DE VALEUR MARCHANDE OU DE CONVENANCE À UNE FIN PARTICULIÈRE DE CE PRODUIT EST RESTREINTE DANS SA DURÉE À LA DURÉE DE CETTE GARANTIE.

Certaines provinces ne permettent pas l'exclusion ou la restriction des dommages accidentels ou indirects et n'admettent pas de limites quant à la durée d'une garantie tacite, de sorte que les exclusions/restrictions exprimées ci-dessus peuvent ne pas s'appliquer. Cette garantie vous donne des droits spécifiques et vous pouvez en avoir d'autres qui varient selon la province.

Soutien technique: Bien que le soutien technique ne soit pas offert gratuitement au titre de cette garantie restreinte, SONY a prévu une ligne téléphonique à cet effet. Des frais peuvent être exigés à moins que le soutien technique gratuit et temporaire ne soit expressément indiqué par écrit comme caractéristique de votre Produit. Avant de placer l'appel, assurez-vous d'avoir les numéros de modèle et de série du Produit, la date d'achat, la liste des options qui y sont installées et une description détaillée du problème.

Vous trouverez sur l'Internet un appui direct, une base de renseignements, une foire aux questions et des mises à jour gratuites sous http://www.sony.com/pcsupport/

Pour de l'information sur les produits, de l'aide avec le service, la résolution de problèmes de service ou pour une aide technique, veuillez composer le 1-888-4SONYPC (476-6972).

À conserver pour référence future.

©1999 Sony du Canada Ltée. Reproduction partielle ou complète interdite sans autorisation écrite préalable. Tous droits réservés. SONY est une marque déposée de Sony.

### Battery Limited Warranty

The limited warranty on the battery included with your VAIO PictureBook Notebook covers defects in material or workmanship for a period of 30 days from the original date of purchase. This warranty is not extendable.

For the purposes of this Limited Warranty, "SONY" means Sony Electronics Inc. for Products purchased in the United States of America and Sony of Canada Ltd. for Products purchased in Canada. Sony warrants this Product against defects in material or workmanship for thirty (30) days from your purchase date. If this Product is determined to be defective, SONY will replace the Product at no charge to you. This Limited Warranty contains your exclusive remedy. SONY shall not be liable for any incidental or consequential damages for breach of any express or implied warranty on this product. Some states and provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights which vary from state to state or province to province. For information on obtaining warranty service, please call SONY at 1-888-4SONYPC (1-888-476-6972).

### GARANTIF RESTREINTE

Au titre de cette garantie restreinte, "SONY" signifie Sony du Canada Ltée pour les produits achetés au Canada et Sony Electronics Inc. pour les produits achetés aux États-Unis. SONY garantit ce produit contre tous vices de matières premières et de fabrication pour trente (30) jours à compter de la date d'achat. Si ce produit est reconnu défectueux, SONY le remplacera à ses frais. Cette garantie restreinte est votre seul recours. SONY ne sera aucunement responsable de tout dommage indirect ou consécutif pour dérogation à toute garantie tacite ou expresse sur ce produit. Certaines provinces ne permettent pas l'exclusion ou la restriction des dommages accidentels ou indirects, de sorte que les exclusions/restrictions exprimées cidessus peuvent ne pas s'appliquer. Cette garantie vous donne des droits spécifiques et vous pouvez en avoir d'autres qui varient selon la province. Pour de l'information sur le service au titre de la garantie, veuillez appeler Sony au 1-888-4SONYPC (1-888-476-6972).

## Index

A	buttons
About This Computer tab 44	Finish 14
AC adapter 8	Open 40
AC power 8	Start (Windows 98) 13, 43
AC Profile power setting 45	
accessing online support 15	C
adding	cameras
hardware 33	digital video recorder 42
peripherals 33	canceling commands 17
printers 35	Caps Lock
adjusting	indicator light 19
brightness 20	CAPTURE button 58
air circulation 84	Capturing a still image 57
Alt key 17	Capturing a video clip 61
Application Recovery CDs 82	CD-ROM discs
Applications key 17	cleaning <b>86</b>
	handling 85, 86
В	CD-ROM drive
Basic/Advanced tab 44	closing lid 41
battery pack 9, 86	connecting 25, 39
charging 10	opening lid 40
indicator light status 10	troubleshooting 75
indicator lights 10, 19	using 39
inserting 9	charge status indicator light 10
loading 9	charging battery pack 10
power status 10	choosing
rechargeable 8	power source 9
removing 11	cleaning computer 84
battery packs	coin-operated telephones 34
charge status icons 49	computer
BatteryScope utility 48	cleaning 84
brightness	condensation 85
adjusting 12, 20	customizing 43
built-in speaker 20	lithium ion battery v
volume 20	setting up 5

setup screen 43	troubleshooting 76
starting 12	display
troubleshooting 73-78	dual display 53
connecting	mode 52
CD-ROM drive 25, 39	options 37
coin-operated telephones 34	selecting 37
digital video recorder 42	disposal of lithium ion battery v
external keyboard 38	drives 39
external mouse 38	CD-ROM 39
floppy disk drive 23	floppy disk 6, 23
monitor 36	dual display function 53
multiple phone lines 34	DV In/Out 6, 42
network 25	
parallel devices 35	Ε
party phone lines 34	Eject button 24
PBX 34	ejecting
phone line 34	diskettes 24
power source 8	electronic
printer 35	documentation 71
projector 37	ergonomic considerations 2-??
connectors	Escape key 17
DC In 7, 8	Express Service technical support 15
external speakers 6	external devices
FDD 6	display 3, 37
headphone 6	See also monitor
i.LINK 6	keyboard 38
infrared 28	mouse 38
parallel 35	
phone line 7	F
printer 35	faxes
USB 6	laws governing v
correction keys 16, 17	FDD connector 6
Ctrl key 17	Finish button 14
cursor-movement keys 16	floppy disk drive
customer assistance	connecting 23
support options 71	connector 6
customizing your computer 43	troubleshooting 76
	Fn key 17
D	combination commands 20
DC In 7, 8	function keys 16, 17
digital still camera 28	v
digital video camera 42	G
diskettes	glare 3
ejecting 24	
handling 85	Н
inserting into drive 23	handling

audio CDs 86	L
CD-ROM discs 85, 86	LCD 83
diskettes 85	lock lever 12
Hard Disk Standby power setting 46	reducing glare 3
hard drive	selecting to display output 37
indicator light 19	troubleshooting 74
headphone	lever
connector 6, 37	LCD 12
help 71	lighting 3
	Limited Warranty 15, 89
1	lithium ion battery
i.LINK 6, 42	disposal v
IEEE1394 6, 42	safety precautions v
indicator lights 19	loading
battery 10, 19	battery pack 9
Caps Lock 19	location for computer 3
charge status 10	•
hard drive 19	M
Information 19	maintenance 84, 87
modem 5	Maximum Battery Life power setting
Num Lock 19	45
Scroll Lock 5, 19	memory module
infrared communication devices 28	installing 25
other computers 28	microphone 5
infrared port 28	modem
Infrared tab 44	connector 7
infrared transmission	indicator 5
active distance 29	laws governing v
troubleshooting 29	troubleshooting 76
input devices iv	moisture condensation 85
Insert key 16, 17	monitor
inserting	connecting 36
battery pack 9	connector 37
diskettes into drive 23	selecting 37
installing	switching among 20
hardware 33	mouse
memory 25	connecting 38
peripherals 33	troubleshooting 77
integrated digital camera 1	Movie Player 61
interference iii, 85	multiple phone lines 34
V	
K	N
keyboard 16–18, 20	navigation keys 16
connecting 38	network
	connecting 25

Notebook Setup tabs 44	power setting
Num Lock	AC Profile 45
indicator light 19	Maximum Battery Life 45
numeric keypad area 16	
numeric keypau area 16	Power Management Off 49
0	System Hibernation 46
_	System Suspend 46
online	Video Standby 46
help 71	power sources 9, 83
Open button 40	connecting 8
opening	power standby
CD-ROM drive lid 40	Hard Disk Standby 46
operator keys 17	PowerPanel
output devices iv	activating 47
adding 35	customizing toolbar 45, 46
	precautions 84
P	Print Screen key 17
parallel port 35	printer
party phone lines 34	connecting 35
PBX 34	port 35
PC card	projector 37
inserting 25	
release button 25	R
removing 27	radio interference iii, 85
slot protector 26	rechargeable battery pack 8, 9
slots 25	recharging battery pack 10
troubleshooting 78	Recovery CDs 82
Type II 25	registering
phone	Windows 98 14
connecting line 34	your computer 15
jack 7, 34	regulatory information iii
laws governing <b>v</b>	removing
power 19	battery pack 11
switch 12	diskettes 24
Power Management	restoring data 82
toolbar 47	restoring data 02
power management	S
-	Scroll Lock 5
settings 45 Power Management Off power setting	indicator light 19
45	selecting
**	
Power On	display 37 LCD 37
Device Sequence tab 44	
Password tab 44	monitor 37
power saving modes 30	power source 9
System Hibernation 20, 31	setting up
System Suspend 20, 30	Windows 98 14
Video Standby 20	setup screen

About This Computer tab 44	W
Basic/Advanced tab 44	warranty 15, 89
displaying 43	Windows 98
Infrared tab 44	Certificate of Authenticity 14
Power On Device Sequence tab 44	Control Panel 29
Power On Password tab 44	Explorer 18
setup tabs 44	Find window 18
Shift key 17	Finish button 14
Shut Down Windows dialog box 13	help 18
Smart Capture 57	key 17
Smart Label 69	key combinations 18
Smart Publisher 68	License Agreement 14
Smart Utilities 57	registering 14
Smart Write 67	setup 14
Sony Fax-on-Demand service 72	Setup Wizard screen 14
Sony Notebook Setup screen 43	Start button 13
speakers	taskbar 13, 75
connectors 6	
troubleshooting 76	
Start button 13, 43	
starting	
computer 12	
startup problems 13	
switching	
display 20	
monitor 20	
System Hibernation mode 20, 31, 46	
System Suspend mode 20, 30, 46	
•	
T	
technical support	
support options 71	
troubleshooting 73–78	
startup 13, 73	
turning on	
computer 12	
TV interference iii, 85	
U	
USB	
connector 6	
V	
ventilation 84	
video camera 42	

Video Standby mode 20