


Honeywell

TROLA[®]TEMP

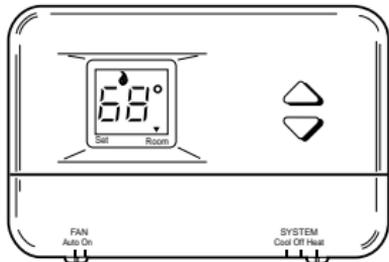

M14752

Electronic Thermostat

OWNER'S GUIDE



69-1496

Congratulations on the purchase of your new thermostat! Over 100 years of Honeywell engineering expertise went into the making of this thermostat in an effort to provide you with a more comfortable and convenient living environment.

- *Simple and easy to use.* The ▲ and ▼ keys make it easy for you to change your temperature setting.
- *Large digital display.* You can easily read the current room temperature at a glance.
- *No need for batteries.* Batteries are not required because your temperature settings are held permanently in memory.


Settings

Setting FAN and SYSTEM Switches

Fan and system settings are controlled by using FAN and SYSTEM switches located on the bottom of the thermostat case.


First set the FAN switch:

- Auto:** Normal setting for most homes. In cooling, the fan goes off and on with the cooling equipment. In heating, the fan may start a few minutes after the heating equipment comes on.
- On:** The fan runs continuously. Use for improved air circulation and air quality.

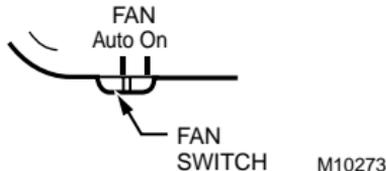

Then set the **SYSTEM** switch:

- Cool:** Normal setting for months when your home needs cooling (air conditioning). Digital display shows a snowflake ❄️ when cooling is on.
- Off:** Both heating and cooling are off.
- Heat:** Normal setting for months when your home needs heating. Digital display shows a flame 🔥 when heating is on.

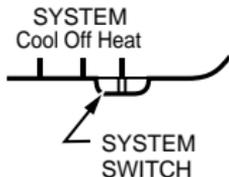

M14228

IMPORTANT


Do not operate the Thermostat in cooling mode when the outdoor temperature is below 50°F (10°C), or damage to compressor could result.

Displaying Temperature Setting

NOTE: Your temperature setting can be set anywhere from 40° to 99°F (5° to 37°C).


The temperature setting and the room temperature are shown separately on the digital display. The ▼ indicator points to **Set** when the temperature setting is displayed and to **Room** when the room temperature is displayed.

1. To display the temperature setting on the digital display, press either the ▲ or ▼ key once.

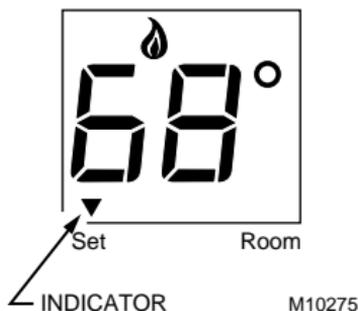

Changing Temperature Setting

1. To lower the temperature setting, press the ▼ key.
When in the heating mode, lowering the temperature at night or during the day can lower your energy costs.

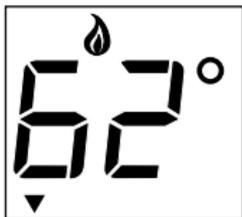

Set

Room

M10276

2. To raise the temperature setting, press the ▲ key.
When in the cooling mode, raising the temperature before you leave for work or school also lowers your energy costs.



Set

Room

M10982

Troubleshooting Guide



CAUTION

Low Temperature Hazard

Operating at too low of an outdoor temperature may cause compressor damage.

Do not operate cooling if outdoor temperature is below 50°F (10°C). Refer to manufacturer's recommendations.

Heating or cooling does not come on.

- Check power to the heating or cooling equipment.
For compressor protection, on initial startup, and during power interruptions the Thermostat will go into a 5 minute delay. During this delay, the cooling icon, a snowflake ❄️, will flash.

- Check that the SYSTEM switch on the thermostat is set to Heat or Cool.
- Check the system fuse or circuit breaker and replace or reset if necessary.
- Check for air movement at the register.

Temperature setting is too warm or cool

- Adjust the temperature by pressing either the ▲ or ▼ key.

If you have questions concerning this thermostat, call Honeywell Customer Relations at 1-800-468-1502, Monday-Friday, 7:00 am-5:30 pm, Central time.

For service, contact your local heating and cooling contractor:



Home and Building Control

Honeywell

1985 Douglas Drive North

Golden Valley, MN 55422

Home and Building Control

Honeywell Limitée

35 Dynamic Drive

Scarborough, Ontario

M1V 4Z9

Honeywell

TROLA[®]TEMP

69-1496 G.H. 9-00

Copyright © 2000 Honeywell

All Rights Reserved

® U.S. Registered Trademark



Printed in U.S.A. on recycled
paper containing at least 10%
post-consumer paper fibers.

www.honeywell.com/yourhome/