

**COMPLETE STEREO SYSTEM**  
*with AM/FM STEREO RADIO,*  
**CD and CASSETTE PLAYER,**  
*and FULL SIZE STEREO PHONOGRAPH*

**OWNER'S MANUAL**

**NR303TTC**

Visit our web site at: [www.emersonelectronics.ca](http://www.emersonelectronics.ca)

## CAUTION

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

 <p>The lightning flash with arrow-head symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated 'dangerous voltage' within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>	<p><b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p><b>WARNING : TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK), NO USER SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</b></p>	 <p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>
--	---	---

## IMPORTANT SAFETY INSTRUCTIONS

- 1.) Read these instructions.
- 2.) Keep these instructions.
- 3.) Heed all warnings.
- 4.) Follow all instructions.
- 5.) Do not use this apparatus near water.
- 6.) Clean only with dry cloth.
- 7.) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8.) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9.) Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10.) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and point where they exit from the apparatus.
- 11.) Only use attachments/ accessories specified by the manufacturer.
- 12.) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 13.) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 14.) This appliance shall not be exposed to dripping or splashing water and no object filled with liquids such as vases shall be placed on the apparatus.
- 15.) Do not overload wall outlet. Use only power source as indicated.
- 16.) Use replacement parts as specified by the manufacturer.
- 17.) The product may be mounted to a wall only if recommended by the manufacturer.
- 18.) Upon completion of any service or repairs to this product, ask the service technician to perform safety checks.

**Thank you**..... for purchasing this Emerson Heritage Series complete home stereo system. Inside this beautiful real wood veneer cabinet you will find a state of the art audio system that includes an AM/FM Stereo Radio, a Compact Disc player, and a wide-range dynamic speakers. This system has been designed to provide you with many years of enjoyment and trouble-free operation with an absolute minimum of care and maintenance.

Every component in this system was in perfect working order when it left our factory. If you experience any problems with the set up or operation of this system, PLEASE DO NOT RETURN IT TO THE RETAIL STORE. Please call the SYNEX Canada Limited Customer Service Hotline, toll-free, at 1-800-663-5954. One of our representatives will attempt to resolve the problem for you. If the problem cannot be resolved by phone you will be instructed on how to proceed.

Please read all of the instructions in this manual to make sure you are getting the maximum benefit out of the features included in this system. And please save this manual for future reference. It includes your warranty and important service information.

Once again, thank you for purchasing this Emerson Heritage Series Complete Stereo System.

The serial number of your system is located on the back panel. Please take a moment now to locate the serial number and write the number in the space provided below. You may be asked to provide this number when calling for product service.


**Model Number:** NR303TTC

**Serial Number:** \_\_\_\_\_

## IMPORTANT NOTES

- Avoid installing this unit in places exposed to direct sunlight or close to heat radiating appliances such as electric heaters, on top of other stereo equipment that radiates too much heat, places lacking ventilation or dusty areas, places subject to constant vibration and/or humid or moist areas.
- Do not attempt to clean this unit with chemical solvents as this might damage the finish. Use a clean dry cloth.
- Operate controls and switches as described in the manual.
- Before turning 'On' the power, make certain that power cord is properly installed.
- Store your Cds, cassettes in a cool area to avoid damage from heat.
- When moving the set, be sure to first disconnect the power cord.

### CLASS 1 LASER PRODUCT

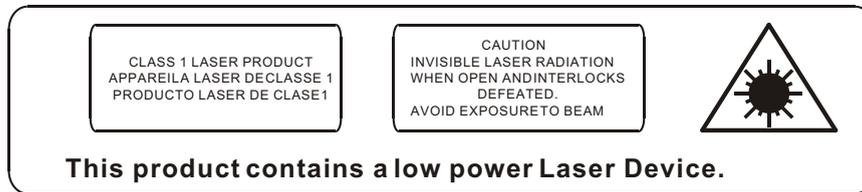

### FCC INFORMATION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

## IMPORTANT NOTES

### IMPORTANT

Since digital circuitry may cause interference to other radio or television tuners nearby, switch this unit off when not in use or move it away from the affected radio/television tuner.


NOTE: This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the Radio Interference Regulations of Industry Canada. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television operation (which can be determined by turning the equipment off), the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.


## PREPARATION FOR USE

### UNPACKING AND SET UP

- Carefully remove the unit from the display carton and remove all packing material from the unit.
- Unwind the AC power cord and extend it to its full length.
- Unwind the FM Antenna wire and extend it to its full length.
- Place the unit on a stable, level surface, convenient to an AC outlet, out of direct sunlight, and away from sources of excess heat, dust, moisture, humidity, or strong magnetic fields.
- Connect the plug to your AC outlet.
- Raise the lid to expose the phonograph. The phonograph has been secured for shipment with a transit screw. Use a coin or screwdriver to turn the transit screw clockwise. This will allow the turntable to “float” .

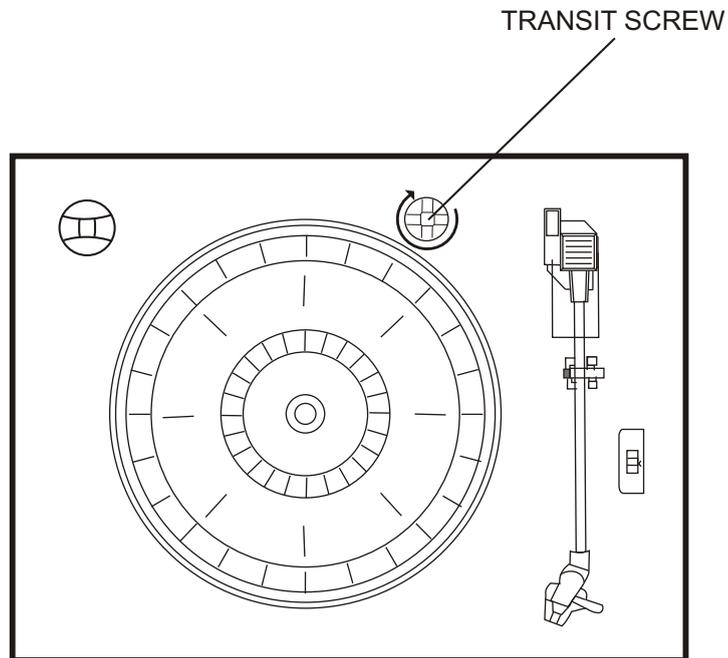


- Remove the opaque white plastic stylus cover from the phonograph stylus by sliding it in the direction of the arrow.

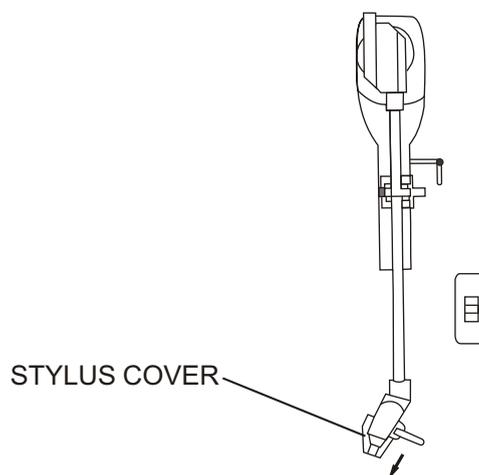

Discard the stylus cover.

- Remove the twist-tie that was used to secure the tone arm during shipment.
- Release the tone arm lock lever.

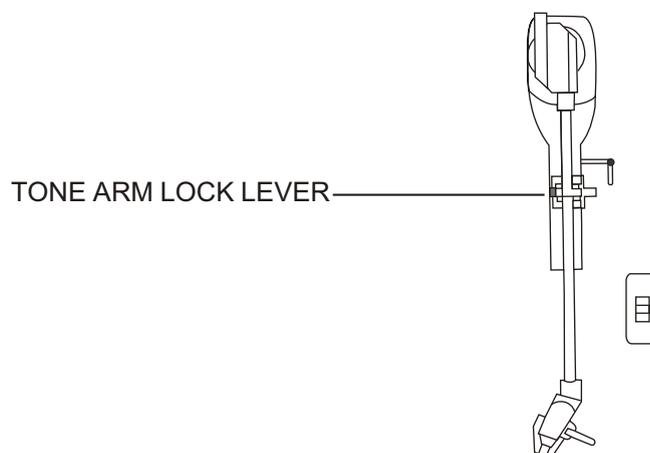


- Connect the plug to your AC outlet.

## POWER SOURCE

This system is designed to operate on normal 120V 60 Hz AC only. Attempting to operate from any other power source may cause damage to the system, and such damage is not covered by your warranty.

### NOTE:

You will note that this system is equipped with a polarized AC power plug having one blade wider than the other. This is a safety feature. If this plug does not fit into your existing AC outlet, do not try to defeat this safety feature by filing the wide blade to make it fit into your outlet. If this plug will not fit into your outlet, you probably have an outdated non-polarized AC outlet. You should have your outlet changed by a qualified licensed electrician.

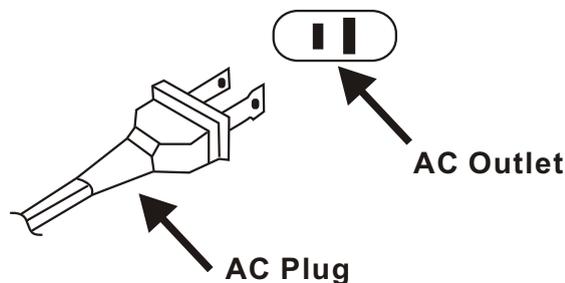

## PROTECT YOUR FURNITURE

This model is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centres everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the product on fine wooden furniture.

### IMPORTANT: Raising And Lowering The Lid


To open the lid, raise it as far as it will go until the lid support bracket 'locks' in the open position.

To close the lid, lift it upward slightly until the lid support bracket 'unlocks', and then gently lower the lid.

TO AVOID DAMAGING THE CABINET OR THE LID, NEVER FORCE THE LID CLOSED. ALWAYS RAISE THE LID TO RELEASE THE LID SUPPORT BRACKET.


## LOCATION OF CONTROLS AND INDICATORS

### FRONT PANEL

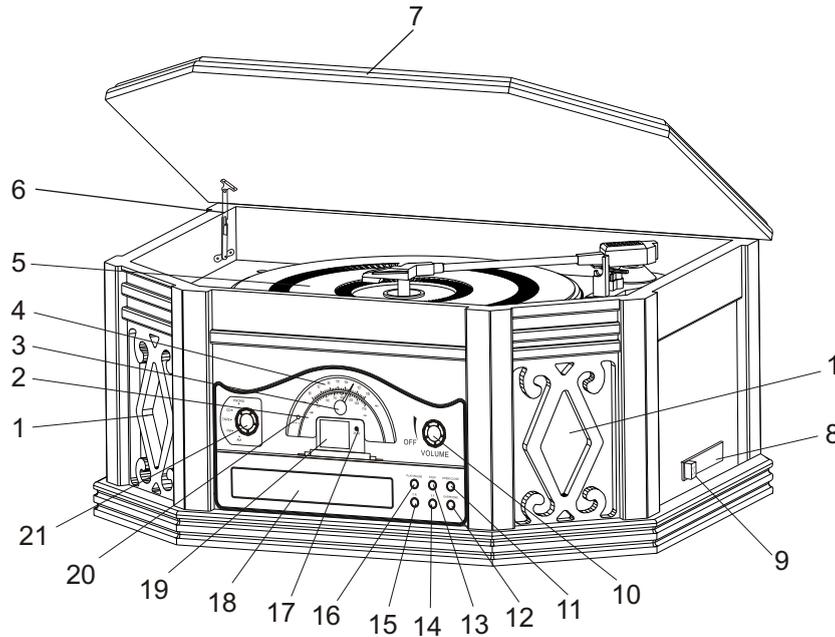

- |   |   |
|---|---|
| 1.) Speakers.   | 11.) CD <b>OPEN/CLOSE</b> Button.                     |
| 2.) <b>AM</b> Dial Scale.                                 | 12.) <b>EARPHONE</b> (Headphone) Jack.                |
| 3.) Tuning Control.                                       | 13.) CD <b>STOP</b> Button.                           |
| 4.) <b>FM</b> Dial Scale.                                 | 14.) CD <b>F.F</b> (Fast Forward) Button.             |
| 5.) Turntable.  | 15.) CD <b>F.R</b> (Fast Reverse) Button.             |
| 6.) Phonograph Lid Support Bracket.                       | 16.) CD <b>PLAY/PAUSE</b> Button.                     |
| 7.) Phonograph Lid.                                       | 17.) <b>POWER</b> On Indicator.                       |
| 8.) Cassette Player Slot.                                 | 18.) CD Drawer.                                       |
| 9.) Cassette <b>EJ/FF</b> Button.<br>(Eject/Fast Forward) | 19.) CD Track Number Display.                         |
| 10.) <b>OFF-VOLUME</b> Control.                           | 20.) <b>FM ST.</b> Indicator.                         |
|   | 21.) <b>AM/FM/TAPE/CD/PHONO</b><br>Function Selector. |


## BACK PANEL

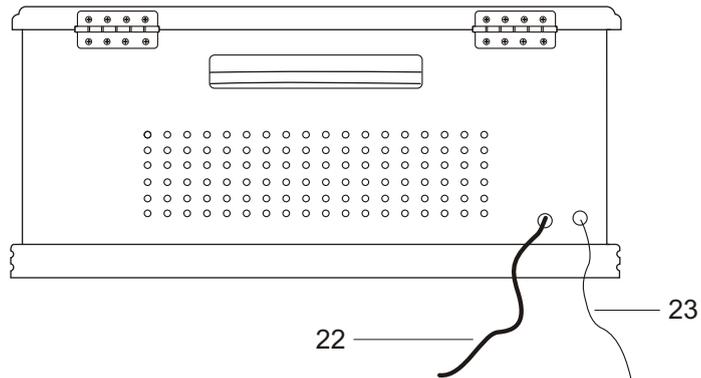

- 22.) **AC Power Cord.**
- 23.) **FM Lead Wire Antenna.**

## PHONOGRAPH

- 1.) Turntable.
- 2.) 45 rpm Adapter.
- 3.) Transit Screw.
- 4.) Cue Lever.
- 5.) Speed Selector (33/45/78 rpm).
- 6.) Tone Arm Lock.
- 7.) Tone Arm with Stylus.

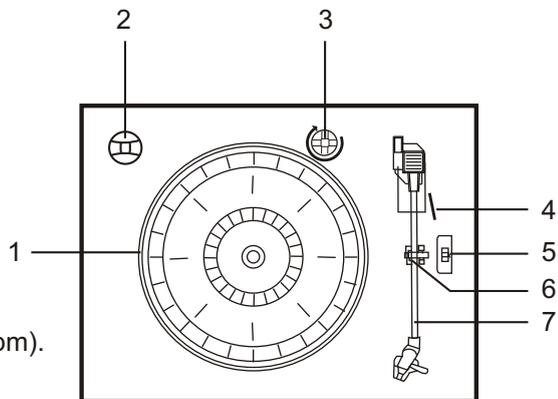


## OPERATING INSTRUCTIONS

### Listening To The Radio

- 1.) To turn the system 'on', rotate the **OFF-VOLUME** control clockwise until a 'click' is heard, and set the Volume to a low level. The POWER indicator lights up.
- 2.) Set the Function selector (**AM/FM/TAPE/CD/PHONO**) to the AM or FM band as desired. The dial scale light comes 'on'.
- 3.) Rotate the **TUNING** control to tune the desired radio station. If you tune to an FM stereo station, the **FM ST.** Indicator will light and reception will be in stereo. If you tune to a weaker FM station, the reception will automatically switch to mono.
- 4.) Adjust the **OFF-VOLUME** control as desired.
- 5.) When you are finished listening turn the **OFF-VOLUME** control counter clockwise until a 'click' is heard. The POWER indicator and the tuning dial light go 'off'.

### Antenna Information


The AM antenna is inside the cabinet. If AM reception is unsatisfactory try repositioning the cabinet slightly until the internal antenna is picking up the strongest signal.

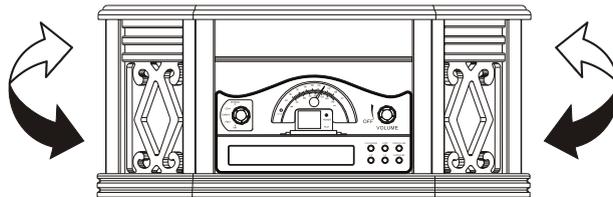

The FM wire antenna is located on the back cabinet. If necessary adjust the position and direction of this antenna until you find the position that provides the best reception.

## PLAYING COMPACT DISCS

- 1.) Turn the **OFF-VOLUME** control clockwise until a 'click' is heard, and set the volume to a low level.
- 2.) Set the Function selector (**AM/FM//TAPE/CD/PHONO**) to the **CD** position. The CD track number display comes 'On'.

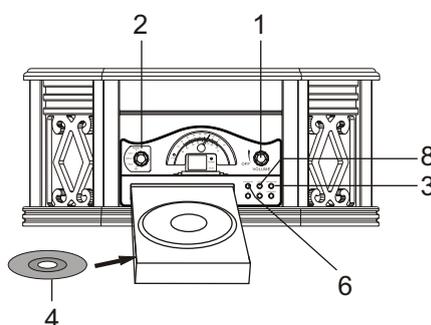


- 3.) Press the CD **OPEN/CLOSE** button to open the CD drawer.
- 4.) Place your disc in the drawer with the printed label side facing up.

- 5.) Press the CD **OPEN/CLOSE** button once more to close the drawer. The disc will spin for a few seconds while the player reads the disc, then the disc stops and the display shows the total number of tracks on the disc.



- 6.) Press the CD **OPEN/CLOSE** button again to begin playback on track number one. The Play Indicator lights.

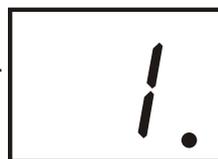

- 7.) Adjust the **OFF-VOLUME** control to the desired level.
- 8.) Playback will continue until the end of the disc. When the disc ends, the display shows the total number of tracks on the disc again. You may also stop playback at any time by pressing the CD **STOP** button.

### Pause Control


To pause momentarily during playback press the CD **PLAY/PAUSE** button again. Playback stops but the disc continues to spin and the display flashes. Press the CD **PLAY/PAUSE** button once more to cancel Pause and resume playback. The display stops flashing.



## Skipping Tracks And High Speed Music Search

During CD Playback, repeatedly press the **F.F** (Forward Forward) or **F.R** (Fast Reverse) buttons to skip to higher or lower number tracks. When the desired track number appears on the display release the buttons and playback will begin on the desired track.

To rapidly search forward or back within a track to locate a specific musical passage, depress and hold either the **F.F** (Forward Forward) or **F.R** (Fast Reverse) buttons. The player will move forward or backward at high speed as long as the buttons are depressed. When you hear the desired passage release the buttons. Normal playback will resume at that point.

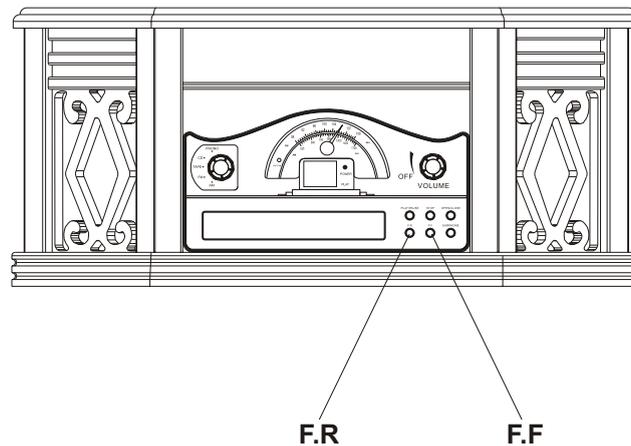




## PLAYING CASSETTE TAPES

**Note:** Before inserting a tape in the player be sure that there is no excess slack in the cassette that could become jammed in the mechanism.

Refer to the *CARE AND MAINTENANCE* section for instructions on removing excess slack from the cassette.

- 1.) Rotate the **OFF-VOLUME** control clockwise until a 'click' is heard and set the Volume to a low level. The **POWER** indicator comes 'on'.
- 2.) Set the Function selector (**AM/FM/TAPE/CD/PHONO**) to the **TAPE** position.
- 3.) Insert your cassette into the slot located on right side cabinet, as shown in the illustration, with the side you wish to play facing 'up' and the open end on the right side.

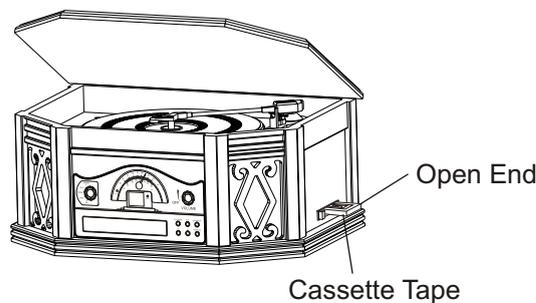

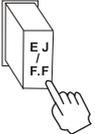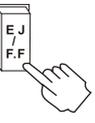- 4.) Cassette playback begins as soon as the tape is inserted. Adjust the **OFF-VOLUME** control to the desired level.
- 5.) To advance the tape rapidly, depress the **EJ/FF** (Eject/Fast Forward) button approximately half way. The tape will move forward rapidly as long as the button is depressed. Normal playback will resume when the button is released. 
- 6.) When the tape ends, the player stops automatically. Depress the **EJ/FF** (Eject/Fast Forward) button completely to remove the cassette from the player. You may press the **EJ/FF** (Eject/Fast Forward) button to stop playback and remove the cassette at any time. 
- 7.) To turn the system 'off', rotate the **OFF-VOLUME** control counter clockwise until a 'click' is heard. The **POWER** indicator goes 'off'.

## PLAYING RECORDS

This system includes a full-size, 3-speed, belt-drive turntable. You can play 33, 45, and 78 rpm records.


- 1.) Turn the **OFF-VOLUME** control clockwise until a 'click' is heard, and set the Volume to a low level.
- 2.) Set the Function (**AM/FM/TAPE/CD/PHONO**) selector to the **PHONO** position.
- 3.) Make sure that you have removed the stylus cover from the stylus and have released the Tone Arm Lock that secured the tone arm to the tone arm rest.
- 4.) Set the turntable Speed Selector to the appropriate speed, 33, 45, or 78 rpm. If you are playing 45 rpm 'singles', place the 45 rpm adapter on the centre spindle.
- 5.) Place your record on the centre spindle.
- 6.) Raise the Cue lever to lift the tone arm off its rest. Move the tone arm to the edge of the record. The turntable starts automatically. Use the Cue lever to gently lower the tone arm onto the record.
- 7.) Adjust the **OFF-VOLUME** control to the desired level.
- 8.) When the tone arm reaches the end of the record it automatically returns to the tone arm rest and the record player stops.
- 9.) To turn the system 'off', rotate the **OFF-VOLUME** control counter clockwise until a 'click' is heard. The POWER indicator goes 'off'.

**NOTE:** Do not turn or stop the turntable manually. Moving or jarring the Turntable without securing the Tone Arm clamp could result in damage to the Tone Arm.


## IMPORTANT!!

- TO PROTECT THE TURNTABLE FROM DAMAGE DURING TRANSPORTATION, A SILVER TRANSIT SCREW IS LOCATED AT THE UPPER RIGHT OF THE TURNTABLE PLATFORM.

- BEFORE PLAYING, PLEASE USE A SCREWDRIVER TO TURN THE TRANSIT SCREW IN CLOCKWISE DIRECTION (SCREW GOING DOWN) COMPLETELY TO UNLOCK THE TURNTABLE.

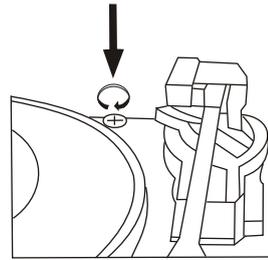


- TO CLOCK THE TURNTABLE AGAIN FOR TRANSPORTATION, PLEASE TURN THE SCREW IN COUNTER-CLOCKWISE DIRECTION.

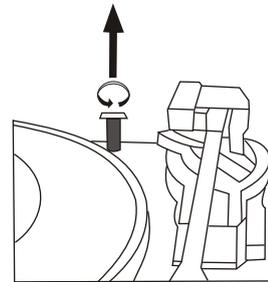

## USING STEREO HEADPHONES (NOT INCLUDED)

Connect a set of stereo headphones with a 3.5mm mini-plug to the **EARPHONE** jack on the front panel. Before putting on the headphones always set the **OFF-VOLUME** control to a low level. Then put the headphones on and gradually increase the Volume to a comfortable listening level. The built-in speakers automatically shut off when headphones are connected to the **EARPHONE** jack.

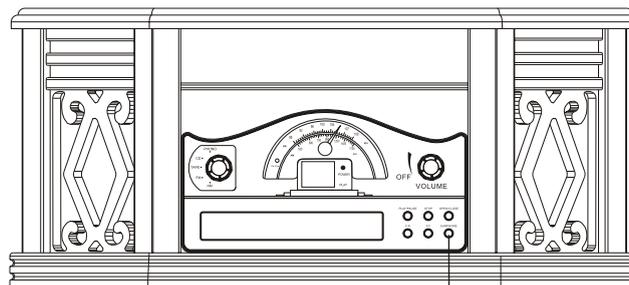

EARPHONE jack

## CARE AND MAINTENANCE

### CASSETTE CARE

Two common causes of trouble experienced when using cassettes are:

- 1.) Tape jamming - Leading to uneven speed in playback, and
- 2.) Tape tangling - Where the tape wraps itself around vital parts of the mechanism.

To reduce the likelihood of these problems occurring, the following precautions should be observed:

- Check that there are no loose layers of tape visible through the cassette centre window (see Fig. 1). Take up any loose layers, using a pencil or hexagonal barrelled ballpoint pen, before inserting the cassette into the machine (see Fig.2).

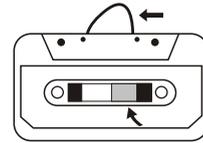


Fig. 1

- If the cassette feels “ tight ” while performing operation shown (see Fig.2), the tape may be jamming due to “ridges” formed in the winding of the tape (visible through the centre window). These may be removed, in most cases, by fast winding of the cassette from one end to the other and back again.

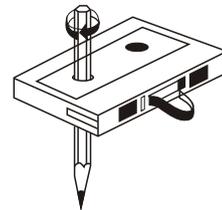


Fig. 2


- Use only well-known brands of tape. Avoid use of C-120 cassettes.

Furthermore, do not expose cassettes to direct sunlight, dust or oil, and do not touch the tape surfaces.


## CARE AND MAINTENANCE

### COMPACT DISC CARE

- To remove a disc from its storage case, press down on the centre of the case and lift the disc out, holding it carefully by the edges.

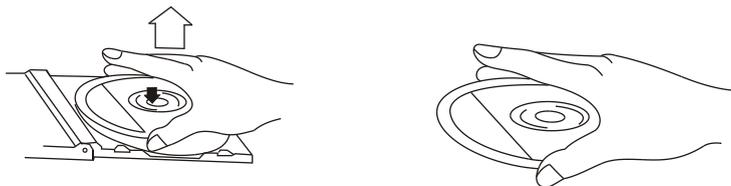

- Fingerprints and dust should be carefully wiped off the discs recorded surface with a soft cloth. Unlike conventional records, compact discs have no grooves to collect dust and microscopic debris, so gently wiping with a soft cloth should remove most particles. Wipe in a straight line from the inside to the outside of the disc. Small dust particles and light stains will have absolutely no effect on reproduction quality.

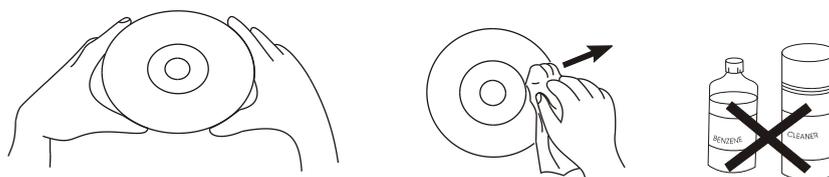

- Clean the disc periodically with a soft, lint-free, dry cloth. Never use detergents or abrasive cleaners to clean the disc. If necessary, use a CD cleaning kit.
- Never write on or affix labels to the surface of compact discs.

### CARE OF THE CABINETS

You should care for the cabinet as you would care for any piece of the furniture. When the cabinet becomes dusty wipe it with a soft, non-abrasive dust cloth. If the cabinet becomes smudged with fingerprints you may use any good quality commercial dusting and polishing spray cleaner, however avoid spraying the plastic or metal parts of this system. We recommend that you spray the cleaner on your dust cloth, not directly on the cabinet, to avoid getting any of the spray on the plastic or metal parts.

## **EMERSON WARRANTY**

Consumer Electronics, Home Appliances and Home Office Products

Thank you for choosing EMERSON!

SYNNEX Canada Limited gives the following express warranty to the original consumer purchaser or gift recipient for this EMERSON product, when shipped in its original container and sold or distributed in Canada by SYNNEX Canada Limited or by an Authorized EMERSON Dealer.

SYNNEX Canada Limited warrants that this product is free, under normal use and maintenance, from any defects in material and workmanship. If any such defects should be found in this product within the applicable warranty period, SYNNEX Canada Limited shall, at its option, repair or replace the product as specified herein. Replacement parts furnished in connection with this warranty shall be warranted for a period equal to the unexpired portion of the original equipment warranty.

This warranty shall not apply to:

- a. Any defects caused or repairs required as a result of abusive operation, negligence, accident, improper installation or inappropriate use as outlined in the owner's manual.
- b. Any EMERSON product tampered with, modified, adjusted or repaired by any party other than SYNNEX Canada Limited or EMERSON's Authorized Service Centres
- c. Damage caused or repairs required as a result of the use with items not specified or approved by SYNNEX Canada Limited, including but not limited to head cleaning tapes and chemical cleaning agents.
- d. Any replacement of accessories, glassware, consumable or peripheral items required through normal use of the product including but not limited to earphones, remote controls, AC adapters, batteries, temperature probe, stylus, trays, filters, cables, paper, cabinet, cabinet parts, knobs, buttons, baskets, stands, shelves, cookware and cooking utensils.
- e. Any cosmetic damage to the surface or exterior that has been defaced or caused by normal wear and tear.
- f. Any damage caused by external or environmental conditions, including but not limited to transmission line/power line voltage or liquid spillage.

- g. Any product received without appropriate model, serial number and CSA/cUL /cULus/cETL /cETLus markings.
- h. Any products used for rental or commercial purposes.
- i. Any installation, setup and/or programming charges.

Should this EMERSON product fail to operate during the warranty period, warranty service may be obtained upon delivery of the EMERSON product together with proof of purchase and a copy of this LIMITED WARRANTY statement to an Authorized EMERSON Service Centre. This warranty constitutes the entire express warranty granted by SYNEX Canada Limited and no other dealer, service centre or their agent or employee is authorized to extend, enlarge or transfer this warranty on behalf of SYNEX Canada Limited. To the extent the law permits, SYNEX Canada Limited disclaims any and all liability for direct or indirect damages or losses or for any incidental, special or consequential damages or loss of profits resulting from a defect in material or workmanship relating to the product, including damages for the loss of time or use of this EMERSON product or the loss of information. The purchaser will be responsible for any removal, reinstallation, transportation and insurance costs incurred. Correction of defects, in the manner and period of time described herein, constitute complete fulfillment of all obligations and responsibilities of SYNEX Canada Limited to the purchaser with respect to the product and shall constitute full satisfaction of all claims, whether based on contract, negligence, strict liability or otherwise.

**CARRY-IN PARTS & LABOUR WARRANTY PERIODS:**

- Audio Products: 1 Year (Remote Control, if applicable 90 Days)
- Home Appliances: 1 Year
- Microwave Magnetron parts only additional 3 Years
- Refrigerator / Freezer Compressor parts only, additional 4 years
- Home Office Products: 1 Year

To obtain the name and address of the nearest Authorized EMERSON Service Centre or for more information on this warranty

- visit [www.emersonelectronics.ca](http://www.emersonelectronics.ca)
- mail your inquiry to  
SYNEX Canada Limited  
EMERSON Customer Service  
200 Ronson Drive, Toronto, ON M9W 5Z9; or
- call toll free 1-800-663-5954, Monday to Friday 9:00am 5:00pm Eastern Standard Time.



**EMERSON**  
**Part NO.: 16-2956EF**  
**607-01**

**Printed in China**