



This guide is designed as a reference to help you start using your LCD TV quickly. Please refer to the User's Manual for more detailed installation and safety instructions.

### Front View

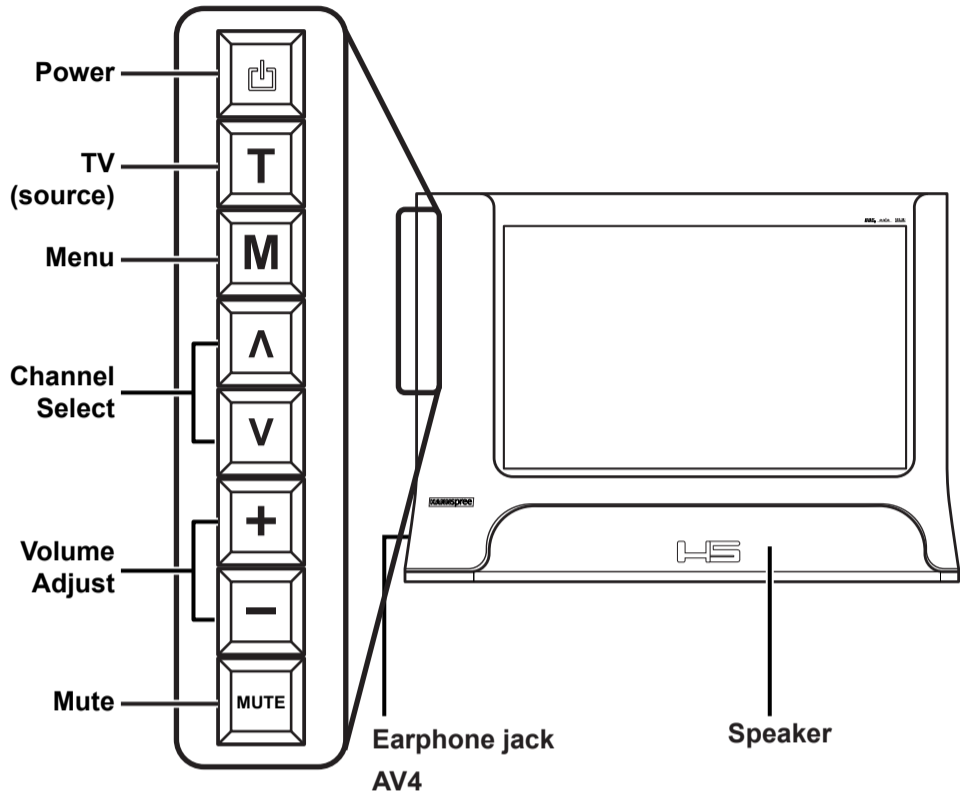


### Rear View

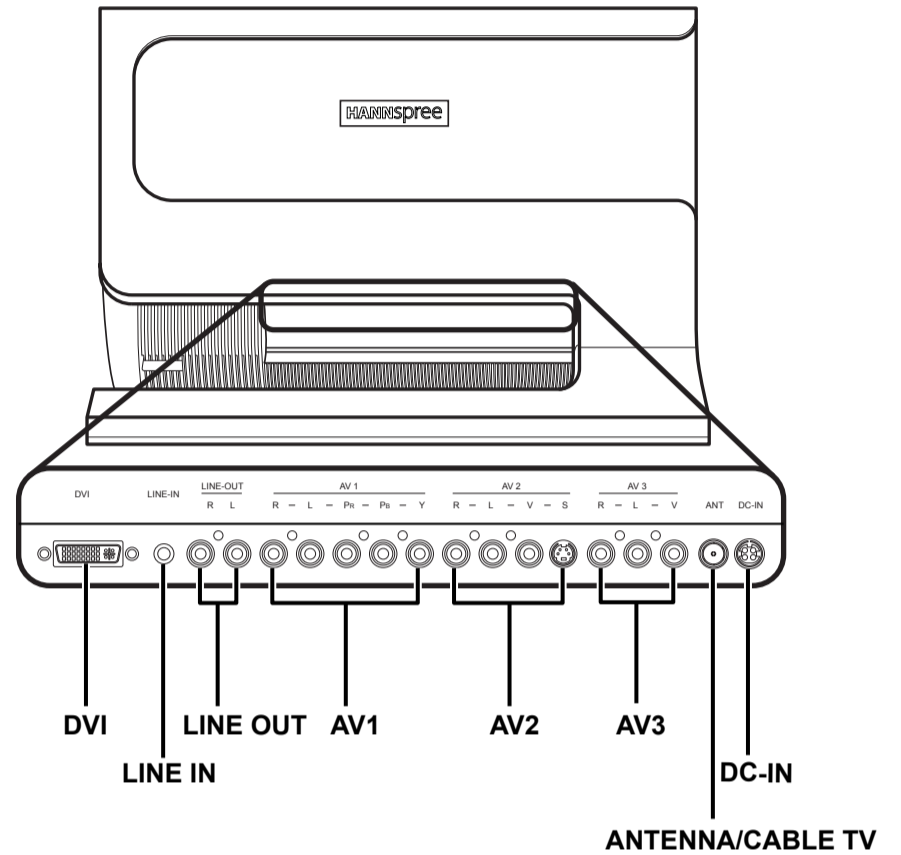


## Making Connections

### Connecting to Antenna/Cable TV/ PC/ AV Devices

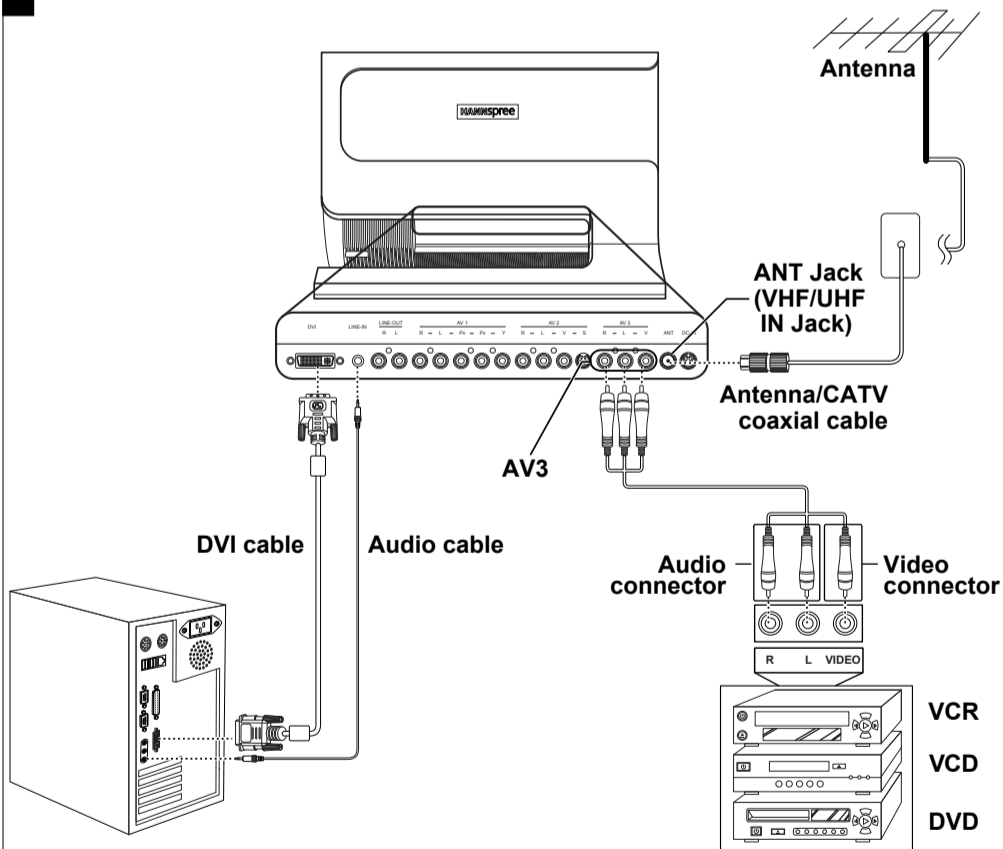

### Connecting the Power Adapter

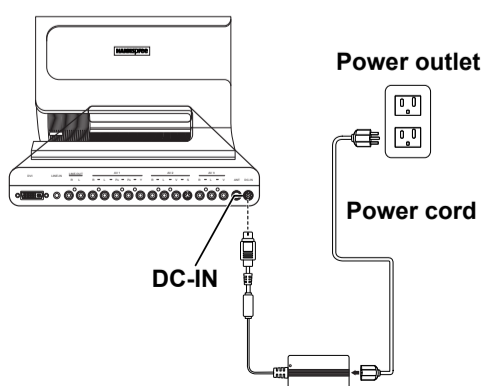

1. Connect the power cord to the power adapter as illustrated.
2. Plug the power adapter connector into the DC-IN input jack on the rear panel of the TV.
3. Insert the three-pronged plug at the other end of the power cord into a power outlet.

Note :  
Images are for illustration only and may vary by model or region.

## Getting Started


### Watching Broadcast or Cable TV

1. Press the **POWER** button to turn on your LCD TV.
2. Press the **SOURCE** button to select "TV".
3. Press the **MENU** button to open the OSD menu.
4. Press the **CH ^** or **CH v** button to select "TV".
5. Press the **VOL +** button to enter "TV MENU".
6. Press the **CH ^** or **CH v** button to select "SYSTEM".
7. Press the **VOL +** button to select "AUTO, B/G, D/K, I".



### Selecting A/V Sources

1. Make sure your TV is turned on and a device such as a DVD player is connected.
2. Press **SOURCE** key on the control panel to select different source signals. The TV channel number, PC or AV1 ~ AV4 appears on the screen.

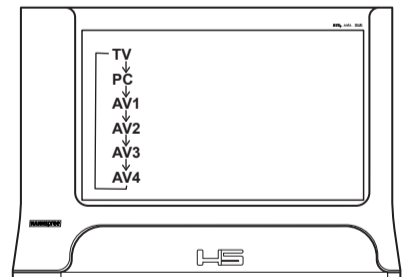

### Auto Channel Setup

Please follow the instructions by using the control panel.

1. Press the **MENU** button to enter the OSD main menus.
2. Use the **CH v** button to enter select the " TV " menu.
3. Press the **VOL ^** button to enter the TV setting.
4. Press the **CH v** button until the " AUTO PROGRAM " feature is selected.
5. Press the **VOL ^** button to begin " AUTO PROGRAM ".
6. Your television will begin automatically memorizing the available channels.

#### TV Menu



#### Auto Program

