


6-Piece Home Theater Speaker Package

Refer to your Owner's Manual for complete instructions.

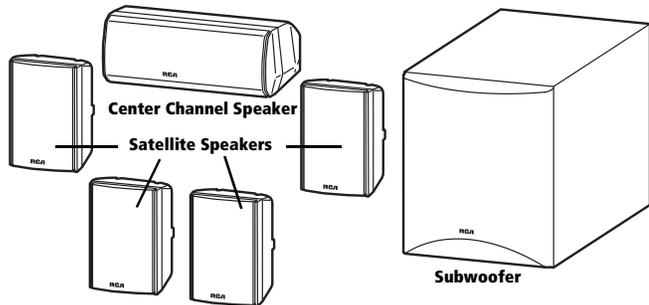


Speaker Placement




- Place the center speaker directly above or below the TV so that the sound of the center channel is localized at the TV.
- If possible, place the surround speakers slightly above ear level.
- Try to place all the speakers at an equal distance from the listening position.

**Connecting the Subwoofer to an Amplifier/Receiver
(Amplifier/Receiver Not Supplied)**

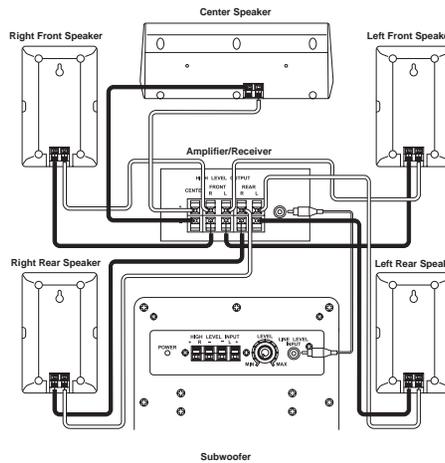

Line Level Input Jack

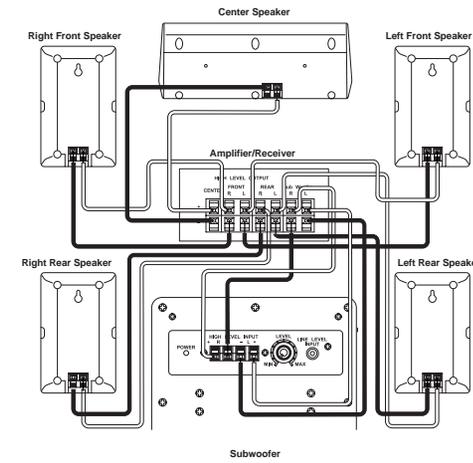

High Level Input Terminals

Connecting Power

Connect the power cord to a standard 120V/60 Hz AC outlet. Route the subwoofer's power cord so it is not likely to be walked on or pinched by items placed upon or against it, especially at plugs, convenience receptacles, and the point where it exits from the subwoofer.

Subwoofer Operation

The subwoofer turns on and off automatically. Follow these steps to adjust the volume.

1. Rotate **LEVEL** clockwise to **MIN** then turn on your audio system.
2. Play a DVD/CD, record, cassette, radio, or TV and adjust the audio system to a comfortable level.
3. Rotate **LEVEL** clockwise until you achieve the desired balance of bass between the subwoofer and the main speakers. After you adjust **LEVEL**, use the amplifier/receiver's volume control to control the speaker's volume.