

REPAIR PARTS MANUAL MODEL NO. 14596 (BA14596C) Lawn Tractor

McCULLOCHPM

# **HOW TO USE THIS MANUAL**

This manual is designed to provide the customer with a means to identify the parts on his/her tractor when ordering repair parts. The illustrations may or may not represent the actual assemblies; therefore, it is not recommended to use this manual as a guide to assemble or disassemble the tractor. Some hardware and parts are drawn larger in order to more readily identify them.

Each tractor has its own model number.

The model number for your tractor can be found on the fender under the seat.


When ordering parts, always give the following information:

- Product "Tractor"
- Model Number 14596 (BA14596C)
- Part Number
- Part Description

# TABLE OF CONTENTS

SCHEMATIC	3
ELECTRICAL	4-5
CHASSIS	6-7
DRIVE	8-9
STEERING	10-11
SEAT	12
DECALS	13
ENGINE	14
MOWER LIFT	15
MOWER DECK	16-17
WARRANTY	20

# TRACTOR - MODEL NO. 14596 (BA14596C), PRODUCT NO. 964 77 26-02 SCHEMATIC

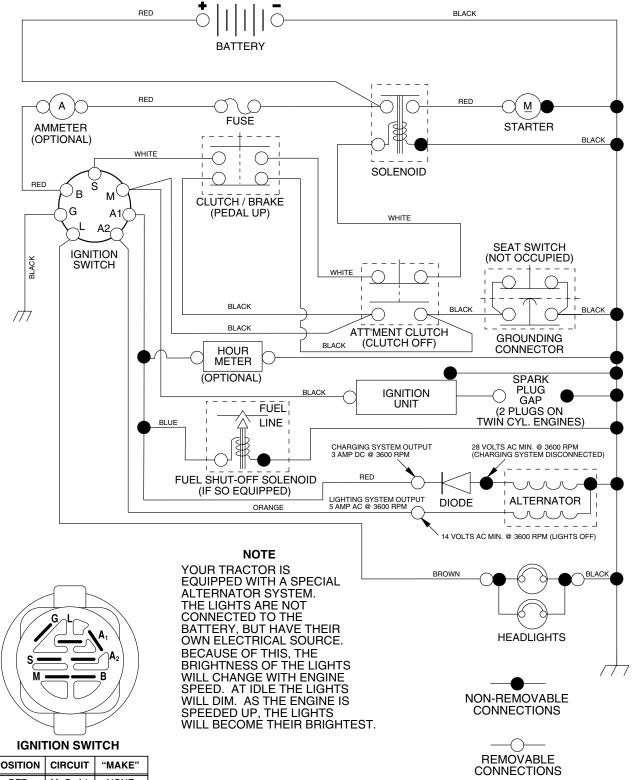


POSITION	CIRCUIT	"MAKE"
OFF	M+G+A1	NONE
RUN/LIGHT	B+A1	A2+L
RUN	B+A1	NONE
START	B + S + A1	NONE

#### WIRING INSULATED CLIPS

**NOTE:** IF WIRING INSULATED CLIPS WERE REMOVED FOR SERVICING OF UNIT, THEY SHOULD BE REPLACED TO PROPERLY SECURE YOUR WIRING.

TRACTOR - MODEL NO. 14596 (BA14596C), PRODUCT NO. 964 77 26-02 ELECTRICAL

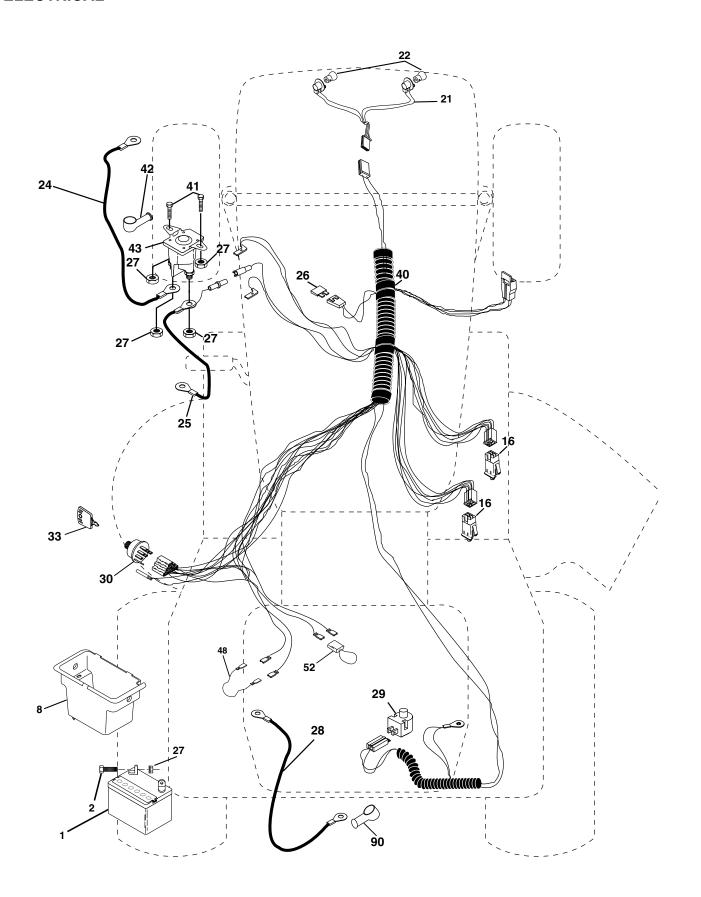


TRACTOR - MODEL NO. 14596 (BA14596C), PRODUCT NO. 964 77 26-02 ELECTRICAL

KEY NO.		DESCRIPTION
1	532 16 34-65	Battery 12 Volt 28 AMP
2	874 76 04-12	Bolt Hex Hd 1/4-20 unc x 3/4
8	532 17 66-89	Box Battery
16	532 17 61-38	Switch Interlock Push-In
21		Harness Asm. Light
22	532 00 41-52	
24		Cable Battery 6 Ga. 11" red
25		Cable Battery 6 Ga. 44" red w/16 wire
26		Fuse 20 AMP
27		Nut Keps Hex 1/4-20 unc
28		Cable Ground 6 Ga. 12" black
29		Switch Plunger Nc Gray
30	532 17 55-66	
33		Key Ign Molded Generic
40	532 17 97-20	
41		Bolt Blk Fin Hex 1/4 - 20 x 1/2
42		Cover Terminal Red
43	532 17 88-61	
48		Adapter Ammeter Rectangular
52		Protection Wire Loop
90	532 18 04-49	Cover Terminal Battery

**NOTE:** All component dimensions given in U.S. inches. 1 inch = 25.4 mm.

TRACTOR - MODEL NO. 14596 (BA14596C), PRODUCT NO. 964 77 26-02 CHASSIS AND ENCLOSURES

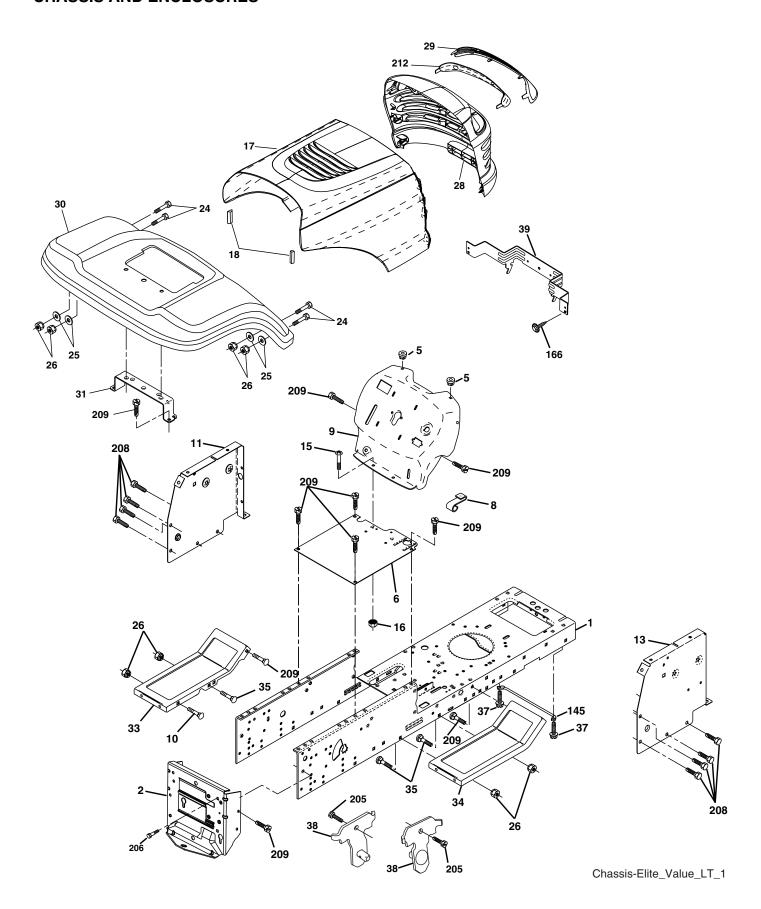


# TRACTOR - MODEL NO. 14596 (BA14596C), PRODUCT NO. 964 77 26-02 CHASSIS AND ENCLOSURES

KEY NO.	PART NO.	DESCRIPTION
1 2 5 6 8 9 10 11 3 15 16 17 18 4 2 5 6 8 9 14 5 16 6 20 8 20 20 20 20 20 20 20 20 20 20 20 20 20	532 17 46-20 532 17 65-54 532 15 52-72 532 18 25-59 532 12 64-71 <b>532 19 06-94</b> 872 14 06-08 532 17 49-96 532 18 69-52 874 18 05-12 873 51 05-00 532 18 65-80 <b>532 18 49-21</b> 874 78 06-16 819 13 13-12 873 80 06-00 532 18 35-52 532 18 58-46 532 19 10-03 532 18 25-07 532 18 25-07 532 18 25-07 532 18 25-08 872 11 06-06 817 49 05-08 532 17 57-10 532 17 47-14 532 15 65-24 <b>532 19 16-11</b> 817 49 06-08 532 17 01-65 817 67 06-08 817 00 06-12	Chassis Stamping Drawbar Bumper Hood/Dash Saddle Clip Insulator Dash P/L Bolt Carriage 3/8-16 x 1 Panel Dash Lh Panel Dash Rh Screw Mach Trhd 5/16-18 unc x 3/4 Nut Keps 5/16-18 unc Hood LT/PL Bumper Hood Bolt Fin Hex 3/8-16 unc x 1 Gr. 5 Washer 13/32 x 13/16 x 12 Ga. Nut Lock Hex W/Ins 3/8-16 unc Grille/Lens Asm. (Includes #'s 29 and 212) Lens LT/PL Fender Bracket Support Fender Footrest LH Footrest RH Bolt Rdhd 3/8-16 x 3/4 Screw Thdrol 6/16-18 x 1/2 TYT Bracket, Asm. Pivot, Mower Rear Bracket Pivot Rod Pivot Chassis/Hood Screw 10 x 3/4 Single Lead Hex Screw Thdrol 3/8-16 x 1/2 Bolt Shoulder 5/16-18 TT Screw Thdrol 3/8-16 x 1/2 Screw Hexwsh Thdr 3/8-16 x 3/4 Insert Lens Reflect
		-

**NOTE:** All component dimensions given in U.S. inches 1 inch = 25.4 mm


TRACTOR - MODEL NO. 14596 (BA14596C), PRODUCT NO. 964 77 26-02 DRIVE

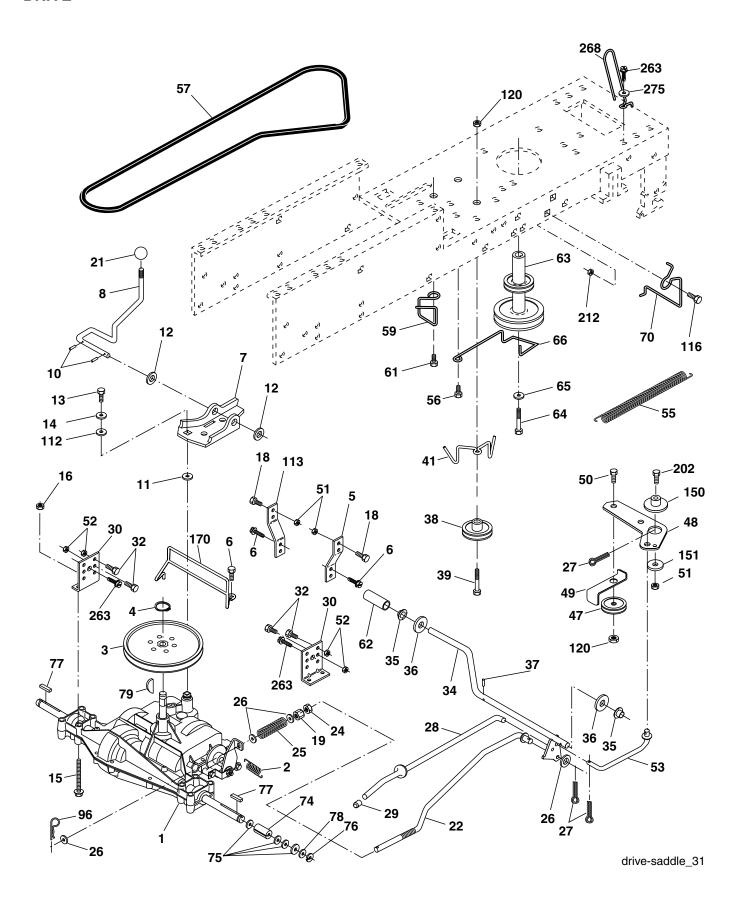

# TRACTOR - MODEL NO. 14596 (BA14596C), PRODUCT NO. 964 77 26-02 DRIVE

	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1		Transaxle, Peerless 206-545C	49	532 12 32-05	Retainer Belt Style Spring
		(Order Parts From Transaxle Manu-	50		Bolt Carr Sh 3/8-16 unc x 1-1/2 Gr.5
		factuer)	51	873 68 06-00	Nut Crownlock 3/8-16 unc
2	532 14 66-82	Spring Return Brake T/a Zinc	52	873 68 05-00	Nut Crownlock 5/16-18 unc
3	532 12 36-66	Pulley Transaxle 18" tires	53	532 10 57-10	Link Clutch
4	812 00 00-28	Ring Retainer # 5100-62	55	532 10 57-09	Spring Return Clutch 6 75
5		Strap Torque 30 Degrees	56	817 06 06-20	Screw 3/8-16 x 1-1/4
6	817 00 05-12	Screw 5/16-18 x 3/4	57	532 13 08-01	V-Belt Ground Drive 95 25
7	532 16 22-40	Plate Bracket Shift Saddle	59	532 16 96-91	Keeper Belt Span Ctr
8	532 13 16-79	Rod Shift Saddle	61	817 12 06-14	Screw 3/8-16 x .875
10	876 02 04-16	Pin Cotter 1/8 x 1 Cad	62	532 12 48-72	Cover Pedal
11	532 10 57-01	Washer Plate Shf 388 Sq Hole	63	532 18 02-19	Engine Pulley LT/YT
12	819 15 12-16	Washer 15/32 x 3/4 x 16 Ga.	64	532 17 39-37	Bolt Hex 7/16-20 x 4 x Gr. 5 - 1Hr
13		Bolt 1/4-28 Unf Gr. 8 W/Patch	65	810 04 07-00	Washer Lock Hvy Hlcl Spr 7/16
14		Washer Lock Hvy Helical 1/4	66	532 15 47-78	Keeper Belt Engine Foolproof
15		Bolt Hex Flg Hd 5/16-18 Gr. 5	70		Guide Belt Mower Drive RH
16		Nut lock Hx W/Ins 5/16-18 unc	74	532 13 70-57	
18		Bolt, Fin Hex 3/8-16 unc x 1 Gr. 5	75		Washer 25/32 x 1 1/4 x 16 Ga.
19		Nut Lock 3/8-16 Unc	76		E-ring #5133-75
21	532 10 69-33		77		Key Square 2 0 x 1845/ 1865
22		Rod Brake Blk Zinc 26 840	78		Washer 25/32 x 1-5/8 x 16 Ga.
24		Nut Hex Jam 3/8-16 unc	79		Key Woodruff #9 3/16 x 3/4
25		Spring Rod Brake 2 00 Zinc	96		Retainer Spring 1"
26		Washer 13/32 x 13/16 x 16 Ga.	112		Washer 9/32 x 3/4 x 10 Ga.
27		Pin Cotter 1/8 x 3/4 Cad	113		Strap Torque LT
28		Rod Brake Parking LT/YT	116		Bolt Rdhd Sq Neck 3/8-16 x 1
29	532 07 16-73	Cap Brake Parking Black	120		Nut Lock Flg. 3/8-16
30	532 17 49-73	Bracket Mtg Transaxle	150		Spacer Retainer
32		Bolt Hex Hd 5/16-18 unc x 3/4	151		Washer 13/32 x 2 x 10 Ga.
34		Shaft Asm Pedal Foot	170		Keeper Belt T/A
35		Bearing Nylon Blk 629 Id	202		Bolt RDHD 3/8-16 x 1-3/4 Gr. 5
36		Washer 21/32 x 1 x 16 Ga.	212		Nut Hex Flg Lock
37		Pin Roll 3/16 x 1"	263		Screw Hexwsh Thdr 3/8-16 x 3/4
38		Pulley Composite	268		Guard Muffler OHV B&S RH
39		Bolt RDHD 3/8-16 unc x 2-3/4 Gr. 5	275	819 13 16-14	Washer 13/32 x 1 x 14 Ga.
41		Keeper Belt Idler Flat			
47		Pulley Idler V Groove Plastic	NOT	E: All compone	ent dimensions given in U.S. inches
48	532 15 44-07	Bellcrank Clutch Grnd Drv Stl		1 inch = 25.	

TRACTOR - MODEL NO. 14596 (BA14596C), PRODUCT NO. 964 77 26-02 STEERING ASSEMBLY

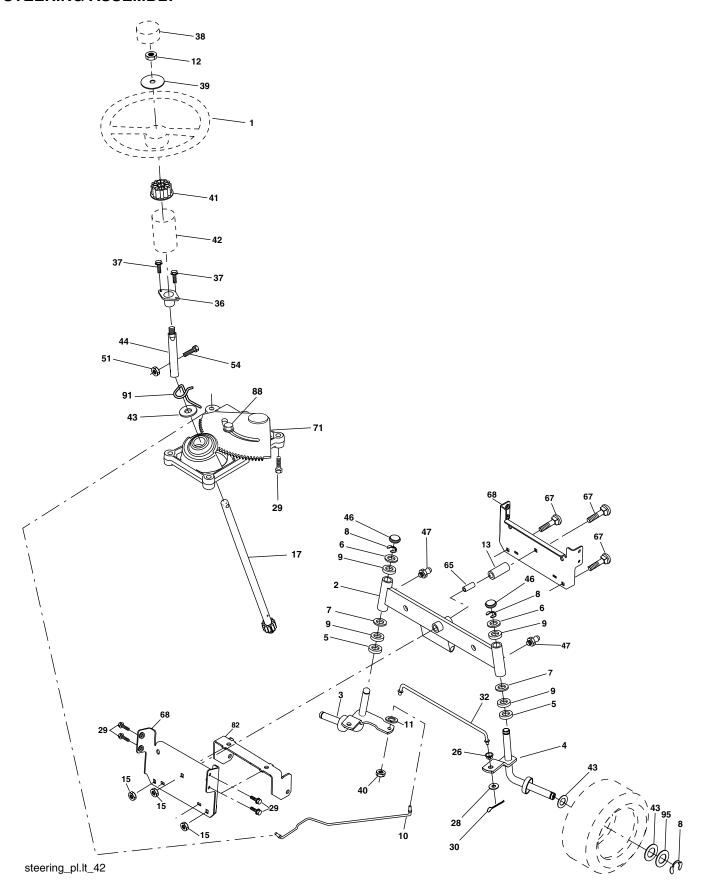


# TRACTOR - MODEL NO. 14596 (BA14596C), PRODUCT NO. 964 77 26-02 STEERING ASSEMBLY

KEY NO.	PART NO.	DESCRIPTION
1		Wheel Steering
2 3	532 17 51-31	Axie Asm Spindle Asm LH
4	532 16 98-39	Spindle Asm RH
5	532 12 49-31	Bearing Race Thrust Harden
6		Washer 25/32 x 1-5/8 x 16 Ga.
7 8		Washer 27/32 x 1-1/4 x 16 Ga.
9	532 12 49-37	Ring Klip #t5304-75 Bearing Col Strg Blk
10	532 17 51-21	
11	810 04 06-00	Washer Lock Hvy Hlcl Spr 3/8
12	873 94 08-00	Nut Hex Jam Toplock 1/2-20 unf
13 15	532 13 65-18 532 14 52-12	Spacer Brg Axle Front Nut Hex Flange Lock
17	532 18 06-41	Shaft Asm Strg
26	532 12 68-47	Bushing Link Drag Blk LR
28	819 13 14-16	Washer 13/32 x 7/8 x 16 Ga. Screw 3/8-16 x 3/4
29 30	81 / 00 06-12 876 02 04-12	Screw 3/8-16 x 3/4 Pin Cotter 1/8 x 3/4 Cad
32		Rod Tie Wire Form 19 75 Mech
36	532 15 50-99	Bushing Strg
37	532 15 29-27	
38	532 17 59-05	Insert Cap Strg Wh Washer 9/16 x 2-3/8 x 12
39 40		Nut Crownlock 3/8-24
41		Adaptor Wheel Strg
42	532 16 96-33	Boot Steering Shaft
43		Washer 25/32 x 1-1/4 x 16 Ga.
44 46	532 18 06-40	Extension Steering Shaft LR/LT Cap Spindle Fr Top Blk
47	532 18 32-26	Fitting Grease
51	873 54 04-00	Nut Crownlock 1/4-28
54		Bolt Hex 1/4-28 unf
65 67		Spacer Brace Axle Bolt, Rdhd Sqnk 3/8-16 x 2-1/4
68	532 16 98-27	
71		Steering Asm.
82	532 16 98-35	Bracket Susp Chassis Front
88		Bolt Shoulder 7/16-20
91 95	532 17 55-53 532 18 89-67	Clip Steering Washer Harden .793 x 1.637 x 060
00	332 13 00 07	1140.101 11414011.700 X 1.007 X 000


**NOTE:** All component dimensions given in U.S. inches. 1 inch = 25.4 mm.

# TRACTOR - MODEL NO. 14596 (BA14596C), PRODUCT NO. 964 77 26-02 SEAT ASSEMBLY

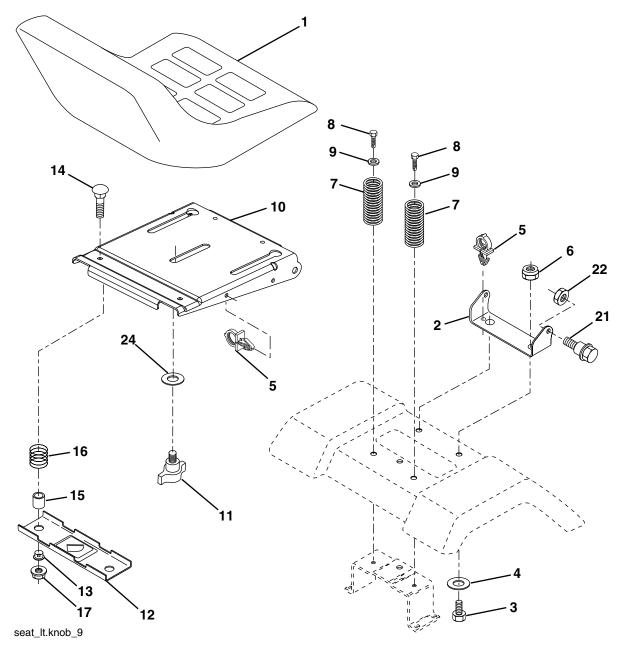


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1 2 3		Seat Bracket Pivot Seat 8 720 Bolt Fin Hex 3/8-16 unc x 1	13 14 15	872 05 04-12	Bushing Snap Blk Nyl 50 Id Bolt Rdhd Sqnk 1/4-20 x 1-1/2 Spacer Split 28 x 96 Yel Zinc
3 4 5	819 13 16-10	Washer 13/32 x 1 x 10 Ga Clip Push-In	16 17	532 12 12-50	Spring Cprsn 1 27 Blk Pnt Nut Lock 1/4 Lge Flg Gr. 5 Zinc
6 7	873 80 06-00 532 12 41-81	Nut Hex w/Ins. 3/8-16 unc Spring Seat Cprsn 2 250 Blk Zi	21 22	532 17 18-52 873 80 05-00	Bolt Shoulder 5/16-18 unc Nut Hex Lock W/Ins 5/16-18
8 9 10		Screw 3/8-16 x 1-1/2 Washer 13/32 x 1 x 14 Ga.	24	819 17 19-12	Washer 17/32 x 1-3/16 x 12 Ga.
11 12	532 16 63-69		NOTE	: All components 1 inch = 25.	ent dimensions given in U.S. inches. 4 mm

TRACTOR - MODEL NO. 14596 (BA14596C), PRODUCT NO. 964 77 26-02 DECALS

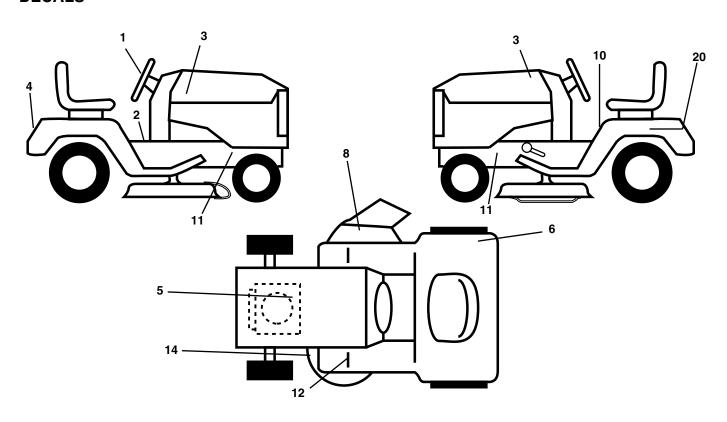

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532 18 96-97	Decal Steering Wheel	12	532 15 97-37	Decal Brake/ Clutch Symbol Lt
2	532 14 08-37	Decal Saddle Brake Parking	14	532 13 68-32	Decal V-Belt Schematic
3	532 18 96-91		20	532 14 50-05	Decal Bat Dan/Psn
4	532 18 95-74	Decal Fender		532 16 25-98	Decal Drawbar
5	532 18 47-67	Decal HP Engine		532 13 83-11	Decal Handle Lift Height Adjust
6	532 18 04-32	Decal Europe Stand CE		532 18 51-49	Manual Operator's (Euro.)
8	532 18 21-66	Decal Mower Cutfinger		532 18 52-38	Manual Operator's (Scand)
10	532 14 54-98	Decal Read Owner's Manual Syms.		532 18 51-50	Manual Operator's (E-Bloc)
11	532 15 97-36	Decal Chassis Hot Muffler		532 19 17-24	Manual Parts


#### **WHEELS & TIRES**

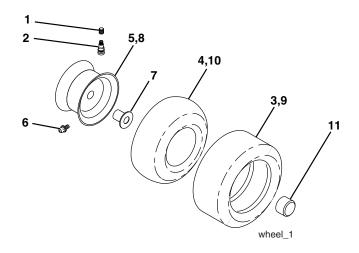

KEY NO.	PART NO.	DESCRIPTION
1	532 05 91-92	Cap Valve Tire
2	532 06 51-39	Stem Valve
3	532 10 62-22	Tire F Ts 15 x 6 0 - 6 Service
4	532 05 99-04	Tube Front (Service Item Only)
5	532 18 33-37	Rim Asm 6" front White Service
6	532 12 49-57	Fitting Grease (Front Wheel Only)
7	532 12 49-59	Bearing Flange (Front Wheel Only)
8	532 18 33-38	Rim Asm 8" rear White Service
9	532 10 62-68	Tire R Ts 18 x 9.5-8 C. Service
10	532 12 49-26	Tube Rear (Service Item Only)
11	532 17 50-39	Cap Axle Blk 1 50 x 1 00
	532 14 43-34	Sealant, Tire ( 10 oz. Tube)


**NOTE:** All component dimensions given in U.S. inches 1 inch = 25.4 mm

# TRACTOR - MODEL NO. 14596 (BA14596C), PRODUCT NO. 964 77 26-02 ENGINE

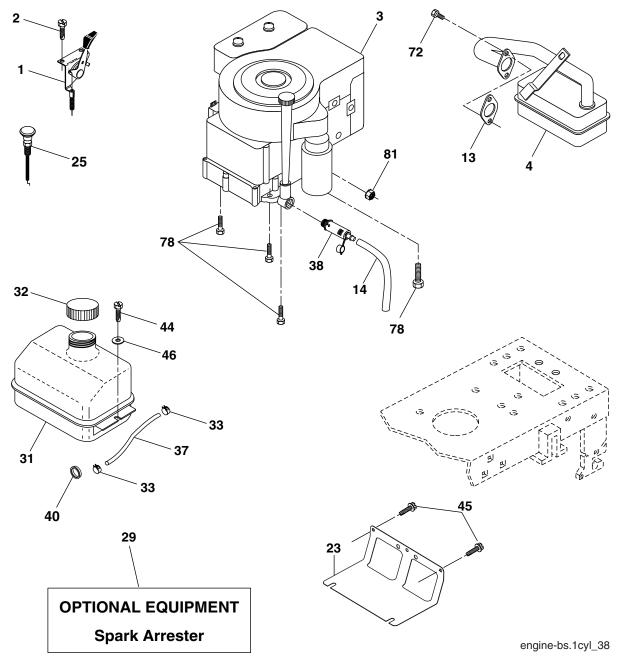


KEY	PART		KEY	PART	
NO.	NO.	DESCRIPTION	NO.	NO.	DESCRIPTION
1	532 17 05-51	Control Th/ch Flag	33	532 12 34-87	Clamp Hose Black
2	817 72 04-08	Screw Hex Thd Cut 1/4-20 x 1/2	37	532 13 70-40	Line Fuel 20"
3		Engine B&S Model No. 282H07	38	532 18 16-54	Plug Drain Oil Easy
		(Order Parts From Engine Manufac-	40	532 12 40-28	Bushing Snap Nyl Blk Fuel Line
		turer)	44	817 67 04-12	Screw Hexwsh Thdrol 1/4-20 x 3/4
4	532 13 73-52	Muffler	45	817 00 06-12	Screw Hex Wsh Thdrol 3/8-16 x 3/4
13	532 16 52-91	Gasket Eng 1 313 ld Tin Plated	46	819 09 14-16	Washer 9/32 x 7/8 x 16 Ga.
14	532 14 84-56	Tube Drain Oil Easy	72	532 18 39-06	Screw Socket Head 5/16-18 x 1
23	532 16 98-37	Shield Brn/Dbr Guard	78	817 06 06-20	Screw 3/8-16 x 1-1/4
25	532 19 06-95	Control Choke	81	873 51 04-00	Nut 1/4-20
29	532 13 71-80	Kit Spark Arrestor (Flat Scrn)			
31		Tank Fuel Front	NOTE	: All compone	ent dimensions given in U.S. inches
32	532 14 05-27	Cap Asm Fuel W/sym Vented		1 inch = 25.4	

TRACTOR - MODEL NO. 14596 (BA14596C), PRODUCT NO. 964 77 26-02 MOWER LIFT

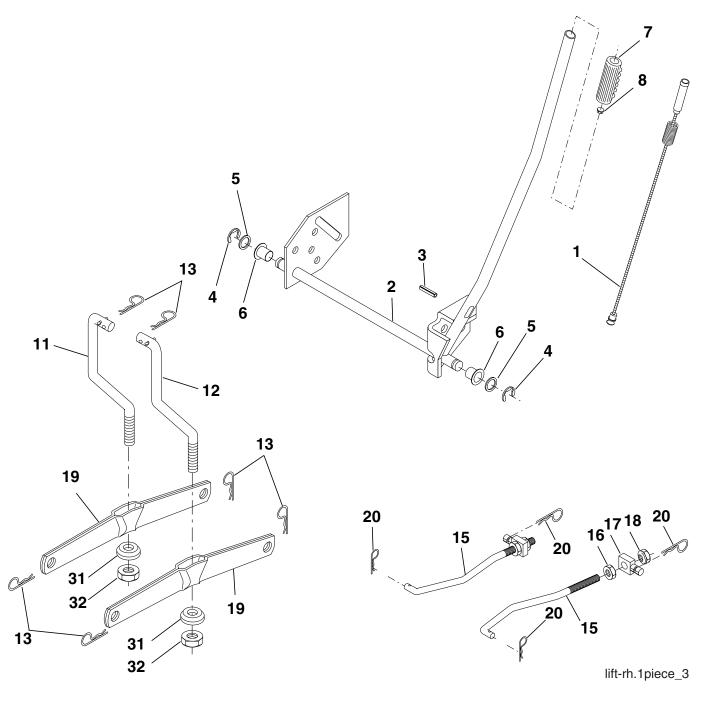

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1 2 3 4	532 15 94-61 532 15 94-76 <b>532 18 88-22</b>	Wire Asm Inner/Spring W/plunger Shaft Asm Lift	15 16 17 18	532 17 32-88 873 35 08-00 532 17 56-89	Link Front Nut Jam Hex 1/2-13 unc
5 6 7 8 11 12	819 21 16-21 532 12 01-83 532 10 94-13 532 12 45-26 532 13 98-65 532 13 98-66	Washer PLTD 21/32 x 1 x 21 Ga. Bearing Nylon Blk 629 Id Grip Handle Button Plunger Black Link Lift LH	19 20 31 32	532 13 98-68 532 16 35-52 532 16 98-65 873 54 06-00	Arm Suspension Rear Spring, Retainer Bearing Pvt. Lift Nut Crownlock 3/8-24 ent dimensions given in U.S. inches

TRACTOR - MODEL NO. 14596 (BA14596C), PRODUCT NO. 964 77 26-02 MOWER DECK

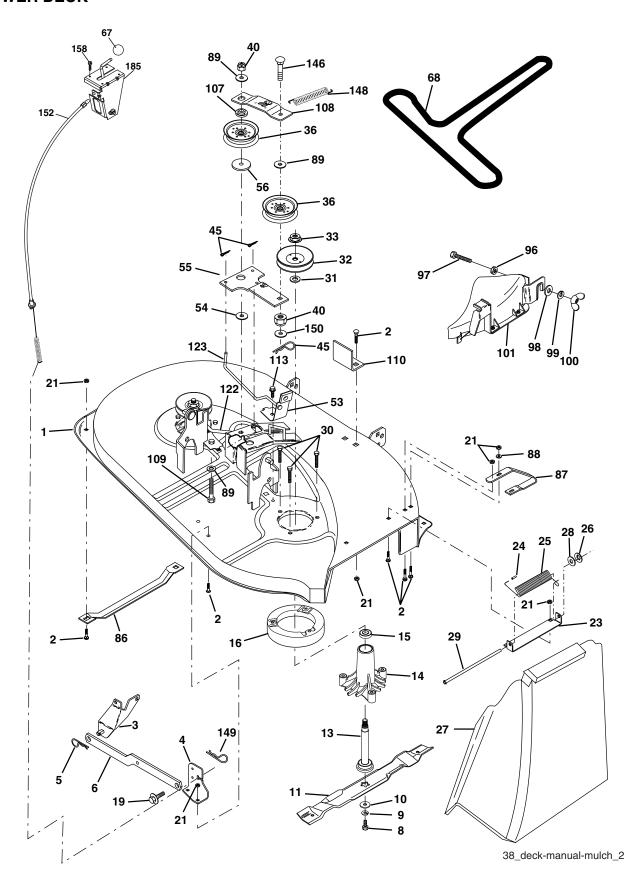

# TRACTOR - MODEL NO. 14596 (BA14596C), PRODUCT NO. 964 77 26-02 MOWER DECK

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
			_	_	
1		Mower Deck Assembly	67 68	532 10 69-32 532 18 02-14	Knob RD 3/8-16 Plstc Thd
2	872 14 05-06		86	532 10 02-14	
3		Bracket Assembly, Sway Bar	87	532 12 30-74	
4		Bracket Sway Bar Deck	88		Washer 11/32 x 3/4 x 16 Ga.
5		Retainer Spring	89		Washer 13/32 x 13/16 x 11 Ga.
6	532 17 80-24		96		Nut Centerlock 3/8-16
8		Bolt, Hex 3/8-24 x 1.25 Gr. 8	90 97		Bolt 3/8-16 x 1-1/4
9		Washer, Lock Hvy Hlcl 3/8	98		Washer Lock 3/8
10	532 14 02-90	Washer, Hardened	99		Washer 13/32 x 1-1/4 x 16 Ga.
11		Blade, Mower 38	100	532 13 56-51	
13		Shaft Assembly, Mandrel, Vented	101		Cover Mulch 38"
14		Housing, Mandrel, Vented	107		Spacer, Retainer
15		Bearing, Ball, Mandrel	107	532 13 35-02	Stiffener, Idler Arm
16		Stripper, Vented Mower Deck	109		Bolt, Hex Head 3/8-16 x 2-1/2
19 21		Bolt, Shoulder	110		Upstop Deck Front 38
		Nut Crownlock 5/16-18	113		Screw 5/16-18 x 3/8
23 24		Bracket, Mower Deflector	122		Rod, Brake, LH
	532 10 53-04		123		Rod, Brake, RH
25		Spring, Torsion, Deflector	146		Bolt Carriage Idler
26 27	532 11 04-52		148		Spring Return Idler
28		Shield, Deflector	149		Retainer Spring Yellow Zinc
20 29		Washer 11/32 x 5/8 x 16 Ga.	150		Washer 9/32 x 3/4 x 16 Ga.
30	532 10 67-35	Screw Thdrol	152		Cable Clutch 38 In
31		Washer, Spacer	158		Screw Hex Thd Cut 1/4-20 x 1/2
32			185		Head Asm Cable Clutch
		Pulley, Mandrel			Mandrel Assembly (Includes Hous-
33 36		Nut, Toplock, Flanged		302 10 07-34	ing, Shaft, and Shaft Hardware Only
40		Pulley, Idler, Flat Nut Crownlock 3/8-16			- Pulley Not Included)
45				532 18 12-09	Mower Deck, Complete (Order
53		Retainer, Spring		302 10 12 03	separately mulcher cover 96-101)
53 54		Brake Assembly Washer, Hardened			osparatory maiorier cover 50-101)
54 55					
56		Idler Arm Assembly	NOTE		ent dimensions given in U.S. inches
50	JUZ 10 31-23	Spacer, Retainer		1 inch = 25.	4 mm

# **SERVICE NOTES**



# SERVICE POLICY WARRANTY



Issued January 1980 Revised January 1991

# LIMITED WARRANTIES FOR NEW PEERLESS GEAR POWER TRAIN COMPONENTS

#### A. Products Warranted

Peerless Gear and Machine Division of Tecumseh Products Company ("Tecumseh"), subject to the limitations contained below, will, at its option, repair or replace, without charge for parts or labor only, any part of a new Power Train Component (which as used herein means and includes the transaxle, gear box, transmission, differential and right angle drives, and any part of the Power Train Component), EXCEPT any new Power Train Component incorporated in equipment used for commercial or rental purposes, which is found upon examination by any Tecumseh Authorized Service Outlet or by Tecumseh's factory in Grafton, Wisconsin, to be DEFECTIVE IN MATERIAL AND/OR WORKMANSHIP if received by Tecumseh or a Tecumseh Authorized Service Outlet for such examination within TWO YEARS from the date of sale to the original consumer purchaser of Peerless Series 820, 900, 910, 915, 920, 930 transaxles and Series 1100 angle drive and ONE YEAR for all other Peerless products. New Power Train Components incorporated in equipment used for commercial purposes are warranted in the same manner and to the same extent EXCEPT such Power Train Components are warranted for NINETY (90) DAYS ONLY, and must be received by Tecumseh or by a Tecumseh Authorized Service Outlet for such examination within 90 days from the date of sale to the original purchaser. New Power Train Components Incorporated in equipment used for rental purposes are warranted in the same manner and to the same extent EXCEPT such Power Train Components are warranted for THIRTY (30) DAYS ONLY, and must be received by Tecumseh or a Tecumseh Authorized Service Outlet within 30 days from the date of sale to the original purchaser.

#### **B. Products And Items Not Warranted**

- 1. Alterations or Modifications of Power Train Components.
- 2. Accidents, Normal Maintenance, Failure to follow the Original Equipment Manufacturer's Manual.

This warranty covers only parts of new Power Train Components which are found upon examination to be defective in material or workmanship as delivered to the original purchaser. This warranty does not cover defects caused by depreciation or damage caused by normal wear, accidents, improper maintenance, improper use or abuse of the product, failure to follow the instructions contained in an Instruction Manual for the operation of the Power Train Component and parts. The cost of normal maintenance and replacement of service items which are not defective shall be paid for by the original purchaser.

#### C. Securing Warranty Service

Warranty service can be arranged for by contacting either a Tecumseh Authorized Service Outlet (any Tecumseh Registered Service Dealer, Tecumseh Authorized Service Distributor, or Tecumseh Central Warehouse Distributor) or by contacting Tecumseh, c/o Service Manager, Engine and Transmission Group Service Division, 900 North Street, Grafton, Wisconsin 53024. Warranty service can only be performed by a Tecumseh Authorized Service Outlet or by Tecumseh at its factory in Grafton, Wisconsin. At the time of requesting warranty service, evidence must be presented of the date of sale to the original purchaser. The purchaser shall pay any charges for making service calls and/or for transporting the product to and from the place where the inspection and/or warranty work is performed. The purchaser shall be responsible for any damage or loss incurred in connection with the transportation of Power Train Components and/or part(s) of the Power Train Components submitted for inspection and/or warranty work.

#### D. Limitation of Damages and Implied Warranties

The foregoing EXPRESSED WARRANTY IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES. Neither Tecumseh nor any of its affiliates makes any warranties, representations or promises, written or oral, as to the quality of the Power Train Component or any of its parts, other than as set forth herein.

ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, TO THE EXTENT THAT EITHER MAY APPLY TO ANY PART(S) OF POWER TRAIN COMPONENTS, SHALL BE LIMITED IN DURATION TO THE PERIODS OF THE EXPRESSED WARRANTIES DEFINED IN PARAGRAPH A HEREOF. IN NO EVENT WILL TECUMSEH BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES AND/OR EXPENSES. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitation(s) or exclusion(s) may not apply to you. This warranty gives you specific legal rights and you may also have other legal rights which vary from state to state.

#### E. No Dealer Warranty

Tecumseh neither assumes nor authorizes any other person, natural or corporate, to assume for Tecumseh any other obligations or liabilities in connection with or with respect to any part(s) of a Power Train Component. The seller or dealer of part(s) of a Power Train Component has no authority, whatsoever, to make any representations or promises on behalf of Tecumseh or to modify the terms or limitations of Tecumseh's warranty in any way.

#### LIMITED WARRANTY

The Manufacturer warrants to the original consumer purchaser that this product as manufactured is free from defects in materials and workmanship. For a period of one (1) year from date of purchase by the original consumer purchaser, we will repair or replace, at our option, without charge for parts or labor incurred in replacing parts, any part which we find to be defective due to materials or workmanship. This Warranty is subject to the following limitations and exclusions.

- 1. This warranty does not apply to the engine. Please contact your nearest dealer where they will send the machine to the engine manufacturer.
- Transportation charges for the movement of any power equipment unit or attachment are the responsibility of the purchaser. Transportation charges for any parts submitted for replacement under this warranty must be paid by the purchaser unless such return is requested by your dealer.
- 3. Battery Warranty: On products equipped with a Battery, we will replace, without charge to you, any battery which we find to be defective in manufacture, during the first ninety (90) days of ownership. After ninety (90) days, we will exchange the Battery, charging you 1/12 of the price of a new Battery for each full month from the date of the original sale. Battery must be maintained in accordance with the instructions furnished.
- 4. The Warranty period for any products used for rental or commercial purposes is limited to 90 days from the date of original purchase.
- 5. This Warranty applies only to products which have been properly assembled, adjusted, operated, and maintained in accordance with the instructions furnished. This Warranty does not apply to any product which has been subjected to alteration, misuse, abuse, improper assembly or installation, delivery damage, or to normal wear of the product.
- 6. Exclusions: Excluded from this Warranty are belts, blades, blade adapters, normal wear, normal adjustments, standard hardware and normal maintenance.
- 7. In case of any problem within the boundaries of this warranty, contact the nearest department store, indicate the model number, serial number and the date of purchase of your machine. This warranty does not apply to accidental damages. All implicit warranties are limited to the same time frames. Or contact:

E.M. Services 54 Rue Lambrechts 92400 Courbevoie France Telephone: (1) 46678078 Fax: (1) 46678095

THIS WARRANTY DOES NOT APPLY TO INCIDENTAL OR CONSEQUENTIAL DAMAGES. ANY IMPLIED WARRANTIES ARE LIMITED TO THE SAME TIME PERIODS STATED HEREIN.

