

Safety Information English

For UK Only
CONNECT THE MAIN LEAD INTO A MAINS POWER SOCKET
POWER SUPPLY 230V. It must not be connected to D.C. mains.

Note: The mains lead of the set is fitted with a moulded plug. If the mains socket are not compatible or if for any reason the plug is removed please follow the directions below. The moulded plug cannot be re-wired and if removed must be disposed of safely.
DO NOT under any circumstances plug the severed plug into any mains socket as this could result in electric shock.

Important: If the plug is removed, rewire the new plug as follows:
The wires in the mains plug are coloured in accordance to the following code:
BLUE = NEUTRAL/BROWN = LIVE

If the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:
BROWN wire to the terminal coded N (Neutral) or coloured black.
BROWN wire to the terminal coded L (Live) or coloured red.
DO NOT make any connection to the terminal in the plug which is marked by the letter E or by the earth symbol or coloured green or green and yellow.

A fused plug must be fitted with a 3A fuse approved by ASTA or BS1362 and fuse covers must be always be securely replaced. If you set does not work, the fuse may be blown.

CAUTION! Invisible laser radiation when open. Avoid exposure to beam. Class 1 laser product. This system must be opened only by qualified technicians to prevent accidents caused by the laser beam.
LASER λ = 780 nm, P max = 5 mW
Rating Information: At bottom/rear of the unit. This unit comply with the existing requirements.

Please respect the environment. Before throwing any batteries away, consult your distributor who may be able to take them back for specific recycling.

Have a Blast - Just Not in Your Eardrums! Make sure you turn down the volume on the unit before you put on headphones. Increase the volume to the desired level only after headphones are in place.

In accordance with the rating plate of the unit, this unit complies with current standards concerning electrical safety and electromagnetic compatibility.

Safety Information


This symbol means that your inoperative electronic appliance must be collected separately and not mixed with the household waste. The European Union has implemented a specific collection and recycling system for which manufacturers are responsible.

This appliance has been designed and manufactured with high quality materials and components that can be recycled and reused. Electrical and electronic appliances are liable to contain parts that are necessary in order for the system to work properly but which can become a health and environmental hazard if they are not handled or disposed of in the proper way. Consequently, please do not throw out your inoperative appliance with the household waste.

If you are the owner of the appliance, you must deposit it at the appropriate local collection point or leave it with the vendor when buying a new appliance.
If you are a professional user, please follow your supplier's instructions.
If the appliance is rented to you or left in your care, please contact your service provider.

Help us protect the environment in which we live!

Main plug is used as the disconnect device, it shall remain readily operable and shall not be obstructed during intended use. To be completely disconnected the apparatus from supply mains, the main plug of the apparatus shall be disconnected from the mains socket outlet completely.

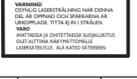


Before You Begin

Unpacking Your System
You should have:
• One main unit (with 2 speakers);
• One remote control;
• One user's guide;
• One Thomson Warranty Card

Connecting the Speakers
The speaker connection jacks are located on the back of the unit.
When connecting the speakers, match the red wires to the red jacks and the black wires to the black jacks.



Installation
To ensure sufficient ventilation, keep the spacing shown as below:

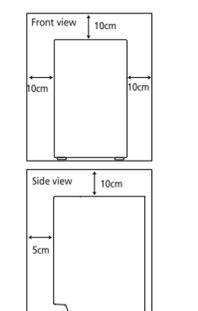

Using the Antenna
Before you use your audio system, you'll want to make sure the FM antenna is positioned properly. The FM antenna is the coiled wire connected to the back of the unit. Uncoil it, making sure it is fully extended (you may even want to tape it to the wall behind the unit, if possible. The higher the better.) You'll also need to connect the AM antenna loop to the back of the unit if you listen to AM stations. Rotate the AM loop antenna for better reception.

AC & DC Power Input
Make sure you have connected all cables before plug in. For AC power, connect the power plug to an AC power outlet (230V-50Hz).
You can also power the unit with a 12V DC adapter (not included). Connect the adapter to the input jack at the back of the unit.
Note: DC power input will be disconnected whenever AC power is connected. Do not connect both DC and AC power at the same time.

General Controls

Refer to the actual unit or remote control while you are reading below descriptions.

Front View
ONECO - Turns on/off the unit.
Vol - Adjusts volume.
▶ - Stops playback.
◀ - Starts and pauses playback.
◀▶ - Skips backward or forward track/file; searches down or up radio frequency.
▶ - Starts and pauses playback.
▶ - Stops playback.
BAND - Selects radio band.
Volume Control Knob - Adjusts volume.
AUX IN - Remove the cover and insert external audio cables to L (left channel cable) and R (right channel cable).
⊖ - Remove **AUX INPUT** cover for insertion of headphones.

Top View
OPEN - Press to open the CD compartment door. Push the door downward to close it.
ALARM - Press once to check alarm time, press and hold to switch on or off alarm function.
DISPLAY - Press once to select analogue or digital clock display. Press and hold to activate or deactivate dimmer function.
ADJUST - Adjusts clock and timer. Press and hold to change display background colours.

Remote Control

ONECO - Turns on/off the unit.
Vol - Adjusts volume.
▶ - Stops playback.
▶ - Starts and pauses playback.
▶ - Skips backward or forward track/file; searches down or up radio frequency.
▶ - Starts and pauses playback.
▶ - Stops playback.
BAND - Selects radio band.
⊖ - Turns on or off random playback.
Source - Selects CD, tuner and AUX mode.
Repeat - Selects repeat playback modes.
Intro - Turns on or off track sampling.
Alarm On/Off - Turns on or off alarm function.
Adj Time - Enters clock time adjusting mode.
Adj Alarm - Enters alarm time adjusting mode.

Installing Batteries
The remote control must be inserted with 2 "AAA" or "LR03" batteries prior use.

Quick Start

Refer to the following for basic playback and radio listening. For detailed operations and more advanced features, please refer to relevant sections.

Listening to CD/mp3/WMA Discs

- Press **ONECO** to switch on the unit.
- Press **SOURCE** to select **TUNER** mode.
- Press **BAND** (or **Band-APP** on the remote control) to select radio band.
- Press **▶** or **▶▶** to tune down or up radio frequency. Press and hold for automatic channel search. "ATUO" shows on the display when searching is in progress.
- Wait while the unit reads and counts the total number of songs on the disc.
- If the CD compartment is not loaded with a CD or the CD is unreadable, "disc" flashes on the display.
- Press **▶** to start playback. Press again to pause playback and again to resume.
- If the song is a mp3 or WMA file, the mp3 or WMA icon lights on the display.
- During playback, elapsed playback time and current track number show on the display alternately.
- Press **▶▶** or **▶▶▶** to select previous or next track / file. Press and hold to search through the disc while it is playing.
- Press **▶** to stop playback.

Listening to Radio

- Press **ONECO** to switch on the unit.
- Press **SOURCE** to select **TUNER** mode.
- Press **BAND** (or **Band-APP** on the remote control) to select radio band.
- Press **▶** or **▶▶** to tune down or up radio frequency. Press and hold for automatic channel search. "ATUO" shows on the display when searching is in progress.

CD Playback

This unit is compatible with audio CD-R/RW discs.

Notes on CD-R/RW
Do not affix any type of labels to either side of a CD-R/RW disc as this may result in the unit malfunctioning.
Playability capability for CD-RW discs may vary due to variations in the quality of the CD-RW disc and the recorder used to create the disc.
Note: Be sure to remove all discs from the disc compartment before moving or transporting the unit!

Notes on mp3/WMA Discs:
Use caution when converting audio files into mp3 for saving onto CD-R(W) or CD-ROM, e.g. ABCD.mp3. Do not use any other extension e.g. .doc, .pdf.
Do not use the mp3 extension for other text or non-audio data files as this may result in serious malfunction or harmful noise interference.
For better quality in mp3 disc playback, the CD quality should be recorded 128Kbps or above.
Disc data size > 650MB is not recommended.
Total files should not exceed 412 and the total folders should not exceed 100. It also depends on the length of the file/folder names.
For mixed mode discs, only one mode will be selected for playback depending on the recording format.
To ensure good performance, wait until the disc changer completely reads the disc before proceeding.
mp3 files in CD ROM EXTRA format disc cannot be recognized.

Basic Playback

Refer to "Quick Start" for basic playback.

Random Playback

Press **⊖** on the remote control to turn on or off random playback. "Random" shows on the display when activated.

Repeat Playback

Press **Repeat** repeatedly on the remote control to select the corresponding icon shows on display when activated:

Repeat 1: repeat current songs;
Repeat All: repeat all songs;
No icon: normal playback.

Radio

Basic Listening

Refer to "Quick Start" for selecting radio mode, band and searching channels.

Auto Channels Presetting

Press and hold **BAND** (or **Band-APP** on the remote control) to scan stations. A maximum of 30 stations can be stored. Beware of your preset channels being erased accidentally because the scanning and storing process is automatic upon pressing the button. "Prog" icon flashes during programming. Press **Band-APP** to stop scanning.

Manual Channels Presetting

A maximum of 30 stations can be stored.
1. Press **BAND** (or **Band-APP** on the remote control) to select band.
2. Press **▶▶** or **▶▶▶** to select station to be stored.
3. Press **Prog-Set** on the remote control to enter program mode.

Listening to the Preset Channels

Press **Folder/Preset** (up or down) on the remote control repeatedly to select your desired memory location.

Suppressing Stereo Signal

Press **Stereo** on the remote control to switch between FM mono and stereo for FM broadcast. If FM stereo reception is weak, select mono sound may reduce noise.

Auxiliary Input

Connecting External Device

Remove the **AUX IN** cover on unit front and insert audio cables (not included) to the L (left channel) and R (right channel) input jacks

Selecting and Playing External Device

Press **SOURCE** to select AUX mode. Control playback on your external device. Adjust volume by rotating the volume control knob on unit front.

Troubleshooting Tips

Problem	Solution	Problem	Solution
System will not turn on	• Check power cord for a secure connection. • Unplug the unit for a moment, and then plug into power source again. • Check the outlet by plugging in another device.	CD sound skips	• Clean the disc. • Check disc for warping, scratches, or other damage. • Check if something is causing the system to vibrate. If so, move the system. • Make sure the speakers are at least 3 feet away or on a different surface from the main unit.
No sound	• Increase the volume setting. • Check connection to speakers. • Check that you have selected the appropriate function: CD, Tuner. • Make sure headphones are not plugged in.	CD button will not respond	• Switch to another function (Tuner) and then back to CD.
Poor radio reception	• Check antenna connection. • Move antenna. • Turn off nearby electrical appliances, such as hair dryer, vacuum cleaner, microwave, fluorescent lights.	Remote control does not work	• Check that the batteries are properly installed. • Replace weak batteries. • Check the system is plugged into power source. • Point the remote directly at the system's front panel. • Move closer to the system. • Remove any obstacles between the remote and the system.
CD does not play	• Check that CD is in the tray. • Check that CD label is facing up. • Check that PAUSE mode is not on. • Check that CD function is selected. • Use CD lens cleaner. • Clean the disc. • Try another disc.		

More Information

THOMSON
46, quai Alphonse Le Gallo
92648 Boulogne
Cedex FRANCE
5629 1530 (EN/FF)

www.thomson.net

Display



1. Playback modes
2. Clock functions
3. Record functions
4. EQ and bass effects
5. AM or FM time
6. Sound sources
7. File formats
8. Radio frequency units
9. Digital clock time, track or file number, elapsed playback time
10. Radio bands
11. Playback in progress
12. FM stereo

Display

Setting Clock
1. Press **DISPLAY** and **ADJUST** together (or **Adj Time** on the remote control) to enter clock setting mode. Clock time shows with hour digits flashing on the display.
2. Press **▶▶** or **▶▶▶** to set the hour.
3. Press **ADJUST** (or **Adj Time** on the remote control) to shift to the minute digits.
4. Press **▶▶** or **▶▶▶** to set the minute.
5. Press **ADJUST** (or **Adj Time** on the remote control) to confirm the setting.

Setting Timer

1. Press **ALARM** and **ADJUST** together (or **Adj Alarm** on the remote control) to enter timer setting mode. Timer on time shows with hour digits flashing on the display.
2. Press **▶▶** or **▶▶▶** to set the hour.

Setting Clock

3. Press **ADJUST** (or **Adj Alarm** on the remote control) to confirm setting.
4. Press **▶▶** or **▶▶▶** to set the minute digits.
5. Press **ADJUST** (or **Adj Alarm** on the remote control) to move to source selection.
6. "SC" shows on the display for source selection. Press **▶▶** or **▶▶▶** to select source (CD, Tuner or Buzz). Corresponding source icon shows on the display (Buzz as "SCBU").
7. Press **ADJUST** (or **Adj Alarm** on the remote control) to move to volume setting.
8. Press **▶▶** or **▶▶▶** to set the volume. If source is selected as buzz, volume setting is not possible.
9. Press **ADJUST** (or **Adj Alarm** on the remote control) to confirm setting.
• Timer will be activated automatically after settings are finished.

Setting Timer

1. Press **ALARM** and **ADJUST** together (or **Adj Alarm** on the remote control) to enter timer setting mode. Timer on time shows with hour digits flashing on the display.
2. Press **▶▶** or **▶▶▶** to set the hour.

THOMSON user manual



EN/FF CS66

It is important to read this instruction book prior to using your new product for the first time.

Activating the Timer

Press and hold **ALARM** (or **Alarm On/Off** on the remote control) on the main unit to activate and deactivate the timer function.

Sleep Function

You can select the time interval in minutes before the unit turns off automatically.

Analogue and Digital Clock Display

Two clock display modes are available: analogue and digital. Press **DISPLAY** to toggle between the two display modes. At the center of the analogue clock, "P" stands for PM time, "A" stands for AM time.

Changing Display Brightness

Press and hold **DISPLAY** on the top of the unit to change the brightness level of the display.

Changing Display Colors

Press and hold **ADJUST** on the top of the unit to change the display colors.

Special Features

Preset Equalizer Curves

Press **Preset EQ** on the remote control to toggle among FLAT, JAZZ, ROCK, POP and CLASSICAL. The selection is highlighted on the display.

Changing Display Brightness

Press and hold **DISPLAY** on the top of the unit to change the brightness level of the display.

Changing Display Colors

Press and hold **ADJUST** on the top of the unit to change the display colors.

X-Bass

Press **X-Bass** on the remote control to turn on/off the x-bass feature. The X-Bass icon is displayed.

CD Playback

Sampling Tracks

During playback, press **Intro** on the remote control to turn on or off intro mode which plays the beginning 10 seconds of each track / file. "Intro" shows on the display when activated.

View and Edit Program List

1. Press **Prog-Set** repeatedly to view program list. To edit program location, press **Prog-Set** until the location you want to edit is displayed.
2. Press **▶▶** or **▶▶▶** to select the new track to be stored.
3. Press **Prog-Set** to confirm.


Deleting Programs

Press and hold **▶** to clear program list and "clr" shows on the display. The program list will also be cleared once the CD compartment door is opened.

CD Playback

mp3/WMA Playback Sequence

Refer to the diagram below for playback sequence details on multi-level folder structure.
Songs are played before playing songs placed in folders at each level.

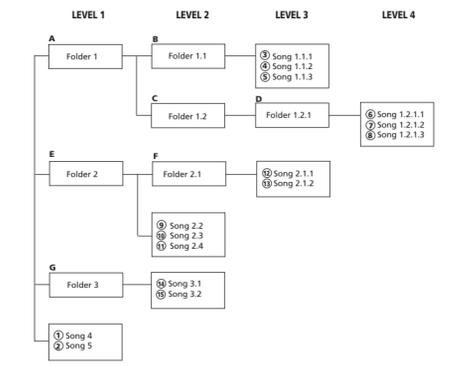

Note: Folder playback sequence is indicated by the letters from A to G. Song playback sequence is indicated by the number 1 to 15 in front of the song name.

More Information

CD Player

CAUTION! This system operates with a laser. It must be opened only by a qualified technician.

Cleaning CDs

Dirty CDs can cause poor sound quality. Always keep CDs clean by wiping them gently with a soft cloth from the inner edge toward the outer perimeter.

CD Lens Care

When your CD lens gets dirty it can also cause the system to output poor sound quality. To clean the lens you will need to purchase a CD lens cleaner which can maintain the output sound quality of your system. For instructions on cleaning the CD lens, refer to the ones accompanying the lens cleaner.

Technical Specification

Power supply: 230V-50Hz
Dimensions (H x W x D mm):
Unit size: 178 x 130 x 210
Speaker: 178 x 120 x 130
Net Weight: 3.6kg
CD player: Response curve (±2dB): 60Hz to 15 kHz
Rating Plate: Look for it at the bottom of the set.

Safety Precautions

- Never open the cabinet under any circumstances. Any repairs or internal adjustments should be made only by a trained technician.
- Never operate this product with the cabinet removed.
- Do not use your System immediately after transporting it from a cold place to a warm place, as condensation may cause the system to malfunction.
- Keep your unit away from humid areas and abnormally hot places.
- Do not touch the player with wet hands. If any liquid enters the player cabinet, take the player to a trained technician for inspection.
- This compact disc player uses a laser to read the music on the disc. The laser mechanism corresponds to the cartridge and stylus of a record player. Although this product incorporates a laser pick-up lens, it is completely safe when operated according to directions.
- Discs rotate at high speed inside the player. Do not use damaged, warped, or cracked discs.
- Do not touch the pick-up lens which is located inside the disc compartment. To keep dust from collecting on the pick-up lens, do not leave the compartment door open for an extended period of time. If the lens becomes dirty, clean it with a soft brush, or use an air blower brush designed for camera lenses.
- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Minimum distances around the apparatus for sufficient ventilation.
- The ventilation should not be impeded by covering the ventilation opening with items, such as newspaper-table-cloths, curtains, etc.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Attention should be drawn to the environmental aspects of battery disposal.
- The use of apparatus in moderate climates.

More Information

Headset Safety

Do not play your headset at high volume. Hearing experts warn against extended high-volume play.
If you experience ringing in your ears, reduce volume or discontinue use.
You should use with extreme caution or temporarily discontinue use in potentially hazardous situations. Even if your headset is an open-air designed to let you hear outside sounds, do not turn up the volume so high that you are unable to hear what is around you.

ESD Remark:

In case of malfunction due to electrostatic discharge just reset the product (disconnect and reconnect of the power source may be required) to resume normal operation.

Important Battery Information

- Remove the batteries to avoid leakage if you do not use your remote control for more than one month.
- Discard leaky batteries immediately as leaking batteries may cause skin burns or other personal injuries. Dispose of batteries in the proper manner, according to provincial and local regulations.
- Any battery may leak electrolyte under the following circumstances:
 - if mixed with a different battery type,
 - if inserted incorrectly,
 - if all batteries are not replaced at the same time,
 - if disposed of in fire, or
 - if an attempt is made to charge a battery not intended to be recharged.

Don't Infringe

This product should only be used for the purposes for which it is sold, that is, entertainment, violating no copyright law. Any attempts to use this product for unintended purposes are unlawful and therefore not condoned by Thomson.

The descriptions and characteristics in this owner's manual are for the purpose of general reference only and not as a guarantee. In order to provide you with the highest quality product, we may make changes or modifications without prior notice. The English version serves as the final reference on all product and operational details should any discrepancies arise in other languages.