

jWIN -- JT-P560

OWNER'S MANUAL and OPERATING INSTRUCTIONS



DESCRIPTION

1. Caller ID Speaker Phone
2. English/French/Spanish selectable
3. 90 Incoming Call Memories including Name and Number
4. Built In Phone Book with 45 Memories
5. Enable to Review Last 16 Dial Out Record
6. LCD Contrast Adjustable (5 Levels)
7. 8 Ringer Melody Selectable
8. Display Real Time, Date, and Year
9. Baby Call Function for Emergency One Touch Dialing
10. Music Hold
11. Data Port
12. Digital Clock

INSTALLATION

1. Insert 3 “AAA” batteries.
2. Connect the phone with the telephone line.
3. Press [SET] to enter setup mode, then:
 - Use [UP], [DOWN] to select options.
 - Use [SET] to enter.
 - Use [DEL] to exit.

SELECT LANGUAGE

1. Press [SET] to enter.
2. Use [UP], [DOWN] to select language options.
3. Use [SET] to confirm.

SET AREA CODE

1. Press [SET] to enter.
2. Use [UP], [DOWN] to select a number.
3. Use [SET] to confirm.
4. Repeat steps 2 and 3 to select each number.

LONG DISTANCE ACCESS

1. Press [SET] to enter.
2. Use [UP], [DOWN] to select the number.
3. Use [SET] to confirm.
4. Repeat steps 2 and 3 to select each number.

DATE/TIME

1. Press [SET] to enter.
2. Use [UP], [DOWN] to select the year.
3. Use [SET] to confirm.
4. Repeat to select the time.

LCD CONTRAST ADJUST

1. Press [SET] to enter.
2. Use [UP], [DOWN] to select the desired contrast level.
3. Use [SET] to confirm.

BABY CALL

1. Press [SET] to enter.
2. Use [UP], [DOWN] to turn the baby function on/off.
3. When you turn the function on, enter the emergency call number on the dial keypad.

NOTE: Once this is set up, press any key on the keypad (except [SET]) and the preset number will dial out under speakerphone mode.

SET RINGING MELODY

1. Press [SET] to enter.
2. Use [UP], [DOWN] to select the desired ringing melody.
3. Press [SET] to confirm.

PHONE BOOK ENTRY

1. Press [SET] to enter.
2. Enter Number by using the dialing keypad.
3. Press [SET] to confirm.
4. Enter the name by pressing the key which corresponds to the desired letter several times until the wanted letter appears.
5. Wait 2 seconds before entering the next letter.
6. Press [SET] to complete.

PHONE BOOK EDIT

1. Press [SET] to enter.
2. Enter the first letter of the record's name by pressing the key which corresponds to the desired letter several times until the wanted letter shows on the LCD.
3. Use [UP], [DOWN] to search for the wanted record.
4. Use [DEL] to erase an unwanted phone number.
5. Re-enter a new phone number.
6. Use [SET] to confirm changes and the cursor will move to the Name position.
7. Use [UP], [DOWN] to move the cursor.
8. Use [DEL] to erase letters.
9. Use the keypad to enter new letters.

NOTE: Use the "0" key to insert a blank space during entry.

OPERATION

MAKING A CALL

1. Lift the handset or press [SPEAKER]. You should get a dial tone.
2. Enter the phone number you wish to call.
3. You can use [DEL] to correct the number, then
4. Press [SPEAKER] or [RD/BACK] to dial the number.

REVIEW INCOMING CALLS AND DIAL BACK

1. Use [UP], [DOWN] to review and select incoming call records.
2. Press [RD/BACK] to dial the number.

SAVE INCOMING CALLS TO THE PHONEBOOK

1. Use [UP], [DOWN] to review and select from the list of incoming call records.
2. Press [STORE].
3. Press [BOOK] to save the record in the phone book.

DELETE INCOMING CALLS

1. Use [UP], [DOWN] to review and select the incoming call records.
2. Press [DEL] to erase a single record.

NOTE: Holding [DEL] for more than 4 seconds will delete the entire incoming call record list.

REVIEW DIALED CALLS

1. Use [DIALED] to review the last dial out record, and
2. Press [DIALED] repeatedly to review all records.
3. Use [DEL] to delete a dialed call record.

PHONE BOOK REVIEW AND DIAL OUT

1. Press [BOOK] to go to the phone book.
2. Use [UP], [DOWN] to review and select records, or
3. Enter the first letter of the record by pressing the corresponding key. You can press the same key continuously to go through a range beginning with the same letter.
4. Press [RD/BACK] to dial a number after the record is located.

AUTO REDIAL

When a dialed number is busy:

1. Press [AUTO-RD] to activate auto-redial function. The phone will repeat dial the last dialed number 5 times. When the call gets through:
2. Press [SPEAKER] or lift the handset to converse.

MUSIC HOLD

This feature is automatic. When you are conversing with someone by phone and you need to put them on HOLD:

- Press [HOLD] to start music hold.
- Resume your conversation by picking up the handset or pressing [SPEAKER]. When you resume your conversation the music will stop.

DIGITAL LOCK

Use this function to block specific numbers from being dialed on your phone.

To Activate Lock Function

1. Press [CODE] to enter lock manual. "INPUT PIN CODE" will display on the LCD.
2. Enter "8888" (the preset PIN code) and press [CODE] again. "UPDATE DATE CODELOCK" will display on the LCD.
3. Enter the desired digits you would like to block. Use "#" to separate the numbers, if necessary.
4. Press [CODE] to confirm and complete.
5. NOTE: If you would like to block all digits, enter "***" and press [CODE] to confirm.

To Deactivate the Lock Function

1. Press [CODE] to enter the manual lock function. The LCD will display "INPUT PIN CODE".
2. Enter "8888" (the preset PIN code) and press [CODE] again. The LCD will display "UPDATE DATE CODELOCK".
3. Press [DEL] to erase the locked digits.
4. Press [CODE] to confirm.

Modify the PIN Code

1. Press [CODE].
2. Enter the preset PIN Code: 8888.
3. Press [CODE]. The LCD will display “UPDATE CODELOCK”.
4. Press [UP] to enter the modify mode. The LCD will display “MODIFY PIN CODE”.
5. Enter the desired personal PIN Code (must be 4 digits).
6. Press [CODE] to confirm.

If you forget your pin code, do the following:

1. Remove the batteries.
2. Disconnect the unit from the telephone line for 3 hours.

The pin code will reset back to the factory code “8888” and all other information such as phone book and incoming call records will be erased.