



Extron® Electronics
INTERFACING, SWITCHING AND DISTRIBUTION

User's Manual



CrossPoint 42 HVA

CrossPoint Matrix Switcher

Precautions

Safety Instructions • English



This symbol is intended to alert the user of important operating and maintenance (servicing) instructions in the literature provided with the equipment.



This symbol is intended to alert the user of the presence of uninsulated dangerous voltage within the product's enclosure that may present a risk of electric shock.

Caution

Read Instructions • Read and understand all safety and operating instructions before using the equipment.

Retain Instructions • The safety instructions should be kept for future reference.

Follow Warnings • Follow all warnings and instructions marked on the equipment or in the user information.

Avoid Attachments • Do not use tools or attachments that are not recommended by the equipment manufacturer because they may be hazardous.

Consignes de Sécurité • Français



Ce symbole sert à avertir l'utilisateur que la documentation fournie avec le matériel contient des instructions importantes concernant l'exploitation et la maintenance (réparation).



Ce symbole sert à avertir l'utilisateur de la présence dans le boîtier de l'appareil de tensions dangereuses non isolées posant des risques d'électrocution.

Attention

Lire les instructions • Prendre connaissance de toutes les consignes de sécurité et d'exploitation avant d'utiliser le matériel.

Conserver les instructions • Ranger les consignes de sécurité afin de pouvoir les consulter à l'avenir.

Respecter les avertissements • Observer tous les avertissements et consignes marqués sur le matériel ou présentés dans la documentation utilisateur.

Eviter les pièces de fixation • Ne pas utiliser de pièces de fixation ni d'outils non recommandés par le fabricant du matériel car cela risquerait de poser certains dangers.

Sicherheitsanleitungen • Deutsch



Dieses Symbol soll dem Benutzer in der im Lieferumfang enthaltenen Dokumentation besonders wichtige Hinweise zur Bedienung und Wartung (Instandhaltung) geben.



Dieses Symbol soll den Benutzer darauf aufmerksam machen, daß im Inneren des Gehäuses dieses Produktes gefährliche Spannungen, die nicht isoliert sind und die einen elektrischen Schock verursachen können, herrschen.

Achtung

Lesen der Anleitungen • Bevor Sie das Gerät zum ersten Mal verwenden, sollten Sie alle Sicherheits- und Bedienungsanleitungen genau durchlesen und verstehen.

Aufbewahren der Anleitungen • Die Hinweise zur elektrischen Sicherheit des Produktes sollten Sie aufzubewahren, damit Sie im Bedarfsfall darauf zurückgreifen können.

Befolgen der Warnhinweise • Befolgen Sie alle Warnhinweise und Anleitungen auf dem Gerät oder in der Benutzerdokumentation.

Keine Zusatzeräge • Verwenden Sie keine Werkzeuge oder Zusatzeräge, die nicht ausdrücklich vom Hersteller empfohlen wurden, da diese eine Gefahrenquelle darstellen können.

Instrucciones de seguridad • Español



Este símbolo se utiliza para advertir al usuario sobre instrucciones importantes de operación y mantenimiento (o cambio de partes) que se desean destacar en el contenido de la documentación suministrada con los equipos.



Este símbolo se utiliza para advertir al usuario sobre la presencia de elementos con voltaje peligroso sin protección aislante, que puedan encontrarse dentro de la caja o alojamiento del producto, y que puedan representar riesgo de electrocución.

Precaucion

Leer las instrucciones • Leer y analizar todas las instrucciones de operación y seguridad, antes de usar el equipo.

Conservar las instrucciones • Conservar las instrucciones de seguridad para futura consulta.

Obedecer las advertencias • Todas las advertencias e instrucciones marcadas en el equipo o en la documentación del usuario, deben ser obedecidas.

Evitar el uso de accesorios • No usar herramientas o accesorios que no sean específicamente recomendados por el fabricante, ya que podrían implicar riesgos.

Warning

Power sources • This equipment should be operated only from the power source indicated on the product. This equipment is intended to be used with a main power system with a grounded (neutral) conductor. The third (grounding) pin is a safety feature, do not attempt to bypass or disable it.

Power disconnection • To remove power from the equipment safely, remove all power cords from the rear of the equipment, or the desktop power module (if detachable), or from the power source receptacle (wall plug).

Power cord protection • Power cords should be routed so that they are not likely to be stepped on or pinched by items placed upon or against them.

Serviceing • Refer all servicing to qualified service personnel. There are no user-serviceable parts inside. To prevent the risk of shock, do not attempt to service this equipment yourself because opening or removing covers may expose you to dangerous voltage or other hazards.

Slots and openings • If the equipment has slots or holes in the enclosure, these are provided to prevent overheating of sensitive components inside. These openings must never be blocked by other objects.

Lithium battery • There is a danger of explosion if battery is incorrectly replaced. Replace it only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

Avertissement

Alimentations • Ne faire fonctionner ce matériel qu'avec la source d'alimentation indiquée sur l'appareil. Ce matériel doit être utilisé avec une alimentation principale comportant un fil de terre (neutre). Le troisième contact (de mise à la terre) constitue un dispositif de sécurité : n'essayez pas de la contourner ni de la désactiver.

Déconnexion de l'alimentation • Pour mettre le matériel hors tension sans danger, déconnectez tous les cordon d'alimentation de l'arrière de l'appareil ou du module d'alimentation de bureau (s'il est amovible) ou encore de la prise secteur.

Protection du cordon d'alimentation • Acheminer les cordons d'alimentation de manière à ce que personne ne risque de marcher dessus et à ce qu'ils ne soient pas écrasés ou pincés par des objets.

Réparation-maintenance • Faire exécuter toutes les interventions de réparation-maintenance par un technicien qualifié. Aucun des éléments internes ne peut être réparé par l'utilisateur. Afin d'éviter tout danger d'électrocution, l'utilisateur ne doit pas essayer de procéder lui-même à ces opérations car l'ouverture ou le retrait des couvercles risquent de l'exposer à de hautes tensions et autres dangers.

Fentes et orifices • Si le boîtier de l'appareil comporte des fentes ou des orifices, ceux-ci servent à empêcher les composants internes sensibles de surchauffer. Ces ouvertures ne doivent jamais être bloquées par des objets.

Lithium Batterie • Il a danger d'explosion s'il y a remplacement incorrect de la batterie. Remplacer uniquement avec une batterie du même type ou d'un type équivalent recommandé par le constructeur. Mettre au rebut les batteries usagées conformément aux instructions du fabricant.

Vorsicht

Stromquellen • Dieses Gerät sollte nur über die auf dem Produkt angegebene Stromquelle betrieben werden. Dieses Gerät würde für eine Verwendung mit einer Hauptstromleitung mit einem geerdeten (neutralen) Leiter konzipiert. Der dritte Kontakt ist für einen Erdanschluß, und stellt eine Sicherheitsfunktion dar. Diese sollte nicht umgangen oder außer Betrieb gesetzt werden.

Stromunterbrechung • Um das Gerät auf sichere Weise vom Netz zu trennen, sollten Sie alle Netzkabel aus der Rückseite des Gerätes, aus der externen Stromversorgung (falls dies möglich ist) oder aus der Wandsteckdose ziehen.

Schutz des Netzkabels • Netzkabel sollten stets so verlegt werden, daß sie nicht im Weg liegen und niemand darauf treten kann oder Objekte darauf- oder unmittelbar dagegengestellt werden können.

Wartung • Alle Wartungsmaßnahmen sollten nur von qualifiziertem Servicepersonal durchgeführt werden. Die internen Komponenten des Gerätes sind wartungsfrei. Zur Vermeidung eines elektrischen Schocks versuchen Sie in keinem Fall, dieses Gerät selbst öffnen, da beim Entfernen der Abdeckungen die Gefahr eines elektrischen Schlags und/oder andere Gefahren bestehen.

Schlitzes und Öffnungen • Wenn das Gerät Schlitzes oder Löcher im Gehäuse aufweist, dienen diese zur Vermeidung einer Überhitzung der empfindlichen Teile im Inneren. Diese Öffnungen dürfen niemals von anderen Objekten blockiert werden.

Lithium-Batterie • Explosionsgefahr, falls die Batterie nicht richtig ersetzt wird. Ersetzen Sie verbrauchte Batterien nur durch den gleichen oder einen vergleichbaren Batterietyp, der auch vom Hersteller empfohlen wird. Entsorgen Sie verbrauchte Batterien bitte gemäß den Herstelleranweisungen.

Advertencia

Alimentación eléctrica • Este equipo debe conectarse únicamente a la fuente/tipo de alimentación eléctrica indicada en el mismo. La alimentación eléctrica de este equipo debe provenir de un sistema de distribución general con conductor neutro a tierra. La tercera pata (puesta a tierra) es una medida de seguridad, no puentearla ni eliminarla.

Desconexión de alimentación eléctrica • Para desconectar con seguridad la acometida de alimentación eléctrica al equipo, desenchufar todos los cables de alimentación en el panel trasero del equipo, o desenchufar el módulo de alimentación (si fuera independiente), o desenchufar el cable del receptáculo de la pared.

Protección del cables de alimentación • Los cables de alimentación eléctrica se deben instalar en lugares donde no sean pisados ni apretados por objetos que se puedan apoyar sobre ellos.

Reparaciones/mantenimiento • Solicitar siempre los servicios técnicos de personal calificado. En el interior no hay partes a las que el usuario deba acceder. Para evitar riesgo de electrocución, no intentar personalmente la reparación/mantenimiento de este equipo, ya que al abrir o extraer las tapas puede quedar expuesto a voltajes peligrosos u otros riesgos.

Ranuras y aberturas • Si el equipo posee ranuras o orificios en su caja/alojamiento, es para evitar el sobrecalentamiento de componentes internos sensibles. Estas aberturas nunca se deben obstruir con otros objetos.

Batería de litio • Existe riesgo de explosión si esta batería se coloca en la posición incorrecta. Cambiar esta batería únicamente con el mismo tipo (o su equivalente) recomendado por el fabricante. Deschar las baterías usadas siguiendo las instrucciones del fabricante.

Quick Start — CrossPoint 42 HVA

 
Installation

Step 1 - Mounting

Mount the switcher in a rack.

Step 2 - Turn off power

Turn off power to the input and output devices, and remove the power cords from them.




Step 3 - Cable video input


Cable the switcher for RGBHV, RGBS, RGsB, RsGsBs, component video , S-video, or composite video input (3). See Cabling and Rear Panel Views in Chapter 2 for details.

Step 4 - Cable video output

 
Cable the switcher for RGBHV, RGBS, RGsB, RsGsBs, component video , S-video, or composite video output (3). See Cabling and Rear Panel Views in Chapter 2 for details. Ensure that the same video planes (R, G, B, H/HV, and/or V) are used on the switcher output as on the input.




Unbalanced Input
(high impedance)

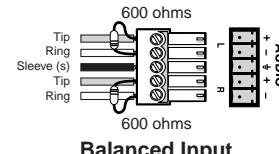


Balanced Input
(600 ohms)

 

Balanced Input
(high impedance)

 

Unbalanced Output

 


Balanced Output

Step 5 - Cable stereo input

Cable the switcher for stereo audio input. Each input has a 3.5 mm, 5-pole captive screw connector for balanced or unbalanced stereo audio input (5). Connectors are included with each switcher, but you must supply the audio cable. High impedance is generally over 800 ohms.

Step 6 - Cable stereo output

 Cable the switcher for stereo audio output. Each output has a 3.5 mm, 5-pole captive screw connector that outputs the selected unamplified, line level audio. Connect an audio device, such as an audio amplifier or powered speakers (6).



Step 7 - Power up


Plug the switcher, input devices, and output devices into a grounded AC source, and turn on the input and output devices.

CAUTION Connect the sleeve to ground (Gnd). Connecting the sleeve to a negative (-) terminal will damage the audio output circuits.

Step 8 - Create a tie

1. Press and release the Conf/Save button to select audio and/or video.
2. Press and release the output button to select the desired output (1 or 2).
3. Press and release the desired input button.
4. Repeat steps 1-3 as necessary.

LED key: ● = off, ☀ = on, ☺ = blinking,

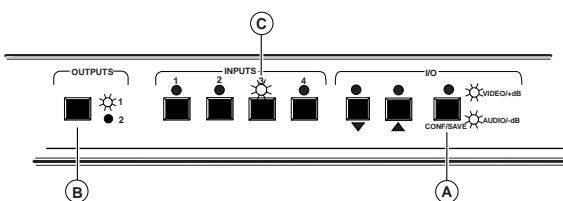


Quick Start — CrossPoint 42 HVA, cont'd

Additional Information


View ties

- A. Press and release the Conf/Save button to select audio and/or video.
- B. Press and release the output button to select the desired output (1 or 2). The selected output and tied input LEDs light.

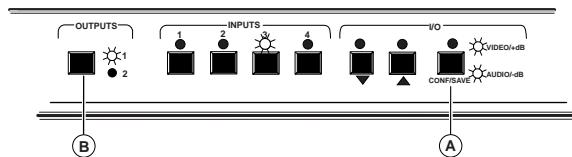

View and adjust audio level

- A. Press and hold the Conf/Save button until the Audio LED begins to blink.
- B. Press and release the desired input button. The level is displayed by the input LEDs and the Decrement (▼) and Increment (▲) LEDs. Gain or attenuation is indicated by the Video/+dB (gain), or Audio/-dB (attenuation) LEDs.
- C. Decrease or increase the level by pressing the Decrement (▼) and Increment (▲) buttons until the desired level is reached.
- D. Press and release the Conf/Save button to exit.

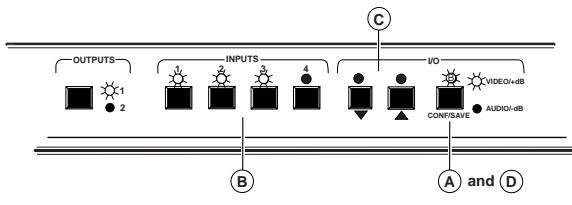

LED key: ● = off, ○ = on, ⚡ = blinking, ⚡ = blinking slowly, ⚡ = blinking fast

Front Panel Controls

Input and output buttons and LEDs select and identify inputs and outputs. The input LEDs also display a portion of the audio level of the selected input.

Conf/Save button selects view mode (video and audio, video only, or audio only) and saves changes when you change the configuration.

I/O LED indicates the current configuration mode. It is steady when setting up a video and/or audio tie, and it blinks in audio level display/adjust mode.

Video/+dB and Audio/-dB LEDs indicate when video or audio is selected. The Audio LED blinks to indicate audio breakaway. The Audio button also selects the audio level/adjust mode. The Video/+dB LED indicates a positive (+) gain value. The Audio/-dB LED indicates a negative (-) attenuation value.

Decrement (▼) button and LED decrements the audio level of the selected input. The LED indicates a portion of the audio level of the selected input.

Increment (▲) button and LED increments the audio level of the selected input. The LED indicates a portion of the audio level of the selected input.

Definitions

The following terms are used throughout this manual:

Tie — An input-to-output connection.

Configuration — One or more **ties** or **sets of ties**.

Current configuration — The currently active **configuration** (also called **configuration 0**).

Table of Contents

Chapter 1 • Introduction	1-1
About the CrossPoint 42 HVA Matrix Switcher	1-2
Features	1-3
Chapter 2 • Installation	2-1
Mounting the Switcher	2-2
Table or Wall mounting	2-2
Rack mounting	2-3
Cabling and Rear Panel Views	2-3
Power connection	2-3
Video input and output connections	2-3
Audio input and output connections	2-4
RS-232 Connection	2-5
Chapter 3 • Operation	3-1
Front Panel Controls and Indicators	3-2
Definitions	3-2
Input buttons, output buttons, and LEDs	3-2
I/O Control buttons and LEDs	3-2
Front Panel Operations	3-3
Power	3-3
Creating a configuration	3-3
Viewing the current configuration	3-5
Viewing and adjusting the audio level	3-5
System reset to factory defaults	3-6
Executive mode (front panel security lockout)	3-6
Rear Panel Controls	3-7
Chapter 4 • Programmer's Guide	4-1
Host-to-Switcher Instructions	4-2
Switcher-Initiated Messages	4-2
Switcher Error Responses	4-3
Using the Command/Response Table	4-3
Command/Response Table	4-4
Chapter 5 • Switcher Software	5-1
Windows-Based Program Control	5-2
Installing the software	5-2
Using the software	5-2
Using the help system	5-2

Table of Contents, cont'd

Appendix A • Specifications	A-1
Specifications	A-2
Part Numbers	A-4
CrossPoint part numbers	A-4
Optional accessories	A-4
Cables	A-4
Appendix B • Reference Information	B-1
Hardware Upgrade and Maintenance	B-2
Opening the switcher	B-2
Closing the switcher	B-2
Installing a firmware update	B-2
Replacing the AC fuse	B-4

All trademarks mentioned in this manual are the properties of their respective owners.

68-654-01 Rev. A
Printed in the USA
08 02



CrossPoint 42 HVA Matrix Switcher

1

Chapter One

Introduction

About the CrossPoint 42 Matrix Switcher

Features

Introduction

About the CrossPoint 42 Matrix Switcher

The Extron CrossPoint 42 HVA Matrix Switcher is an analog RGBHV matrix switcher, with stereo audio, that distributes any input to any combination of outputs. The matrix switcher can route multiple input/output configurations simultaneously.

The Extron CrossPoint 42 HVA Matrix Switcher switches RGBHV and two-channel stereo audio (balanced and unbalanced). It also switches RGBS, RGsB, RsGsBs, HDTV, component video, S-video, and composite video (figure 1-1). The audio switching can either be linked to the video (audio follow) or independent of the video (audio breakaway). Adjustable audio gain and attenuation compensates for level differences between audio inputs.

The CrossPoint 42 HVA is a single box solution to simple 300 MHz (-3dB) routing applications. Each input and output is individually isolated and buffered, and any of four input(s) can be switched to either or both outputs with virtually no crosstalk or signal noise between channels.

The CrossPoint 42 HVA is housed in rack-mountable, 1U high, 19" wide metal enclosure. The appropriate rack mounting kit is included with the switcher. The switcher has an internal 100VAC to 240VAC, 50/60 Hz, 40 watt, auto-switchable power supply that provides worldwide power compatibility.

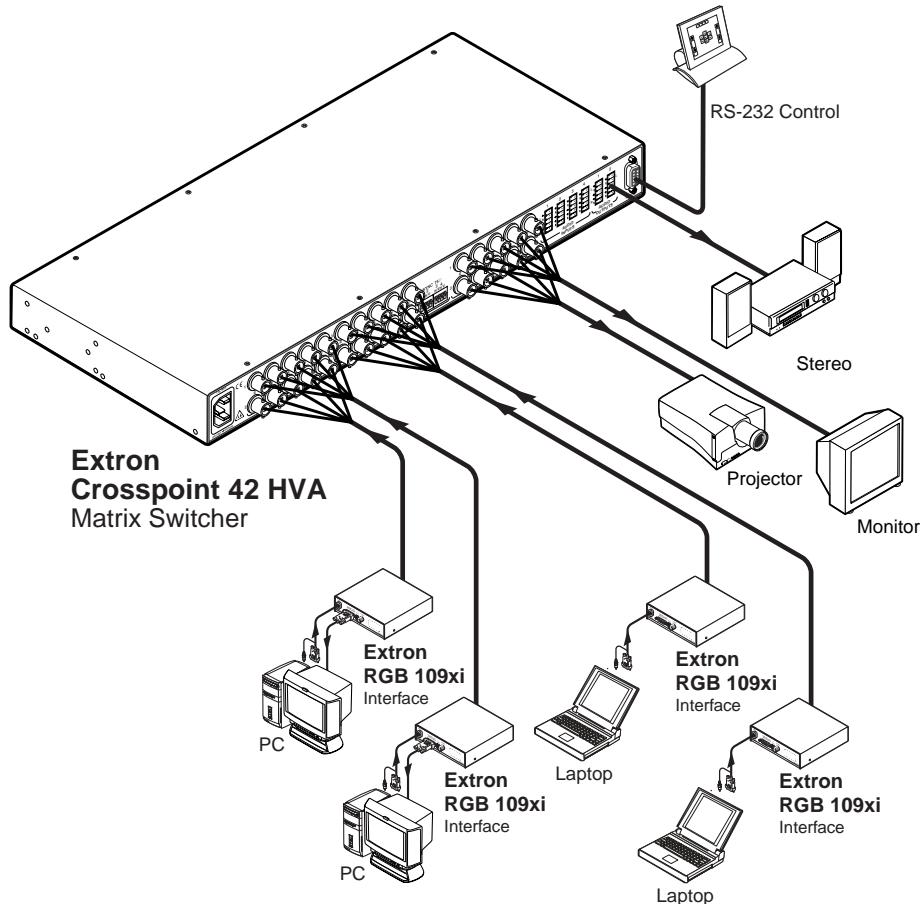


Figure 1-1 — A typical CrossPoint 42 HVA Matrix Switcher application

Features

Inputs — This switcher offers 4 RGBHV, RGBS, RGsB, RsGsBs, HDTV, component video, S-video, or composite video inputs on BNC connectors.

Stereo audio input can be balanced or unbalanced, on 3.5 mm, 5-pole captive screw terminals.

Outputs — 2 RGBHV, RGBS, RGsB, RsGsBs, HDTV, component video, S-video, or composite video outputs are available on BNC connectors.

Stereo audio output can be balanced or unbalanced, on 3.5 mm, 5-pole captive screw terminals.

Bandwidth — Bandwidth is a minimum of 300 MHz (-3dB), fully loaded. This high bandwidth allows Extron's switchers to switch everything from NTSC video to high-resolution computer displays.

Operational flexibility — Operations such as input/output selection and adjustment of audio levels can be performed on the front panel or over the RS-232 link. The RS-232 link allows remote control via a control system.

- **QuickSwitch Front Panel Controller (QS-FPC™)** — The CrossPoint 42 HVA QS-FPC feature supports touch-of-a-button input and output selection, and audio gain and attenuation control.
- **Windows-based control program** — Extron's Windows-based control program provides a versatile range of operational options with its graphical interface and drag-and-drop/point-and-click operation. The Windows-based control program also has an emulation mode that lets you create a switcher configuration file at the home office and then download it for use by the switcher on site.
- **Extron's Simple Instruction Set™ (SIS™)** — The remote control protocol uses Extron's SIS for easy programming and operation.

Audio gain/attenuation — Users can set the level of audio gain or attenuation (-18dB to +24dB) via the RS-232 link or from the front panel. Individual input audio levels can be adjusted so there are no noticeable volume differences when switching between sources (figure 1-2).

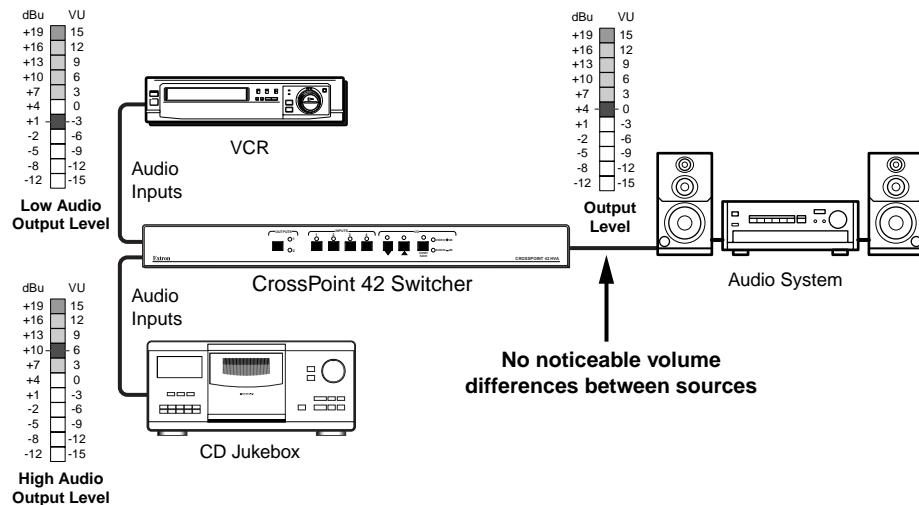


Figure 1-2 — Audio gain and attenuation

Introduction, cont'd

Switching — Individually buffered, independent matrix switched outputs with audio follow and audio breakaway.

- **Any input to any output**
- **Audio follow** — Audio can be switched with the corresponding video input. This feature allows any audio signal to be selected with any video signal simultaneously to one or all outputs in any combination. Audio follow switching can be done via front panel or under RS-232 remote control.
- **Audio breakaway** — Audio can be broken away from its corresponding video signal. Audio breakaway switching can be done via front panel or under RS-232 control.

Remote control — The CrossPoint 42 is remote controllable, using the MCP 1000 master control panel and any combination of MCP 1000 slave control panels and/or MKP 1000 slave control keypads. The remote control devices are easy to use and provide tactile buttons for quick selection. Each MCP 1000 can be used for one-touch switching for a particular output and selecting global presets. Each MKP 1000 dedicated to an output can be used to select a different input for that output or to select a preset.

Executive mode (front panel security lockout) — If the CrossPoint 42 is installed in an open area, where operation by unauthorized personnel may be a problem, a security lock-out feature can be implemented. When the front panel is locked, a special button combination is required to unlock the front panel controller before it can be operated.

Rack mount — The switcher is mountable in any conventional 19" wide rack.

Power — The internal 100VAC to 240VAC, 50/60 Hz, 40 watt, auto-switchable power supply provides worldwide power compatibility.



CrossPoint 42 HVA Matrix Switcher

2

Chapter Two

Installation

Mounting the Switcher

Cabling and Rear Panel Views

Installation

Mounting the Switcher

The CrossPoint 42 HVA Matrix Switcher is housed in a rack-mountable, 1U high, 19" wide metal enclosure. The appropriate rack mount kit (#70-077-03) is included with the switcher. The switcher may also be surface-mounted under a table, desk, or podium, or on a wall, using an Extron 1U underdesk mounting kit (#70-222-01).

Table or wall mounting

The table/wall mounting brackets extend approximately 1/4" (6.4 mm) above the top surface of the switcher enclosure. This design allows for an air space between the enclosure and the surface to which it is mounted. Table or wall mount the switcher as follows:

1. Attach the table/wall mounting brackets to the switcher with the eight provided #8 machine screws (figure 2-1).
2. Hold the switcher with the attached brackets against the underside of the table or other furniture, or against the wall. Mark the location of the screw holes of the bracket on the mounting surface.
3. Drill 3/32" (2 mm) diameter pilot holes, 1/4" (6.4 mm) deep in the mounting surface at the marked screw locations.
4. Insert #8 wood screws into the four pilot holes. Tighten each screw into the mounting surface until just less than 1/4" of the screw protrudes.
5. Align the mounting screws with the slots in the brackets and place the switcher against the surface, with the screws through the bracket slots.
6. Slide the switcher slightly forward or back, then tighten all four screws to secure the switcher in place.

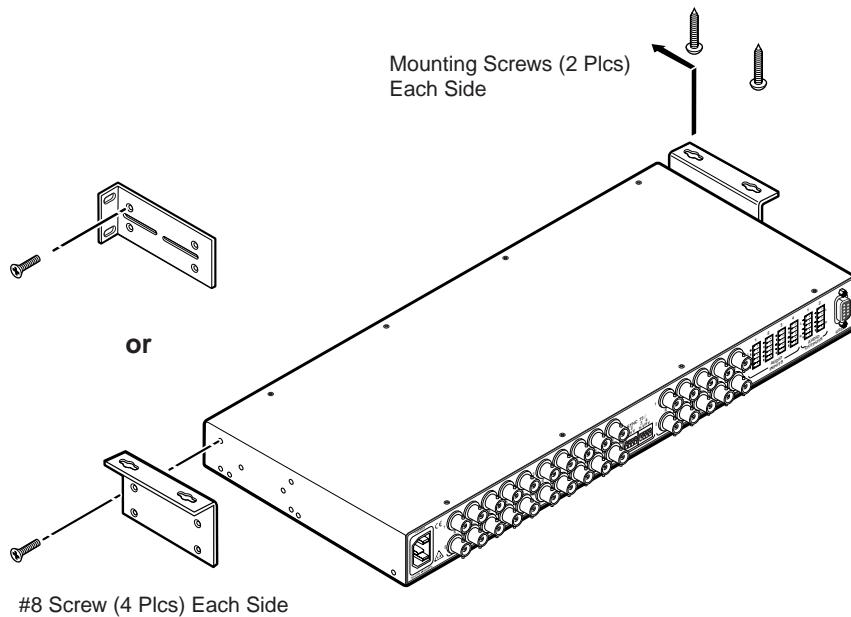


Figure 2-1 — Mounting the CrossPoint 42 HVA Switcher

Rack mounting

Rack mount the switcher as follows:

1. Attach the rack mounting brackets to the switcher with the eight provided #8 machine screws (figure 2-1).
2. Insert the switcher into the rack, align the holes in the mounting bracket with those of the rack.
3. Secure the switcher to the rack using the supplied machine screws.

Cabling and Rear Panel Views

All connectors are on the rear panel. Figure 2-2 shows the rear panel of the CrossPoint 42 HVA.

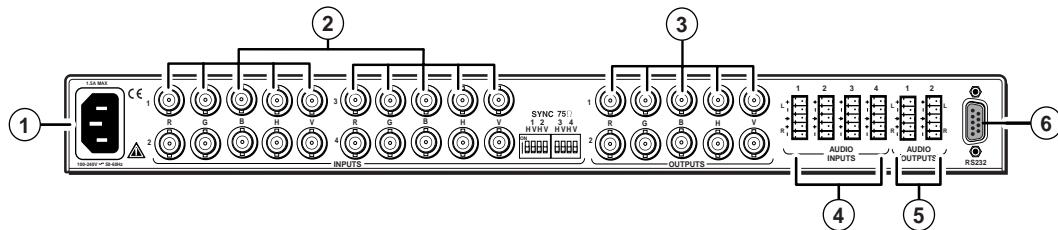


Figure 2-2 — Rear panel connectors, CrossPoint 42 HVA

Power connection

- ① **AC power connector** — Plug a standard IEC power cord into this connector to connect the switcher to a 100 to 240VAC, 50 Hz or 60 Hz power source.

Video input and output connections

NOTE All video input and output connections to the CrossPoint 42 are made with female BNC connectors. Some types of video output devices do not have BNC video output connectors. For these cases, a suitable cable or connector adapter is necessary between the device output connector and the BNC input connector of the CrossPoint.

- ② **RGBHV video inputs** — Connect RGBHV video inputs to these BNC connectors for each input.
③ **RGBHV video outputs** — Connect RGBHV video outputs to these BNC connectors for each output.

NOTE The CrossPoint 42 HVA switcher can also switch RGBS, RGsB, RsGsBs, component video, S-video, or composite video by using four, three, two, or one BNC. If switching a video format other than RGBHV, ensure that the same video planes (R, G, B, H/HV, and/or V) are used on the switcher output as on the input. H/HV and V will switch sync signals only, but will not switch video.

NOTE The CrossPoint 42 HVA switcher does not alter the video signal in any way. The signal output by the switcher is in the same format as the input.

Installation, cont'd

Audio input and output connections

- ④ Connections for balanced and unbalanced audio inputs — Each input has a 3.5 mm, 5-pole captive screw connector for balanced or unbalanced stereo audio input. Connectors are included with each CrossPoint switcher, but you must supply the audio cable. See figure 2-3 to wire a connector for the appropriate input type and impedance level. High impedance is generally over 800 ohms.

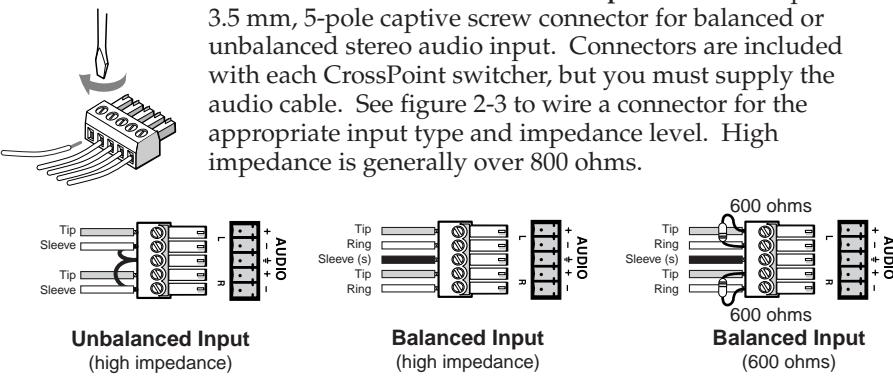


Figure 2-3 — Captive screw connector wiring for inputs

NOTE When making connections for the CrossPoint switcher from existing audio cables, see figure 2-4. A mono audio connector consists of the tip and sleeve. A stereo audio connector consists of the tip, ring and sleeve.

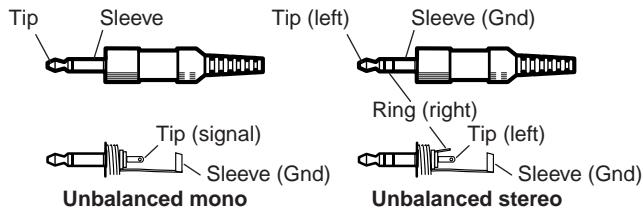


Figure 2-4 — Phono audio connectors

The audio level for each input can be individually set, via the front panel or RS-232, to ensure that the level on the output does not vary when switching from input to input. See chapter 3, *Operation*, chapter 4, *Programmer's Guide*, and chapter 5, *Matrix Software* for details.

- ⑤ Connections for audio outputs — These 3.5 mm, 5-pole captive screw connectors output the selected unamplified, line level audio. Connect audio devices, such as an audio amplifier or powered speakers. See figure 2-5 to properly wire an output connector.

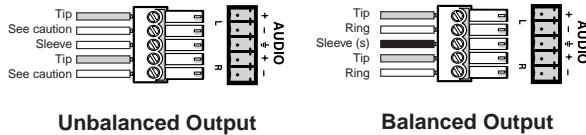



Figure 2-5 — Captive screw connector wiring for audio output

CAUTION Connect the sleeve to ground (Gnd). Connecting the sleeve to a negative (-) terminal will damage the audio output circuits.

By default, the audio output follows the video switch. Audio breakaway, commanded via the front panel, under RS-232 control, or Windows-based control program, allows you to select from any one of the audio input sources. See chapter 3, *Operation*, chapter 4, *Programmer's Guide*, and chapter 5, *Matrix Software* for details.

RS-232 connection

- ⑥ **Remote/RS-232 port** — Connect a host device, such as a computer or touch panel control, to the CrossPoint via this 9-pin D connector for serial RS-232 control.

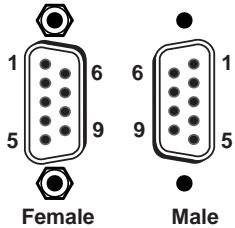

If desired, attach an MCP 1000 remote control panel master unit to the switcher's RS-232 connector. You can also attach an MKP 1000 remote keypad or MCP 1000 slave unit to the MCP 1000 master unit. Refer to the *MCP 1000 Remote Control Panel User's Manual* and the *MKP 1000 User's Manual* for details.

See chapter 4, *Programmer's Guide*, for definitions of the SIS commands and chapter 5, *Matrix Software* for details on how to install and use the control software.

Installation, cont'd



CrossPoint 42 HVA Matrix Switcher

3

Chapter Three

Operation

Front Panel Controls and Indicators

Front Panel Operations

Rear Panel Controls

Operation

Front Panel Controls and Indicators

The front panel controls (figure 3-1) are grouped into three sets. The Outputs button and LEDs are grouped on the left side of the control panel, the Inputs buttons and LEDs are grouped in the center of the panel, and the I/O (input/output) control buttons and LEDs are grouped on the right side of the panel.

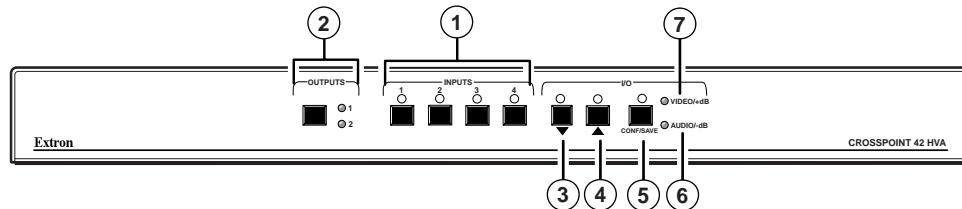


Figure 3-1 — Front panel, CrossPoint 42 HVA

Definitions

The following terms apply to Extron Matrix Switchers, and are used throughout this manual:

Tie — An input-to-output connection.

Configuration — May consist of one tie or two ties.

Current configuration — The configuration that is currently being used (also called **configuration 0**).

Input buttons, output buttons, and LEDs

- ① **Input 1 through 4 buttons and LEDs** — The Input buttons are used to select an input, either to determine existing ties, or to set up a configuration. The input LEDs identify selected inputs and indicate audio levels in the audio adjustment mode. A more detailed explanation of the two functions is included in *Front Panel Operations* later in this chapter.
- ② **Outputs button and Outputs 1 and 2 LEDs** — The Outputs button and LEDs select and identify outputs.

I/O Control buttons and LEDs

When creating or viewing a configuration, you must specify whether the configuration applies to video, audio, or both. This is done with the Conf/Save button. Current mode is indicated by the Audio and Video LEDs.

- ③ and ④ **Decrement ▼ and Increment ▲ buttons and LEDs** — The Decrement ▼ and Increment ▲ buttons decrease and increase the amount of audio gain for a selected input. The input 1-4 LEDs and the Decrement ▼ and Increment ▲ LEDs indicate the audio level of the selected input (see the chart in *Viewing and adjusting the audio level*).
- ⑤ **I/O Conf/Save button and LED** — Press and release the Conf/Save button to select video and audio, video only, or audio only for configuration. As a secondary function, the Conf/Save button selects the audio level display/adjust mode. Press and hold the Conf/Save button until the I/O LED begins to blink. If the Video/+dB LED was lit, it turns off. Select an input. The current audio level setting for the selected input is displayed in the input LEDs. The audio level for the selected input can be increased or decreased by pressing the Increment (3) or Decrement (4) buttons. A more detailed

explanation of audio level adjustment is included in *Viewing and adjusting the audio level* later in this chapter.

- (6) **Audio/-dB LED** — The Conf/Save button selects and deselects audio for a configuration being created or viewed. The Audio/-dB LED lights to indicate that audio is available for configuration or viewing. The Audio/-dB LED lights steadily to indicate that the audio follows the video configuration. The Audio/-dB LED (and the LED for the selected audio input) blink to indicate that the audio configuration is broken away from the video configuration. In audio level display/adjust mode this LED indicates attenuation (-) of the audio level.
- (7) **Video/+dB LED** — The Conf/Save button selects and deselects video for a configuration being created or viewed. The Video/+dB LED lights to indicate that video is available for configuration or viewing. In audio level display/adjust mode this LED indicates a gain (+) in the audio level.

Front Panel Operations

The following paragraphs detail the power-up process and then provide sample procedures for creating ties and configurations; changing a configuration; viewing ties and configurations; and viewing and adjusting the audio level.

Power

Power is automatically applied when the power cord is connected to an AC source. When AC power is applied, the switcher performs a self-test that blinks the front panel LEDs during the test. An error-free power up self-test sequence leaves the RGBHV LED, Audio LED, Output 1 LED, and Input 1 LED on and all other LEDs off.

NOTE *During the first power up, Input 1 is tied to Output 1, so both LEDs will light. During subsequent power ups, the LED for the input that is tied to Output 1 will light.*

The current configuration is saved in non-volatile memory. When power is applied, the last current configuration is retrieved.

If an error occurs during the self-test, the switcher locks up and will not operate. If your switcher locks up on power-up, call the Extron S³ Sales & Technical Support Hotline.

Creating a configuration

The current configuration can be changed using the front panel buttons. To change the current configuration, do the following:

1. Press the Conf/Save button to select video, audio, or both for configuration.
2. Select the desired output by pressing and releasing the Outputs button to cycle through output 1 or output 2.
3. Select the desired input by pressing and releasing the appropriate Input button.
4. Repeat steps 1 through 3 to create a second tie, as desired.

NOTE

- 1. Only one video input and one audio input can be tied to an output.
- 2. If a tie is made between an input and an output, and the selected output was previously tied to another input, the older tie is broken in favor of the newer tie.
- 3. To indicate current ties, input LEDs light when an output is selected.

Operation, cont'd

4. If audio and video are tied to different inputs (audio breakaway), and if you select video and audio for display, the LED for the selected video input lights steadily and the LED for the selected audio input blinks.
5. If an output with no tie is selected, only that output's LED lights.

Example 1: Create a set of video and audio ties — input 3 to output 1

See figure 3-2 and the following steps for an example in which input 3 is tied to output 1.

NOTE This example assumes that there are no ties in the current configuration.

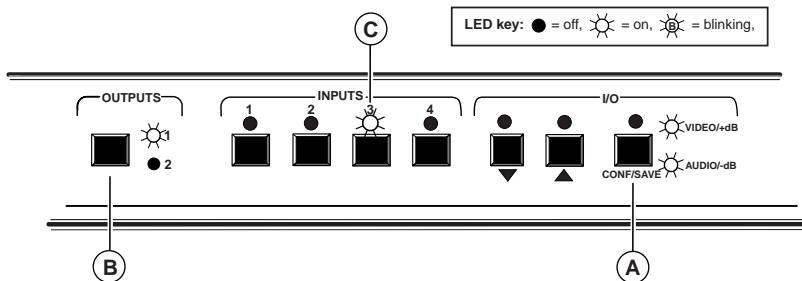


Figure 3-2 — Example 1: Creating a tie

- (A) Press and release the Conf/Save button to select both video and audio for a tie.
- (B) Press and release the Outputs button to cycle through the outputs, selecting output 1.
- (C) Press and release the Input 3 button. The LED for input 3 lights to indicate selection.

Example 2: Changing the audio input to an existing tie

See figure 3-3 and the following steps for an example in which a new audio tie is added to the current configuration.

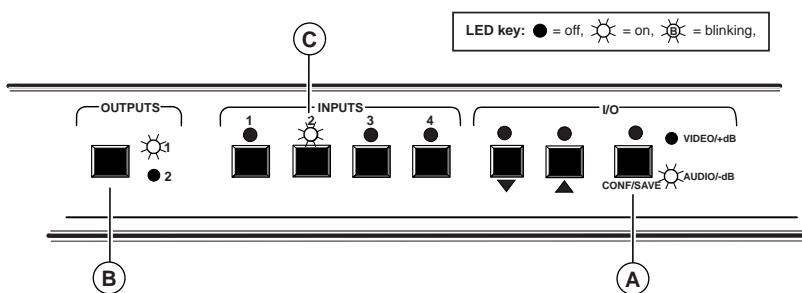


Figure 3-3 — Example 1: Changing the audio input

- (A) Press and release the Conf/Save button to select Audio for a tie.
- (B) Press and release the Outputs button to cycle through the outputs, selecting output 1.
- (C) Press and release the input 2 button. The LED for input 2 lights to indicate selection.

Press the Conf/Save button to select both video and audio. The LED for input 3 should light steadily for video and the LED for input 2 should blink for audio.

Viewing the current configuration

The current configuration can be viewed using the front panel buttons. Press and release the Output button and the LED for the input tied to it will light. If, when you view video and audio ties, the Audio LED blinks and the Video LED is on after selecting an input or output, the LEDs indicate that the audio ties are not the same as the video ties for that input (audio breakaway is active).

Viewing and adjusting the audio level

The audio level of each input can be displayed and adjusted through a range of -18dB to +24dB to ensure that there is no noticeable volume difference among sources. The audio level can be adjusted from the front panel or by using Extron's Windows-based control program. To adjust the audio level of an input from the front panel:

1. Select an input, then press and **hold** the Conf/Save button until the I/O LED begins to blink (approx. 5 seconds), indicating that the audio adjustment mode is active. The Input LEDs, and the decrement (**▼**) and increment (**▲**) LEDs, display the audio level. The Video/+dB displays positive (+) polarity and the Audio/-dB displays negative polarity. Both LEDs are lit to indicate 0dB.
2. Press and release an input button to select an input.
3. Each Input LED, and the Decrement (**▼**) and Increment (**▲**) LEDs, indicate 0dB when off, 1dB when blinking slowly, 2dB when blinking quickly, and 3dB when lit. Refer to the chart at right.
4. Press and release the Decrement or Increment button to increase or decrease the audio input level.
5. Press and hold the Conf/Save button until the I/O LED turns off to save the attenuation or gain value in memory and exit the audio display and adjustment mode.


NOTE

1. There is one audio level setting per input. The audio level setting is shared by the left and right audio inputs.
2. The audio level settings are stored in non-volatile memory. When power is removed and restored, the audio level settings are retained.

Example 3: Viewing and adjusting an audio level

See figure 3-4 and the following steps for an example of viewing and adjusting the audio level.

 - (A) Press and hold the Conf/Save button until the I/O LED begins to blink, indicating that the audio adjustment mode is active.



dB	Input LED				▼	▲	-dB +dB
	1	2	3	4			
+24	○○○○	●●●●	○○○○	●●●●	○○○○	●●●●	○○○○
+23	○○○○	●●●●	○○○○	●●●●	○○○○	●●●●	○○○○
+22	○○○○	●●●●	○○○○	●●●●	○○○○	●●●●	○○○○
+21	○○○○	●●●●	○○○○	●●●●	○○○○	●●●●	○○○○
+20	○○○○	●●●●	○○○○	●●●●	○○○○	●●●●	○○○○
+19	○○○○	●●●●	○○○○	●●●●	○○○○	●●●●	○○○○
+18	○○○○	●●●●	○○○○	●●●●	○○○○	●●●●	○○○○
+17	○○○○	●●●●	○○○○	●●●●	○○○○	●●●●	○○○○
+16	○○○○	●●●●	○○○○	●●●●	○○○○	●●●●	○○○○
+15	○○○○	●●●●	○○○○	●●●●	○○○○	●●●●	○○○○
+14	○○○○	●●●●	○○○○	●●●●	○○○○	●●●●	○○○○
+13	○○○○	●●●●	○○○○	●●●●	○○○○	●●●●	○○○○
+12	○○○○	●●●●	○○○○	●●●●	●●●●	●●●●	○○○○
+11	○○○○	●●●●	○○○○	●●●●	●●●●	●●●●	○○○○
+10	○○○○	●●●●	○○○○	●●●●	●●●●	●●●●	○○○○
+9	○○○○	●●●●	○○○○	●●●●	●●●●	●●●●	○○○○
+8	○○○○	●●●●	○○○○	●●●●	●●●●	●●●●	○○○○
+7	○○○○	●●●●	○○○○	●●●●	●●●●	●●●●	○○○○
+6	○○○○	●●●●	○○○○	●●●●	●●●●	●●●●	○○○○
+5	○○○○	●●●●	○○○○	●●●●	●●●●	●●●●	○○○○
+4	○○○○	●●●●	○○○○	●●●●	●●●●	●●●●	○○○○
+3	○○○○	●●●●	○○○○	●●●●	●●●●	●●●●	○○○○
+2	○○○○	●●●●	○○○○	●●●●	●●●●	●●●●	○○○○
+1	○○○○	●●●●	○○○○	●●●●	●●●●	●●●●	○○○○
0	●●●●	●●●●	●●●●	●●●●	●●●●	●●●●	○○○○
-1	○○○○	●●●●	●●●●	●●●●	●●●●	●●●●	○○○○
-2	○○○○	●●●●	●●●●	●●●●	●●●●	●●●●	○○○○
-3	○○○○	●●●●	●●●●	●●●●	●●●●	●●●●	○○○○
-4	○○○○	●●●●	●●●●	●●●●	●●●●	●●●●	○○○○
-5	○○○○	●●●●	●●●●	●●●●	●●●●	●●●●	○○○○
-6	○○○○	●●●●	●●●●	●●●●	●●●●	●●●●	○○○○
-7	○○○○	●●●●	●●●●	●●●●	●●●●	●●●●	○○○○
-8	○○○○	●●●●	●●●●	●●●●	●●●●	●●●●	○○○○
-9	○○○○	●●●●	●●●●	●●●●	●●●●	●●●●	○○○○
-10	○○○○	●●●●	●●●●	●●●●	●●●●	●●●●	○○○○
-11	○○○○	●●●●	●●●●	●●●●	●●●●	●●●●	○○○○
-12	○○○○	●●●●	●●●●	●●●●	●●●●	●●●●	○○○○
-13	○○○○	●●●●	●●●●	●●●●	●●●●	●●●●	○○○○
-14	○○○○	●●●●	●●●●	●●●●	●●●●	●●●●	○○○○
-15	○○○○	●●●●	●●●●	●●●●	●●●●	●●●●	○○○○
-16	○○○○	●●●●	●●●●	●●●●	●●●●	●●●●	○○○○
-17	○○○○	●●●●	●●●●	●●●●	●●●●	●●●●	○○○○
-18	○○○○	●●●●	●●●●	●●●●	●●●●	●●●●	○○○○

Operation, cont'd

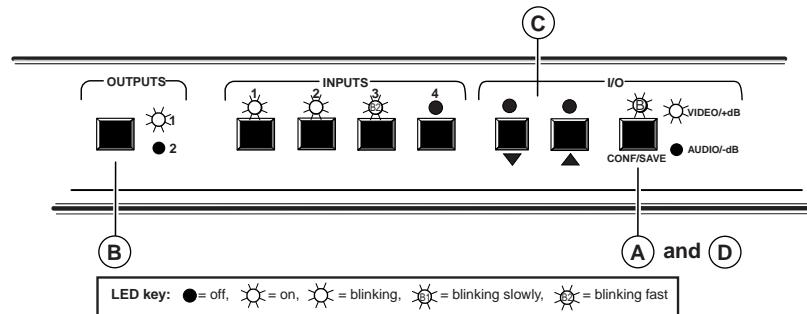


Figure 3-4— +8dB gain on input #1 displayed

- (B) Press and release an input button to select an input.
- (C) Press and release the Decrement (▼) or Increment (▲) button to decrease or increase the audio input level until the Inputs 1 and 2 LEDs are lit and the Input 3 LED is blinking rapidly and the Video/+dB LED is on. This indicates a gain of +8dB.
- (D) Press and hold the Conf/Save button until the I/O LED turns off to save the attenuation or gain value in memory and exit the audio adjustment mode.

NOTE If another input button is pressed and released, the level value for the current input is saved and level value for the newly selected input is displayed.

System reset to factory defaults

To reset the switcher to the factory default settings, press and hold the Conf/Save button on the front panel while AC power is being applied. Continue to hold the Conf/Save button until the power up sequence is completed (all LEDs turn off, the Output 1, Video, and Audio LEDs turn on, then the Conf/Save LED blinks). System reset clears all ties and sets all audio gain levels to unity gain (+0dB).

Executive mode (front panel security lockout)

The executive mode limits the operation of the CrossPoint switcher from the front panel. When the switcher is in executive mode, all of the front panel functions are disabled and the ties can be viewed but not changed. See the section on *Viewing the current configuration* earlier in this chapter. Selecting an Output will show associated Input and the Conf/Save button selects the signal type (Audio, Video, or both). Other than that, if the user pushes a front panel button when the switcher is in executive mode, the Conf/Save LED blinks three times and goes out.

To toggle executive mode on or off, press and hold the Outputs and Conf/Save buttons for approximately five seconds. The Conf/Save LED blinks to indicate the mode change. Release the Outputs and Conf/Save buttons. To toggle the executive mode state again, press and hold the Outputs and Conf/Save buttons again.

Rear Panel Controls

The CrossPoint 42 HVA has sync termination switches on the rear panel for all inputs (figure 3-5). The switches provide a way to condition non-TTL sync levels greater than 5 Vp-p, enabling the sync to be properly passed from input to selected output(s). The CrossPoint 42 HVA has two sets of sync termination switches; one for horizontal or combined sync and a second set for vertical sync.

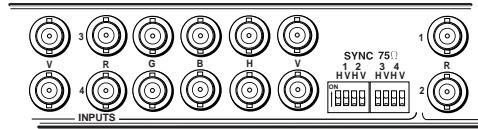


Figure 3-5 — Sync termination switches

Each switch provides the option of selecting either 510 ohms or 75 ohms. The 75 ohms position is required only for an input with non-TTL sync, greater than 5V p-p. The normal (default) position is 510 ohms.

NOTE An input that produces an out-of-sync display (a display that is rolling vertically and/or tearing horizontally) could indicate a non-TTL sync input. Input should be set to the 75 ohm position for a device known to output non-TTL sync levels (greater than 5V p-p). If you're not sure, check the specifications in the user's manual for the input device.

Operation, cont'd



CrossPoint 42 HVA Matrix Switcher

4 **Chapter Four**

Programmer's Guide

Host-to-Switcher Instructions

Switcher-Initiated Messages

Using the Command/Response Table

Programmer's Guide

The switcher's rear panel RS-232 connector (figure 4-1) can be connected to the serial port output of a host device such as a computer or control system. This connection makes software control of the switcher possible. Remote communications with the CrossPoint 42 are via Extron's Simple Instruction Set (SIS) or using Extron's Windows-based control program.

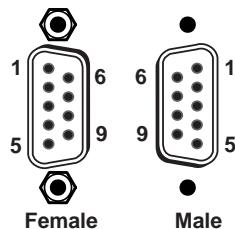


Figure 4-1 — RS-232 connector pin arrangement

The RS-232 connector on the CrossPoint 42 is a 9-pin D female connector with the following pin assignments.

The protocol is 9600 baud, 8-bit, 1 stop bit, no parity, and no flow control.

Host-to-Switcher Instructions

Pin	RS-232	Function
1	—	Not used
2	TX	Transmit data
3	RX	Receive data
4	—	Not used
5	Gnd	Signal ground
6	—	Not used
7	—	Not used
8	—	Not used
9	—	Not used

The switcher accepts SIS commands through the RS-232 port. SIS commands consist of one or more characters per command field. They do not require any special characters to begin or end the command character sequence. Each switcher response to an SIS command ends with a carriage return and a line feed (CR/LF = ↵), which signals the end of the response character string. A string is one or more characters.

Switcher-Initiated Messages

When a local event such as a front panel operation occurs, the switcher responds by sending a message to the host. The switcher-initiated messages are listed below (underlined).

(C) Copyright 2002, Extron Electronics "CrossPoint 42 HVA", Vx.xx↵

The copyright message is initiated by the switcher when it is first powered on. Vx.xx is the firmware version number.

Switcher Error Responses

When the switcher receives an SIS command and determines that it is valid, it performs the command and sends a response to the host device. If the switcher is unable to perform the command because the command is invalid or contains invalid parameters, the switcher returns an error response to the host. The error response codes are:

- E01 — Invalid input channel number (too large)
- E10 — Invalid command
- E12 — Invalid output number (too large)
- E13 — Invalid value (out of range)

Using the Command/Response Table

The command/response table begins on the next page. Lower case letters are acceptable in the command field only where indicated. Symbols are used throughout the table to represent variables in the command/response fields. Symbol definitions are provided on the next page and an ASCII-to-Hexadecimal (HEX) conversion table is provided below. Command and response examples are shown throughout the table.

ASCII to HEX Conversion Table											
20	!	21	"	22	#	23	\$	24	%	25	&
(28)	29	*	2A	+	2B	,	2C	-	2D
0	30	1	31	2	32	3	33	4	34	5	35
8	38	9	39	:	3A	;	3B	<	3C	=	3D
@	40	A	41	B	42	C	43	D	44	E	45
H	48	I	49	J	4A	K	4B	L	4C	M	4D
P	50	Q	51	R	52	S	53	T	54	U	55
X	58	Y	59	Z	5A	[5B	\	5C]	5D
'	60	a	61	b	62	c	63	d	64	e	65
h	68	i	69	j	6A	k	6B	l	6C	m	6D
p	70	q	71	r	72	s	73	t	74	u	75
x	78	y	79	z	7A	{	7B	}	7C	}	7D
											DEL
											7F

Command/Response Table

Symbol Definitions:

- ↔ = Carriage return/line feed
- = Carriage return (no line feed)
- Esc = W
- X1** = Input number 01 – 04
- X2** = Input number (for tie) 0 – maximum number of inputs (0=disconnected)
- X3** = Output number 01 – 02
- X4** = Audio gain/attenuation (-18 thru +24)
- X5** = Audio gain 0dB thru 24dB (1dB/step)
- X6** = Audio attenuation 1dB thru 18dB (1dB/step)
- X7** = 0 – 10 (0 to 5 seconds, 0.5 seconds/step)
- X9** = 0 or 1 1 = on and 0 = off
- X19** = Controller software version number to second decimal place
- X20** = Mute 0 = No mute, 1 = Video mute, 2 = Audio mute, 3 = Video & Audio mute

NOTE

Input and output numbers in commands may be entered as either 1-digit or 2-digit numbers. All input and output numbers are specified as 2-digit numbers in the response.

Programmer's Guide, cont'd

Command/response table for SIS commands			
Command	ASCII Command (host to switcher)	Response (switcher to host)	Additional description
Create ties			
Tie input $\boxed{X_2}$ to output $\boxed{X_3}$, A & V <i>Example:</i> 1*2!	$\boxed{X_2} * \boxed{X_3}, !$	Out $\boxed{X_3}$ In $\boxed{X_2}$ All \leftarrow Out02In01All \leftarrow	Tie input 1 A & V to output 2
Tie input to output, RGBHV <i>Example:</i> 3*1&	$\boxed{X_2} * \boxed{X_3} &$	Out $\boxed{X_3}$ In $\boxed{X_2}$ RGB \leftarrow Out01In3RGB \leftarrow	Audio breakaway
Tie input $\boxed{X_2}$ to output $\boxed{X_3}$, audio <i>Example:</i> 1*2\$	$\boxed{X_2} * \boxed{X_3} \$$	Out $\boxed{X_3}$ In $\boxed{X_2}$ Aud \leftarrow Out02In1Aud \leftarrow	Audio breakaway
Tie input to all outputs A & V <i>Example:</i> 4*!	$\boxed{X_2}^*!$	In $\boxed{X_2}$ All \leftarrow In 04 All \leftarrow	Tie input 4 to all outputs
RGB Mute			
RGB Mute	$\boxed{X_3} *1B/b$	Vmt $\boxed{X_3} *1\leftarrow$	
RGB Un-mute	$\boxed{X_3} *0B/b$	Vmt $\boxed{X_3} *0\leftarrow$	
Read RGB Mute	$\boxed{X_3} B/b$	$\boxed{X_9}\leftarrow$	
Global (where $\boxed{X_3}$ is not included, global RGB Mute is activated)			
RGB Mute all	1*B/b	Vmt 1 \leftarrow	
RGB Un-mute all	0*B/b	Vmt 0 \leftarrow	
Audio Mute			
Audio Mute	$\boxed{X_3}^*1Z/z$	Amt $\boxed{X_3}^*1\leftarrow$	
Audio Un-mute	$\boxed{X_3}^*0Z/z$	Amt $\boxed{X_3}^*0\leftarrow$	
Read Audio Mute	$\boxed{X_3}^*Z/z$	$\boxed{X_9}\leftarrow$	
Global - (where $\boxed{X_3}$ is not included, global Audio Mute is activated)			
Audio Mute all	1*Z/z	Amt 1 \leftarrow	
Audio Un-mute all	0*Z/z	Amt 0 \leftarrow	
Audio input gain and attenuation			
Set audio input gain to +dB value <i>Example:</i> 1*2G	$\boxed{X_1} * \boxed{X_5} G$	In $\boxed{X_1}$ Aud $\boxed{X_4}\leftarrow$ In01Aud+02 \leftarrow	Set input 1 audio gain to +2dB
Set audio input attenuation to -dB value <i>Example:</i> 1*3g	$\boxed{X_1} * \boxed{X_6} g$	In $\boxed{X_1}$ Aud $\boxed{X_4}\leftarrow$ In01Aud-03 \leftarrow	Set input 1 audio gain to -3dB
Increment gain up <i>Example:</i> 4+G	$\boxed{X_1} + G$	In $\boxed{X_1}$ Aud $\boxed{X_4}\leftarrow$ In04Aud+01 \leftarrow	Audio input 4 incremented by +1dB
Decrement gain down <i>Example:</i> 1-G	$\boxed{X_1} - G$	In $\boxed{X_1}$ Aud $\boxed{X_4}\leftarrow$ In01Aud-01 \leftarrow	Audio input 1 decremented by -1dB
RGB Delay			
Set delay	$\boxed{X_7} * \boxed{X_3} D/d$	Out $\boxed{X_3}$ Dly $\boxed{X_7}\leftarrow$	
Read delay	$\boxed{X_3} D/d$	Out $\boxed{X_3}$ Dly $\boxed{X_7}\leftarrow$	
Executive mode			
Lock front panel	1 X/x	Exe1 \leftarrow	Enable executive mode
Unlock front panel	0 X/x	Exe0 \leftarrow	Disable executive mode
Lock status	X/x	$\boxed{X_9}\leftarrow$	1 = On, 2 = Off

NOTE Commands can be made back-to-back with no spaces. Example 1*1!02!03*03!..

The tie input to all outputs commands activate all I/O switches simultaneously. The matrix switcher supports the 2-digit numeric format (01*02).

Command/response table for SIS commands, cont'd

Command	ASCII Command (host to switcher)	Response (switcher to host)	Additional description
Reset to factory defaults			
Reset audio levels	[Esc]ZA ↵	Zpa ↵	Reset all audio levels to 0dB
Reset whole switcher	[Esc]ZXXX ↵	Zpx ↵	Clears all ties & resets audio to 0dB
Un-mute RGB/Audio (all mutes)	[Esc]ZZ ↵	Zpz ↵	Un-mute all
View ties and gain			
View RGBHV output tie	[X3] &	[X2] ↵	
<i>Example:</i>	2&	3 ↵	Output 2 video tied to input 3 video
View audio output tie	[X3] \$	[X2] ↵	
<i>Example:</i>	2\$	4 ↵	Output 2 audio tied to input 4 audio
View gain for input	[X1]G	[X4] ↵	
Information requests			
Information request	I/i	V1* [X2] A1* [X2] V2* [X2] A2* [X2] Vmt1* [X9] Amt1* [X9] Vmt2* [X9] Amt2* [X9] ↵	
<i>Example:</i>	i		
Request part number	N/n	xx-xxx-xx ↵	See appendix A for part #s
Query software version	Q/q	[X9] ↵	Software version number

Programmer's Guide, cont'd



CrossPoint 42 HVA Matrix Switcher

Chapter Five

Switcher Software

Windows-Based Program Control

Matrix Software

Windows-Based Program Control

The Extron Universal Switcher Control Program is included with your CrossPoint 42 HVA switcher. This program communicates with the switcher, via the RS-232 port, and provides remote control of the input selection for each output (including audio breakaway) and audio gain and attenuation adjustments.

This program is compatible with Windows 3.1/3.11, Windows 95/98, Windows NT, Windows ME, and Windows 2000. Updates to this program can be downloaded from the Extron Web site (<http://www.extron.com>).

Installing the software

The program is contained on a set of 3.5-inch diskettes, and you should load and run the program from the hard drive. To install the software on the hard drive, run SETUP.EXE from the first floppy disk and follow the screen instructions.

By default, the Windows installation creates a C:\UNIVSW folder and places two icons (Universal Switcher Control Program and Universal Switcher Help) into a group named "Extron Electronics".

Using the software

1. To run the software, double click on the Universal Switcher Control Program icon in the Extron Electronics program group.

UNIVSW.EXE
2. Click on the comm port that is connected to the CrossPoint's RS-232 port.
3. The Extron Universal Switcher Control Program window (figure 5-1) displays the selected inputs for each output and the audio gain for the selected audio inputs.

NOTE *The program was designed to control most Extron switchers, but its operation is limited to the features and configuration of your CrossPoint 42 HVA switcher.*

Using the help system

For information about program features, you can access the help program in any of the following ways:



- From the Extron Electronics program group, double-click on the Universal Switcher Help icon.
- From within the Windows-based switcher control program, click on the Help entry on the task bar.
- From within the Windows-based switcher control program, press the F1 key.

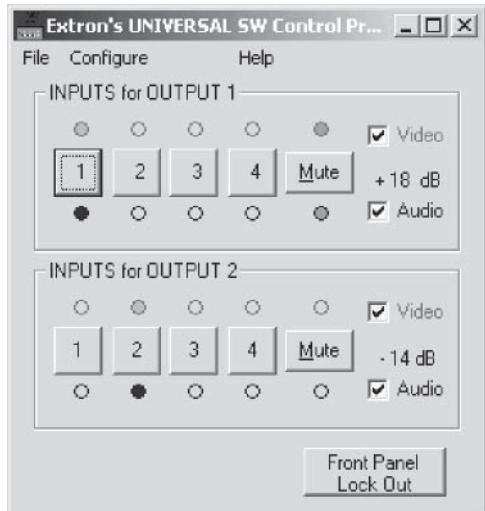


Figure 5-1 — Universal Switcher Control Program Main Menu window

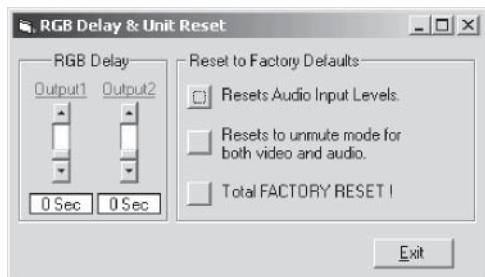


Figure 5-2 — RGB Delay and Unit Reset window

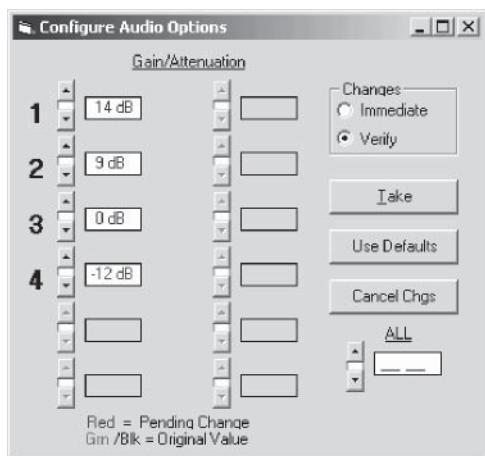


Figure 5-3 — Configure Audio Options window

Matrix Software, cont'd



CrossPoint 42 HVA Matrix Switcher

Appendix A

Specifications and Part Numbers

Specifications

Part Numbers

Specifications and Part Numbers

Video

Routing	4 x 2 matrix
Gain	Unity
Bandwidth	300 MHz (-3dB), fully loaded 0 - 40 MHz no more than +0.1dB to -0.1dB 0 - 230 MHz no more than +2.0dB to -0.1dB
Crosstalk	-55dB @ 10 MHz, -45dB @ 30 MHz, -30dB @ 100 MHz
Switching speed	200 ns (max.)

Video input

Number/signal type	4 RGBHV, RGBS, RGsB, RsGsBs, HDTV, component video, S-video, composite video
Connectors	4 x 5 BNC female
Minimum/maximum levels	Analog 0.5V to 2.0V p-p
Impedance	75 ohms
Return loss	-30dB @ 5 MHz
Maximum DC offset	1.2V

Video output

Number/signal type	2 RGBHV, RGBS, RGsB, RsGsBs, HDTV, component video, S-video, composite video
Connectors	2 x 5 BNC female
Minimum/maximum level	-0.5V to 2.0V p-p
Impedance	75 ohms
Return loss	-30dB @ 5 MHz
DC offset	±5mV maximum with input at 0 offset
Switching type	Triple-Action

Sync

Input type	RGBHV, RGBS, RGsB, RsGsBs
Output type	RGBHV, RGBS, RGsB, RsGsBs
Input level	0.5V to 5.0V p-p, 4.0V p-p normal
Output level	AGC to TTL 4V to 5V p-p
Input impedance	75 or 510 ohms, switchable
Output impedance	75 ohms
Polarity	Positive or negative (follows input)

Audio

Routing	4 x 2 stereo matrix
Gain	Unbalanced -6dB, balanced 0dB
Frequency response	20 Hz to 20 kHz, ±0.05dB
THD + Noise	0.04% @ 1 kHz at rated maximum output drive
S/N	>90dB, balanced, at rated maximum output drive (21dBu)
Adjacent input crosstalk	<-90dB @ 1 kHz, fully loaded
Stereo channel separation	>90dB @ 1 kHz
CMRR	>75dB @ 20 Hz to 20 kHz

Audio input

Number/signal type	4 stereo, balanced/unbalanced
Connectors	4 3.5 mm captive screw connectors, 5 pole
Impedance	>10 kohms unbalanced/balanced, DC coupled
Maximum level	+19.0dBu, (balanced or unbalanced) at stated %THD+N
Input gain adjustment	-18dB to +24dB, adjustable per input by RS-232 or front panel
CMRR	>75dB @ 20 Hz to 20 kHz

Audio output

Number/signal type	2 stereo, balanced/unbalanced
Connectors	2 3.5 mm captive screw connectors, 5 pole
Impedance	50 ohms unbalanced, 100 ohms balanced
Gain	Unbalanced -6dB, balanced 0dB
Gain error	±0.1dB channel to channel
Maximum level (Hi-Z)	>+21dBu, balanced or unbalanced at stated %THD+N
Maximum level (600 ohm)	>+15dBm, balanced or unbalanced at stated %THD+N

NOTE 0dBu = 0.775 volts (RMS).

Control/remote — switcher

Serial control port	1 RS-232, 9-pin female D connector
Baud rate and protocol	9600, 8-bit, 1 stop bit, no parity
Serial control pin configurations	2 = TX, 3 = RX, 5 = GND
Program control	Extron's control program for Windows® Extron's Simple Instruction Set™ – SIS™

General

Power	100VAC to 240VAC, 50/60 Hz, 40 watts, internal, auto-switchable
Temperature/humidity	Storage -40° to +158°F (-40° to +70°C) / 10% to 90%, non-condensing Operating +32° to +122°F (0° to +50°C) / 10% to 90%, non-condensing
Rack mount	Yes
Enclosure type	Metal
Enclosure dimensions	1.75" H x 17.5" W x 9.5" D (1U high, full rack width) (4.4 cm H x 44.5 cm W x 24.1 cm D) (Depth excludes connectors. Width excludes rack ears.)
Product weight	4.9 lbs (2.2 kg)
Shipping weight	8 lbs (3.6 kg)
Vibration	NSTA 1A in carton (International Safe Transit Association)
Listings	UL, CUL
Compliances	CE, FCC Class A, VCCI, AS/NZS, ICES
MTBF	30,000 hours
Warranty	3 years parts and labor

NOTE Specifications are subject to change without notice.

Specifications and Part Numbers, cont'd

Part Numbers

CrossPoint part numbers

Extron Part	Part #
CrossPoint 42 HVA	60-504-01
Windows Universal Switcher Control Program	29-031-01
CrossPoint 42 HVA Matrix Switcher User's Manual	68-654-01
Rack mounting kit	70-077-03
Under desk mounting kit	70-222-01

Optional accessories

Extron Part	Part #
MKP 1000	
Gray	60-239-01
Black	60-239-02
White	60-239-03
MCP 1000M (master)	60-298-01
MCP 1000S (slave)	60-298-02
Captive screw audio connector	10-319-14
RCA-to-BNC adapter	10-264-01
SVHS - BNC adapter	26-353-01

Cables

When using signals with a scanning frequency of 15-125 kHz and running distances of 100 feet or more, use high resolution BNC cables to achieve maximum performance.

Bulk cable

Extron Part	Part #
Super High Resolution Cable	
Bulk SHR-1, 500'	22-098-02
Bulk SHR-1, 1000'	22-098-03
Bulk SHR-4, 500'	22-099-02
Bulk SHR-5, 500'	22-100-02
BNC SHR crimp connectors, qty. 50	100-075-51

BNC-4 Mini HR Cable

Bulk BNC 4-500' HR	22-032-02
Bulk BNC 4-1000' HR	22-032-03

BNC-5 Mini HR Cable

Bulk BNC 5-500' HR	22-020-02
Bulk BNC 5-1000' HR	22-020-03

Plenum BNC-5 Mini HR Cable

Bulk BNC 5-500' HRP	22-103-02
Bulk BNC 5-1000' HRP	22-103-03

Plenum Seventeen Conductor Installation Cable

Bulk install plenum, 500'	22-111-03
Bulk install plenum, 1000'	22-111-04

Assorted connectors

BNC connectors

BNC Mini HR crimp connectors, qty. 50	100-074-51
BNC Super High Resolution crimp connectors, qty. 50	100-075-51
BNC bulkhead connectors, qty. 50 (for custom wall plates)	100-076-51

Pre-cut cables

BNC-4 Mini HR cable is used for RGBS cable runs, and BNC-5 Mini HR cable is used for RGBHV cable runs. Either type can also be used for composite video, S-video, or RGsB. All Extron BNC cables have male connectors on both ends. A plenum version of the BNC-5 Mini HR cable is also available.

Extron Part	Part #
BNC-4 Mini HR Cable	
BNC-4-25' MHR (25 feet/7.5 meters)	26-210-04
BNC-4-50' MHR (50 feet/15.0 meters)	26-210-05
BNC-4-75' MHR (75 feet/23.0 meters)	26-210-06
BNC-4-100' MHR (100 feet/30.0 meters)	26-210-07
BNC-4-150' MHR (150 feet/45.0 meters)	26-210-08
BNC-4-200' MHR (200 feet/60.0 meters)	26-210-09
BNC-4-250' MHR (250 feet/75.0 meters)	26-210-54
BNC-4-300' MHR (300 feet/90.0 meters)	26-210-53
BNC-5 Mini HR Cable	
BNC-5-25' MHR (25 feet/7.5 meters)	26-260-03
BNC-5-50' MHR (50 feet/15.0 meters)	26-260-04
BNC-5-75' MHR (75 feet/23.0 meters)	26-260-16
BNC-5-100' MHR (100 feet/30.0 meters)	26-260-05
BNC-5-150' MHR (150 feet/45.0 meters)	26-260-12
BNC-5-200' MHR (200 feet/60.0 meters)	26-260-06
BNC-5-250' MHR (250 feet/75.0 meters)	26-260-18
BNC-5-300' MHR (300 feet/90.0 meters)	26-260-14

NOTE Bulk cable in lengths up to 5000' rolls is available with or without connectors.

Specifications and Part Numbers, cont'd



CrossPoint 42 HVA Matrix Switcher

B

Appendix B

Reference Information

Hardware Upgrades

Reference Information

Hardware Upgrade and Maintenance

This appendix contains procedures for installing a new firmware update and replacing the AC fuse.

Opening the switcher

Before you can perform the hardware upgrade or maintenance procedures, you must open the switcher. The interior of the CrossPoint 42 switcher is accessed by removing the top cover.

To open the CrossPoint 42, do the following:

1. Disconnect the power cord from the switcher.
2. If the switcher is rack mounted, remove the switcher from the rack and place it on a clean workspace.
3. Remove the 14 screws that secure the switcher's top cover as shown in figure B-1.

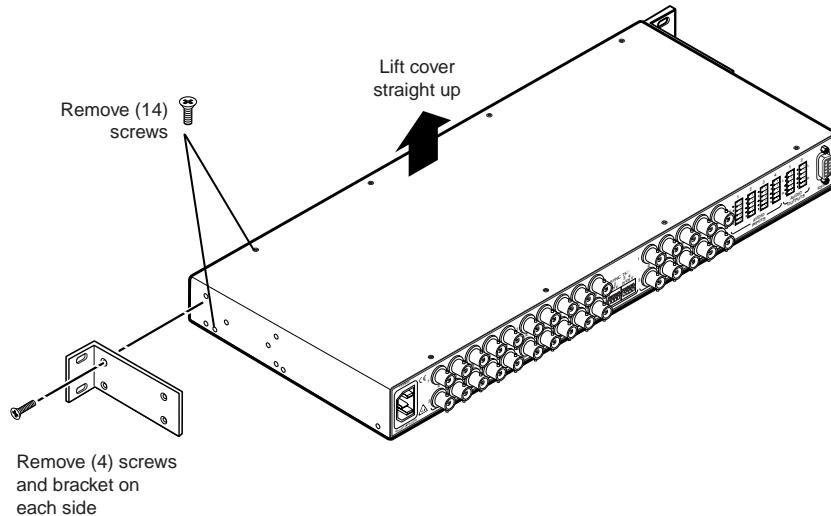


Figure B-1 — Removing the top cover

4. Lift the top cover straight up as shown in figure B-1. Lift the cover evenly to clear the grooves at the edge of the rear panel.

Closing the switcher

1. Reinstall any cables removed. To plug a self-latching cable into the desired receptacle, align the holes in the connector with the pins in the receptacle, then press evenly until the receptacle tabs lock into place.
2. Place the top cover in place and replace all the screws removed in *Opening the switcher* on page B-2.

Installing a firmware update

NOTE *The IC that contains the firmware for the matrix switcher also contains the memory in which audio levels are saved. When you replace the IC, these settings will be lost. You may want to record the audio levels before you replace the IC.*

To replace the firmware, do the following:

1. Follow the instructions in *Opening the switcher* on page B-2, to gain access to the interior of your switcher.
2. Remove the four screws at the front edge of the bottom cover, releasing the front panel, then lay the front panel down, with the front panel circuit board still attached, in front of the switcher.

NOTE *Do not touch the components inside the switcher without being electrically grounded. Electrostatic discharge (ESD) can damage ICs, even if you cannot feel, see, or hear it.*

3. Locate IC U3 (figure B-3).

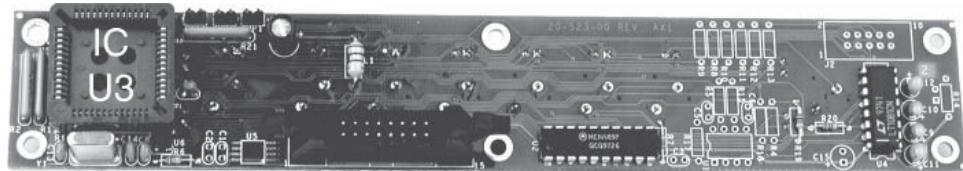


Figure B-3 — Front panel board

4. Use the PLCC IC puller to remove the existing firmware IC. Squeeze the tool to align its hooks with the slots in opposite corners of socket U3. Insert the hooks, squeeze gently, and pull the IC straight out of the socket. Set the IC aside.
5. Note the key (angled corner) of the new firmware IC and the dot on the underside that indicates pin 1 (figure B-4). Orient the IC to match the key and pin 1 (indicated by arrow) on the socket, and carefully press the IC in place.

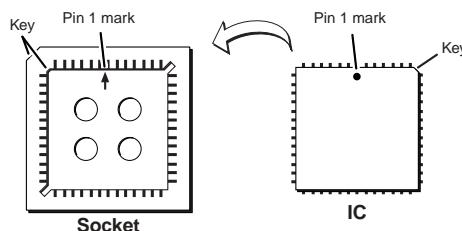
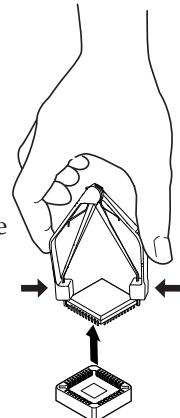


Figure B-4 — Key and pin-1 mark

6. Reinstall the switcher's front panel and cover. See *Closing the switcher* on page B-2.

WARNING *If you choose to check for proper operation before putting the cover back on, ensure that tools and hands are outside the switcher, then perform step 7. After recognizing the new IC, the switcher should power up normally. Unplug the AC power cord, and reinstall the cover.*

7. Reinitialize the switcher to recognize the new IC as follows:
 - a. Connect the power cord to the AC power source.
 - b. Press and **hold** the Conf/Save button while you connect the power cord to the switcher.
 - c. Observe that the Input, Output, and I/O LEDs all flash.
 - d. Release the Conf/Save button.

Reference Information, cont'd

8. Ensure that the switcher is working properly.
9. If the switcher was removed from a rack, remove its power cord, reattach the switcher to the rack, and reconnect the power cord.
10. Reconnect the input and output cables.

Replacing the AC fuse

The AC fuse on the power supply board is a user-replaceable component of the CrossPoint 42. To replace the AC fuse, do the following:

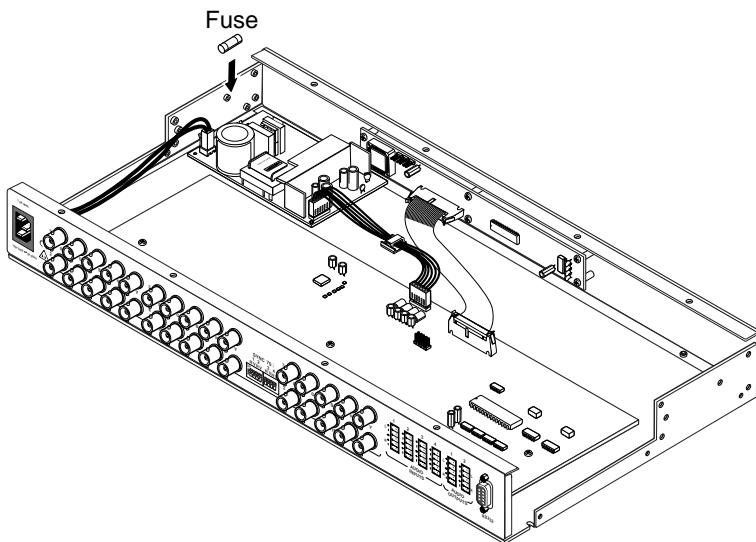


Figure B-5 — Replacing the AC Fuse

1. Follow the instructions in *Opening the switcher* on page B-2 to remove the top cover.
2. Locate the fuse on the power supply board (see figure B-5), and remove it from its retaining clips.
3. If test equipment is available, you can check the fuse.
4. Place a new 2A/250V fast-blow fuse in the retaining clips.
5. Reinstall the switcher's cover. See *Closing the switcher* on page B-2.

WARNING

If you choose to check the switcher for proper operation before putting the cover back on, ensure that tools and hands are outside the switcher, then connect the power cord to the unit and to an AC source. The switcher should power up normally. Unplug the AC power cord and reinstall the cover.

6. Attach the power cord to the switcher and to the AC power source. Make sure the switcher is working properly.
7. If the switcher was removed from a rack, remove its power cord, reattach the switcher to the rack, and reconnect the power cord.
8. Reconnect the input and output cables.

FCC Class A Notice

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

Note: This unit was tested with shielded cables on the peripheral devices. Shielded cables must be used with the unit to ensure compliance.

Extron's Warranty

Extron Electronics warrants this product against defects in materials and workmanship for a period of three years from the date of purchase. In the event of malfunction during the warranty period attributable directly to faulty workmanship and/or materials, Extron Electronics will, at its option, repair or replace said products or components, to whatever extent it shall deem necessary to restore said product to proper operating condition, provided that it is returned within the warranty period, with proof of purchase and description of malfunction to:

**USA, Canada, South America,
and Central America:**

Extron Electronics
1230 South Lewis Street
Anaheim, CA 92805, USA

Europe, Africa, and the Middle East:

Extron Electronics, Europe
Beeldschermweg 6C
3821 AH Amersfoort
The Netherlands

Asia:

Extron Electronics, Asia
135 Joo Seng Road, #04-01
PM Industrial Bldg.
Singapore 368363

Japan:

Extron Electronics, Japan
Daisan DMJ Bldg. 6F,
3-9-1 Kudan Minami
Chiyoda-ku, Tokyo 102-0074
Japan

This Limited Warranty does not apply if the fault has been caused by misuse, improper handling care, electrical or mechanical abuse, abnormal operating conditions or non-Extron authorized modification to the product.

If it has been determined that the product is defective, please call Extron and ask for an Applications Engineer at (714) 491-1500 (USA), 31.33.453.4040 (Europe), 65.6383.4400 (Asia), or 81.3.3511.7655 (Japan) to receive an RA# (Return Authorization number). This will begin the repair process as quickly as possible.

Units must be returned insured, with shipping charges prepaid. If not insured, you assume the risk of loss or damage during shipment. Returned units must include the serial number and a description of the problem, as well as the name of the person to contact in case there are any questions.

Extron Electronics makes no further warranties either expressed or implied with respect to the product and its quality, performance, merchantability, or fitness for any particular use. In no event will Extron Electronics be liable for direct, indirect, or consequential damages resulting from any defect in this product even if Extron Electronics has been advised of such damage.

Please note that laws vary from state to state and country to country, and that some provisions of this warranty may not apply to you.



www.extron.com

Extron Electronics, USA
1230 South Lewis Street
Anaheim, CA 92805
USA
714.491.1500
Fax 714.491.1517

Extron Electronics, Europe
Beeldscherweg 6C
3821 AH Amersfoort
The Netherlands
+31.33.453.4040
Fax +31.33.453.4050

Extron Electronics, Asia
135 Joo Seng Road, #04-01
PM Industrial Building
Singapore 368363
+65.6383.4400
Fax +65.6383.4664

Extron Electronics, Japan
Daisan DMJ Building 6F
3-9-1 Kudan Minami
Chiyoda-ku, Tokyo 102-0074 Japan
+81.3.3511.7655
Fax +81.3.3511.7656