

English Winder

EZ1010 Series RCA Small Wonder Camcorder www.mvsmallwonder.com

Congratulations on purchasing your new RCA Small Wonder Camcorder.

Please read these instructions for quick tips on using the product.

 
The User Manual PDF file can also be found in the camcorder memory under the User Manuals folder

1. Content of the box

- Small Wonder Camcorder
- USB cable
- AV cable
- Tripod
- Carrying case

2. Battery Installation









4 x AAA batteries

Ouick Start Guide

Warranty leaflet

Owner Registration card

Wrist stran

3. General controls microSD card slot



4. Inserting (or removing) memory card

The camcorder internal memory will only permit minutes of recording time. A microSD memory card (not included) is recommended for recording.




To remove card. Push card in until a click is heard then slowly release the card. As card is under minimal tension when locked in memory slot, please use care when removina.

To insert card: Push the card in until a click is heard


As the memory card is small in size, it is recommended to use a small coin to help insert or remove it

5. Turning on the camcorder

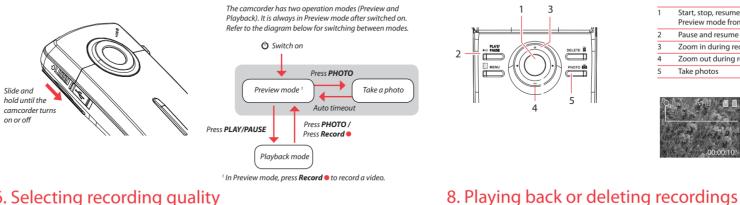

 6. Selecting recording quality






HQ 640 x 480 @ 30fps 8 hours	Settings	Resolutions (pixel) & Frame Rates (FPS)	Approx. recording duration on a 16 GB memory card ²
WohO 440 v 226 ⊕ 20fms 16 hours	HQ	640 x 480 @ 30fps	8 hours
wend 440 x 330 @ 301ps 10 flours	WebQ	448 x 336 @ 30fps	16 hours

² Actual recording time and capacity will vary depending on type of video content being recorded, system requirements, and other factors.

 7. Video recording and photo taking




QuickTime

- Start ston resume recording in Preview mode: enter Preview mode from other modes
- Pause and resume recording

Enter Playback mode to play the most recent recording

Enter Preview mode from playback mode: take photos

 - Zoom in during recording
- 4 Zoom out during recording
- Take photos



start or pause playback

Cue to previous recording

Cue to next recording

Adjust volume during playback

Enter Preview mode from Playback mode

Press to select delete one or all recordings.

file in the **RCAMacInstallers** volume to install the RCA Detective application.

To ensure that videos can be managed and played on your PC:

9. Installing RCA Memory Manager application

Mac: Open the mounted volume labeled SMALLWONDER on the desktop. Double-

click the **RCAMacInstallers.dmg** disk image in the SMALLWONDER volume. Locate

the **RCAMacInstallers** volume on the desktop and Double-click on it. Double-click the

MemoryMgr3 Mac Installer file in the RCAMacInstallers volume to start the installation. After

the Memory Manager 3 installation has completed, double-click the RCA Detective Installer

Windows: Open My Computer and double-click the drive labeled SMALLWONDER. Double-

Connect the camcorder to your PC with the provided USB cable.

click MemoryMgr3 Windows Installer.exe to start the installation

Make sure to install the included Memory Manager application.

10. Learning more about the camcorder

Read the user manual for more information on the followings:

- Using the **MENU** button to setup the camcorder (including date and time)
- Viewing videos on TV

To install Memory Manager 3

- Recording videos to VHS tape or DVD
- Connecting the camcorder to your PC
- Tips and troubleshooting
- Safety and warranty information



Visit http://store.audiovox.com to fin the best accessories for your products

© 2010 Audiovox Accessorie 1 Congressional Blvd., Suite 35 Carmel, IN 4603 Trademark Registere