



12-934

AM/FM stereo headset radio

Thank you for purchasing your AM/FM Stereo Headset Radio from RadioShack.



NOTE: Actual product may vary from the images found in this document.

what's included

AM/FM Stereo Headset

User's Guide

Please read this user's guide before installing, setting up and using your new product.

www.radioshack.com

installing the battery

Your headset requires one AAA battery (not included, available at RadioShack or online at www.radioshack.com). When the sound weakens, replace the battery.



1. Open the battery compartment cover. Replace when finished.
2. Place the battery in the compartment as indicated by the polarity symbols (+ and -).

battery notes

- *Dispose of old battery promptly and properly. Do not burn or bury it.*
- *Use only a fresh battery of the required size and recommended type.*
- *If you do not plan to use your radio for a month or longer, remove the battery. Batteries can leak chemicals that can damage electronic parts.*

the FCC wants you to know

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your local RadioShack store or an experienced radio/TV technician for help.
- If you cannot eliminate the interference, the FCC requires that you stop using your equipment. Changes or modifications not expressly approved by RadioShack may cause interference and void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

limited ninety-day warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. For complete warranty details and exclusions, check with your local RadioShack store.



RadioShack Customer Relations
300 RadioShack Circle, Fort Worth, Texas 76102

04/04

using your radio

using the radio

Adjust the head band.

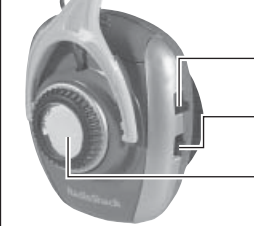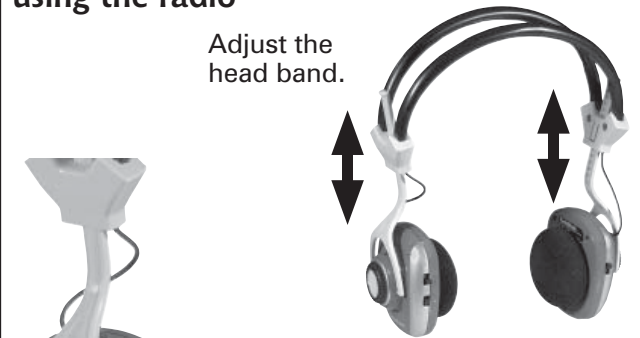

POWER OFF/ON

BASS BOOST OFF/ON

VOLUME

Rotate to adjust volume.



FM/FMST/AM

Switch to select band.

AM/FM Tuner

Rotate to select station.

listening safely

To protect your hearing when using your headset radio, set the volume to the lowest setting before you begin listening. Then, adjust it to a comfortable level. Wearing headphones while driving a car or riding a bicycle can create a traffic hazard and can be illegal in some areas.

caring for your radio

Keep the headset dry. If it gets wet, wipe it dry immediately. Use and store the headset only in room temperature environments. Handle the headset carefully. Do not drop it. Keep the headset away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.