

DC14S: User Guide


Digital Camera

DC14S: User's Guide



slick®


In the box:

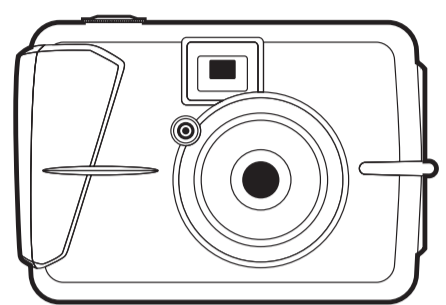

Digital Camera



Installation CD

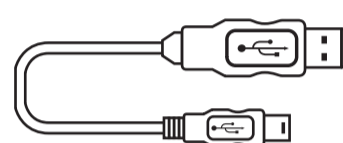


USB Cable



User Guide

Installing the batteries

Requires 2 AAA batteries (Not included)

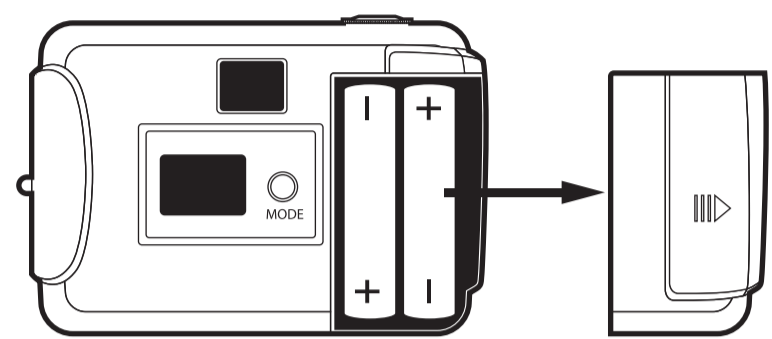

Battery cover

Installing the batteries

1. Open the battery cover by sliding it in the direction of the arrow.
2. Insert 2 alkaline "AAA" size batteries into the compartment.
3. Replace the battery cover.


Installing the camera & webcam drivers

You must install the camera & webcam drivers that are provided on the included CD before connecting the camera to your computer for the first time. Follow the directions below to install the drivers on to your computer:


1. Insert the provided CD to the CD-ROM drive of your computer, and click on "Camera & Webcam Driver".



Installation CD

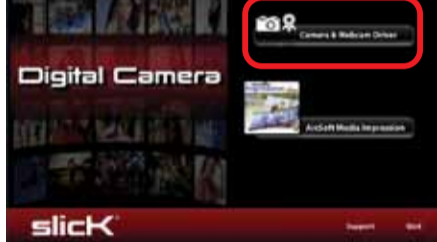

Location of controls

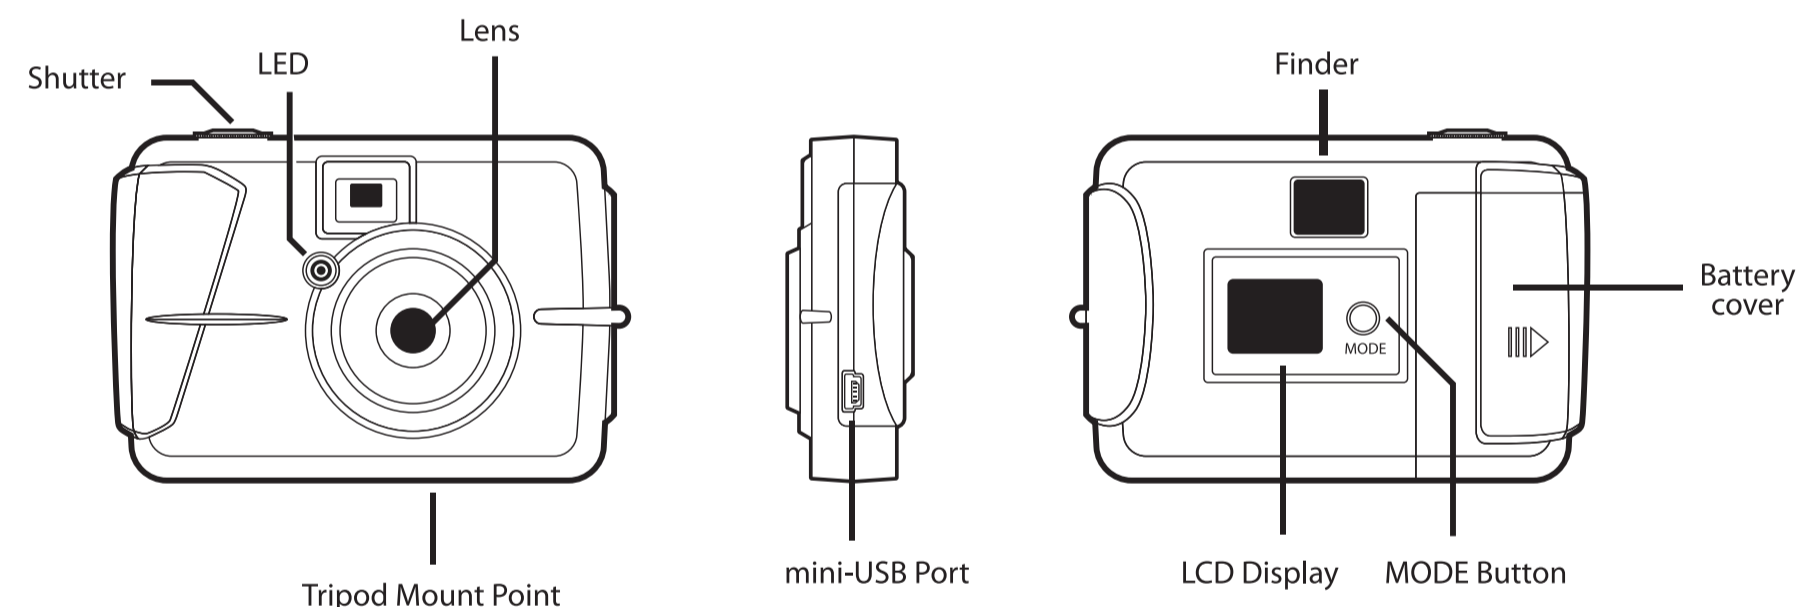

Tripod Mount Point

mini-USB Port

LCD Display

MODE Button

Battery cover

2. Click "Install".




3. Click "Next" and "Finish" (Your computer will have to restart to install the software).




The screenshots may differ slightly depending on your computer's operating system.

4. When your computer restarts, the "MyDSC2" folder, which contains the camera and webcam drivers will be on your computer's "Desktop".

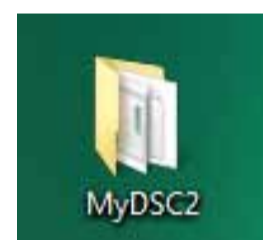


Understanding the LCD display

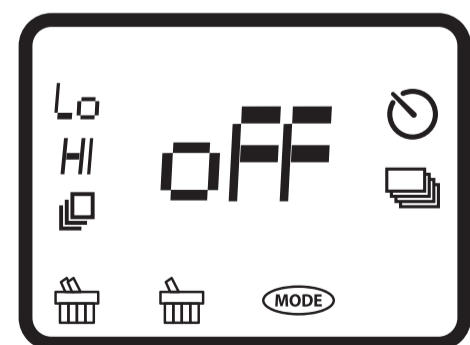

- Power off the camera
- Self timer
- Video clip mode
- Multi shoot (take three photos continuously)
- Delete all
- Delete last
- Resolution (HI/LO)
- Compression (Hd/Ld)

Using your camera

Turning the camera ON/OFF

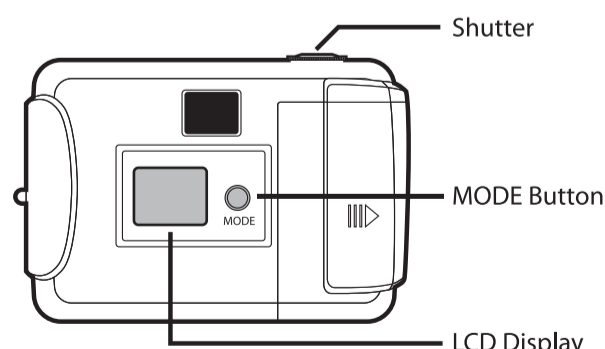

- Press the [**MODE**] button to turn the camera **ON**, the remaining picture capacity will be displayed.

- Press the [**MODE**] button until "OFF" is displayed on the screen, then quickly press the [**Shutter**] button and the display will turn **OFF**.

Taking a picture

Compose your shot using the viewfinder, hold the camera steady and make sure that there is sufficient lighting before taking a picture or video clip.

1. Press the [**MODE**] button to turn on the camera.
2. The remaining picture capacity is displayed.
3. Press and release the [**Shutter**] button.



1. Press the [**MODE**] button until you see the Video Clip Mode (📹) icon in the display.
2. Within 5 seconds, press and HOLD the [**Shutter**] button until you would like to stop shooting, or until the memory is full (the display shows rotating lines and the camera will beep once for every photo taken until the [**Shutter**] button is released).

Note: The Video Clip Mode requires bright lighting conditions. If there is insufficient lighting, the video clip will fail.

After taking a picture or video clip, the remaining available pictures that may be taken are displayed. If you attempt to take a picture when the memory is full, the camera will beep. To clear the camera's memory, either delete or transfer to your computer some of the pictures or video clips.

Deleting one picture

- To delete the last photo or video clip taken, press the [**MODE**] button until the "Delete Last" icon (🗑️) is displayed, and quickly press the [**Shutter**] button to delete.

The Photo Counter will increase based on what has been deleted (a deleted picture will increase the remaining photos by 1, while the result of deleting a video clip will vary depending on how long the clip was).

Deleting all

- To delete all the pictures and video clips and clear the camera's memory, press the [**MODE**] button until the "Delete All" icon (🗑️) is displayed, and quickly press the [**Shutter**] button (the photo counter will flash) quickly press the [**Shutter**] button once again to delete all.

The Photo Counter will display the maximum number of pictures that can be taken based on the compression and resolution settings selected.

Photo quality setting

Self timer

- Press the [**MODE**] button until the "Self timer" icon is displayed and then quickly press the [**Shutter**] button. The camera will beep as it counts down from 10 seconds and take a picture.



Multi shoot

- Press the [**MODE**] button until the "Multi shoot" icon is displayed and quickly press and release the [**Shutter**] button. The camera will take 3 continuous pictures.



Photo resolution setting

You may select from 2 photo resolutions

- "HI" (CIF 352 X 288 resolution) - 18 pictures
- "LO" (QCIF 176 X 144 resolution) - 64 pictures

Switch resolution

1. Press the [**MODE**] button until the [**MODE**] icon is displayed. [1~2]
2. Quickly press the [**Shutter**] button. [3]

The remaining available pictures will increase or decrease based on your selection.

Photo compression setting

To get even more pictures from your camera's memory, you can select "Hd" (the high compression mode) or "Ld" (low compression mode). Refer to the chart below to see how the compression mode affects the picture capacity.

Switch compression

- Press the [**MODE**] button until the display shows "Hd" or "Ld" as the image on the right. Then press the [**Shutter**] button to switch the compression mode.



Quality	Setting (resolution) + (compression)
Highest	HI (resolution) + Ld (compression) = 18 Photos
Higher	HI (resolution) + Hd (compression) = 50 Photos
Lower	LO (resolution) + Ld (compression) = 64 Photos
Lowest	LO (resolution) + Hd (compression) = 150 Photos

Frequency Selection ("50" or "60" HZ)

Your camera is set to 60HZ by default, if you need to change the frequency follow the steps below:

1. Press the [**MODE**] button until you see "50" in the display and quickly press the [**Shutter**] button. To return back to the default setting (60HZ) press the [**MODE**] button until you see "60" in the display and quickly press the [**Shutter**] button.


60HZ (default setting) - For the USA and North America
50HZ - For Europe and Asia

The incorrect frequency setting could result in poor images or video.

Transferring pictures or video clips to PC

Before connecting the camera to your computer for the first time, you must first install the drivers provided on the included CD. Please refer to "Installing the camera and webcam drivers".

1. Connect the camera to your computer's USB port.
2. Open the "MyDSC2" folder located on your computer's "Desktop" and click on the "MyDSC2" icon.

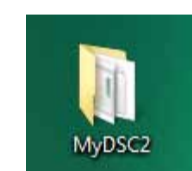

3. Click "Download" to load your pictures.

4. Select the pictures or video clips you would like to transfer to your computer by either clicking on them, or click "Select all" to select all the files displayed.
5. Click "Edit" to edit pictures

6. Click "Save", and choose a destination on your computer to transfer the pictures (We recommend sending them to the "My Pictures" folder or your computer's "Desktop").




Video clip file

Select all

Webcam feature

Your Digital Camera may also be used as a webcam. This feature is quite useful if you would like to utilize the video function on Skype™ and other similar applications. Before using webcam feature, make sure that you have already installed the WebCam driver.

1. Connect the camera to your computer via USB cable.
2. The computer will recognize your camera as a webcam.

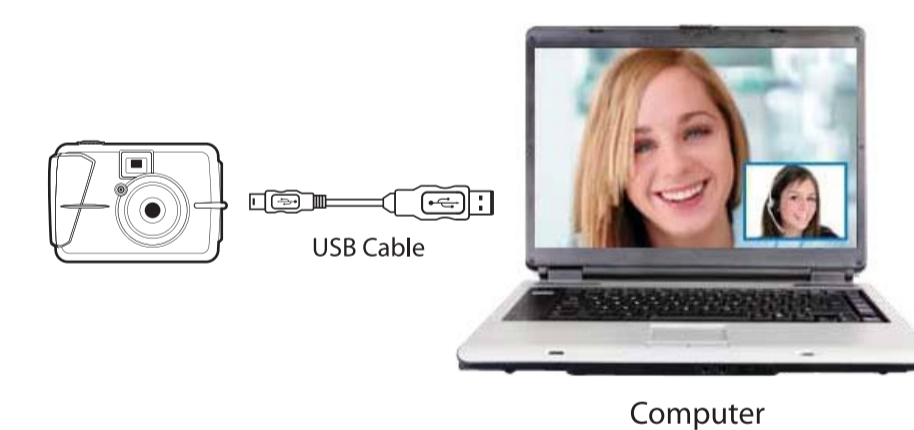

Computer

Install ArcSoft® Media Impression Software

Installing

Install the included ArcSoft® Media Impression Software before connecting the camera to your computer. With this software you will be able to manage, view, edit, transfer, and easily upload / share your videos and pictures. Follow the instruction below to install the Media Impression software onto your computer.



1. Insert the provided CD into your computer's CD-ROM drive of your computer, and click on "ArcSoft Media Impression".
2. Click "Install".
3. Click "Next" when prompted and "Finish".
4. To open Media Impression, click on the "Media Impression" icon.

FCC information

FCC Part 15

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not attempt to repair or modify this equipment.
Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Safety Precautions

Always follow these basic safety precautions when using your camera. This will reduce the risk of product damage and personal injury.

- Do not disassemble, repair or modify the camera by yourself. Refer servicing to qualified personnel.
- If the LCD display breaks, do not touch the glass or liquid, and contact customer support.
- The use of a NON-RECOMMENDED accessory may cause fire, electric shock, or injury. For approved accessories, please contact customer support.
- Keep the camera away from direct sunlight and any direct heat source.
- Do not expose the camera to rain or moisture.
- Avoid using the camera in dry environments to avoid static.
- Never apply heavy impact on the player, or place it on a magnet.
- When connecting the camera to a computer or TV, route the cable so that people and pets are not likely to trip over it.
- Clean only with a dry cloth. Make sure the player is turned off before cleaning. Do not use a liquid cleanser.

Important Battery Precautions

- Use only the type of battery specified in this user manual.
- Batteries may present a risk of fire, explosion, or chemical burn if abused. Do not try to charge a battery that is not intended to be recharged.
- Do not dispose of the battery (ies) in a fire. They may explode. Check with local codes for disposal instructions.
- Non-rechargeable batteries, such as alkaline batteries, may leak if left in your product for a long period of time. Remove the batteries from the product if you are not going to use it for a month or longer.
- If your product uses more than one battery, do not mix different types of batteries. Make sure you replace the old, with all new batteries. Mixing different types of batteries or inserting them incorrectly, may cause them to leak.
- In the event that the battery is leaking, do not handle the device with your bare hands. Contact the service center for help since the liquid may remain in the player. If your body or clothes had contact with the battery liquid, wash it off thoroughly with water. Also, if some liquid gets into your eyes, do not rub your eyes but immediately wash them with clean water and consult a doctor.
- Please help to protect the environment by recycling or disposing of batteries according to federal, state, and local regulations.

Warranty information

90 Days Limited Warranty

In the unlikely event that this product is defective or does not perform properly, you may within ninety (90) days from your original date of purchase return it to the authorized service center for repair or exchange.

TO OBTAIN WARRANTY SERVICE:

- Provide proof of the date of purchase within the package (Dated bill of sale).
- Prepay all shipping costs to the authorized service center, and remember to insure your return.
- Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.
- Describe the defect or reason you are returning the product.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

Warranty service not provided
This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, and unauthorized modification. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

Limitation of Warranty:
THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT.
ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED.
NO VERBAL OR WRITTEN INFORMATION GIVEN BY SOUTHERN TELECOM, INC. ITS AGENTS, OR EMPLOYEES SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. SOUTHERN TELECOM, INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF NEW YORK. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state. The shipping address of the authorized service center is:

Southern Telecom Inc.
ATTN: Returns Department
14-C 53rd Street
Brooklyn, NY 11232

Should you have any questions or problems concerning this product, please e-mail our customer service department at: cs@southern telecom.com

Made in China / Designed in the USA
Manufactured by: Southern Telecom, Inc. Brooklyn, NY 11232
© 2009 Southern Telecom, Inc. All rights reserved.
Slick is a registered trademark of Southern Telecom, Inc.
www.slickusa.com
ArcSoft and Media Impression are trademarks of ArcSoft, Inc.
Other trademarks and trade names are those of their respective owners.