



THOMSON CONSUMER ELECTRONICS
10330N. Meridian St.
Indianapolis, IN 46290

©1999 Thomson Consumer Electronics, Inc.
Trademark(s) ® Registered
Marca(s) Registrada(s)
5510330N. Meridian St.
55051470 (Rev 0)





**USER'S
GUIDE**

RP-3761



**DIGITAL CD
CLOCK RADIO**





FCC INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

In accordance with FCC requirements, changes or modifications not expressly approved by Thomson Consumer Electronics could void the user's authority to operate this product.

This device generates and uses radio frequency (RF) energy, and if not installed and used properly, this equipment may cause interference to radio and television reception.

If this equipment does cause interference to radio or television reception (which you can determine by unplugging the unit), try to correct the interference by one or more of the following measures:

- Re-orient the receiving antenna (that is, the antenna for the radio or television that is "receiving" the interference).
- Move the unit away from the equipment that is receiving interference.
- Plug the unit into a different wall outlet so that the unit and the equipment receiving interference are on different branch circuits.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions. Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, DC 20402. Please specify stock number 004-000-00345-4 when ordering copies.



WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

 THE LIGHTNING FLASH AND ARROW HEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF "DANGEROUS VOLTAGE" INSIDE THE PRODUCT.	 CAUTION RISK OF ELECTRIC SHOCK. DO NOT OPEN! CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICE TO QUALIFIED SERVICE PERSONNEL.	 THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT.
SEE MARKING ON BOTTOM / BACK OF PRODUCT		

THOMSON CONSUMER ELECTRONICS

SERVICE

This product should be serviced only by those specially trained in appropriate servicing techniques. Attach your sales receipt to the booklet for future reference or jot down the date this product was purchased or received as a gift. This information will be valuable if service should be required during the warranty period.

 
Purchase Date _____

Name of Store _____





MAINS CONNECTIONS :



MAINS OUTLET POWER SUPPLY: 120V ~60Hz

Note:

Power is fed to the unit even when it is not functioning. To cut the power supply off, the power cable must be unplugged.

For Your Safety

The AC power plug is polarized (one blade is wider than the other) and only fits into AC power outlets one way. If the plug won't go into the outlet completely, turn the plug over and try to insert it the other way. If it still won't fit, contact a qualified electrician to change the outlet, or use a different one. Do not attempt to bypass this safety feature.



The descriptions and characteristics given in this document are given as a general indication and not as a guarantee. In order to provide the highest quality product possible, we reserve the right to make any improvement or modification without prior notice.






THE DIGITAL CD CLOCK RADIO

Protection against mains power failures:


- Connect a 9-volt battery (IEC 6LR61 or NEDA 1604A)
- When the battery is used up, the digits flash on and off when the power comes back on

Battery compartment at the backside of the unit

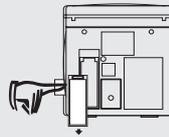

NOTE: Alkaline (IEC 6LR61/NEDA 1604A) batteries are recommended. Carbon-zinc battery may be used but memory holding time will be substantially reduced. Memory holding time for a fresh alkaline battery is approximately 8 hours (if radio or alarm are not operated) which should take care of short, nuisance-type AC power failures. To preserve battery life, the unit should remain plugged into an AC outlet. As the battery gets older, its voltage drops and memory may be lost. Be sure to replace the battery periodically. Battery should be removed if the unit will be stored for more than one month. Leaky battery can badly damage the clock radio.

 Setting time



1. Press and hold **◀** or **▶** to skip fast
2. The AM LED indicator will light to show AM time

Adjusting display brightness

You may slide **OFF DIMMER ON** on the left side of the unit to vary the LED display brightness. When you slide to **OFF**, the display will be maintained at the brightness level; slide to **ON**, the display will vary automatically according to the environment.



THE DIGITAL CD CLOCK RADIO

Listening to radio

- 1 **POWER**
Press to turn on the radio
- 2 Select AM/FM
CD
AM
FM
- 3 **TUNING**
Turn to your desired station
- 4 **VOLUME**
Adjust MIN MAX to your desired listening level

- To improve reception, you may try and:
 1. move or rotate the unit
 2. slide on the left side of the unit to MO
- To turn off the radio, press again

Sleep to CD/radio

You can drift off to sleep to CD/radio knowing that the unit will turn itself off automatically. If alarm is set, the unit will turn on again as programmed.

- 1 Listen to CD/radio (AM/FM)
- 2 Press and hold and the LED indicator will light
- 3 Press or to select time from 1 minute to 1 hour and 59 minutes (When 0 is reached, the unit goes off)

- If you decide to turn off the unit sooner, press or and this will shut off the sleep cycle.
- When sleep mode is active, subsequent presses on will show the remaining time before the unit goes off.



THE DIGITAL CD CLOCK RADIO

Listening to compact disc

- 1 Select CD AM FM
- 2 Lift to open the door
- 3 Insert a disc and close the door
- 4 Press
- 5 Adjust MIN MAX to your desired listening level

You may listen through a headphone by inserting one into PHONES on the left side of the unit. Note that while the alarm is on, the speaker will sound as well although a headphone is inserted.


Press		REPEAT	to repeat the entire disc playback and the LED indicator will light
Press		SHUFFLE	to play music randomly and the LED indicator will light
Press		PLAY/PAUSE	to pause playback
Press		STOP	to stop playback
Press		or	to select track

- If the disc compartment is empty, or the disc cannot be played, the LED message "nd" flashes.
- Do not store CDs in damp areas. Do not expose CDs to high temperatures.
- You should avoid leaving the CD door open. Dust is liable to impair performance of the laser optical unit.




THE DIGITAL CD CLOCK RADIO

Setting alarm with tone

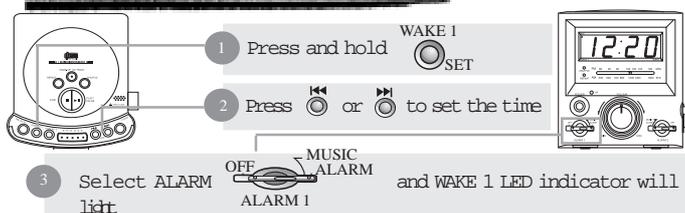

1. You cannot adjust the alarm tone volume.
2. With the **GRADUWAKE** feature, the alarm tone volume will increase gradually to its maximum in about 30 to 45 seconds.

Setting alarm with music

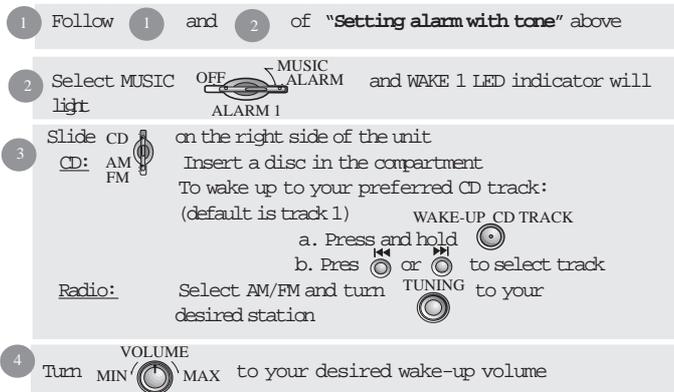

- If the CD compartment is empty, the alarm tone will sound instead when in fact MUSIC mode is selected.
- When setting ALARM 2, same procedure is followed.
- When both ALARM 1 and ALARM 2 are set to MUSIC, **ONLY 1** mode (CD or AM or FM) can be selected.



THE DIGITAL CD CLOCK RADIO

Stopping alarm

1. **To silence the alarm momentarily:**

◆ Press  and the alarm will sound again when the snooze period is over (see "Adjusting snooze duration" below)

2. **To stop alarm from sounding:**

◆ Press  and the alarm will be on again the following day at the same time

3. **To cancel alarm completely:**


◆ Slide  OFF or  OFF to OFF and the corresponding alarm(s) won't sound again the following day



• If uninterrupted, the alarms will stop sounding in 2 hours.

Adjusting snooze duration

The snooze-alarm control allows extra sleep time after the unit comes on in alarm mode. Press  will turn off the alarm until the snooze period is over. You can use the SNOOZE feature repeatedly for up to about 2 hours, after which the unit will turn off until the next alarm conditions are met.

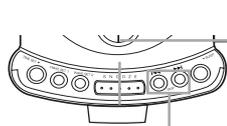

1 Press and Hold 

2 Press  or  to set the "quiet" period (default is 9 minutes) from 1 minute to 30 minutes for which the alarm momentarily goes off



LIMITED WARRANTY

What your warranty covers?

- Any defect in materials or workmanship

For how long after your purchase?

- One year.

(The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.)

What we will do:

- Provide you with a new or, at our option, a refurbished unit.
- The exchange unit is under warranty for the remainder of the original product's warranty period.

How to make a warranty claim:

- Properly pack your unit. Include any cables, etc., which were originally provided with the product. We recommend using the original carton and packing materials.
- Remove cassette tapes or CDs from unit before shipping as these will not be returned
- Include in the package evidence of purchase date such as the bill of sale. Also print your name and address and a description of the defect. Send standard UPS or its equivalent to:

Thomson Consumer Electronics, Inc.
 Product Exchange Center
 11721 B Alameda Ave.
 Socorro, TX 79927

- Pay any charges billed to you by the Exchange Center for service not covered by the warranty.
- Insure your shipment in case of loss or damage. Thomson accepts no liability in case of damage or loss.
- A new or refurbished unit will be shipped to you prepaid freight.

What your warranty does not cover:

- Customer instruction. (Your Owner's Manual provides information regarding operating instructions and user controls. For additional information, ask your dealer.)
- Installation and set-up service adjustments.
- Batteries.
- Damage from misuse or neglect.
- Products which have been modified or incorporated into other products.
- Products purchased or serviced outside the USA.
- Acts of God, such as but not limited to lightning damage.

How state law relates to this warranty:

- This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

What if you purchased your product outside the USA:

- This warranty does not apply. Contact your dealer for warranty information.

Model RP-3761
 55051470 (Rev 0 EN/E)
 11-1999

© 1999 Thomson Consumer Electronics, Inc.
 Trademark(s) ® Registered
 Marca(s) Registrada(s)

7

