


OPERATING INSTRUCTIONS FOR  
MR. COFFEE"  
INTERNATIONAL DESIGN SERIES  
COFFEEMAKER, MODEL IDS40 SERIES

Featuring...

**On/off** indicator light  
**4 cup** capacity

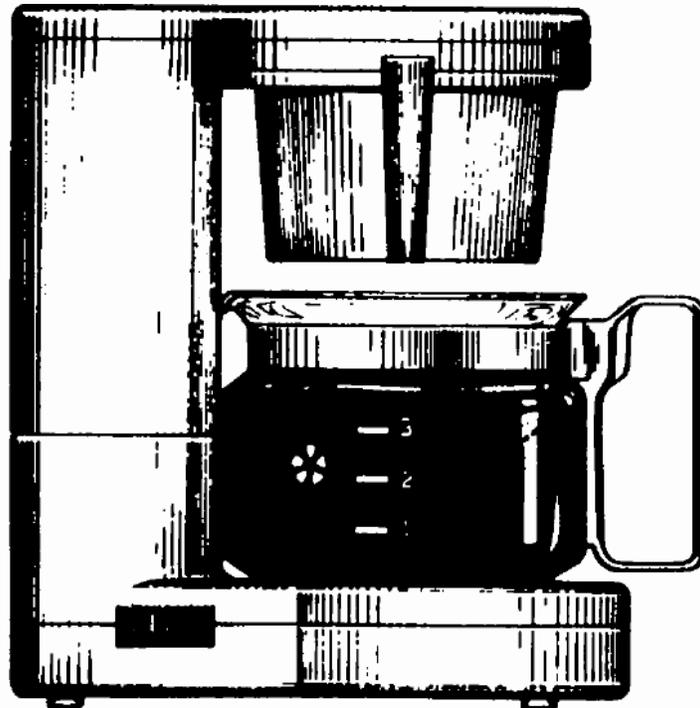

For best results,  
use genuine  
Mr. Coffee Filters

*Sunbeam*

-FOR HOUSEHOLD USE ONLY



# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Read all instructions before using the machine.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electric shock do not immerse cord, plugs, or machine in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Turn control switch OFF and unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return this appliance only to the nearest authorized service center for repair.
7. The use of accessory attachments not recommended by MR. COFFEE, inc. may cause hazards or injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place this appliance on or near a hot gas or electric burner or in a heated oven.
11. To disconnect, turn any control to "off", then remove plug from wall outlet.
12. Do not use appliance for other than intended use.
13. Use on a hard, flat level surface only, to avoid interruption of air flow underneath the appliance.
14. Decanter Use and Care'

Breakage may occur if the following instructions are not followed:

- a. This decanter is designed for use with your Mr. Coffee coffeemaker and therefore must never be used on a range top.
- b. Do not set a hot decanter on a wet or cold surface.
- c. Do not use a cracked decanter or a decanter having a loose or weakened handle.
- d. Do not clean the decanter with cleansers, steel wool pads, or other abrasive materials.

e. Discard decanter immediately if it is ever boiled dry.

f. Avoid sharp blows, scratches, or rough handling.

15. **WARNING:** To reduce the risk of fire or shock do not remove any service covers. No user serviceable parts inside. Repair should be done by authorized personnel only.

## SAVE THESE INSTRUCTIONS

---

### SPECIAL CORD SET INSTRUCTIONS

1. A short power supply cord is provided to reduce the hazards resulting from becoming entangled in, or tripping over a longer cord.
2. An extension cord may be purchased and used if care is exercised in its use.
3. If an extension cord is used, the marked electrical rating of the extension cord must be at 10 amps and 120 volts. The resulting extended cord must be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over accidentally.

### *Precautions*

#### **Do's , . . . . .**

- Avoid areas of the coffeemaker which may become hot or emit steam when the machine is "on". particularly the brew funnel and the intake screen.
- Avoid jerking or straining the power cord when unplugging. Grasp the molded plug to unplug.
- Unplug the unit when not in use.
- Unplug the unit when wiping the exterior. Use only a damp cloth to wipe.

#### **Don'ts.....**

- Do NOT place a cloth or otherwise restrict airflow beneath the appliance.
- Never reheat a beverage by passing it through the brewing system.
- Do not use abrasive or caustic cleaning compounds to clean the exterior of the unit. They can damage the surface.
- Do not store the machine until warmer plate has cooled

## ***Introduction***


Congratulations! You are the owner of a Mr. Coffee International Design Series 4-cup coffeemaker, Model IDS40 series. Our 4-cup model is available in 6 decorative colors; Stone Grey (White), Country Blue, Seasand, Black, Royal Blue, and Cardinal.

This appliance has been designed to provide you with excellent tasting fresh brewed coffee quickly and conveniently. To insure the long life of this appliance and its trouble-free operation, please read carefully all of the instructions in this booklet before you begin to use it. Save these instructions and refer to them often for cleaning and care tips...and, happy brewing!

## ***Table Of Contents***

	<b>Page #</b>
Important Safeguards .....	1-2
Cord Set Instructions .....	.2
Precautions .....	.2
Diagram of the Parts. ....	.3
Before Using .....	.4
Brewing Coffee .....	.4
Deliming and Cleaning .....	.5-6
Decanter Cleaning .....	.6
Helpful Hints. ....	.6
If Service is Required .....	.6
Limited Warranty .....	.7

## ***Diagram of Parts***

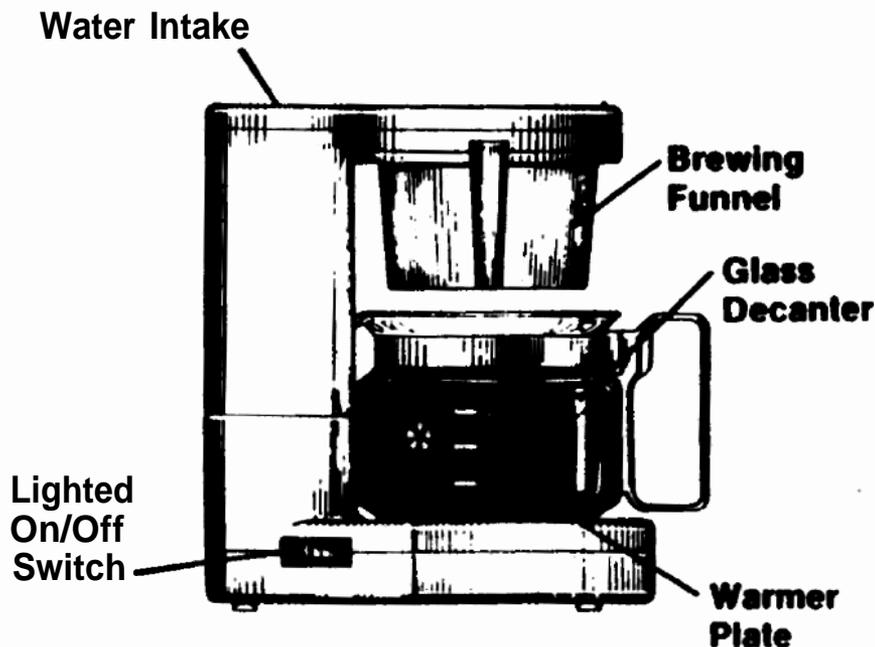

## ***Before Using Your Mr. Coffee***

Make sure your first cup of coffee is as good as can be by cleaning your Mr. Coffee coffeemaker before you use it the first time. Just follow these simple steps:

1. Wash the decanter, lid and brew funnel in a mixture of mild detergent and water. Rinse each thoroughly.
2. Slide the brew funnel into place and then follow steps #4 through #6 in the "HOW TO BREW COFFEE" section. This will clean the inside of your coffeemaker.
3. When the brew cycle is finished, turn the machine off. Pour the water out of the decanter and rinse the decanter and brew funnel.

Your coffeemaker is now ready to use.

## ***How To Brew Coffee***

1. Remove the brew funnel. Place one 4-cup Mr. Coffee paper filter inside.
2. Place coffee into the paper filter according to the coffee measurement chart below.
3. Make sure the paper filter is in the proper position then slide the brew funnel back into position.
4. Fill the decanter with tap water to desired capacity as marked on the side of the decanter. (1 cup equals 5 ounces.) To brew 4 cups of coffee, fill the decanter to the bottom of the silver band.
5. Pour the water into the intake screen. Place the empty decanter onto the warmer plate. The decanter lid should be on.
6. Plug the cord into the electrical outlet and turn the on/off switch on. When coffee stops flowing, the brewing cycle is complete.
7. Discard the used grounds and filter. Rinse the brew funnel and slide it back into place.

**Note:** The warmer plate will keep your coffee piping hot until you turn your coffeemaker off.

8. To make another pot of coffee, turn the coffeemaker off and repeat steps #1 through #7.
9. Be sure to turn the on/off switch off when the decanter is empty and you are no longer using your coffeemaker. Unplug the power cord when not in use.

---

### **COFFEE MEASUREMENT CHART**

For best results, use level tablespoons (tbls.) of drip grind or grind recommended for automatic drip coffeemakers.

<b>To brew this much coffee:</b>	<b>Use this many tablespoons:</b>
4 cups	4 level tbls.
3 cups	3 level tbls.
2 cups	2 level tbls.
1 cup	2 level tbls.

\*Use more or less coffee to suit your taste.

---

## ***Cleaning Is A Must***

Your coffeemaker must be delimed when you begin to notice an increase in steaming. If the pumping action stops before all the water has been pumped out of the machine, then the appliance requires deliming.

The frequency of cleaning depends upon the hardness of water used. The following table gives the recommended cleaning intervals.

---

### RECOMMENDED CLEANING SCHEDULE.

Type of Water	Cleaning Frequency
Soft water	every 80 brew cycles
Hard water	every 40 brew cycles

---

Your coffeemaker may be delimed by using MR. COFFEE CLEANER® or vinegar. For best results, use MR. COFFEE CLEANER. It works better than vinegar and has no unpleasant odor.

using Mr. Coffee Cleaner

(Read Caution Statement on Side Panel of Mr. Coffee Cleaner Box Before Use)

1. Fill the decanter to the 4 cup mark with warm water.
2. Empty contents of one packet of MR. COFFEE CLEANER into the decanter and stir until the cleaner is completely dissolved. This will make a clear blue solution.
3. Pour the blue solution into the coffeemaker.
4. Place the empty decanter on the warming plate and slide the brew funnel into place.
5. Turn your coffeemaker on.
6. When the blue solution has stopped flowing, turn your coffeemaker off.
7. Discard the blue solution and thoroughly rinse the decanter and brew funnel.
8. Repeat steps 1-7 with clean water only (no blue solution).
9. Continue to rinse out the unit until you see no trace of the blue solution. When completed, turn the machine off.
10. If a normal brewing flow rate is not achieved, repeat the cleaning steps 1-9.

Using vinegar.

1. Fill the decanter to the 4 cup mark with undiluted white household vinegar. Pour the vinegar into your coffeemaker.
2. Put a 4-cup paper filter into the brew funnel. Slide the brew funnel back into place.

3. Place the empty decanter on the warming plate and turn the coffeemaker on. Watch the cup markings as the vinegar flows into the decanter. When three cups have flowed through, turn the coffeemaker off, and let stand for 1/2 hour.
4. After 1/2 hour, pour the 3 cups of vinegar back into the coffeemaker.
5. Place the empty decanter on the warming plate. Turn the coffeemaker on and let all of the vinegar flow through.
6. Discard the vinegar and the paper filter.
7. To flush out all traces of vinegar, pour 4 cups of tap water into the coffeemaker and allow it all to cycle through.
8. Discard the water and turn the machine off. Repeat steps 7 and 8.

### ***Decanter Cleaning .***

Hard water can leave a whitish mineral deposit inside the decanter. Coffee and tea discolor these deposits, sometimes leaving a brownish stain inside the decanter. To remove these stains, follow these simple steps:

1. Use a hot white vinegar solution and let it soak.
2. Let it stand for about 20 minutes and then discard.
3. Wash and rinse the decanter thoroughly using a soft cloth. Do not use harsh abrasive cleaners. These will cause scratches which can lead to breakage.

### ***Helpful Hints***

Use only genuine Mr. Coffee 1-cup filters for best brewing performance. The use of chemically softened water can inhibit proper filtration. This will affect the beverage flavor and will cause a long drip time from the brew funnel. Avoid using chemically softened water.

### ***If Service Is Required***

If service is required for your Mr. Coffee machine, please consult your listing of authorized service centers packed with your brewer.

Please do not return this ~~appliance~~ to your store.

For additional information regarding service, please call our Toll-Free Number: 1-800-321-0370

Ohio residents call: 1-800-362-7604

Our office hours are 8:30 AM - 5:00 PM Eastern Time Zone Monday thru Friday.

Please include Model Number IDS40 in all communications.

## ***Limited Warranty***

Mr. Coffee, inc. warrants to the consumer that Mr. Coffee Automatic Coffee Brewer. Model Series IDS40 (except for cord set and glass parts) are free from manufacturer defects in material or workmanship for a period of one year from the date of original purchase when used in compliance with directions as outlined in the manufacturer's instructions, which will constitute reasonable and necessary maintenance by the consumer.

In case of manufacturer defects in material or workmanship, Mr. Coffee, inc. agrees to repair (remedy) a defective coffee brewer without charge.

To be covered under this warranty, repairs must be made by the **authorized Mr. Coffee Service Center** most convenient to the consumer. A list of **authorized Mr. Coffee Service Centers** is enclosed. As the consumer, you assume all cost incurred in transporting your Mr. Coffee machine to the Authorized Mr. Coffee Service Center.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Any implied warranty is limited in duration to the one year provided in this, the only, expressed warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

No responsibility is assumed for incidental or consequential damages; nor damage due to misuse or the use of any unauthorized attachment; nor assumption of responsibility for damage by use of an unspecified electrical circuit. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Warranty is void:

- If unit is subjected to service by anyone other than a service center appearing on the enclosed Authorized Mr. Coffee Service Center list.

Mr. **Coffee**, inc.  
24700 **Miles** Road, **Bedford Heights, Ohio 44146-1399**