



LG 8500 USER GUIDE

Please read this manual carefully before operating your mobile phone. Retain it for future reference.

P/N : MMBB0221201 (1.0) **H**

Important Safety Precautions

Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this user guide.

WARNING! *Violation of the instructions may cause serious injury or death.*



1. Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode.



2. Never place your phone in a microwave oven as it will cause the battery to explode.
3. Never store your phone in temperatures less than -4°F or greater than 122°F.
4. Do not dispose of your battery by fire or with hazardous or flammable materials.



5. When riding in a car, do not leave your phone or set up the hands-free kit near to the air bag. If wireless equipment is improperly installed and the air bag is deployed, you may be seriously injured.
6. Do not use a hand-held phone while driving.



7. Do not use the phone in areas where its use is prohibited. (For example: aircraft, hospital)

Important Safety Precautions



1. Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.



2. Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. This could cause a fire.



3. Do not drop, strike, or shake your phone severely. It may harm the internal circuit boards of the phone.



4. Do not use your phone in high explosive areas as the phone may generate sparks.



5. Do not damage the power cord by bending, twisting, pulling, or heating. Do not use the plug if it is loose as it may cause a fire or electric shock.



6. Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause electric shock or fire.
7. Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.

8. Do not disassemble the phone.



1. Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.
2. Do not hold or let the antenna come in contact with your body during a call.



3. Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.



4. Store the battery out of reach of children.



5. Be careful that children do not swallow any parts. This could cause asphyxiation or suffocation resulting in serious injury or death.



6. Unplug the power cord and charger during lightning storms to avoid electric shock or fire.



7. Only use the batteries and chargers provided by LG. The warranty will not be applied to products provided by other suppliers.
8. Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.
9. An emergency call can be made only within a service area. For an emergency call, make sure that you are within a service area and that the phone is turned on.

Table of Contents

Important Safety Precautions	1	Getting Started with Your Phone	13	Quick Access to Convenient Features	18
Table of Contents	4	The Battery	13	Vibrate Mode	18
Welcome	7	Installing the Battery	13	Lock Mode	18
Important Information	7	Removing the Battery	13	Mute Function	18
FCC Part 15 Class B Compliance	7	Charging the Battery	13	Volume Quick Adjustment	18
Industry Canada Compliance	7	Battery Charge Level	14	Call Waiting	19
Technical Details	8	Battery Temperature Protection	14	Caller ID	19
Technical Details	8	Turning the Phone On and Off	14	Speed Dialing	19
FCC RF Exposure Information	9	Turning the Phone On	14	Using Phone Menus	20
Bodily Contact During Operation	9	Turning the Phone Off	14	Menu Access	20
Vehicle-Mounted External Antenna	9	Signal Strength	15	Contacts	20
Caution	9	Screen Icons	15	1. List Entries	20
Phone Overview	10	Using the Touch Sensitive Keys	15	2. New Entry	21
Menus Overview	11	Making Calls	16	3. Groups	21
		Correcting Dialing Mistakes	16	4. Speed Dials	22
		Redialing Calls	17	5. Voice Dials	22
		Receiving Calls	17		

Some of contents in this user guide maybe different from your phone depending on the software of the phone or your service provider. Features and specifications might be subject to change without prior notice.

6. Erase all Contacts	22
Call History	23
1. All Calls	23
2. Dialed Calls	24
3. Received Calls	24
4. Missed Calls	24
5. Call Timers	25
6. Data Connections	25
7. Erase History	25
Messaging	26
1. Voice Mail	27
2. Text and Multimedia	27
1. Send New	27
2. Inbox	28
3. Outbox/Sent	29
4. Templates	30
5. Drafts	30
6. Saved	30
7. Erase Messages	31
8. Settings	31
9. Memory Info	32
3. Web Alerts	32

4. E-mail	33
5. IM & Chat	33
6. Short Codes	33
Wireless Web	33
Music & Media	35
1. Music	35
1.1 Music Player	35
1.2 My Music List	35
1.3 Memory Info	36
2. Ringtones	36
3. Wallpaper	36
4. Video	37
5. Camera	37
5.1 Take Photo	37
5.2 Take Video	38
6. My Albums	38
6.1 Sound Album	38
6.2 Picture Album	38
6.3 Video Album	39
6.4 Online Album	39
6.5 External Memory	39
7. TV & Radio	40

8. Memory Info	40
Shop	40
Games	41
Tools & Apps	41
1. Get New	41
2. GPS Services	42
3. Calculator	42
4. Alarm Clock	42
5. Scheduler	43
6. Notepad	43
7. Ez Tip Calc	43
8. World Clock	44
9. Voice Memo	44
Settings	45
1. Sound	46
1.1 Ringers	46
1.2 Keypad	46
1.3 Volume	47
1.4 Alerts	47
2. Display	48
2.1 Banner	48

Table of Contents

2.2 Wallpaper	48	5.3 Discovery Mode	56	Health Care Facilities	63
2.3 Backlight	48	5.4 Device Name	56	Vehicles	63
2.4 Keypad Light	48	5.5 Bluetooth Info	57	Posted Facilities	63
2.5 Clock Format	49	6. GPS	57	Aircraft	63
2.6 Menu Style	49	7. System	57	Blasting Areas	63
2.7 Dialing Font	49	7.1 Phone Info	57	Potentially Explosive Atmosphere	63
3. Games / Tools	49	7.2 System	58	For Vehicles Equipped with an Air Bag	64
3.1 Backlight Settings	49	7.3 Security	58	Charger and Adapter Safety	64
3.2 Volume	49	8. Airplane Mode	60	Battery Information and Care	64
3.3 Notifications	50	Safety	61	Safety Information	65
3.4 Others	50	TIA(Telecommunications Industry Association) Safety Information	61	Explosion, Shock, and Fire Hazards	65
3.5 Memory Info	50	Exposure to Radio Frequency Signal	61	General Warnings and Cautions	66
4. Others	50	Antenna Care	61	Avoid damage to your hearing	67
4.1 Nav. Key Shortcuts	50	Phone Operation	61	FDA Consumer Update	67
4.2 Call Setup	50	Tips on Efficient Operation	62	Consumer Information on SAR	74
4.3 Language	51	Driving	62	Accessories	76
4.4 TTY Mode	52	Electronic Devices	62	Warranty Information	77
4.5 Data Setup	53	Pacemakers	62	Index	79
4.6 Memory Info	54	Persons with Pacemakers:	62		
4.7 Touch Sensor Level	54	Hearing Aids	62		
5. Bluetooth®	55	Other Medical Devices	63		
5.1 Power	55				
5.2 Device List	56				

Congratulations for choosing the advanced and compact LG 8500 cellular phone, designed to operate with the latest digital mobile communication technology, Code Division Multiple Access (CDMA). Along with the many advanced features of the CDMA system, such as greatly enhanced voice clarity, this phone offers:

- MicroSD™ expansion slot
- Touch Sensitive Keys & Touch Key Lock
- Built-in MP3 Music Player
- Battery Temperature Protection
- Sleek and Compact Slider Design with Intenna (Intenna described as antenna throughout this user guide)
- Large, easy-to-read, 8-line backlit LCD with status icons
- Paging, messaging, Voice Mail and Caller ID
- 21-button keypad
- Long battery standby and talk time
- Menu-driven interface with prompts for easy operation and configuration
- Any Key Answer, Auto Answer, Auto Retry, One-Touch Dial and speed dialing with 99 memory locations
- Bluetooth® wireless technology
- Bilingual capabilities (English and French)

Important Information

This user's guide provides important information on the use and operation of your phone. Please read all the information carefully prior to using the phone for the best performance and to prevent any damage to or misuse of the phone. Any unapproved changes or modifications will void your warranty.

FCC Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that causes undesired operation.

Industry Canada Compliance

This phone complies with Industry Canada RSS 133. This phone complies with the Class B limits for radio noise emissions as set out in the interference causing standard entitled "Digital Apparatus" (ICES-003) of Industry Canada.

Technical Details

Technical Details

The LG 8500 is an all digital phone that operates on both Code Division Multiple Access (CDMA) frequencies: cellular services at 800 Mhz and Personal Communication Services (PCS) at 1.9 Ghz.

CDMA technology uses a feature called DSSS (Direct Sequence Spread Spectrum) that enables the phone to keep communication from being crossed and to use one frequency channel by multiple users in the same specific area. This results in a 10-fold capacity increase when compared with analog mode. In addition, features such as soft / softer handoff, hard Handoff, and dynamic RF power control technologies combine to reduce call interruptions.

The Cellular and PCS CDMA networks consist of MSO (Mobile Switching Office), BSC (Base Station Controller), BTS (Base station Transmission System), and MS (Mobile Station). The following table lists some major CDMA standards.

* TSB -74: Protocol between an IS-95A system and ANSI J-STD-008

1xRTT system receives twice as many subscribers in the wireless section as IS-95. Its battery life is twice as long as IS-95. High-speed data transmission is also possible.

CDMA Standard	Designator	Description
Basic Air Interface	TIA/EIA/IS-95A	CDMA Dual-mode Air Interface
	TSB-74	14.4kbps radio link protocol and inter-band operations
	ANSI J-STD-008 TIA/EIA-IS2000	IS-95 adapted for PCS frequency band CDMA2000 1xRTT Air Interface
Network	TIA/EIA/IS-634	MAS-BS
	TIA/EIA/IS/651	PCSC-RS
	TIA/EIA/IS-41-C	Intersystem operations
	TIA/EIA/IS-124	Non-signaling data comm.
Service	TIA/EIA/IS-96-B	Speech CODEC
	TIA/EIA/IS-99	Async Data and Fax
	TIA/EIA/IS-637	Short message service
	TIA/EIA/IS-657	Packet Data
	IS-801	Position Determination Service
	TIA/EIA/IS-707-A	High Speed Packet Data
1x EVDO Related interface	TIA/EIA/IS-856	CDMA2000 High Rate Packet Data Air Interface
	TIA/EIA/IS-878	1xEVDO Inter-Operability Specification for CDMA2000 Access Network Interfaces
	TIA/EIA/IS-866	Recommended Minimum Performance Standards for CDMA2000 High Rate Packet Data Access Terminal
	TIA/EIA/IS-890	Test Application Specification(TAS) for High Rate Packet Data Air Interface

FCC RF Exposure Information

WARNING! *Read this information before operating the phone.*

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to Radio Frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by U.S, Canada and international standards bodies.

The design of this phone complies with the FCC guidelines and these international standards.

Bodily Contact During Operation

This device was tested for typical use with the back of the phone kept 0.6 inches (1.5 cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.6 inches (1.5 cm) must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters and similar accessories containing metallic components should not

be used. Avoid the use of accessories that cannot maintain 0.6 inches (1.5 cm) distance between the user's body and the back of the phone and have not been tested for compliance with FCC RF exposure limits.

Vehicle-Mounted External Antenna

(Optional, if available.)

A minimum separation distance of 8 inches (20 cm) must be maintained between the user / bystander and the vehicle-mounted external antenna to satisfy FCC RF exposure requirements. For more information about RF exposure, visit the FCC website at www.fcc.gov.

Caution

Use only the supplied and approved antenna. Use of unauthorized antennas or modifications could impair call quality, damage the phone, void your warranty and/or result in violation of FCC regulations.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin a minor burn may result. Contact your local dealer for a replacement antenna.

Phone Overview



- 1 **Earpiece**
 - 2 **Slide** Slide up to answer an incoming call and slide it down to end the call.
 - 3 **LCD Screen** Displays messages and indicator icons.
 - 4 **Touch Keypad**
 - 5 **Left Soft Key** Use to access the menu assigned to the left screen of the phone.
 - 6 **OK Key** Use **OK** to select different options in the phone's menus.
 - 7 **Send Key** Use to place or answer calls.
 - 8 **Vibrate Mode Key** Use to set the mode (from standby mode press and hold **[* 6]** for 3 seconds).
 - 9 **Camera Lens** Keep it clean for optimal photo quality.
 - 10 **Touch Sensitive Navigation Keys** Use for quick access to Web Browser, Messaging and Call History.
 - 11 **Right Soft Key** Use to access the menu assigned to the right screen of the phone.
 - 12 **CLR Key** Deletes single spaces or characters with a quick press. Press and hold to delete entire words. Press this key once in a menu to go back one level.
 - 13 **Alphanumeric Keypad** Use to enter numbers and characters and select menu items.
 - 14 **Lock Mode Key** Use to set the lock function (from standby mode press and hold **[* 6]** for 3 seconds).
 - 15 **Side Keys** Use to adjust the ringer volume in standby mode and the earpiece volume during a call.
 - 16 **Voice Dial Key** Use for quick access to Voice Dialing.
 - 17 **Charger Port** Connects the phone to the battery charger or other available accessories.
 - 18 **Side Camera Key/Speakerphone* Key** Use for quick access to Camera function (Press and hold for 3 seconds to use the camera). During a call, use to turn on speakerphone mode (only available when a headset device or Bluetooth® headset is not connected).
 - 19 **Music Shortcut Key** Use to access the music player.
 - 20 **Power/End Key** Use to turn the power on/off and to end a call. Also use to return to the main menu display screen.
 - 21 **MicroSD™ Slot** Accommodates optional microSD cards. Supports up to 2GB.
- * indicates shortcut keys for easy access to Chocolate menus.
- * During a call, use Side Camera Key (**[* 6]**) to turn on speakerphone mode. Speakerphone function is only available while a call is in progress.

Menus Overview

1. Contacts

- 1. List Entries
- 2. New Entry
- 3. Groups
- 4. Speed Dials
- 5. Voice Dials
- 6. Erase all Contacts

2. Call History

- 1. All Calls
- 2. Dialed Calls
- 3. Received Calls
- 4. Missed Calls
- 5. Call Timers
 - 1. Last Call
 - 2. Life Time
- 6. Data Connections
 - 1. Data Transferred
 - 2. Connection Time
- 7. Erase History
 - 1. All Calls
 - 2. Dialed Calls
 - 3. Received Calls
 - 4. Missed Calls

3. Messaging

- 1. Voice Mail
- 2. Text and Multimedia
 - 1. Send New
 - 2. Inbox
 - 3. Outbox/Sent
 - 4. Templates
 - 5. Drafts
 - 6. Saved
 - 7. Erase Messages
 - 8. Settings
 - 9. Memory Info
- 3. Web Alerts
- 4. E-mail
 - Get New
 - Online e-mail
- 5. IM & Chat
 - Get New
 - Online IM

6. Short Codes

- 1. Directory
- 2. Templates

4. Wireless Web

5. Music & Media

- 1. Music
- 2. Ringtones
- 3. Wallpaper
- 4. Video
- 5. Camera
- 6. My Albums
- 7. TV & Radio
- 8. Memory Info

Menus Overview

6. Shop

7. Games

Get New

8. Tools & Apps

Get New

GPS Services

Calculator

Alarm Clock

Scheduler

Notepad

Ez Tip Calc

World Clock

Voice Memo

9. Settings

1. Sound

1. Ringers

2. Keypad

3. Volume

4. Alerts

2. Display

1. Banner

2. Wallpaper

3. Backlight

4. Keypad Light

5. Clock Format

6. Menu Style

7. Dialing Font

3. Games / Tools

1. Backlight Settings

2. Volume

3. Notifications

4. Others

5. Memory Info

4. Others

1. Nav. Key Shortcuts

2. Call Setup

3. Language

4. TTY Mode

5. Data Setup

6. Memory Info

7. Touch Sensor Level

5. Bluetooth

1. Power

2. Device List

3. Discovery Mode

4. Device Name

5. Bluetooth Info

6. GPS

1. On

2. Emergency Only(E911)

7. System

1. Phone Info

2. System

3. Security

8. Airplane Mode

Getting Started with Your Phone

The Battery

 
Note

It is important to fully charge the battery before initial use of the phone.

The phone comes with a rechargeable battery. Keep the battery charged while not in use in order to maximize talk and standby time. The battery charge level is shown at the top of the LCD screen.

 
Installing the Battery

To install the battery, insert the battery into the opening on the back of the phone.

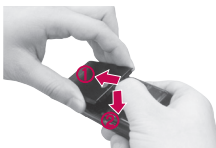

Removing the Battery

Remove the battery by pressing the upper area of it. To remove the battery, slide the battery latch to the left and release the battery.

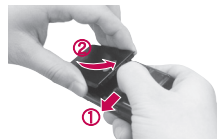

Charging the Battery

To use the charger provided with your phone:

 
WARNING! Use only the charger provided with the phone. Using any charger other than the one included with the LG 8500 may damage your phone or battery.

1. Plug the end of the adapter into the phone's charger port and the other end into an electrical outlet.
2. The charge time varies depending upon the battery level.

Getting Started with Your Phone

Battery Charge Level

The battery charge level is shown at the top right of the LCD screen. When the battery charge level becomes low, the low battery sensor alerts you in three ways: sounding an audible tone, blinking the battery icon, and displaying a warning message. If the battery charge level becomes exceedingly low, the phone automatically switches off and any function in progress is not saved.

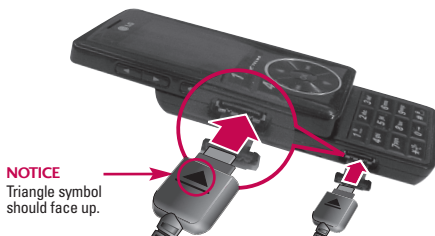


Battery Temperature Protection

If the battery gets overheated, the phone will automatically turn off. When you turn the phone back on, a message pops up alerting you that the phone was powered off for your safety.

Turning the Phone On and Off

Turning the Phone On

1. Install a charged battery or connect the phone to an external power source such as a vehicle power charger or hands-free car kit.
2. Press  for a few seconds until the LCD screen lights up.

Note

Like any other radio device, avoid any unnecessary contact with the antenna while your phone is on.

Turning the Phone Off

1. Press and hold  until the display turns off.

Signal Strength

Call quality depends on the signal strength in your area. The signal strength is indicated on the screen as the number of bars next to the signal strength icon: the more bars, the better the signal strength. If the signal quality is poor, move to an open area. If you are in a building, the reception may be better near a window.





Screen Icons

To see the icons below, go to **Menu -> Settings -> System -> Phone Info -> Icon Glossary**.

Using the Touch Sensitive Keys

The LG Chocolate's unique touchpad looks great and is fun to use. Get the most out of your Chocolate touch keys by following these tips.

- A light touch with clean and dry fingers work best for the heat sensitive touchpad. Press directly in the center of the key to activate the key. Using gloves or a phone case with a protective plastic covering may make the keypad more difficult to use.
- Protect your phone from severe impact because touchpad sensors may become damaged from harsh use.




Tip To navigate using the Touch Keypad tap  to go up, tap  to go down. Tap  &  to go left & right.

- The sensitivity of the touchpad can be adjusted to match your preference. Use the Settings menu: **Settings-> Others-> Touch Sensor Level**.



Getting Started with Your Phone

- When your Chocolate's screen and touchpad lights are off, it is deactivated. Simply press the voice dial key on the side of your Chocolate twice to activate the screen and touch keypad.
- During a call, the touchpad is automatically deactivated to prevent accidental key presses. To access phone content while in a call press the voice dial key twice to reactivate the keys.
- Keep metal and other conductive material away from the surface of the touchpad because contact may cause electronic interference.


Making Calls

1. Make sure the phone is turned on. If not, press  for about 3 seconds.
2. Enter the phone number (include the area code if needed).
3. Press  .
If the phone is locked, enter the lock code.
Call Failed - indicates the call did not go through.
4. Press  to end the call.


Correcting Dialing Mistakes

If you make a mistake while dialing a number, press  once to delete the last digit entered or hold down  for at least 2 seconds to delete all digits.

Redialing Calls

1. Tap  twice to redial the last number you dialed, received or missed in call history. The last 90 numbers are stored in the call history list and you can select one of these to redial.


Receiving Calls


1. When the phone rings or vibrates, press  to answer the call.

Note

If you tap Left Soft Key  [Quiet] while the phone is ringing, the ringing or vibration is muted for that call.

Note


If you tap Right Soft Key  [Ignore] while the phone is ringing, the call will end.

2. Tap  to end the call.

 
Tip

Using Speakerphone During a Call

You can activate speakerphone mode (only available when a headset device or Bluetooth® headset is not connected) using side camera key during a call.



The  is displayed on the upper right side of your screen.

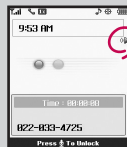To deactivate speakerphone mode, press the side camera key during the conversation. When you end the call, the speakerphone mode automatically turns off.



Quick Access to Convenient Features

Vibrate Mode



Sets the phone to vibrate instead of ring. To set Vibrate Mode press and hold  for 3 seconds. To return to Normal Mode, press and hold .

Lock Mode



Sets your phone to require your 4-digit password in order to use the phone.

Note

Until you change it, the lock code/password is the last 4 digits of your phone number.

To quickly lock your phone press  for three seconds and enter your lock code. To cancel, tap Right Soft Key  **[Unlock]** and enter the password.

Mute Function

The Mute function prevents the other party from hearing your voice, but allows you to hear the other party. To quickly activate Mute tap Left Soft Key  **[Mute]**, then to cancel tap Left Soft Key  **[Unmute]**.



Volume Quick Adjustment

Quickly adjust ringer and earpiece volumes by pressing the up side volume key to increase and down side volume key to decrease.

Note

The earpiece volume can only be adjusted during a call and Key Beep volume can only be adjusted through the menu.

Call Waiting

Your cellular service provider may offer call waiting. While a call is in progress, one beep indicates another incoming call. When call waiting is enabled, you may put the active call on hold while you answer the other incoming call. Press  to receive a waiting call then press  again to switch between calls. Check with your service provider for information about this function.

Caller ID

Caller ID displays the number and/or name of the incoming call. Check with your service provider to ensure they offer this feature.

Speed Dialing

Speed Dialing allows you to make phone calls quickly and easily with a few key presses. Speed Dial number 1 is set to call your Voice Mail.

To dial Speed Dials

For Speed Dials 1 to 9 press and hold the Speed Dial number.

For Speed Dials 10 to 99 press the first digit, then press and hold the key of the last digit.


Note

Another way to Speed Dial is to enter the speed dial number(s), then press .

Using Phone Menus

Contacts

Menu Access

Tap Left Soft Key  **[Menu]** to have access to nine phone menus. There are two methods of accessing menus and submenus:

- Use the navigation key to highlight and select, or
- Press the number key that corresponds to the submenu.

Contacts

The Contacts menu allows you to store names, phone numbers and other information in your phone's memory.

Access and Options



1. Tap Left Soft Key  **[Menu]**.
2. Press  **Contacts**.
3. Select a sub-menu.







1. List Entries
2. New Entry
3. Groups
4. Speed Dials
5. Voice Dials
6. Erase all Contacts

1. List Entries

Allows you to view your Contacts list.

1. Tap and press , , .

2. Options from here:






- Tap  to scroll through your Contacts alphabetically.
- Tap Right Soft Key  **[Options]** to select one of the following:
New Message/ Erase/ Edit/ Erase All
- Tap Left Soft Key  **[New]** to store a New Entry.
- Tap  **[View]** to view the contact information.

2. New Entry

Allows you to add a new number to your Contacts.






Note




Using this submenu, the number is saved as a new Contact. To save the number into an existing Contact, edit the Contact entry.

1. Tap and press , , .
2. Enter the name and press .
3. Use  to select the phone number types such as **Mobile 1/ Home/ Work/ Mobile 2/ Fax**.
4. Enter the numbers as necessary and enter other information such as **Email 1/ Group/ Picture/ Ringtone/ Email 2**.

3. Groups

Allows you to view your grouped Contacts, add a new group, change the name of a group, delete a group, or send a message to everyone in the selected group.

1. Tap and press , , .
2. Tap  to highlight a group to view, then press .

- Tap Left Soft Key  **[New]** to add a new group to the list.
- Use  to highlight a group then tap Right Soft Key  **[Options]**.
Erase/ Message/ Rename Group/ Set Group Ringtone/ Erase All








In **Set Group Ringtone** option, you can customize ringtones using the sub-options.

Default/ Ringtone

- Tap  **[View]** to view the contact information.

4. Speed Dials


Allows you to view your list of Speed Dials or designate Speed Dials for numbers entered in your Contacts.

1. Tap and press , , .
2. Use  to highlight the Speed Dial position, and press .
3. Use  to highlight the Contact then press .

5. Voice Dials

Allows you to view the list of numbers programmed with voice dialing or add a Voice Dial command to a number stored in your Contacts.

1. Tap and press , , .
2. Tap Left Soft Key  **[New]** to record a new Voice Dial command. Follow the phone's prompts.

- Select  if you want to start recording when the pop up message is displayed.

Note

Recordings should be made in a normal use position (speaker by your ear and microphone near your mouth) while using a clear voice.

Hands-free car kits or headsets should be used if the phone is primarily used with them.

6. Erase all Contacts

Allows you to erase all of your Contacts at once.

1. Tap and press , , .
2. Press  **Yes**.

Call History

The Call History menu is a list of the last phone numbers or Contact entries for calls you placed, accepted, or missed. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

Access and Options



1. Tap Left Soft Key [Menu].
2. Press **Call History**.
3. Select a sub-menu.
 1. **All Calls**
 2. **Dialed Calls**
 3. **Received Calls**
 4. **Missed Calls**
 5. **Call Timers**
 6. **Data Connections**
 7. **Erase History**

Shortcut

To view a quick list of all your recent calls, press from the standby mode.

1. All Calls










Allows you to view the list of all calls; (up to 270) entries.

1. Tap and press , , .
2. Use to highlight an entry, then
 - Tap to view the entry.
 - Tap to place a call to the number.
 - Tap Right Soft Key [Options] to select: **Save/ Dial 1 + Number/ Erase/ Erase All**
 - Tap to view the contact information.
 - Tap Left Soft Key [Message] to send a message.

Call History






2. Dialed Calls





Allows you to view the list of outgoing calls; up to 90 entries.

1. Tap and press , , .
2. Use  to highlight an entry, then
 - Tap  to view the entry.
 - Tap  to place a call to the number.
 - Tap Right Soft Key  **[Options]** to select: **Save/ Dial 1 + Number/ Erase/ Erase All**
 - Tap  to view the contact information.
 - Tap Left Soft Key  **[Message]** to send a message.

3. Received Calls










Allows you to view the list of incoming calls; up to 90 entries.

1. Tap and press , , .
2. Use  to highlight an entry, then
 - Tap  to view the entry.

- Tap  to place a call to the number.
- Tap Right Soft Key  **[Options]** to select: **Save/ View Contact/ Dial 1 + Number/ Delete/ Delete All**
- Tap  to view the contact information.
- Tap Left Soft Key  **[Message]** to send a message.

4. Missed Calls

Allows you to view the list of missed calls; up to 90 entries.

1. Tap and press , , .
2. Use  to highlight an entry, then
 - Tap  to view the entry.
 - Tap  to place a call to the number.
 - Tap Right Soft Key  **[Options]** to select: **Save/ Dial 1 + Number/ Erase/ Erase All**
 - Tap  to view the contact information.
 - Tap Left Soft Key  **[Message]** to send a message.

5. Call Timers

Allows you to view the duration of last call and all calls made.

1. Tap and press , , .
2. Use  to highlight a list.

Last Call/ Life Time

6. Data Connections


 



Allows you to view the list of received and transmitted data calls.

1. Tap and press , , .
2. Use  to highlight a data call list.

Data Transferred/ Connection Time

7. Erase History

Allows you to erase selected call list(s).

1. Tap and press , , .
2. Use  to highlight the list of calls to erase, then press .

**All Calls/ Dialed Calls/ Received Calls/
Missed Calls**

3. Tap  **Yes**.

Messaging

Messaging

Access and Options



1. Tap Left Soft Key [Menu].
2. Tap **Messaging**.
3. Select a sub-menu.
 1. **Voice Mail**
 2. **Text and Multimedia**
 3. **Web Alerts**
 4. **E-mail**
 5. **IM & Chat**
 6. **Short Codes**

Text messages, multimedia messages, and the voice mail box become available as soon as the phone is powered on.

- Check types of messages by pressing the message key .
- Make a call to the callback number by pressing during an Inbox message check.

The phone can store up 671 messages (for example, 1 voice mail, 100 inbox text messages, 100 inbox multimedia messages, 100 inbox multimedia notification messages, 100 outbox/sent text messages, 100 outbox/sent multimedia messages, 50 template messages, 50 draft messages, 20 saved text messages, 50 saved multimedia messages). The information stored in the message is determined by phone mode and service capability. Other limits to available characters per message may exist. Please check with your service provider for system features and capabilities.

New Message Alert

There are three ways your phone alerts you to new messages.

1. The phone displays a message on the screen.
2. One of over 16 ring types is heard, if selected.
3. The message icon () is displayed on the screen.








Note

If you receive the same message twice, your phone deletes the older one and the new one is stored as Duplicate.

1. Voice Mail

Allows you to view new voice messages recorded in the Voice Mail box. When you have a new voice message, your phone will alert you.

Checking Your Voice Mail Box




 
1. Tap and press , , .
2. Options from here:
 - Tap Right Soft Key  **[Clear]** to delete information, and then press  **Yes**.
 - Tap  or Left Soft Key  to listen to the Message(s).


2. Text and Multimedia



1. Send New

Allows you to send text messages and picture messages. Each message has a destination and information. These are dependent upon the type of message you want to send.












The Basics of Sending a Message

1. Tap and press , , , .
2. Enter the phone number of the recipient or the email address.

Tap Right Soft Key  **[Options]**.

Select the option(s) to customize.
 - **Contacts** to select a recipient from your Contacts list.
 - **Call History** to select a recipient from your Call History.
 - **Group** to select a recipient from your Group.
 - **Set as Cc** to set another recipient as carbon copy like in your online email.
 - **Set as Bcc** to set another recipient as Blind Carbon Copy like in your online email.
3. Tap .
4. Enter the subject in the subject field and tap .


Messaging


5. Type your message in the text field.
Tap Right Soft Key  [Options].
 - **Add** to select **Quick Text** or **Signature**.
 - **Save As** to select **Draft** or **Template**.
 - **Settings** to select **Priority Level** or **Callback Number**.
 - **Save Quick Text** to save your message as quick template for future use.
6. Use  to highlight **Picture** and tap Left Soft Key  [Add].
Use  to select **Take Picture** or **Picture Album**.
Select Picture and tap Left Soft Key  [Select].
7. Use  to highlight **Video** and tap Left Soft Key  [Add].
Select **Record Video** or **Video Album**.
8. Use  to highlight **Sound** and Left Soft Key  [Add].
Use  to select **Record New** or **Sound Album**.
Select a sound and tap Left Soft Key  [Select].

Tap Right Soft Key  [Options].

For **Record New** option, you can control **Quality** of the sound you record with the options **High/ Medium/Low**.


You can also set **Recording Time** as either **30 Seconds** or **1 Minute**.

For Sound Album, navigate what you want to select and try playing it by tapping  [Play].

9. Tap  [Send].
A sending screen is displayed.

2. Inbox

The phone alerts you in 3 ways when you receive a new message:








- By displaying a message notification on the screen.
- By sounding a beep or vibrating, if set.
- By displaying .

Received text messages and multimedia messages may be searched and the contents viewed. Received messages are displayed from newest to oldest.

Out of Memory Warning

If the memory is full, no more messages can be received until enough memory space becomes available. The warning message is displayed and new messages are not accepted.

Viewing Your Inbox

1. Tap and press , , , .
2. Use  to highlight an Inbox message.
3. Options from here:
 - Left Soft Key  [Reply].
 - Right Soft Key  [Options].

Erase Erases the selected message from the Inbox.

Forward Forwards a received message to other destination address(es).

Move to Saved Saves the message into the Saved folder.








Detail Allows you to check the received message information.

Lock/Unlock

Locks or unlocks the selected message.

3. Outbox/Sent

Up to 100 sent messages can be stored in Outbox View lists and contents of sent messages and verify whether the transmission was successful or not.

1. Tap and press , , , .
2. Use  to highlight an Outbox message.
3. Options from here:
 - Left Soft Key  [Resend].
 - Right Soft Key  [Options].

Erase Erases the selected message.

Forward Forwards a received message to other destination address(es).

Move to Saved Saves the message into the Saved folder.

Detail Allows you to check the selected message information.

Messaging

Lock/Unlock Locks or unlocks the selected message.

4. Templates

Allows you to create, save and set a template to be used as text in your messages.

1. Tap and press , , , .

2. Tap Left Soft Key  **[Add]** to create a new template.

- When you create a template at first, the options are:

Add/ Save As/ Settings/ Save Quick Text

3. Use  to highlight a message.

4. Tap Right Soft Key  **[Options]**.

Erase Erases the selected message from Templates.

Lock/Unlock Locks or unlocks the selected message.

5. Tap  to send the selected message.

5. Drafts

Displays draft messages.

1. Tap and press , , , .

2. Use  to highlight a message.

3. Tap Right Soft Key  **[Options]**.

Erase Erase the selected message from the Drafts.

Lock/Unlock Locks or unlocks the selected message.

4. Tap  to send the selected message.

6. Saved

Displays saved messages.

1. Tap and press , , , .

2. Use  to highlight a message.

3. Tap Right Soft Key  **[Options]**.








Erase Erase the selected message from the Saved.




- Forward** Forwards a message to other destination address(es).
- Detail** Allows you to check the selected message information.
- Lock/Unlock** Locks or unlocks the selected message.

4. Tap  to view the message.

7. Erase Messages

Allows you to erase all messages stored in your Inbox, Outbox, Templates, Drafts or Saved messages. You can also erase all messages at the same time.







1. Tap and press , , , .
- Tap  **[Inbox]** to erase all messages stored in Inbox.
- Tap  **[Outbox/Sent]** to erase all messages stored in Outbox.
- Tap  **[Templates]** to erase all messages stored in Templates.

- Tap  **[Drafts]** to erase all messages stored in Drafts.
- Tap  **[Saved]** to erase all messages stored in Saved messages.
- Tap  **[All Messages]** to erase all messages stored in the Inbox, Outbox, Templates, Drafts or Saved messages.

2. Tap  **Yes**.

8. Settings

Allows you to configure ten settings for messages.

1. Tap and press , , , .
2. Use  to highlight a setting, then press .

Message Settings Sub-Menu Descriptions

Save to Outbox (Auto Save/ Prompt/ Do Not Save)

Allows you to automatically save sent messages in Outbox when transmitted.

Messaging

Auto Delete Inbox (On/ Off)

Allows you to automatically delete read messages when you exceed the storage limit.

Quick Text

Allows you to display, edit and add text phrases. These text strings allow you to reduce manual text input into messages.

Default Entry Mode (T9Word/Alpha/Number)

Allows you to select the default input method including Alpha, T9Word, Number.

Auto Download (On/ Off)

Allows you to download the multi-media message automatically when receiving a message.

Message Priority (High/ Normal/ Low)

Gives priority to the message.

Delivery Report (On/ Off)

Set delivery report to let you know if your message is delivered to the recipient.

Read Report (On/ Off)

Set read report, and you can check out if your message has been read by the recipient.

Callback #


Allows you to automatically send a designated callback number when you send a message.

Signature

Allows you to create and/or edit the signature.

9. Memory Info

Provides you with the memory information of all the messages stored in each folder.

1. Tap and press , **3**^{def}, **2**^{abc}, **9**^{WXYZ}.
2. Check the used and remaining memory.

3. Web Alerts

Web Alerts is special links or message provided from the service provider to inform you of special offers, bulletins and announcements.

1. Tap and press , **3**^{def}, **3**^{def}.

Messaging / Wireless Web

4. E-mail

Allows you to send and receive a text email by **Get New** or by **Online e-mail** after connecting to the WAP page of the service provider and logging on. Contact your service provider for availability.

1. Tap and press , **3** def, **4** ghi.
2. Use  to select **Get New** or **Online e-mail** then press .

5. IM & Chat

Allows you to send and receive instant message at any time. Allows you to chat with Internet Messenger users. The messages are updated anytime.

1. Tap and press , **3** def, **5** jkl.
2. Use  to select **Get New** or **Online IM** then press .

6. Short Codes

Shows you the Short Codes List.

1. Tap and press , **3** def, **6** mno.

Directory/ Templates

 
Wireless Web

The Wireless Web feature allows you to view Internet content, especially designed for your mobile phone. Access and selections within this feature are dependent upon your service provider. For specific information on Wireless Web access through your phone, contact your service provider.

Access and Options

Allows you to initiate an Wireless Web session.

1. Tap Left Soft Key  [Menu].
2. Tap **4** ghi **Wireless Web**.
After a few seconds, you see the Home Page.

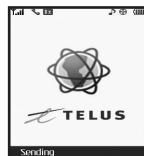

Wireless Web

Overview

The Wireless Web allows the user to use a variety of Internet services. Using the Wireless Web on the phone allows you to:

Send and receive Internet e-mail.

- Browse and search the World Wide Web via web pages especially designed for wireless phone customers.
- Set bookmarks to directly access your favorite sites.
- Retrieve information, such as stock quotes and flight schedules from the Internet.

Quality of Browser

Browsing the web via the phone is not like using your home computer. Site providers have selected only the critical aspects of their site to present to wireless phone users and have removed most graphics.

Ending the Wireless Web Session

You can end a Wireless Web session by pressing .

Navigating through the Browser

While using the Wireless Web, you will find the following content:

- Numbered options (some options may not be numbered);
- Links embedded in content;
- Text or numeric input;
- Simple text.

You can act on the options or the links by using the Soft Keys.

Music & Media

Allows you to download ringtones or wallpapers once the Get New is executed and connected to Browser. In the application homepage, the downloaded ringtones are located under **Music & Media** -> **Ringtones**. For the wallpapers, **Music & Media** -> **Wallpaper**.

Access and Options



1. Tap Left Soft Key [Menu].
2. Tap [5 jkl] **Music & Media**.
3. Select a sub-menu.

1. **Music**
2. **Ringtones**
3. **Wallpaper**
4. **Video**
5. **Camera**
6. **My Albums**
7. **TV & Radio**
8. **Memory Info**

 


1. Music

Transform your LG Chocolate into a portable music player. Expand your collection with the TELUS music library and even set a music alarm using your favourite song.

1. Tap and press [OK], [5 jkl], [1 abc].

1.1 Music Player

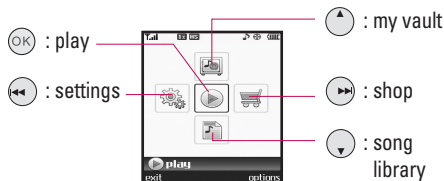

- Tap and press Left Soft Key [OK] to exit the menu.
- Tap and press Right Soft Key [options].

1.2 My Music List

Displays the list of music files you downloaded.

1. Tap and press [OK], [5 jkl], [1 abc], [2 abc].

Music & Media



1.3 Memory Info

Provides the memory info of the music files.

1. Tap and press , **5** jkl, **1** *0, **3** def.



2. Ringtones

Allows you to download new ringtones.

1. Tap and press , **5** jkl, **2** abc.
2. Tap  **[Get New]**.
3. When connected to the application homepage and you download ringtones, the downloaded files are located under **Music & Media -> Ringtones**.
4. The following options are available:
 - **Set As** Contact/ Caller ID/ Unknown Calls/ Roaming.
 - **Delete** Deletes the selected file.
 - **Delete All** Deletes all the selected files.
 - **Details** Displays the information of the files.
 - **Memory Info** Displays the memory information.

3. Wallpaper

Allows you to download new Wallpaper. Use this menu when you want to get another wallpaper other than the default wallpapers in **Display -> Wallpaper** menu.

1. Tap and press , **5** jkl, **3** def.
2. Tap  **[Get New]**.
3. When connected to the application homepage and you download wallpapers, the downloaded files are located under **Music & Media -> Wallpaper**.
4. The following options are available:
 - **Set As** Main Wallpaper/ Picture ID
 - **Delete** Deletes the selected file.
 - **Delete All** Deletes all the selected files.
 - **Information** Displays the information of the files.
 - **Details** Displays the memory information.

4. Video

Allows you to download new Video clips.

1. Tap and press , , .
2. Tap  **[Get New]**.


5. Camera

5.1 Take Photo

View, take, and trade your digital pictures right from your wireless phone.

1. Tap and press , , , .

Note

Pressing and holding the Side Camera Key  from standby mode is a hot key to Take Photo.

2. Set the brightness , zoom , and tap Right Soft Key  **[Options]** to change other settings.

- Select the option(s) to customize.

Resolution 1280X960/ 640X480/ 320X240/
176X144

Quality Economy/ Normal/ Fine

Self Timer 3 Seconds/ 5 Seconds/ 10 Seconds


White Balance Auto/ Sunny/ Cloudy/
Tungsten/ Fluorescent

Color Effects Normal/ Sepia/ Black&White/
Negative/ Solari

Night Mode On/ Off

Memory in Use Phone Memory/ Card
Memory*


* Available only when a
microSD™ card is inserted.



3. Take a picture by pressing .

4. Tap .

The picture is stored in Picture Album.




 



Using the Side Camera Key

You can use the Side Camera Key  to take a picture when the flip is closed. The picture is shown on the outside display.

1. Press the Side Camera Key  for about 3 seconds to enter the Take Photo mode.
2. Take a picture by pressing Side Camera Key .



3. Press the Side Camera Key  for about 3 seconds to save the photo to your phone.
4. Tap  to exit the camera mode.

5.2 Take Video

1. Tap and press , , , .
2. Set the brightness , zoom , and tap Right Soft Key  [Options] to change other settings.
- Select the option(s) to customize.




 


White Balance	Auto/ Sunny/ Cloudy/ Tungsten/ Fluorescent
Time Limit	30' for Video Msg/ Available Memory
Night Mode	On/ Off
Memory in Use	Phone Memory/ Card Memory*

*Available only when a
microSD™ card is inserted.

3. Tap  to begin recording, and again to stop.
4. Tap . The recorded video is stored in Video Album.

6. My Albums

6.1 Sound Album

1. Tap and press , , , .
2. Select your desired sound with  and tap Right Soft Key  [Options].
3. Select one of the following options:
**Send Message/ Erase/ Rename/ Move/ Copy/
Erase All/ Details/ Upload Online Album**

6.2 Picture Album

Allows you to view pictures stored in the phone.







1. Tap and press , , , .
2. Select your desired picture with  and tap Right Soft Key  [Options].

Send Message	Sends a message.
Erase	Yes/ No
Rename	Rename the selected picture.
Move	Yes/ No
Copy	Yes/ No

Erase All	Yes/ No
Icon View(List View)	
Details	Name/ Date/ Time/ Resolution/ File size/ Type
Set As	Main Wallpaper/ Picture Id
Upload Online Album	Accesses the Online Album.

6.3 Video Album

Allows you to view videos stored in the phone.

1. Tap and press , , , .
2. Select your desired video with  and tap Right Soft Key  [Options].

Send Message	Sends a message.
Erase	Yes/ No
Rename	Rename the selected video.
Move	Yes/ No
Copy	Yes/ No
Erase All	Yes/ No
Details	Title/ Date/ Time/ Resolution/ File size
Set As Wallpaper	
Upload Online Album	Accesses the Online Album.

6.4 Online Album

Access the Online Album.

1. Tap and press , , , .

6.5 External Memory

Provides the folders for Picture, Video, Sound and Music, when you insert the miniSD Card into the Phone.

1. Tap and press , , , .
2. Select your desired folder with  then press .

Picture/ Video/ Sound/ Music

Music & Media / Shop

7. TV & Radio

Allows you to access and enjoy the service provider's contents.

1. Tap and press , **5 jkl**, **7 pqrs**.
2. Tap  to launch **Get New**.

After a few seconds, you can see the Home Page.

3. Tap  to access TELUS mobile TV.

8. Memory Info

Provides the memory information.

1. Tap and press , **5 jkl**, **8 tuv**.

 
Shop

Allows you to search and purchase from a variety of content provided by your service provider.



Access and Options

1. Tap Left Soft Key  **[Menu]**.
2. Press **6 mno** **Shop**.

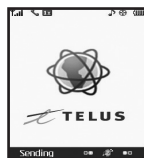After a few seconds, you see the Home Page.



Games

Allows you to download ringtones or wallpapers once the Get New is executed and connected to Browser. In the application homepage, the downloaded MIDlet (type of JAVA application) files are located under Games menu. Use Left Soft Key  to run the selected MIDlet and Right Soft Key  to select options.

- **Run** Open the MIDlet to run.
- **Properties** Displays the information of MIDlet.

Access and Options



1. Tap Left Soft Key  **[Menu]**.
2. Press  **Games**.
3. Select a sub-menu.

Get New





Tools & Apps

Allows you to make use of various tools and applications.

Access and Options






1. Tap Left Soft Key  **[Menu]**.
2. Press  **Tools & Apps**.
3. Select a sub-menu.

Get New
GPS Services
Calculator
Alarm Clock
Scheduler
Notepad
Ez Tip Calc
World Clock
Voice Memo







1. Get New

1. Tap and press , .
 2. Scroll to **Get New** and press .
- After a few seconds, you will see the Home Page.








2. GPS Services

You can get services about global positioning system.

1. Tap and press , .
2. Scroll to **GPS Services** and press .
3. Tap  **Get New**.
After a few seconds, you will see the Home Page.













3. Calculator

You can enter numbers up to the third decimal place.

1. Tap and press , .
2. Scroll to **Calculator** and press .
3. Enter data.
 - Use keypad to enter numbers.
 - Use  to enter decimals.
 - Use  to enter brackets.
 - Tap Left Soft Key **[AC]** to clear the entry.
 - Tap Right Soft Key **[Funct.]** to enter algebraic operators.
 - Use Navigation Keys  to enter operators.
 - Tap  to complete equation.






4. Alarm Clock

Your phone comes with a built-in alarm clock with multiple alarm capabilities.

1. Tap and press , .
2. Scroll to **Alarm Clock** and press .
3. Tap Left Soft Key  **New** to add a new alarm.
4. Use  to select **Off/ Manual/ 10 Min Later/ 20 Min Later/ 30 Min Later/ 1 Hour Later** then press .
5. Set the time for alarm and press .
6. Use  to select one of the following:
Once/ Daily/ Mon~Fri/ Sat~Sun
7. Use  to highlight **Alarm Tone** (ring type setting), tap Left Soft Key  **List**, and select your desired ring.
8. Use  to select **Note** then type your note using the keypad.
9. Tap .






5. Scheduler

Allows you to conveniently keep and access your agenda(s). Simply store your appointments and your phone will alert you with a reminder of your appointment.

1. Tap and press , .
2. Scroll to **Scheduler** and press .
3. Using your navigation key, highlight the day to which you would like to add an event and tap Left Soft Key  **New**.
4. Enter your schedule information including:
 - Date • Time • Subject
 - Reminder (On Time/ 15 minutes before/ 30 minutes before/ 1 hour before/ 1 day before/ 3 days before/ 1 week before/ No Reminder)
 - Repeat (Once/ Daily/ Mon~Fri/ Weekly/ Month (2nd Mon)/ Month(9Th)/ Year(2nd MoofOct)/ Year(9Th of Oct)
 - Expiration (Set Expiration/ No Expiration)
5. Tap .




6. Notepad

Allows you to add, read, edit, and erase notes to yourself.

1. Tap and press , .
2. Scroll to **Notepad** and tap .
3. Tap Left Soft Key  **New** to write a new note.
4. Type your note using the numeric keypad and tap .

7. Ez Tip Calc

Allows you to quickly and easily calculate the total amount, using the total of the bill, the amount of the tip and the number of people as variables.







1. Tap and press , .
2. Scroll to **Ez Tip Calc** and tap .
3. Use your keypad and navigation key to enter the bill amount and desired tip percentage.
The correct tip will be calculated instantly.

Tools & Apps

4. If you're splitting the check, highlight **Split** and enter the number of people in your party (An equal split of the bill will be calculated and displayed).

8. World Clock

Allows you to determine the current time in another time zone or country.

1. Tap and press , .
2. Scroll to **World Clock** and press .
3. Use  to move the cross hairs across the map or tap Right Soft Key  **[Cities]** to enter a specific city.
4. Tap Left Soft Key  **[Set DST]** to set Daylight Saving Time for the selected city.






9. Voice Memo

Allows you to add, listen to, and erase short verbal reminders.

Shortcut

Press the voice dial/ voice memo Key for Voice Memo for 3 seconds to access voice memo.


Recording a Voice Memo

1. Tap and press , .
2. Scroll to **Voice Memo** and press .
3. Tap  **[Record]** to record a new Voice Memo (The phone prompts you to start recording after the beep).
4. To finish recording, press  **[Save]**.

Playing a Voice Memo

1. Tap and press , .
2. Scroll to **Voice Memo** and press .
3. Tap Left Soft Key  **[List]**.

Options from here:

Select your desired Voice Memo with  and tap Right Soft Key  **[Options]**.



Send Message	Sends a message.
Erase	Yes/ No
Rename	Rename the selected Sound.
Move	Yes/ No
Copy	Yes/ No
Erase All	Yes/ No
Details	Name/ File size/ Type
Upload Online Album	Accesses the Online Album.

Settings

The Settings menu has options to customize your phone.

Access and Options



1. Tap Left Soft Key  **[Menu]**.
2. Press  **Settings**.
3. Select a sub-menu.

1. **Sound**
2. **Display**
3. **Games / Tools**
4. **Others**
5. **Bluetooth**
6. **GPS**
7. **System**
8. **Airplane Mode**






1. Sound

Allows you to customize various sounds emitted from the phone.



1.1 Ringers

1.1.1 Voice Calls

Allows you to set ringtones for different types of incoming calls.






1. Tap and press , , , , .
2. Select an incoming call type.

Caller ID/ Unknown Calls/ Roaming



3. Use  to select a ringer, then tap Left Soft Key  **Set** to save the sound.

1.1.2 Messages

Allows you to set ringtones for different types of messages.








1. Tap and press , , , , .
2. Select an incoming call type.

Voice Mail/ Text and Multimedia/ Web-Alerts/ Reminder

3. Use  to select a ringer, then tap Left Soft Key  **Set** to save the sound.

1.1.3 Meeting/ Silent Mode








Allows you to set silent mode proper for specific situations such as meetings.

1. Tap and press , , , , .
2. Use  to set the setting, then press  to save the change.

On/ Off

1.2 Keypad

1.2.1 Keypad Sound

1. Tap and press , , , , .
2. Use  to adjust the volume of the keypad, then press  to save the change.

1.2.2 DTMF Length

Allows you to set the DTMF.

1. Tap and press , , , , .

2. Use  to select a length, then .




 



Short Sends out a tone for a fixed period of time even if you keep the key pressed.

Long Sends out a continuous tone for as long as you keep the key pressed.

1.3 Volume




 



1.3.1 Ringer

Allows you to set ringer volume settings.

1. Tap and press , , , , .
2. Use  to adjust the volume, then tap  to save the change.




 



1.3.2 Earpiece

Allows you to set earpiece volume settings.

1. Tap and press , , , , .
2. Use  to adjust the earpiece volume, then tap  to save the change.

1.3.3 Power On/Off

Allows you to set the phone to sound a tone when the phone is powered on and off.

1. Tap and press , , , , .
 2. Use  to set the alert tone, then tap  to save the change.
- On/ Off**

1.4 Alerts

1. Tap and press , , , .

1.4.1 Service Change

Alerts you when service changes. (On/Off)

1.4.2 Minute Beep

Alerts you 10 seconds before the end of every minute during a call. (On/Off)

1.4.3 Call Connect

Alerts you when the call is connected. (On/Off)

Settings

1.4.4 Call Lost

Alerts you when the call is disconnected. (On/Off)

1.4.5 No Service


 





Alerts you when there is no service. (On/Off)

2. Display

Options to customize the phone's display screen.

2.1 Banner

Allows you to enter a string of up to 13 characters which display on the LCD screen.

1. Tap and press , , , .
2. Use  to select **On**, then tap .
3. Enter your banner text, then press .

2.2 Wallpaper

Allows you to choose the kind of background to be displayed on the phone.







1. Tap and press , , , .

2. Select from different images, then tap .

3. Tap Left Soft Key  **[Set]**.

2.3 Backlight


 




Allows you to set the duration for illuminating the LCD backlight.

1. Tap and press , , , .
2. Use  to select a setting, then tap  to save the change.

**7 Seconds/ 15 Seconds/ 30 Seconds/
Always On/ Always Off**

2.4 Keypad Light



 



Allows you to set the duration for illuminating the phone's keypad.

1. Tap and press , , , .
2. Use  to select a setting, then tap  to save the change.

**7 Seconds/ 15 Seconds/ 30 Seconds/
Always On/ Always Off**

2.5 Clock Format


 
 



Allows you to choose the clock format displayed on the LCD screen.

1. Tap and press , , , .
2. Use  to select the clock format, then tap .

Off/ Small Digital/ Big Digital/ Analog

2.6 Menu Style







Allows you to view the Menus as icons or in a list format.

1. Tap and press , , , .
2. Use  to select a menu format, then tap .

Icon/ List

2.7 Dialing Font

Allows you to set the size and color of the font for calling digits.







1. Tap and press , , , .
2. Use  to choose a setting, then tap .

Normal/ Large

3. Games / Tools

3.1 Backlight Settings







Allows you to set the duration for illuminating the backlight.

1. Tap and press , , , .
2. Use  to select a setting, then tap  to save the change.

7 Seconds/ 15 Seconds/ Always On/ Always Off

3.2 Volume

Allows you to set volume settings.

1. Tap and press , , , .
2. Use  to adjust the volume, then tap  to save the change.

Settings

3.3 Notifications

Allows you to set notification settings.

1. Tap and press , **9**xyz , **3**def , **3**def .
2. Select a sub-menu and tap .

1abc **Voice Mail/** **2**abc **Messages/**
3def **Web Alerts**

3. Use to set the alert setting, then tap to save the change.

On/ Off

3.4 Others

Displays or deletes the list of files created by downloaded JAVA contents.

1. Tap and press , **9**xyz , **3**def , **4**ghi .

3.5 Memory Info

Shows you the memory information of the phone.

1. Tap and press , **9**xyz , **3**def , **5**jkl .

4. Others

4.1 Nav. Key Shortcuts

Assign a shortcut to your favorite and most frequently used function. Select it from the list, and then access it directly by pressing in standby mode.

1. Tap and press , **9**xyz , **4**ghi , **1**abc .
2. Read the disclaimer and press .
3. Select a menu and press .

Left Nav. Key/ Right Nav. Key

4.2 Call Setup

4.2.1 Call Answer

Allows you to determine how to handle an answered call.

1. Tap and press , **9**xyz , **4**ghi , **2**abc , **1**abc .
2. Use to select a setting, then press .

Send Key/ Any Key/ Slide Open

4.2.2 Auto Answer








Allows you to set the length of the time before the phone automatically answers a call. This feature is intended for use with hands free devices, but is an independent feature of the phone and must be manually turned on/off when connected or disconnected from the device.

1. Tap and press , , , , .
2. Use  to select a setting, then press .

Off/ 2 Seconds/ 4 Seconds/ 8 Seconds

4.2.3 Auto Prepend








This option will automatically prepend 1 when dialing 10 digit numbers. However 1 will not prepend when dialing numbers that has less than 10 digits.

1. Tap and press , , , , .
2. Use  to select a setting, then press .

On/ Off

4.2.4 Auto Redial







Allows you to set the length of time the phone waits before automatically redialing a number when the attempted call fails.

1. Tap and press , , , , .
2. Use  to select a setting, then press .

**Off/ Every 10 Seconds/ Every 30 Seconds/
Every 60 Seconds**

4.3 Language








Allows you to set the bilingual feature according to your preference. Choose between English and Français.

1. Tap and press , , , .
2. Use  to select **English** or **Français**, then press .

4.4 TTY Mode

Allows you to attach a TTY device enabling you to communicate with parties also using a TTY device. A phone with TTY support is able to translate typed characters to voice. Voice can also be translated into characters and then displayed on the TTY.

* TTY: Text Telephone (or Teletypewriter).

1. Tap and press , , , .
2. Read the disclaimer and press .
3. Use  to select a setting, then press .

TTY Full/ TTY + Talk/ TTY + Hear/ TTY Off

1. TTY Full:

Users who cannot talk and hear send and receive a text message through TTY equipment.

2. TTY + Talk:

Users who can talk but cannot hear receive a text message and send voice through TTY equipment.

3. TTY + Hear:

Users who can hear but cannot talk send a text message and receive voice through TTY equipment.

4. TTY Off:

Regular users send and receive without TTY equipment.

Connecting TTY Equipment and a Terminal

1. Connect a TTY cable to TTY connection on the terminal. (TTY connection location is same as the hands free earjack)
2. Enter the phone menu and set up the desired TTY mode.
3. After setting a TTY mode, check the LCD screen of the phone for the TTY icon.
4. Connect the TTY equipment to the power source and turn it on.
5. Make a phone connection to the desired number.
6. When connection is made, use the TTY equipment to type in and send a text message or send voice.
7. The voice or text message from the receiver end displays on the TTY equipment display.

Menu	User	Feature	Transmission/ Receiving Mode	When making communications with a normal terminal
TTY Full	For hearing- /verbally- impaired		text message transmission, text message receiving	operator required
TTY+ Talk	For hearing- impaired	verbal	voice transmission , text message receiving	operator required
TTY+ Hear	For verbally- impaired	audible	text message transmission , voice receiving	operator required
TTY Off	For regular users		voice transmission , voice receiving	

4.5 Data Setup

4.5.1 Data/Fax

Allows you to use your phone to transmit data and faxes.

1. Tap and press , **9**xyz, **4**ghl, **5**jkl, **1**oo.
2. Use  to select a setting, then press .




**Off/ Fax In Once/ Fax In Always/ Data In Once/
Data In Always**

Note

The Data Connection Kit allows you to connect your PC or PDA to your LG wireless phone, freeing you from having to locate a telephone outlet. You can send or receive an e-mail, a fax, or access the Internet anytime, anywhere.

4.5.2 PC Connection

Allows you to select the data port.

1. Tap and press , **9**xyz, **4**ghl, **5**jkl, **2**abc.
2. Use  to select a setting, then press .

USB/ RS-232C/ Bluetooth/ Closed









Settings

Note

When using the 1X HSPD data service via a USB data cable, you may get better port speed if the port speed is set to 230,400 rather than 115,200.

4.5.3 Do Not Disturb

Allows you to ignore incoming calls during the data transfer.

1. Tap and press , , , , .
2. Read the disclaimer and press .
3. Use  to select a setting, then press .

On/ Off

4.6 Memory Info

Shows you the memory information of the phone.

4.6.1 Common Memory







1. Tap and press , , , , .

4.6.2 Reserved Memory

1. Tap and press , , , .



 

4.7 Touch Sensor Level

Allows you to control the sensitivity level of the touch pad on the slide of your phone.

1. Tap and press , , , .
2. Use  to select a setting, then tap .

Super/ High/ Medium/ Low

Tip

To navigate using the Touch Keypad tap  to go up, tap  to go down. Tap  &  to go left & right.

5. Bluetooth®

The LG 8500 is compatible with devices that support the Bluetooth® headset and hands-free profile(s). You may create and store 20 pairings within the LG 8500 and connect to one device at a time. The approximate communication range for Bluetooth® wireless technology is up to 30 feet (10 meters).

This device is compliant with *Bluetooth* Specification 1.1 and supports the following profiles:

- Dial-up networking profile (DUN): Tethered data connection over *Bluetooth*.
- Headset profile (HSP): In-band ringtone not supported.
- Hands-free profile (HFP): Three way calling and Phone number to a Voice tag not supported.
- Generic access profile (GAP)
- Serial port profile (SPP)
- Service discovery application profile (SDAP)
- Advanced Audio Distribution (A2DP)
- Audio/Video Remote Control (AVRCP)







The LG 8500 offers integrated *Bluetooth* wireless support for headset and hands-free accessories. However, the software used in the LG 8500 available in Canada from LG Electronics Inc. does not support the transfer of data files.

Notes

- Read user guide of each *Bluetooth* accessory that you are trying to pair with your phone because the instructions may be different.
- The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under license. Other trademarks and trade names are those of their respective owners.
- Your phone is based on the Bluetooth® specification, but it is not guaranteed to work with all devices enabled with Bluetooth® wireless technology.

5.1 Power

Allows you to set the *Bluetooth* power On/Off.

1. Tap and press , , , .
2. Use  to select a setting, then press .

On/Off

Note

By default, your device's Bluetooth® functionality is turned off.

5.2 Device List

Pairing is the process that allows the handset to locate, establish and register 1-to-1 connection with the target device.

For pairing new Bluetooth® device

1. Tap and press , , , .
2. Follow the *Bluetooth* accessory instructions to set the device to pairing mode.
3. Tap Right Soft Key [Options] for New. Select **Add New Device.**
4. If *Bluetooth* device is set to off, you will be prompted to turn power on. Select **Yes.**
5. The device will appear in the Device List menu once it has been located. Highlight the device and tap .
6. The handset will prompt you for the passkey. Consult the *Bluetooth* accessory instructions for the appropriate passkey (typically "0000"). Enter the passkey and tap .

7. Once pairing is successful, select **Yes** to connect with the device.
8. Once connected, you will see the device listed in the Paired Devices menu and the *Bluetooth* icon will show at the top of the LCD screen.

5.3 Discovery Mode

Allows you to set Visible(60 secs) or Hidden.

1. Tap and press , , , .
2. Use to select a setting, then tap .
On(60 secs)/ Off

Note

If you turn on **Visible**, your device is able to be searched by other in-range Bluetooth® devices.

5.4 Device Name






Allows you to edit the name of the Bluetooth® device.

1. Tap and press , , , .
2. Tap to clear the existing name.
3. Use the numeric keypad to enter a new custom name.
4. Tap to save and exit.

5.5 Bluetooth Info

1. Tap and press , **9** , **5** , **5** .

6. GPS

1. Tap and press , **9** , **6** .
2. Use  to select a setting, then press .

On/ Emergency Only (E911)

7. System

Options for specific system network settings.

7.1 Phone Info

The Phone Info menu provides you with specific information pertaining to your phone model.

7.1.1 My Number

Allows you to view your phone number.

1. Tap and press , **9** , **7** , **1** , **1** .

7.1.2 SW Version

Allows you to view the software version.

1. Tap and press , **9** , **7** , **1** , **2** .

7.1.3 Serving System

Identifies the channel number of a system that is served and a SID Number. This information is only for technical support.

1. Tap and press , **9** , **7** , **1** , **3** .

7.1.4 Icon Glossary

Allows you to view all the icons and their meanings.


1. Tap and press , **9** , **7** , **1** , **4** .

7.2 System

The System menu allows you to designate specific system network settings.

7.2.1 Set Mode

Allows you to set up the phone producer's management environment. Leave the default setting unless you want to alter the system selection as instructed by your service provider.

1. Tap and press , **9**^{wxyz}, **7**^{pqrs}, **2**^{abc}, **1**[☎].
2. Use  to select a setting, then press .

Home Only/ Automatic

7.2.2 Set NAM




Allows you to select the phone's NAM (Number Assignment Module) if the phone is registered with multiple service providers.

1. Tap and press , **9**^{wxyz}, **7**^{pqrs}, **2**^{abc}, **2**^{abc}.
2. Use  to select a NAM, then press .

NAM 1/ NAM 2

7.2.3 Call Guard

Call Guard alerts you when roaming charges apply.

1. Tap and press , **9**^{wxyz}, **7**^{pqrs}, **2**^{abc}, **3**^{def}.
2. Use  to select a setting, then press .


On/ Off

7.3 Security

Allows you to secure the phone electronically.

7.3.1 Lock Phone

Keeps your phone from unauthorized use. Once the phone is locked, it is in restricted mode until the lock code is entered. You can receive phone calls and still make emergency calls. You can modify the lock code using the Change Lock code within the Security menu.

1. Tap and press , **9**^{wxyz}, **7**^{pqrs}, **3**^{def}.
2. Enter the 4-digit password.

The lock code is commonly the last 4 digits of your phone number.

3. Press **1** **Lock Phone.**

4. Use to select a setting, then press .

Unlock	The phone is never locked.
Lock	The phone is always locked. When locked, you can only receive incoming calls or make emergency calls.
On Power Up	The phone is locked when it is turned on.

7.3.2 Change Lock

Allows you to change to a new four-digit lock code.

1. Tap and press , **9** , **7** , **3** .

2. Enter the 4-digit password.

The lock code is commonly the last 4 digits of your phone number.

3. Press **2** **Change Lock**

4. Enter a old four-digit lock code.

5. Enter a new four-digit lock code.

6. Enter the new lock code again to confirm the original entry.

7.3.3 Reset Defaults

Allows you to reset your phone to the factory default settings.

1. Tap and press , **9** , **7** , **3** .

2. Enter the 4-digit password.

The lock code is commonly the last 4 digits of your phone number.






3. Tap **3** **Reset Defaults.**

4. Read the screen message, then press .

5. Press **1** **Revert** to change your phone settings back to the factory defaults or press **2** **Cancel** to exit without changing.

8. Airplane Mode

Airplane Mode allows you to use many of your phone's features, such as Games, Notepad, Voice Memos, etc., when you are in an airplane or in any other area where making or receiving calls or data is prohibited. When your phone is in Airplane Mode, it cannot send or receive any calls or access online information.

1. Tap and press , , .
2. Use  to select a setting, then press .

On/ Off

TIA(Telecommunications Industry Association) Safety Information

The following is the complete TIA Safety Information for wireless handheld phones.

Exposure to Radio Frequency Signal

Your wireless handheld portable phone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out Radio Frequency (RF) signals. In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

- ANSI C95.1 (1992) *
- NCRP Report 86 (1986)
- ICNIRP (1996)
- Health Canada, Safety Code 6, 1999.

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of your phone complies with the FCC guidelines, IC Regulations (and those standards).

Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorised antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

Phone Operation

NORMAL POSITION: Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

Tips on Efficient Operation

For your phone to operate most efficiently:

Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

Driving

Check the laws and regulations on the use of wireless phones in the areas where you drive and always obey them. Also, if using your phone while driving, please observe the following:

- Give full attention to driving -- driving safely is your first responsibility;
- Use hands-free operation, if available;
- Pull off the road and park before making or answering a call if driving conditions or the law so require.

Electronic Devices

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with Pacemakers:

- Should ALWAYS keep the phone more than six inches from their pacemaker when the phone is turned ON;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimize the potential for interference;
- Should turn the phone OFF immediately if there is any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives.) Optional for each phone manufacturer.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Health Care Facilities

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may use equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Turn your phone OFF in any facility where posted notices so require.

Aircraft

FCC and Transport Canada regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a “blasting area” or in areas posted: “Turn off two-way radio”. Obey all signs and instructions.

Potentially Explosive Atmosphere

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always marked clearly. Potential areas may include: fueling areas (such as gasoline stations); below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles (such as grain, dust, or metal powders); and any other area where you would normally be advised to turn off your vehicle engine.

For Vehicles Equipped with an Air Bag

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Charger and Adapter Safety

- The charger and adapter are intended for indoor use only.
- Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.

Battery Information and Care

- Please dispose of your battery properly or take it to your local wireless carrier for recycling.
- Do not dispose of your battery by fire or with hazardous or flammable materials..
- Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode.

- The battery does not need to be fully discharged before recharging.
- Use only LG-approved chargers specific to your phone model since they are designed to maximize battery life.
- Do not disassemble or short-circuit the battery.
- Keep the battery's metal contacts clean.
- Replace the battery when it no longer provides acceptable performance. The battery can be recharged several hundred times before replacement.
- Recharge the battery after long periods of non-use to maximize battery life.
- Battery life will vary due to usage patterns and environmental conditions.
- Use of extended backlighting, MiniBrowser, and data connectivity kits affect battery life and talk/standby times.

Safety Information

Please read and observe the following information for safe and proper use of your phone and to prevent damage. Also, keep the user's guide in an accessible place at all the times after reading it.

Explosion, Shock, and Fire Hazards

- Unplug the power cord and charger during lightning storms to avoid electric shock or fire.
- Make sure that no sharp-edged items such as animal's teeth, nails, come into contact with the battery. There is a risk of this causing a fire.
- Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. There is a risk of this causing a fire.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.
- Do not drop, strike, or shake your phone severely. Such actions may harm the internal circuit boards of the phone.
- Do not put your phone in a place subject to excessive dust and keep the minimum required distance between the power cord and heat sources.
- Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it is dirty.
- Do not damage the power cord by bending, twisting, pulling, or heating. Do not use the plug if it is loose as it may cause a fire or electric shock.
- When using the power plug, ensure that it is firmly connected. If it is not, it may cause excessive heat or fire.
- Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause fire or electric shock.
- Do not disassemble the phone.
- Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.
- If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.

- Do not short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and – terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.
- Never place your phone in a microwave oven as it will cause the battery to explode.

General Warnings and Cautions

- Only use the batteries, antennas, and chargers provided by LG. The warranty will not be applied to products provided by other suppliers.
- Store the battery in a place out of reach of children.
- Using a damaged battery or placing a battery in your mouth may cause serious injury.
- Do not place items containing magnetic components such as a credit card, phone card, bank book or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic strip.
- Do not hold or let the antenna come in contact with your body during a call.
- Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
- Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.
- Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.
- Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn. Please contact an LG Authorized Service Center to replace the damaged antenna.
- Do not use the phone in areas where its use is prohibited. (For example: aircraft)
- Do not immerse your phone in water. If this happens, turn it off immediately and remove the battery. If the phone does not work, take it to an LG Authorized Service Center.

- Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.

If you are listening to music while out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when attempting to cross the street.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

FDA Consumer Update



The U.S. Food and Drug Administration's Center for Devices and Radiological Health Consumer Update on Mobile Phones:

1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radiofrequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the Main Menu Screen. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

2. What is the FDA's role concerning the safety of wireless phones?

Under the law, the FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radiofrequency energy (RF) at a level that is hazardous to the user. In such a case, the FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace, or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, the FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and

- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

The FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

The FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure.

The FCC relies on the FDA and other health agencies for safety questions about wireless phones.

The FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

3. What kinds of phones are the subject of this update?

The term “wireless phone” refers here to handheld wireless phones with built-in antennas, often called “cell”, “mobile”, or “PCS” phones. These types of wireless phones can expose the user to measurable radiofrequency energy (RF) because of the short distance between the phone and the user’s head. These RF exposures are limited by FCC safety guidelines that were developed with the advice of the FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person’s RF exposure decreases rapidly with increasing distance from the

source. The so called “cordless phones,” which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radiofrequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don’t know with certainty what the results of

such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that

is directly applicable to human populations, but 10 or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop — if they do — may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

6. What is the FDA doing to find out more about the possible health effects of wireless phone RF?

The FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radio frequency energy (RF). The FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs

that has driven the establishment of new research programs around the world. The project has also helped develop a series of public information documents on EMF issues. The FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. The FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts with independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

7. How can I find out how much radio frequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit radio frequency energy (RF) exposures. The FCC established these guidelines in consultation with the FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless telephones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

8. What has the FDA done to measure the radio frequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the radio frequency energy (RF) exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, “Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques,” sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

9. What steps can I take to reduce my exposure to radio frequency energy from my wireless phone?

If there is a risk from these products — and at this point we do not know that there is — it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radio frequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure. If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna. Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radio frequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure. Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

11. What about wireless phone interference with medical equipment?

Radio frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, the FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by the FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. The FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a “compatible” phone and a “compatible” hearing aid at the same time. This standard was approved by the IEEE in 2000. The FDA

continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, the FDA will conduct testing to assess the interference and work to resolve the problem.

12. Where can I find additional information?

For additional information, please refer to the following resources:

FDA web page on wireless phones
(<http://www.fda.gov/cdrh/phones/index.html>)

Federal Communications Commission (FCC) RF Safety Program
(<http://www.fcc.gov/oet/rfsafety>)

International Commission on Non-Ionizing Radiation Protection
(<http://www.icnirp.de>)

World Health Organization (WHO) International EMF Project
(<http://www.who.int/peh-emf/en/>)

National Radiological Protection Board (UK)
(<http://www.hpa.org.uk/radiation/>)

Consumer Information on SAR

(Specific Absorption Rate)

This Model Phone Meets the Government's Requirements for Exposure to Radio Waves. Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC/IC is 1.6 W/kg*. Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at

its highest certified power level in all tested frequency bands. Although SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Because the phone is designed to operate at multiple power levels to use only the power required to reach the network, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model.

The highest SAR value for this model phone when tested for use at the ear is 1.13 W/kg and when worn on the body, as described in this user guide, is 0.773 W/kg (body-worn measurements differ among phone models, depending upon available accessories and FCC/IC requirements). While there may be differences between SAR levels of various phones and at various positions, they all meet the

government requirement for safe exposure. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID BEJVB8500. Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at <http://www.ctia.org>.

* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

Accessories

There are a variety of accessories available for your mobile phone. Consult your local dealer for availability. Optional items are sold separately.

Battery Charger

The battery charger allows you to charge your phone.



Battery

Standard battery is available.



Vehicle Power Charger

The vehicle power charger allows you to operate the phone and trickle charge the phone's battery from your vehicle.



USB Cable

Connects your phone to your PC.



Headset

Connects to your phone, allowing hands-free operation.



Warranty Information

1. WHAT THIS WARRANTY COVERS:

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

- (1) The limited warranty for the product extends for ONE (1) year beginning on the date of purchase of the product by the original end user.
- (2) The limited warranty extends only to the original end user of the product and is not assignable or transferable to any subsequent purchaser/end user.
- (3) This warranty is good only to the original end user of the product during the warranty period as long as it is in Canada.
- (4) Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.
- (5) During the applicable warranty period, LG will repair or replace at LG's sole option, without charge to the original end user, any defective component part of the phone or accessory.

- (6) LG may, use rebuilt, reconditioned, or new parts or components when repairing any product or replace a product with a rebuilt, reconditioned or new product.

2. WHAT THIS WARRANTY DOES NOT COVER:

- (1) Defects or damages resulting from use of the product in other than its normal and customary manner.
- (2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by spills of food or liquids.
- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) If the carrier's or manufacturer's Customer Service Centre was not notified by the end user of the alleged defect or malfunction of the product, during the warranty period.

Warranty Information

- (5) Products which have had their serial numbers removed or made illegible.
- (6) Damage resulting from use of non-LG approved accessories.
- (7) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (8) Products serviced by non-authorized persons or companies.

Notes:

- (1) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of merchantability or fitness for a particular purpose.
- (2) Shipping damage is the sole responsibility of the shipping company.

3. **EXCLUSION OF LIABILITY:**

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG ELECTRONICS CANADA, INC. SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY APPLICABLE TO THIS PRODUCT.

4. **HOW TO GET WARRANTY SERVICE:**

To obtain warranty service, please call the following telephone number from anywhere in Canada:

LG Electronics Canada, Inc.

Tel. 1-888-542-2623

A		E		K	
Accessories	76	E-mail	33	Keypad	46
Airplane Mode	60	Erase all Contacts	22	Keypad Light	48
Alarm Clock	42	Erase History	25	L	
Alerts	47	Erase Messages	31	Language	51
All Calls	23	External Memory	39	List Entries	20
B		Ez Tip Calc	43	Lock Mode	18
Backlight	48	G		M	
Backlight Settings	49	Games	41	Memory Info	32,40,50,54
Banner	48	Games / Tools	49	Menu Access	20
Battery	13	Get New	41	Menu Style	49
Battery Charge Level	14	GPS	57	Menus Overview	11
Bluetooth Info	57	GPS Services	42	Messaging	26
Bluetooth®	55	Groups	21	Missed Calls	24
C		I		Music	35
Calculator	42	IM & Chat	33	Music & Media	35
Call History	23	Important Safety		Mute Function	18
Call Setup	50	Precautions	1	My Albums	38
		Inbox	28		
D		K			
Call Timers	25	L			
Call Waiting	19	M			
Caller ID	19	N			
Camera	37	O			
Charging the Battery	13	P			
Clock Format	49	Q			
Contacts	20	R			

Index

N		R		T		W	
Nav. Key Shortcuts	50	Received Calls	24	Table of Contents	4	Wallpaper	36,48
New Entry	21	Ringers	46	Take Video	38	Web Alerts	32
Notepad	43	Ringtones	36	Templates	30	Wireless Web	33
Notifications	50			Text and Multimedia	27	World Clock	44
O		S		Tools & Apps	41		
Online Album	39	Saved	30	Touch Sensor Level	54		
Others	50	Scheduler	43	TTY Mode	52		
Outbox/Sent	29	Security	58	Turning the Phone On and Off	14		
P		Settings	31,45	TV & Radio	40		
Phone Info	57	Shop	40				
Phone Overview	10	Short Codes	33	V			
Picture Album	38	Signal Strength	15	Vibrate Mode	18		
Power	55	Sound	46	Video	37		
		Sound Album	38	Video Album	39		
		Speed Dialing	19	Voice Dials	22		
		Speed Dials	22	Voice Mail	27		
		System	57,58	Voice Memo	44		
				Volume	47,49		
				Volume Quick Adjustment	18		