

Advanced Playback mode (continue)

PBC function (VCD 2.0 only)

PBC button. This button switches PBC functions on or off.



- When playing VCD with PBC functions, you can enjoy simple interactive software on TV screen.
- When playing VCD with PBC functions, as track selection, stop, previous/next scene, last forward/backward, return, play/pause and karaoke for you to select.
- PBC functions can be auto run after the disc is loaded and its logo appears on VFD.
- Desired tracks can be selected by pressing numeric buttons when PBC functions are on. Once selected, automatically player will start playing the desired track.

PBC functions allow you to select programs guided by simple interactive software.

DIGEST (DVD and VCD)


Note: MP3 discs does not support this function.

- Press **DIGEST** during Playback.
 - Press **DISP/PAUSE** button to start CD playback from track No. 1.
 - Press the **DISP/PAUSE** button to display the track elapsed time.
 - Press the **DISP/PAUSE** button to start the CD scan function.
- The first 6 seconds of each CD track will display on screen until all CD tracks finish playing the 6-second introduction.

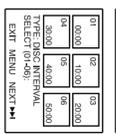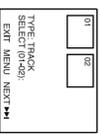

MP3 Basic Operation

MP3 ON SCREEN DIALOGUE BOX FEATURES

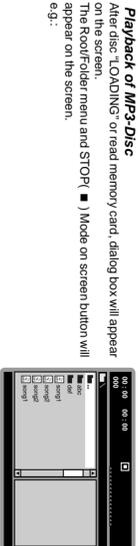


After disc "LOADING" or read memory card, dialog box will appear on the screen.

The Root/Folder menu and STOP (■) Mode on screen button will appear on the screen.

Playback track on Root.

Press the NAVIGATION (◀ ▶) button to select your desired track on the Root, then press PLAY (▶) or "ENTER" button, to start playback, the PLAY (▶) indicator show on screen, and the player will continuous play-back all tracks in ROOT and stop automatically after finished all tracks.

e.g.:

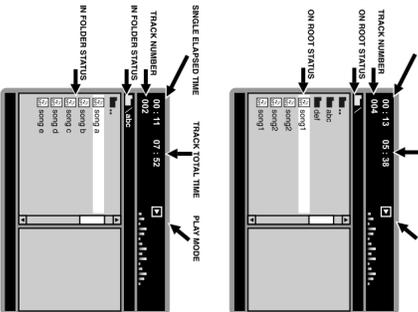

Playback track in folder.

Press the NAVIGATION (◀ ▶) button to select the folder, press NAVIGATION (▶) button or ENTER button to enter folder.

Note: Press a sub-folder, repeat above.

Press the NAVIGATION (◀ ▶) button to select your desired track, then press PLAY (▶) or "ENTER" button to playback, the PLAY (▶) indicator show on screen. The player will continuous playback, until finish all tracks in such folder, the player will stop automatically.

e.g.:

Selecting Folder/Tracks Using the Number Buttons

During playback, press the Numeric buttons corresponding to the track numbers to select your desired track. The unit will jump to the new track and then press ENTER or PLAY (▶) button to playback.

OTHER FUNCTIONS

When playing a MP3 disc, the unit has functions like mute, audio mode, pause/step, previous/next track, and forward/reverse.

You may operate as you do with a CD on Basic Operations.

Select/Back to Folder Menu

When in the folder, or in the sub-folder on screen, Press the NAVIGATION (◀ ▶) button, or press ENTER button, when the cursor highlights the folder ■■■■■, the screen will show the folder name and the CD icon.

If cursor highlights the folder name of folder, press the NAVIGATION (◀ ▶) button, the screen will back to the previous folder or the Root.

The above functions are also available in P.L.V. mode.

REPEAT PLAY

To Repeat play a track/file, simply select the track/file as described on the previous page, then press the REPEAT button once. "REPEAT ON" will appear on the TV screen and the unit will repeat the selected track/file continuously until the STOP button is pressed.

To Repeat play all tracks on an MP3 CD, press the REPEAT button a second time. "REPEAT FOLDER" will appear on the TV screen and the unit will repeat the CD continuously until the STOP button is pressed.

To cancel Repeat play, press the REPEAT button until "FOLDER" appears on the TV screen.

Data Discs with pictures in jpeg format

Note: Copying files must be stored in ".jpeg" format (file extension ".jpg" otherwise they won't be recognized).

When you have inserted a CD with jpeg files, you see a menu showing the folders/files on the CD. Use the navigation keys (◀ ▶) to select the desired folder, then press ENTER. The files inside are displayed.

Use the navigation keys (◀ ▶) to choose the desired file and the picture preview on the right frame. If press the ENTER button, that picture will be displayed.

This starts your "modern slide show" because the unit will change to the next picture automatically after a few seconds until all pictures have been shown on screen once.

Press the PAUSE button to hold the current picture on the screen. Use the PLAY (▶) button to continue.

Use the (M) or (M) key to skip back or forward.

Press the (M) button to cancel the picture show and to return to the folder menu.


If you press the REPEAT button once, the currently displayed picture will constantly been shown.

Press REPEAT again, press this time twice to have all pictures in the current folder repeated.

Important note: When you've selected "REPEAT ON", only the picture will be displayed constantly. Then you **cannot skip** using the (M) or (M) button.

Initial Setting

- Press the Setup button to display the Setup Menu.
- Press the "1" or "2" Navigation buttons to move the yellow cursor under the item on top of the TV screen to your desired icon page.
- The following icons represent 5 Setup Page.

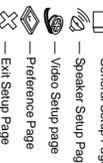

Select a menu icon using the (◀ ▶) buttons. Then Select one of the available options using the (◀ ▶) buttons. Press the (▶) button to access the submenu and use the (◀ ▶) buttons to select an option. Then press ENTER to confirm your selection. Return to a previous menu using the (◀) button. To exit from the menus, press the SETUP button again or select the (X) icon and press ENTER.

General Setup

The setting structure is as follows:

TV DISPLAY

- Normal/PS: This is selected when the unit is connected with a normal TV.
- Wide: Wide-Screen images are shown on the screen, but with some parts cut automatically.
- Normal/LB: Stand for "Letter Box".

TV TYPE

- Select "NTSC" for a NTSC TV.
- Select "PAL" for a PAL TV.

ANGLE MARK

- This only works when there is an angle mark on the disc.
- Select "ON": the screen shows the angle mark when playing a DVD.
- Select "OFF": the angle mark is not shown.

OSD LANG

To change language of setup menu, choose the language using (◀ ▶) buttons and press ENTER to confirm.

Screen Saver

Select the screen saver, the screen saver image appears when the unit sleeps, or the image is motionless for approximately 1 minute. This saver can keep the screen from being damaged.

Speaker Setup Page

ON: Start the screen saver.

OFF: Remove the screen saver.

Speaker Setup Page

Select Audio setup in the Setup Menu and then Select the Speaker Setup Menu using the (◀ ▶) buttons to navigate through the menuscreens and press the Enter button to confirm.

Video Setup Page

Sharpness: To adjust the sharpness or softness picture.

Press the (+ or -) buttons to select your desired level. The colour bar appears on the screen. Press ENTER to confirm.

Brightness

To adjust more shining or darken picture.

Contrast

To adjust increase or decrease colour contrast.

Colour

To adjust increase or decrease the phases of colour.

Unit

To adjust increase or decrease the level. Press ENTER to confirm.

Preference Setup Page

Select Audio setup in the Setup Menu and then Select the Preference Setup Menu using the (◀ ▶) buttons to navigate through the menuscreens and press the Enter button to confirm.

Disc menu

To change the language of menu, choose the language using the (◀ ▶) buttons and press ENTER to confirm.

Parental

You can control access to the player and the type of discs your family can watch with the rating function. There are eight levels of parental control.

Rating Level

1 KID SAF = 2 G = 3 PG = 4 PG 13 = 5 PGR = 6 R = 7 NC-17 = 8 Adult

Password change

This option allows you to set or change the password.

Subtitle

To change the subtitle language, choose the language using the (◀ ▶) buttons and press ENTER to confirm.

Audio

To change the audio language, choose the language using the (◀ ▶) buttons and press ENTER to confirm.

Subtitled

To change the subtitle language, choose the language using the (◀ ▶) buttons and press ENTER to confirm.

Disc menu

To change the language of menu, choose the language using the (◀ ▶) buttons and press ENTER to confirm.

Parental

You can control access to the player and the type of discs your family can watch with the rating function. There are eight levels of parental control.

Rating Level

1 KID SAF = 2 G = 3 PG = 4 PG 13 = 5 PGR = 6 R = 7 NC-17 = 8 Adult

Password change

This option allows you to set or change the password.

Subtitle

To change the subtitle language, choose the language using the (◀ ▶) buttons and press ENTER to confirm.

| | | | | |
|-----------------------|--------------------|------------------|-----------------|-----------------|
| General Setup Page -- | Speaker Setup Page | Video Setup Page | Preference Page | Exit Setup Page |
| TV Display | PS | NTSC | TV Type | AT Type |
| Angle Mark | ON | ENG | OSD Lang | Screen Saver |

Specifications

| | | |
|--------------------------------------|---|------------------|
| Power requirements: | AC-100-240V/50-60Hz | DC 9V/1.2V, 1.5A |
| Power consumption: | 11W maximum | |
| Signal system: | NTSC / PAL | |
| Dimensions: | 147 Hq. (with battery) | |
| Weight: | 1.47 kg. (with battery) | |
| Operating temperature range: | Play: 25(L) X 17(W) X 43(H)mm (excluding battery) | |
| Operating humidity range: | +5°C to +35°C | |
| Battery charging time: | 5 to 90% (no condensation) | |
| Battery life/full charge: | Approximately 4-5 hours | |
| Discs played: | 12cm single-sided, single-layer | |
| (1) DVD-VIDEO disc | 12cm single-sided, dual-layer | |
| | 12cm double-sided, single-layer | |
| | 12cm double-sided, dual-layer | |
| | 8 cm single-sided, single-layer | |
| | 8 cm double-sided, single-layer | |
| | 12cm disc | |
| | 8 cm disc | |
| | 1 V-P | |
| | 1 Vrms (1 KHz, 0dB) | |
| Audio output level: | 20Hz-20KHz (8KHz sampling) | |
| Audio signal output characteristics: | 20Hz-20KHz (8KHz sampling) | |
| Frequency responses: | 20Hz-20KHz (8KHz sampling) | |
| DVD (linear audio): | 20Hz-20KHz | |
| CD audio: | 20Hz-20KHz | |
| S/N ratio: | 70dB | |
| Voice and subtitle help: | measurable level | |
| Pickup: | Voice height: CLAS 1 | |
| | Specifications are subject to change without notice. Weight and dimensions are approximate. | |

Troubleshooting

- No power**
 - Insert the AC power plug securely into the power outlet.
 - Play fails to start even when P.L.V. is pressed. Play starts but then stops immediately.
 - Condensation has formed, wait about 1 to 2 hours to allow the player to dry out.
 - This player cannot play a disc other than DVD, Video CD and CD.
 - The disc may be dirty and may require cleaning.
 - Ensure that the disc is installed with the label side up.
- No picture.**
 - Ensure that the equipment is connected properly.
 - LINE SELECT is set to "IT" and you are trying to play a disc.
 - No sound or Distorted sound.
 - Ensure that the input setting is connected properly.
 - Ensure that the speaker and stereo system are correct.
 - Picture is distorted during rapid advance or rapid reverse.
 - The picture will be somewhat distorted at times; this is normal.
 - No rapid advance (or rapid reverse play).
 - Some discs may have sections which prohibit rapid advance (or rapid reverse).
 - No 4:3 (16:9) picture.
 - Choose the correct setup "TV SCREEN" item which matches the TV set used.
 - No operations can be performed with the remote control unit.
 - Check the batteries are installed with the correct polarities (+ and -).
 - The batteries are exhausted; replace them with new ones.
 - Point the remote control unit at the remote control sensor and operate.
 - Remove the obstacles between the remote control unit and remote control sensor.
 - No key operation by the main unit and/or the remote control unit is effective.
 - Press POWER to set the player to the standby mode and then back to ON.
 - Alternatively, press POWER to set the player to the standby mode and then back to ON.
 - Alternatively, the player may not be operating properly due to lightning, static electricity or some other external factor).
 - Play does not start even when title is selected.
 - Confirm the RATING LEVEL setting.
 - Audio soundtrack and/or subtitle language is not the disc, the initial settings.
 - If the audio soundtrack and/or subtitle language does not exist on the language selected at the initial settings will not be seen/heard.
 - No subtitles.
 - Subtitles appear only with discs which contain them.
 - Subtitles are cleared from the TV monitor perform the steps on portion SUBTITLE to display the Alternative audio soundtrack (or subtitle) language fail to be selected.
 - An alternative language is not selected with discs which do not contain more than one language. Angle cannot be changed.
- This function is dependent on software availability. Even if a disc has a number of angles recorded, these angles may be recorded for specific scenes only.
- The password for rating level has been forgotten.
- Please contact your local sales dealer.
- No menu play.
- This function works only for Video CDs with playback control.
- When AC-DC adaptor plugin a while, FULL and CHARGE indicators blink, then CHARGE indicator light on RED, but rechargeable battery is released.
- In a system test for recharge circuit, and then the circuit is powered ON, which is not a malfunction.

Additional Information

Disc types you can play:

| | | |
|--------------------|---------------|---|
| DVD VIDEO | Audio & Video | Disc size 12cm |
| COMPACT DISC VIDEO | Audio & Video | Single side, single layer / Single side, double layer |
| COMPACT DISC AUDIO | Audio | PAL and NTSC DVD disc |
| | | Playback time 15min/24min max. |
| | | Disc size 12cm / 8 cm |
| | | SVCD, CD and VCD disc |
| | | Playback time 74min / 24min max. |
| | | Disc size 12cm / 8 cm |
| | | CD disc |
| | | Playback time 24min / 24min max. |

Note:

Only the above types of discs can be played on this unit.

DVD-ROM, CD-ROM, CDV, etc. cannot be played.

Some CD-R, CD-RW disc cannot be played depending on the condition of the player and the disc. This unit is to be used exclusively with the NTSC or PAL colour system. SECAM system discs cannot be used with this unit.

DVD disc

DVD discs are divided into titles, and the titles are subdivided into chapters.

Music CD disc

Music CD discs are divided into tracks.

MP3

MP3 is the abbreviation of "MPEG 1 Audio Layer 3" MPEG Audio is a compression specification that compresses the audio portion only. This image compression method is used in DVD etc. The audio data has been compressed into about 1/10.

Notes on handling discs

- Do not scratch discs.
- Do not expose the disc to direct sunlight, high humidity, or high temperatures for extended periods of time.
- Discs should be returned to their cases after use.
- Do not apply paper or wipe anything on the disc surface.
- Do not touch the disc with your fingers (greasy state).
- Fingerprints and dust should be carefully wiped off the playing surface of the disc with a soft cloth.

Disc Cleaning

Never use chemicals such as aerosol cleaners, benzene, anti-static liquids or any other solvent for cleaning discs. When cleaning, wipe gently with a soft damp (water only) cloth from the center to the edge, avoiding circular motions, which could cause scratches and interference during play-back. Wipe in a straight motion from the center to the outside of the disc.

This product incorporates copyright protection technology that is protected by method claims of the U.S. Patent Nos. 4,631,603; 4,819,098; 4,907,093; 5,315,448; and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembling is prohibited.

Apparatus Claims of U.S. Patent Nos. 4,631,603; 4,819,098; 4,907,093; 5,315,448; and 5,516,132; licensed for limited viewing uses only.