



35mm Flash Camera

OWNER'S MANUAL

DTE622



WARNING



Choking Hazard—Small Parts and Packaging Materials. Not for children under 8 years.

- All materials for fastening or packing purposes are not part of the unit and should be discarded for children's safety.
- Please keep all information for future reference.
- This is not a toy.

FCC NOTICE:

 
 
This device complies with part 15 of the FCC Rules. Operation is subject to the following conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Emerson Radio Corp. has produced this product under license from Nickelodeon. We have taken great care to make sure your unit was in perfect working order when it left our factory.

This product has been designed to give you many years of enjoyment and trouble-free operation. Read this manual before operating this unit to become familiar with its features. In the event you require technical assistance, please contact the Emerson Radio Customer Service hotline at 1-800-898-9020. Retain this manual for future reference.

LOCATION OF CONTROLS

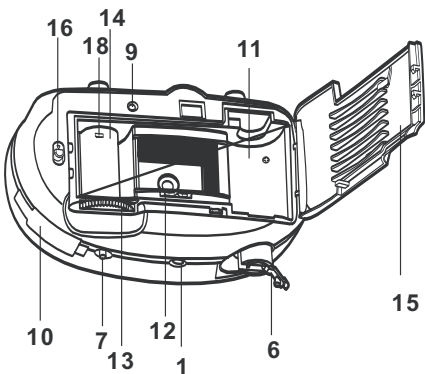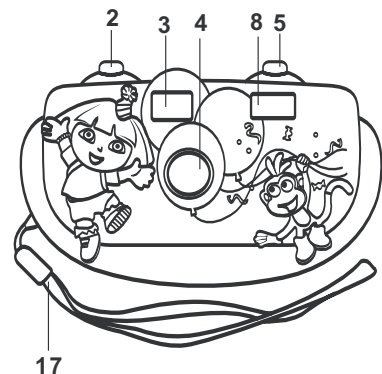

1. Film Counter
2. Shutter Release Button
3. Viewfinder Window
4. Lens
5. Flash Button
6. Film Rewind Crank
7. Film Rewind Button
8. Electronic Flash
9. Flash Ready Indicator
10. Battery Compartment Cover
11. Film Chamber
12. Film Sprocket Wheel
13. Film Advance Wheel
14. Film Take-up Spool
15. Back Cover
16. Back Cover Release
17. Hand Strap
18. Spool Hook

NOTE:

 
Throughout the manual, the controls are referred to by location number; i.e., on page 3, the Battery Compartment cover is listed as (10).

CAMERA CARE AND STORAGE

- When the camera is not in use, please remove the battery.
- Do not subject the camera to any shock or vibration.
- Never leave the camera in extreme high or low temperatures.
- Keep the camera in a cool and dry place, away from dust and chemicals.
- Unload the battery from the camera for extended storage.

INSTALLING THE BATTERY

1. Open the Battery Compartment cover (10) and insert one (1) AA battery into the compartment following the diagram in the compartment.
2. Replace the Battery Compartment cover.

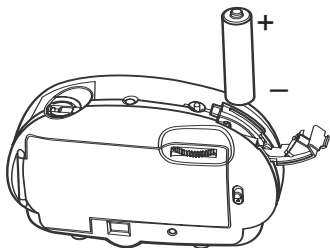



BATTERY PRECAUTIONS

- * Replacement of batteries must be done by an adult.
- * Do not mix old and new batteries.
- * Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- * The supply terminals are not to be short-circuited.
- * Non-rechargeable batteries are not to be recharged.
- * Exhausted batteries are to be removed.
- * Only batteries of the equivalent type are to be used.
- * Batteries are to be inserted with the correct polarity.
- * Dispose of batteries properly.
Do not dispose of batteries in fire; batteries may explode or leak.

LOADING AND UNLOADING FILM


LOADING FILM

  1. Push the Back Cover Release (16) to open the Back Cover (15); the Film Counter (1) will automatically reset to "S".
2. Insert standard 35mm film into the Film Chamber (11) by placing the film onto the Film Take-up Spool (14).
3. Turn the Film Advance Wheel (13), while making sure the film engages properly in the gear of the Film Sprocket Wheel (12).
4. Close the Back Cover (15).
5. Turn the Film Advance Wheel (13), then press the Shutter Release button (2).
6. Repeat step 5 until the Film Counter (1) indicates "1".

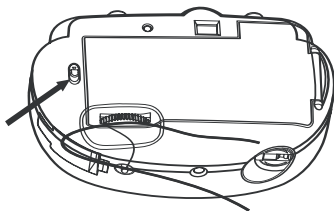


UNLOADING FILM

 1. After taking the last picture, press and hold the Film Rewind button (7) on the bottom of the camera.
2. Lift the handle of the Film Rewind Crank (6) outward, then turn clockwise to rewind the film into the film case until no pressure is felt.
3. Push the Back Cover Release (16) to open the back cover (15), remove film and develop.

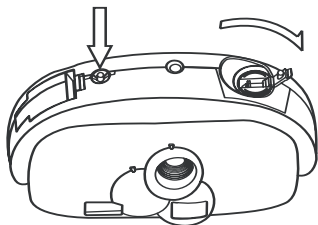

TAKING PICTURES

1. To turn on the flash, press the Flash button (5) to the “” position; the Flash Ready indicator (9) will start blinking within a few seconds indicating you are ready to take a picture with the flash.
To turn off the flash, press the Flash button (5) to the opposite position; you are ready to take a picture without the flash.
2. Press the Shutter Release button (2) to take a picture.

NOTE:

Never shoot the flash directly into the eyes of people or animals at close distance. It may cause serious injury.

SPECIFICATIONS

Camera Type	...35 mm focus camera with built-in electronic flash
Film FormatFilm size 24 x 36mm (standard 35mm film)
Lens25.3mm F/11 (1 element) lens
Focus distance1.0 meter to infinity focus
ViewfinderOptical 2 element reverse Galilean viewfinder
Shutter speed1/120 sec
Film AdvanceManual thumb wheel system
Built-in FlashReady light indication, recycle time approximately 8 seconds with fresh alkaline battery
Battery1 x "AA" 1.5 volt size alkaline battery
Dimensions133 x 83 x 40mm
Range of flash shooting (ISO 100)1.0m-1.2m
ISO 2001.0m-1.7m
ISO 4001.0m-2.2m



Emerson[®]

SERVICE

TO FIND THE LOCATION AND PHONE
NUMBER OF YOUR NEAREST SERVICE
CENTER PERMITTED TO PERFORM
WARRANTY...

CALL TOLL FREE: 1-800-695-0098

FOR ADDITIONAL SET-UP OR OPERATING ASSISTANCE
PLEASE CALL:
1-800-898-9020

FOR CUSTOMER SERVICE, PLEASE WRITE TO:
Emerson Radio Corp.,
Consumer Affairs Dept.,
5101 Statesman Drive,
Irving, TX 75063.

**EMERSON RADIO CORP.
LIMITED WARRANTY**

Emerson Radio Corp. warrants manufacturing defects in original material, including original parts and workmanship, under normal use and conditions, for a period of ninety (90) days from the date of original purchase in the U.S. With your dated proof of purchase, we will provide repair service at no charge for labor and parts at an authorized Depot Repair Facility, or replace the product in our discretion. For repair or replacement, pack your unit in a padded box, enclose your check or money order payable to Emerson Radio Corp. in the amount of \$9.00 (not required by California residents) to cover shipping and handling costs, and enclose a copy of your proof of purchase. Send your unit to:

Emerson Radio Corp.
5101 Statesman Drive
Irving, TX 75063

This warranty does not cover damage from negligence, misuse, abuse, accident, failure to follow operating instructions, commercial use, rental, repairs by an unauthorized facility, or products purchased, used, serviced or damaged outside of the United States.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

AU898M

The serial number of your system is located on a label on the bottom cabinet. Please take a moment now to locate the serial number and write the number in the space provided below. You may be asked to provide this number when calling for product service.

Model Number: **DTE622**

Serial Number: _____



EMERSON
PART NO. 21-2086
508-01

Printed in China