



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY NEX-3. You'll find the answers to all your questions on the SONY NEX-3 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SONY NEX-3
User guide SONY NEX-3
Operating instructions SONY NEX-3
Instructions for use SONY NEX-3
Instruction manual SONY NEX-3

The image shows the front cover of the Sony NEX-3/NEX-5 Instruction Manual. The cover is white with a grey vertical band on the left side. The Sony logo is at the top left, and the phone number 4-183-856-11(1) is at the top right. The title 'Interchangeable Lens Digital Camera' is prominently displayed in the center, with 'Instruction Manual' in a black box below it. A faint outline of the camera is visible in the background. On the right side, there is a table of contents with a grey bar next to each item. At the bottom, the 'α' logo and 'E-mount' are visible, along with the model numbers 'NEX-3/NEX-3C/NEX-5/NEX-5C'. A barcode and the number '4183856110' are at the bottom left. A small box contains information about the Customer Support Website.

SONY 4-183-856-11(1)

NEX-3/NEX-5

**Interchangeable
Lens Digital Camera**

Instruction Manual

Preparing the camera	
Mastering the basic operation	
Using the recording functions	
Using the playback functions	
Checking the functions available	
Importing images to the computer	
Others	

Additional information on this product and answers to frequently asked questions can be found at our Customer Support Website.

<http://www.sony.net/>

Printed using VOC (Volatile Organic Compound)-free vegetable oil based ink.

©2010 Sony Corporation Printed in Thailand

4183856110

α **E-mount**

NEX-3/NEX-3C/NEX-5/NEX-5C



[Your user manual](#)
[SONY NEX-3](#)

Manual abstract:

A. Telephone No.: 858-942-2230 This device complies with Part15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Declaration of Conformity Trade Name: SONY Model No.: NEX-5 Responsible Party: Sony Electronics Inc. Address: 16530 Via Esprillo, San Diego, CA 92127 U.S.A. Telephone No.

: 858-942-2230 This device complies with Part15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. [CAUTION You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment. GB 4 [Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help. The supplied interface cable must be used with the equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules. For Customers in Europe [Notice for the customers in the countries applying EU Directives The manufacturer of this product is Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan. The Authorized Representative for EMC and product safety is Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany. For any service or guarantee matters please refer to the addresses given in separate service or guarantee documents. This product has been tested and found compliant with the limits set out in the EMC Directive for using connection cables shorter than 3 meters (9.8 feet). [Attention The electromagnetic fields at the specific frequencies may influence the picture and sound of this unit. [Notice If static electricity or electromagnetism causes data transfer to discontinue midway (fail), restart the application or disconnect and connect the communication cable (USB, etc.) again.

GB 5 [Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems) This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product. [Disposal of waste batteries (applicable in the European Union and other European countries with separate collection systems) This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste. On certain batteries this symbol might be used in combination with a chemical symbol. The chemical symbols for mercury (Hg) or lead (Pb) are added if the battery contains more than 0..



[Your user manual](#)
[SONY NEX-3](#)