


**デジタル一眼レフカメラ用レンズ/Lens for  
Digital Single Lens Reflex Camera/  
Objectif pour appareil photo numérique  
reflex à objectifs interchangeables**

取扱説明書/Operating Instructions/Mode d'emploi/  
Manual de instrucciones

50mm F2.8 Macro  
100mm F2.8 Macro  
35mm F1.4 G

SAL50M28/100M28/35F14G

©2006 Sony Corporation Printed in Japan

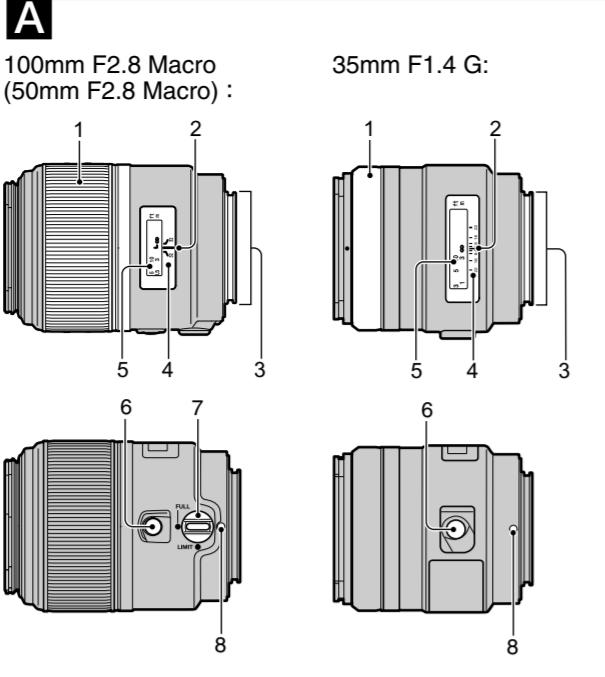

日本語

この取扱説明書は、複数のレンズを対象としています。  
本機はソニー製 **α** カメラでお使いになれます。

**A 警告 安全のために**

ソニー製品は、安全に充分配慮されています。しかし、間違った使いかたをすると、人身事故が起る恐れがあり危険です。事故を防ぐために以下のことを必ずお守りください。

- 安全のための注意事項を守る。
- 故障したたらすぐに、お買い上げ店、またはソニーデジタル一眼レフカメラ専用ヘルプデスクに修理を依頼する。

**A 警告 下記の注意事項を守らないと、事故により死亡や大けがの原因となります。**

レンズを通して、太陽や強い光を見ない  
目をいためたり、失明の原因となることがあります。

乳幼児の手の届く場所に置かない  
事故やけがなどの原因となります。

・さまざまな温度条件下でも良好なピントが確保できるよう、フォーカスリングは無限遠側に余分に回転する仕組みになっています。手動でピント合わせをする場合は、無限遠撮影でモードフォーカスリングを無限遠の終端まで(止まるまで)回さず、ファインダーを見ながら正確にピント合わせをしてください。

• フォーカスリングを回す際は、手を離さないでください。

• このボタンを押している間、オートフォーカスの駆動を止めることができます。押した時点でのピントが固定されますので、そのままのピントでシャッターを切ることができます。

• カスター設定機能を搭載しているカメラでは、このボタンの機能を変更することができます。詳細はカメラの取扱説明書をご覧ください。

• フォーカスレンジ切り替えノブ **D-(3)** (50mm F2.8 Macro, 100mm F2.8 Macro)

ピントを合わせたいもののままでの距離に応じて、近距離撮影範囲内、または遠距離撮影範囲内にピントの駆動範囲を制限(LIMIT)することができます。こうすることで、より早くピントを合わせることができます。

	近距離撮影範囲	遠距離撮影範囲
50mm F2.8 Macro	20cm ~ 27cm	30cm ~ ∞
100mm F2.8 Macro	35cm ~ 54cm	59cm ~ ∞

ピントを合わせたいものが、上の表の近距離撮影範囲内にある場合は、この範囲内の適当な位置にピントを合わせてから、フォーカスレンジ切り替えノブをLIMITにします。以降、ピントの合う位置はこの範囲内に制限されます。<sup>9</sup> 遠距離のものを撮影するときは同じく、上の表の遠距離撮影範囲内の適当な位置にピントを合わせてから、切り替えノブをLIMITにして範囲を制限します。切り替えノブをFULLにすると、全域でピントが合います。

• 近距離撮影範囲と遠距離撮影範囲の間にあるものを撮影するときは、切り替えノブをFULLにしてください。

**被写界深度目盛**

レンズはある距離にピントを合わせたとき、その距離にあるものが鮮明に写るだけでなく、その前後に写真として実用上ピントを合わせる範囲があります。この範囲は被写界深度といいます。被写界深度は使用レンズの撮影距離、絞りによって変化します。被写界深度は、被写界深度目盛上で該当する絞りによって表示されます。

**マクロレンズの被写界深度(50mm F2.8 Macro, 100mm F2.8 Macro)**

マクロレンズの詳しい被写界深度については、被写界深度表 **F** をご覧ください。

• 被写界深度目盛、被写界深度表 **F** は35mm判カメラ用です。APS-Cサイズの撮影機器を搭載したデジタル一眼レフカメラでは、被写界深度は浅くなります。

**E マクロ撮影について(50mm F2.8 Macro, 100mm F2.8 Macro)**

**撮影倍率**

倍率目盛が鏡胴繊出し部に比率で表示されています。レンズ本体の先端部と重なる線(イラスト **E** では1:1)が現在の撮影倍率です。

• 撮影倍率が高くなるとカメラが目立やすくなりますので、撮影時は三脚等でカメラをしっかりと固定してください。

• レンズ信号点を触らないでください。よこれにより接触不良になると、カメラとの信号のやりとりが正しく行われず、カメラが正しく動作しなくなりますのでご注意ください。

**CAUTION**

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

**Focus**

When using the auto focus, the camera focuses the lens automatically. When focusing manually, set your camera to the manual focus and rotate the focusing ring while looking through the viewfinder. The focus signal in the viewfinder indicates the current degree of the focus.

• The focusing ring can be rotated slightly past the infinity to provide accurate focusing under various operating temperatures. Do not rotate the focusing ring all the way to the end when focusing manually even at infinity. Look through the viewfinder and set the focus precisely.

**Focus-hold button **D-(2)****

While the focus-hold button is pressed, auto focus function is suspended and the focus is fixed for shooting.

• The function of the focus-hold button can be changed on cameras with custom function capability. Refer to the camera manuals for details.

**Focus-range limiter **D-(3)****

For quick focusing, the focusing range can be limited to close or far range, depending on the distance to your subject.

**Notes on use**

• Do not leave the lens in direct sunlight. If sunlight is focused onto a nearby object, it may cause a fire. If circumstances necessitate leaving the lens in direct sunlight, be sure to attach the lens cap.

• Be careful not to subject the lens to mechanical shock while attaching it.

• Always place the lens caps on the lens when storing.

• Do not keep the lens in a very humid place for a long period of time to prevent mold.

• After attaching the lens, do not carry the camera by holding the lens.

• Do not touch the lens contacts. If dirt, etc., gets on the lens contacts, it may interfere or prevent the sending and receiving of signals between the lens and the camera, resulting in operational malfunction.

**Precaution for flash use**

With certain of lens/flash combinations, the lens may partially block the light of the flash, resulting in a shadow at the bottom of the picture. When using a built-in camera flash, make sure to remove the lens hood and shoot from at least 1m (3.3feet) away from your subject.

**Vignetting**

When you use lens, the corners of the screen become darker than the center. To reduce this phenomena (called vignetting), close the aperture by 1 to 2 stops.

**Condensation**

If your lens is brought directly from a cold place to a warm place, condensation may appear on the lens. To avoid this, place the lens in a plastic bag or something similar. When the air temperature inside the bag reaches the surrounding temperature, take the lens out.

**Cleaning the lens**

• Do not touch the surface of the lens directly.

• If the lens gets dirty, brush off dust with a lens blower and wipe with a soft, clean cloth (Cleaning Cloth KK-CA (optional) is recommended).

• Do not use any organic solvent, such as thinner or benzine, to clean the lens or the camera cone.

**A Names of parts**

1...Focusing ring 2...Distance index 3...Lens contacts 4...Depth-of-field scale 5...Distance scale 6...Focus-hold button 7...Focus-range limiter\* 8...Mounting index

\* 50mm F2.8 Macro, 100mm F2.8 Macro only

**E Macro photography (50mm F2.8 Macro, 100mm F2.8 Macro)**

The magnification scale is located on the extending section of the lens barrel. The line on the magnification scale which the edge of the outer lens barrel overlaps indicates the current magnification ratio (1:1 in illustration **E**).

\* As the magnification increases, the camera is more vulnerable to shaking. Use a tripod to steady the camera when shooting.

**Exposure Compensation (when using a hand-held exposure meter, etc.)**

As the magnification increases, the amount of light reaching the image sensor decreases. This is automatically compensated in all autoexposure modes, or in the manual exposure mode as long as the exposure is adjusted according to the camera's meter index. If your camera is set to the manual exposure mode and you are using a hand-held exposure meter, or if your camera is set to the manual exposure mode and you are using the Manual Flash Control function available on some external flash units, refer to the exposure compensation table **G**, and adjust exposure accordingly.

**G Exposure compensation table**

a Exposure correction  
b Magnification ratios  
c Distance  
(E.g., when adjusting by the aperture, +2 means opening the aperture 2 more stops.)

**Specifications**

Name (Model name)	Equivalent 35mm-format focal length <sup>1</sup> (mm)	Lens groups-elements	Angle of view 1 <sup>2</sup>	Angle of view 2 <sup>2</sup>	Minimum focus <sup>3</sup> (m)	Maximum magnification (X)	Minimum f-stop (f-number)	Filter diameter (mm)	Dimensions (maximum diameter x height) (mm (in.))	Mass (g (oz.))
50mm F2.8 Macro (SAL50M28)	75	6-7	47°	32°	0.2 (0.65)	0.2	f/32	55	Approx. 71.5x60 (2 13/16x2 3/8)	Approx. 295 (10 3/8)
100mm F2.8 Macro (SAL100M28)	150	8-8	24°	16°	0.35 (1.2)	0.35	f/32	55	Approx. 75x98.5 (3x4)	Approx. 505 (18)
35mm F1.4 G (SAL35F14G)	52.5	8-10	63°	44°	0.3 (1)	0.3	f/22	55	Approx. 69x76 (2 3/4x3)	Approx. 510 (18)

<sup>1</sup> The value for equivalent 35mm-format focal length is based on Digital Single Lens Reflex Cameras equipped with an APS-C sized image sensor.

<sup>2</sup> The angle of view of 1 is based on 35mm-format cameras, and that of angle of view 2 is based on Digital Single Lens Reflex Cameras equipped with an APS-C sized image sensor.

<sup>3</sup> Minimum focus is the shortest distance from the image sensor to the subject.

\* This lens is equipped with a distance encoder. The distance encoder allows more accurate measurement (ADI) by using a flash for ADL.

\* Depending on the lens mechanism, the focal length may change with any change of the shooting distance. The focal length assumes the lens is focused at infinity.





Included items: Lens (1), Front lens cap (1), Rear lens cap (1), Lens hood<sup>1</sup> (1), Carrying case<sup>2</sup> (1), Set of printed documentation

<sup>1</sup> The 50mm F2.8 Macro does not include a lens hood.

<sup>2</sup> The 50mm F2.8 Macro and 100mm F2.8 Macro do not include a carrying case.

Designs and specifications are subject to change without notice.


**α** is a trademark of Sony Corporation.

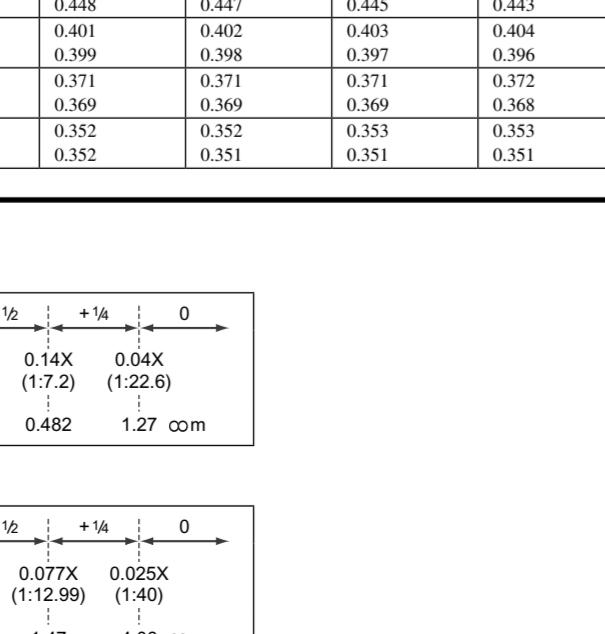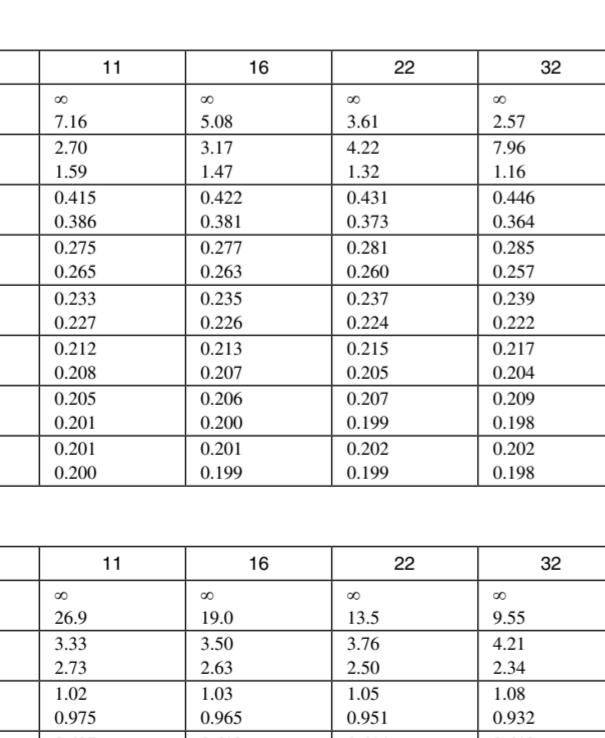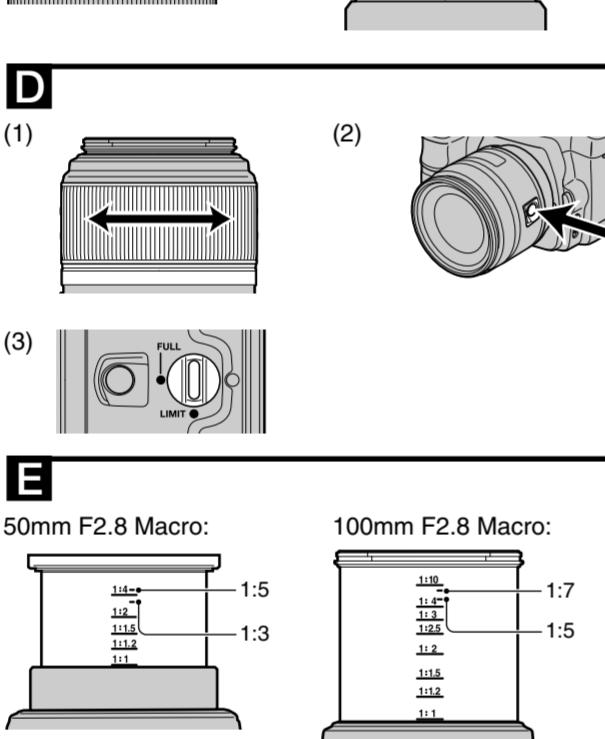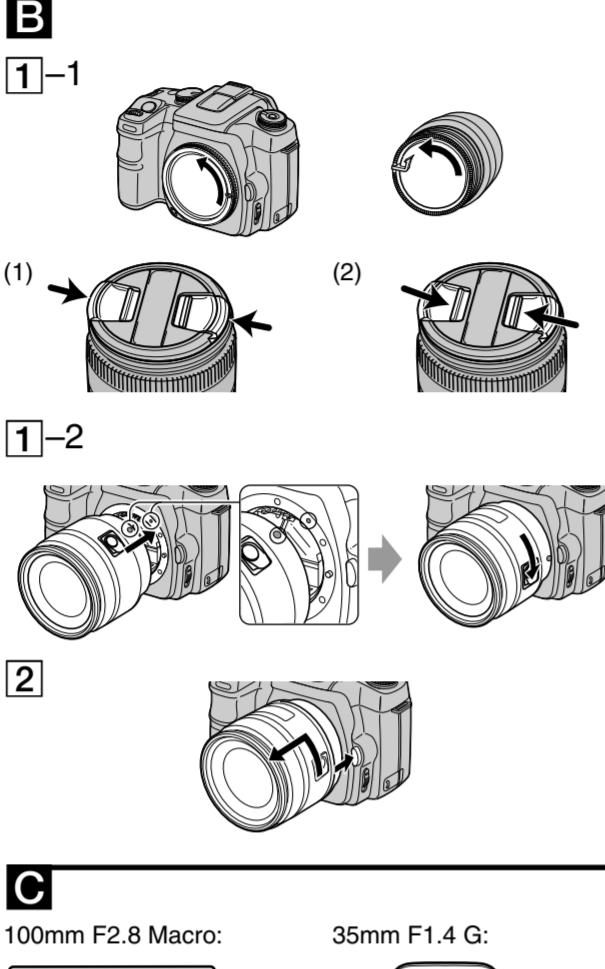


**F**

50mm F2.8 Macro:


m	F	2.8	4	5.6	8	11	16	22	32
∞		∞	∞	∞	∞	∞	∞	∞	∞
		28.0	20.1	14.3	10.1	7.16	5.08	3.61	2.

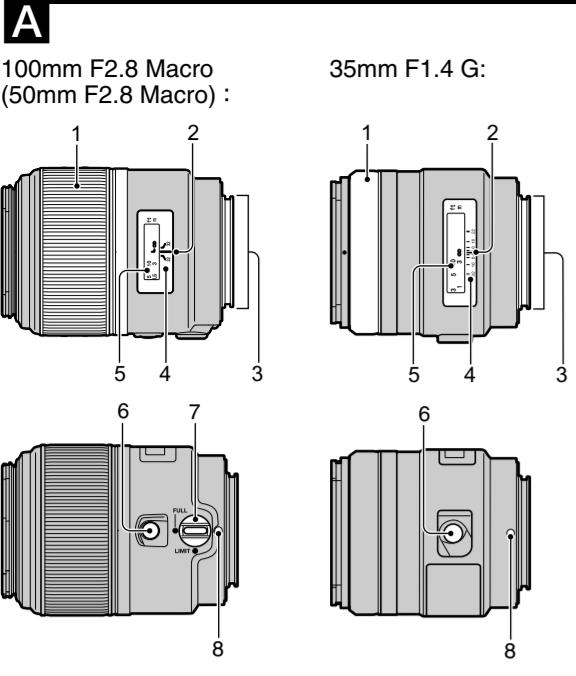


B

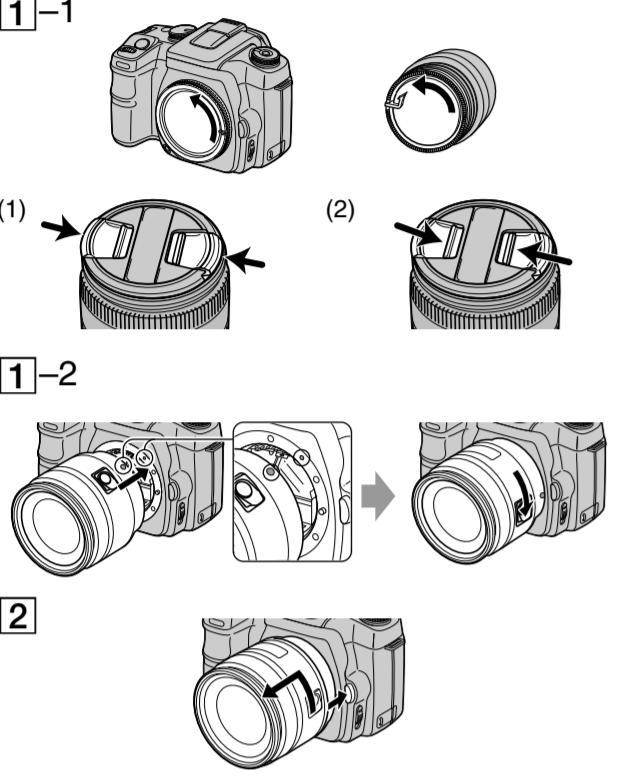


C

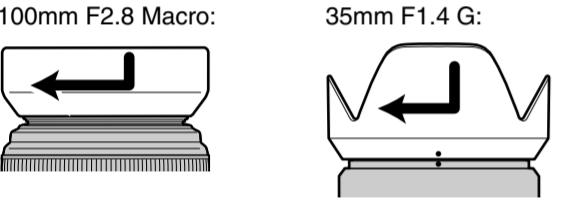

D

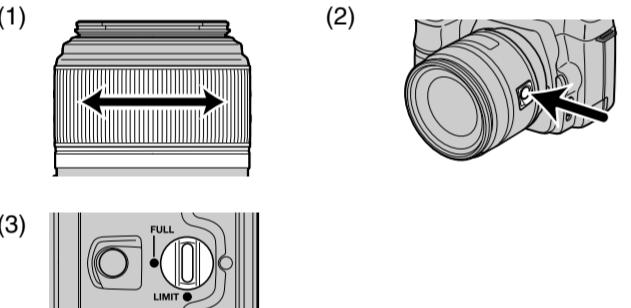

E

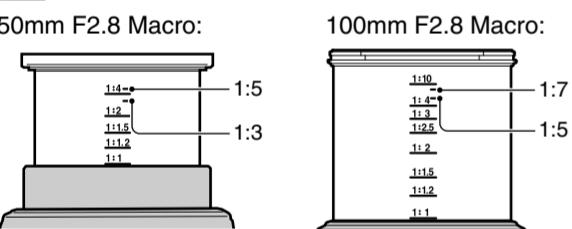

F

m	F	2,8	4	5,6	8	11	16	22	32
$\infty$		$\infty$							
	28.0	20.1	14.3	10.1	7.16	5.08	3.61	2.57	
2	2.14	2.20	2.29	2.45	2.70	3.17	4.22	7.96	
	1.85	1.77	1.69	1.59	1.47	1.32	1.16		
0,4	0.404	0.405	0.407	0.410	0.415	0.422	0.431	0.446	
	0.396	0.395	0.393	0.390	0.386	0.381	0.373	0.364	
0,27	0.271	0.272	0.273	0.274	0.275	0.277	0.281	0.285	
	0.269	0.268	0.266	0.265	0.263	0.260	0.257		
0,23	0.231	0.231	0.232	0.233	0.235	0.237	0.239		
	0.229	0.229	0.228	0.228	0.227	0.226	0.224	0.222	
0,21	0.211	0.211	0.212	0.212	0.213	0.215	0.217		
	0.209	0.209	0.209	0.208	0.207	0.205	0.204		
0,203	0.204	0.204	0.204	0.205	0.205	0.206	0.207	0.209	
	0.202	0.202	0.202	0.202	0.201	0.200	0.199	0.198	
0,200	0.201	0.201	0.201	0.201	0.201	0.201	0.202	0.202	
	0.200	0.200	0.200	0.200	0.200	0.199	0.199	0.198	

100mm F2.8 Macro:

m	F	2,8	4	5,6	8	11	16	22	32
$\infty$		$\infty$							
	107	75,8	53,6	38,0	26,9	19,0	13,5		9,55
3	3,07	3,11	3,16	3,23	3,33	3,50	3,76	4,21	
	2,93	2,90	2,86	2,80	2,73	2,63	2,50	2,34	
1	1,00	1,00	1,01	1,02	1,03	1,05	1,08		
	0,993	0,991	0,987	0,982	0,975	0,965	0,951	0,932	
0,6	0,602	0,602	0,603	0,605	0,607	0,610	0,614	0,619	
	0,598	0,598	0,597	0,595	0,593	0,593	0,587	0,582	
0,45	0,451	0,451	0,449	0,448	0,448	0,447	0,445	0,443	
	0,449	0,449	0,449	0,448	0,448	0,447	0,445	0,443	
0,4	0,400	0,400	0,401	0,401	0,401	0,402	0,403	0,404	
	0,399	0,399	0,399	0,399	0,398	0,397	0,396		
0,37	0,370	0,370	0,370	0,370	0,371	0,371	0,371	0,372	
	0,370	0,370	0,370	0,370	0,369	0,369	0,369	0,368	
0,352	0,352	0,352	0,352	0,352	0,352	0,352	0,353	0,353	
	0,352	0,352	0,352	0,352	0,352	0,351	0,351	0,351	

100mm F2.8 Macro:

m	F	2,8	4	5,6	8	11	16	22	32
$\infty$		$\infty$							
	107	75,8	53,6	38,0	26,9	19,0	13,5		9,55
3	3,07	3,11	3,16	3,23	3,33	3,50	3,76	4,21	
	2,93	2,90	2,86	2,80	2,73	2,63	2,50	2,34	
1	1,00	1,00	1,01	1,02	1,03	1,05	1,08		
	0,993	0,991	0,987	0,982	0,975	0,965	0,951	0,932	
0,6	0,602	0,602	0,603	0,605	0,607	0,610	0,614	0,619	
	0,598	0,598	0,597	0,595	0,593	0,593	0,587	0,582	
0,45	0,451	0,451	0,449	0,448	0,448	0,447	0,445	0,443	
	0,449	0,449	0,449	0,448	0,448	0,447	0,445	0,443	
0,4	0,400	0,400	0,401	0,401	0,401	0,402	0,403	0,404	
	0,399	0,399	0,399	0,399	0,398	0,397	0,396		
0,37	0,370	0,370	0,370	0,370	0,371	0,371	0,371	0,372	
	0,370	0,370	0,370	0,370	0,369	0,369	0,369	0,368	
0,352	0,352	0,352	0,352	0,352	0,352	0,352	0,353	0,353	
	0,352	0,352	0,352	0,352	0,352	0,351	0,351	0,351	

50mm F2.8 Macro:

m	F	2,8	4	5,6	8	11	16	22	32
$\infty$		$\infty$							
	107	75,8	53,6	38,0	26,9	19,0	13,5		9,55
3	3,07	3,11	3,16	3,23	3,33	3,50	3,76	4,21	
	2,93	2,90	2,86	2,80	2,73	2,63	2,50	2,34	
1	1,00	1,00	1,01	1,02	1,03	1,05	1,08		
	0,993	0,991	0,987	0,982	0,975	0,965	0,951	0,932	
0,6	0,602	0,602	0,603	0,605	0,607	0,610	0,614	0,619	
	0,598	0,598	0,597	0,595	0,593	0,593	0,587	0,582	
0,45	0,451	0,451	0,449	0,448	0,448	0,447	0,445	0,443	
	0,449	0,449	0,449	0,448	0,448	0,447	0,445	0,443	
0,4	0,400	0,400	0,401	0,401	0,401	0,402	0,403	0,404	
	0,399	0,399	0,399	0,399	0,398	0,397	0,396		
0,37	0,370	0,370	0,370	0,370	0,371	0,371	0,371	0,372	