


Lensbaby 3G™

Quick Start Guide

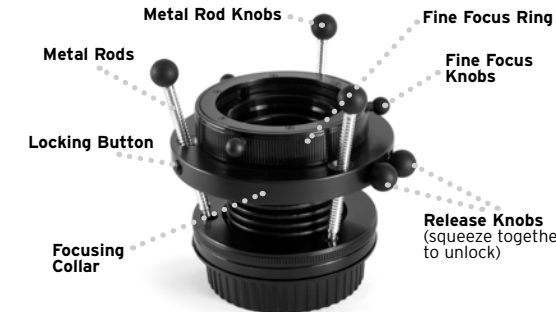

(This is NOT a user guide, so please take a look!)
To see a video showing how to use a Lensbaby, please visit www.Lensbabies.com/training.

1 Exposure Mode



Most SLR cameras will work in aperture priority mode. Most Nikon users will set the camera to Manual Mode. Sony/Maxxum users: please consult your insert.

technical support: 1-971-223-5662


2 Adjust your Diopter



It's important to adjust your diopter prior to using a Lensbaby. For instructions, please consult your camera's manual or visit lensbabies.com/diopter.

visit www.Lensbabies.com/training

3 Unlock your Lensbaby

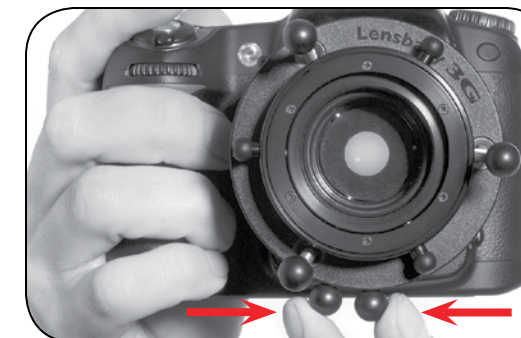

To unlock, squeeze the two Release Knobs at the bottom of the Focusing Collar completely together.

technical support: 1-971-223-5662


4 Center the Fine Focus



Before focusing, center the Fine Focus Knobs in the middle of their range, midway between the Metal Rods.

visit www.Lensbabies.com/training


5 Hand Position

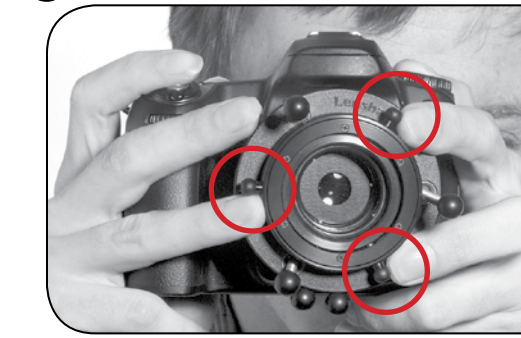

With both thumbs behind the camera place two fingers of your left hand and your right ring finger on the Focusing Collar next to the Fine Focus Knobs.


technical support: 1-971-223-5662

6 Initial Focus

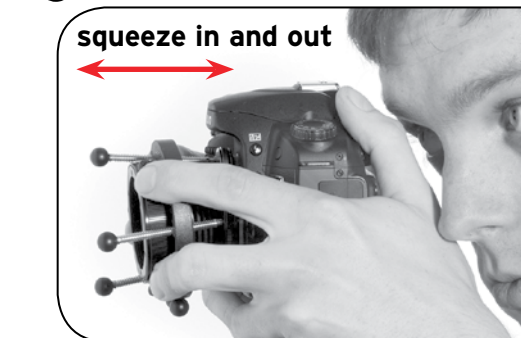

When uncompressed your Lensbaby focuses 18" away. Slowly compress your Lensbaby straight back without bending until the subject in the center of your image comes into focus.

7 Move the Sweet Spot

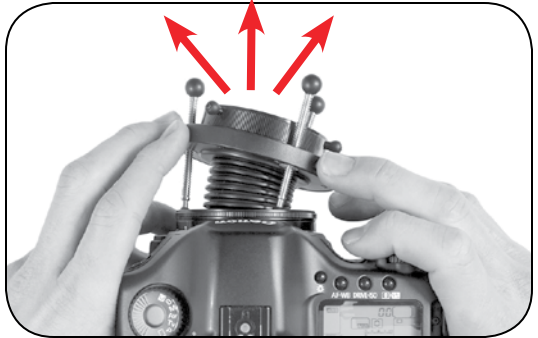

After your subject is in focus, slightly bend your Lensbaby to move the sweet spot of sharp focus. At this point you can take a photograph or lock your Lensbaby.

technical support: 1-971-223-5662


8 Lock



While holding your focus, lock your Lensbaby by pressing the button on the top right of the Focusing Collar with your right index or middle finger.

visit www.Lensbabies.com/training


9 Fine Focus

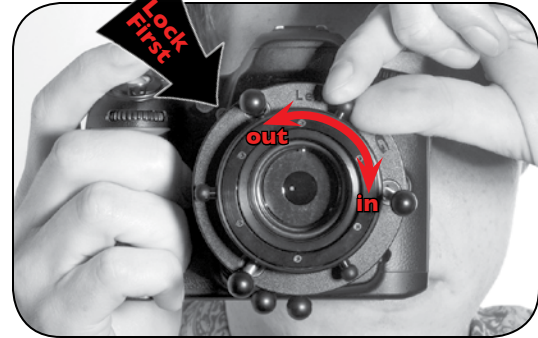

After locking your Lensbaby, rotate the Fine Focus Ring to fine tune your front to back focus. Once your focus is set you are ready to start photographing.

technical support: 1-971-223-5662


✿ Fine Tune the Tilt

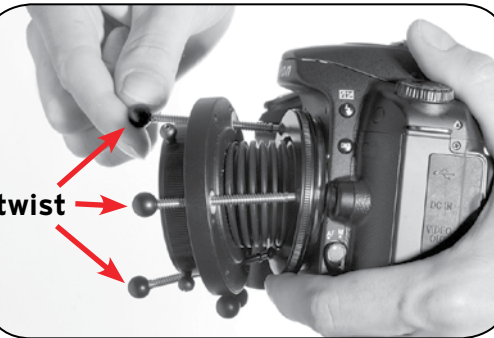

If necessary, rotate the Metal Rods to adjust the tilt and slightly move your sweet spot. Repeat step 9 to fine tune the focus.

✿ Other features of the Lensbaby 3G

✿ Change your Aperture

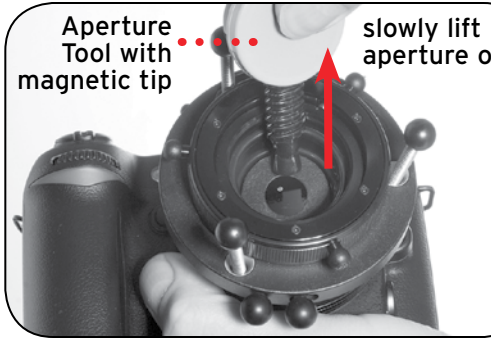

Touch the tip of the Aperture Tool to the Aperture Disk and slowly lift the disk out. Drop in a new disk which is held in place by 3 magnets.

technical support: 1-971-223-5662

Aperture options

○ f/2.0 (No aperture installed) Smallest sweet spot of focus with a lot of Lensbaby blur

○ f/2.8

○ f/4


○ f/5.6

○ f/8

○ f/11

○ f/16

● f/22 Largest sweet spot with little blurring on the edges and largest depth of field

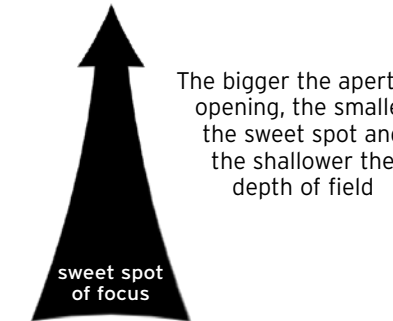


visit www.Lensbabies.com/training

Warranty: Lensbabies will repair or replace any product found to be defective in materials or workmanship for up to one year after the date of purchase. To exercise your warranty, please visit our website at www.Lensbabies.com/warranty. Please have your name, address, order number, telephone number, and a description of the defect ready.

Returns: Don't love your Lensbaby? Please return it to the place of purchase for a full refund up to 30 days after the date of purchase. If you purchased your Lensbaby from Lensbabies.com, please visit our returns page for current instructions: www.Lensbabies.com/returns

A detailed User Guide can be found on our website at www.Lensbabies.com/userguide. Our favorite wide angle, super wide angle, telephoto, and macro conversion lenses are for sale on the accessories page of Lensbabies.com.

Questions or comments? Please call 1-971-223-5662 or email us at customerhappiness@lensbabies.com.

 This user guide was printed on 100% recycled paper with soy based inks.