



**URC 7200 / 7201
Cinema 7**

User Manual

FEATURES AND FUNCTIONS

Here are the features and functions of the *Cinema 7* universal remote control. Use the drawing to locate each feature of the remote, then refer to the chart for a description of what function each feature performs.



FEATURES AND FUNCTIONS

- The Light (LED) flashes red to show that the remote is working and is sending a signal.
- The **MAGIC** key is used to program your *Cinema 7*.
- The **POWER** key controls power ON and OFF the same as the POWER key on your original remote. Please note that most CD Players do not have an ON/OFF function on the original remote control. If this is the case with your CD Player, then **POWER** will have no effect on your CD Player.
- The **TV**, **VCR**, **DVD/LD**, **RCVR**, **AUX**, **CD** and **CABLE/SAT** keys are used to select the home entertainment component you want to control. If your component does not respond when you press a key on the remote control, press the appropriate device key (**TV**, **VCR**, **DVD/LD**, **RCVR**, **AUX**, **CD** or **CABLE/SAT**) first to tell the remote control which component you would like the remote to operate.
- The **VOL▲** (Volume Up), **VOL▼** (Volume Down) and **MUTE** keys control the volume the same as the Volume Up and Down and Mute keys on your original remote.
- The **CH▲** (Channel Up) and **CH▼** (Channel Down) keys change channels the same as the Channel Up and Down keys on your original remote. The **CH▲/▼** keys also control the following functions in other modes: **DVD/LD** mode = Skip Forward/ Skip Reverse, **RCVR**, **AUX** and **CD** mode = Preset Up/ Preset Down.
- The Digit keys (**0-9**) control direct channel access the same as the Digit keys on your original remote. The Digit keys (**0-9**) also control the following functions in other modes: **RCVR** and **AUX** modes = Input Selections.
- The **ENTER** key operates the same as the Enter key on your original remote. If your original remote control required you to use an Enter key to change channels, use the **ENTER** key on the *Cinema 7* after entering your channel number. The **ENTER** key also controls the following functions in other modes: **RCVR** and **AUX** modes = TAPE MON.



The **PREV CH** (Previous Channel) key operates the same as the Last Channel or Recall key on your original remote. The **PREV CH** key also controls the following functions in other modes: **DVD/LD**, **RCVR**, **AUX** and **CD** mode = Random.

The **CH▲/▼**, **VOL▲/▼**, **MUTE**, **PREV CH** and Digit (**0-9**) keys are made of a phosphorescent material that glows-in-the-dark. Expose the keys to bright light to activate the glow-in-the-dark feature. The length of time the keys remain illuminated will be determined by the length of time the remote is exposed to bright light.

The **SLEEP** key accesses the Sleep Timer of your home entertainment components (**TV**, **CABLE/SAT**, **RCVR** and **AUX** modes only). Even if your component does not have a Sleep Timer, the *Cinema 7* may access its own built-in sleep timer.

The **REW** (Rewind), **PL** (PLAY), **FF** (Fast Forward) **REC** (Record), **STOP** and **PAUSE** keys operate the same as the transport keys on your original VCR, Laser Disc, DVD and CD Player remote. As a safety feature of the *Cinema 7*, you must press the **REC** key twice before recording.

The **TV/VCR** key operates the same as the TV/VCR key on your original VCR remote. The **TV/VCR** key also controls the following functions in other modes: **TV** mode = TV/VIDEO, **CBL/SAT** mode = A/B or TV/SAT, **DVD/LD** mode = TV/LD, **RCVR** mode = Input Select, **CD** mode = A/B.

The **MENU** key operates the same as the MENU or OSD (On Screen Display) key on your original remote. Use **▲**, **▼**, **◀**, and **▶** (Menu Up, Down, Left and Right) to navigate your menus. If your original remote control had a SELECT key to select options in your menus, use **SEL**. Use the **EXIT** key to exit/clear your On-Screen menus. Please consult your home entertainment component's original owner's manual for more detailed instructions on accessing and navigating your On-Screen menus.

The **◀**, **▶**, **▲**, and **▼** (Menu Up, Down, Left and Right) keys are used to navigate your On-Screen menus. The **◀**, **▶**, **▲**, and **▼** keys also control the following functions in other modes: **RCVR** and **AUX** mode = Rear Level +/- and Balance Left/Right, **CD** mode = Track +/- and Disc +/-.

The **SEL** (Select) key selects options in your On-Screen menus. The **SEL** key also controls the following functions in other modes: **RCVR** and **AUX** mode = Surround mode, **CD** mode = Disc Select, **DVD/LD** mode = Chapter.

The **EXIT** key exits or clears your on-screen menus. The **EXIT** key also controls the following functions in other modes: **RCVR**, **AUX** and **CD** mode = Open/Close.

The **PROG/GUIDE** key operates your components secondary menus as well as your DBS system's and Cable Converter's Guide function. Use the

◀, **▶**, **▲**, and **▼** (Menu Up, Down, Left and Right) keys to navigate your menus. If your original remote control had a SELECT key to select options in your menus, use **SEL**. Use the **EXIT** key to exit/clear your On-Screen menus. Please consult your home entertainment component's original owner's manual for more detailed instructions on accessing and navigating your On-Screen menus.

The **DISPLAY** key operates the Display function of your home entertainment components.

The **PIP On/Off** key accesses your TV's Picture-in-Picture feature. The **PIP On/Off** key also controls the following functions in other modes: **CD** mode = Disk Skip, **DVD/LD** mode = Subtitle On/Off, **CBL/SAT** mode = View.

The **SWAP** key swaps the Picture-in-Picture window and the TV's main picture. The **SWAP** key also controls the following functions in other modes: **CBL/SAT** mode = SAT.

The **MOVE PIP** key moves the Picture-in-Picture window around your TV screen. The **MOVE PIP** key also controls the following

functions in other modes: **DVD/LD** mode = Angle, **CBL/SAT** mode = Next.

The **SURROUND** key operates the same as the Surround On/Off key on your original remote. The **SURROUND** key also controls the following functions in other modes: **VCR** mode = Auto Tracking, **DVD/LD** mode = Disc, **CBL/SAT** mode = Favorite Channel, **CD** mode = 10+.

The **MACRO** and **MACRO 2** keys can memorize up to 15 keystrokes per key that can be accessed in sequence with a single key press. These keys are not mode specific.

INSTALLING THE BATTERIES

Your *Cinema 7* requires four (4) new AAA alkaline batteries. To install the batteries:

- On the back of the *Cinema 7*, pull back on the tab and lift the battery cover off.
- Match the + and - marks on the batteries to the + and - marks in the battery case, then insert the batteries.
- Press the battery cover back into place.
- Test the unit by pressing **POWER**. If the batteries are inserted correctly, the red light will blink.

NOTE: Removing the batteries will not require you to reprogram your remote control because the *Cinema 7* has unlimited memory backup.

SETTING UP YOUR COMPONENTS

Programming the Cinema 7 to operate your TV: Locate the brand name of your TV and then write it in the space below.

TV Brand: _____

Locate the brand name of your TV in the "Setup Codes For TVs" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 7* to operate your TV.

To program the *Cinema 7* to operate your TV:

- Turn on your TV.
- Press **TV** and release. Press and hold **MAGIC** until the *Cinema 7*'s red light blinks twice, then release **MAGIC**.
- Enter the first four-digit TV code listed for your brand in the "Setup Codes For TVs" section. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.
- Aim the *Cinema 7* at your TV and press **POWER**. Your TV should turn off. If your TV does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your TV.
- Your *Cinema 7* is now programmed to operate your TV. Write your TV code in the boxes to the left for future reference.

Remember, if you want to use your *Cinema 7* to operate your TV, press the **TV** key first.

Programming the Cinema 7 to operate your VCR: Locate the brand name of your VCR and then write it in the space below.

VCR Brand: _____

Locate the brand name of your VCR in the "Setup Codes For VCRs" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 7* to operate your VCR.

To program the *Cinema 7* to operate your VCR:

- Turn on your VCR and insert a tape.
- Press **VCR** and release. Press and hold **MAGIC** until the *Cinema 7*'s red light blinks twice, then release **MAGIC**.
- Enter the first four-digit VCR code listed for your brand in the "Setup Codes For VCRs" section. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.
- Aim the *Cinema 7* at your VCR and press **POWER**. Your VCR should turn off. If your original VCR remote control did not have a POWER key, press **PL** (Play). Your VCR should start to play. If your VCR does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your VCR.
- Your *Cinema 7* is now programmed to operate your VCR. Write your VCR code in the boxes to the left for future reference.

Remember, if you want to use your *Cinema 7* to operate your VCR, press the **VCR** key first.

NOTE: If your TV/VCR is working on one of the above codes highlighted with an asterisk (*), you may need to program a separate TV code in order to control the volume. Check the list of codes below and follow the instructions detailed in the "Programming the Cinema 7 to Operate Your TV" section to program the supplied TV code. *TV/VCRs working on VCR code 0032 may require TV code 0000 for volume control.*

TV/VCRs working on VCR code 0035 may require TV code 0051 for volume control.
TV/VCRs working on VCR code 0048 may require TV code 0093 for volume control.
TV/VCRs working on VCR code 0060 may require TV code 0047 for volume control.
TV/VCRs working on VCR code 0081 may require TV code 0054 for volume control.
TV/VCRs working on VCR code 0162 may require TV code 0250 for volume control.
TV/VCRs working on VCR code 0278 may require TV code 0451 for volume control.

Programming the Cinema 7 to operate your DVD or Laser Disc Player: Locate the brand name of your DVD or Laser Disc Player and then write it in the space below.

DVD/LD Brand: _____

Locate the brand name of your DVD or Laser Disc Player in the "Setup Codes For DVD or Laser Disc Players" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 7* to operate your DVD or Laser Disc Player.

To program the *Cinema 7* to operate your DVD or Laser Disc Player:

- Turn on your DVD or Laser Disc Player and insert a disc.
- Press **DVD/LD** and release. Press and hold **MAGIC** until the *Cinema 7*'s red light blinks twice, then release **MAGIC**.
- Enter the first four-digit DVD or Laser Disc Player code listed for your brand in the "Setup Codes For DVD or Laser Disc Players" section. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.
- Aim the *Cinema 7* at your DVD or Laser Disc Player and press **POWER**. Your DVD or Laser Disc Player should turn off. If your DVD or Laser Disc Player does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your DVD or Laser Disc Player.
- Your *Cinema 7* is now programmed to operate your DVD or Laser Disc Player. Write your DVD or Laser Disc Player code in the boxes to the left for future reference.

Remember, if you want to use your *Cinema 7* to operate your DVD or Laser Disc Player, press the **DVD/LD** key first.

Programming the Cinema 7 to operate your Receiver/Tuner: Locate the brand name of your Receiver/Tuner and then write it in the space below.

Receiver/Tuner Brand: _____

Locate the brand name of your Receiver/Tuner in the "Setup Codes For Receivers/Tuners" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 7* to operate your Receiver/Tuner.

To program the *Cinema 7* to operate your Receiver/Tuner:

- Turn on your Receiver/Tuner.
- Press **RCVR** and release. Press and hold **MAGIC** until the *Cinema 7*'s red light blinks twice, then release **MAGIC**.
- Enter the first four-digit Receiver/Tuner code listed for your brand in the "Setup Codes For Receivers/Tuners" section. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.
- Aim the *Cinema 7* at your Receiver/Tuner and press **POWER**. Your Receiver/Tuner should turn off. If your Receiver/Tuner does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your Receiver/Tuner.
- Your *Cinema 7* is now programmed to operate your Receiver/Tuner. Write your Receiver/Tuner code in the boxes to the left for future reference.

Remember, if you want to use your *Cinema 7* to operate your Receiver/Tuner, press the **RCVR** key first.

Programming the Cinema 7 to operate your CD Player: Locate the brand name of your CD Player and then write it in the space below.

CD Player Brand: _____

Locate the brand name of your CD Player in the "Setup Codes For CD Players" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 7* to operate your CD Player.

To program the *Cinema 7* to operate your CD Player:

- Turn on your CD Player and insert a disc.
- Press **CD** and release. Press and hold **MAGIC** until the *Cinema 7*'s red light blinks twice, then release **MAGIC**.
- Enter the first four-digit CD Player code listed for your brand in the "Setup Codes For CD Players" section. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.
- Aim the *Cinema 7* at your CD Player and press **PL** (Play). Your CD Player should play your disc. If your CD Player does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your CD Player.
- Your *Cinema 7* is now programmed to operate your CD Player. Write your CD Player code in the boxes to the left for future reference.

Remember, if you want to use your *Cinema 7* to operate your CD Player, press the **CD** key first.

Programming the Cinema 7 to operate your Cable Converter or Satellite: Locate the brand name of your Cable Converter or Satellite and then write it in the space below.

Cable Converter Brand: _____
 or
 Satellite Brand: _____

Locate the brand name of your Cable Converter or Satellite in the "Setup Codes For Cable Converters or Satellites" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 7* to operate your Cable Converter or Satellite.

To program the *Cinema 7* to operate your Cable Converter or Satellite:

- Turn on your Cable Converter or Satellite.
- Press **CABLE/SAT** and release. Press and hold **MAGIC** until the *Cinema 7*'s red light blinks twice, then release **MAGIC**.
- Enter the first four-digit Cable Converter or Satellite code listed for your brand in the "Setup Codes For Cable Converters or Satellites" section. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.
- Aim the *Cinema 7* at your Cable Converter or Satellite and press **POWER**. Your Cable Converter or Satellite should turn off. If your Cable Converter or Satellite does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your Cable Converter or Satellite.
- Your *Cinema 7* is now programmed to operate your Cable Converter or Satellite. Write your Cable Converter or Satellite code in the boxes to the left for future reference.

Remember, if you want to use your *Cinema 7* to operate your Cable Converter or Satellite, press the **CABLE/SAT** key first.

Programming the AUX Key: The **AUX** key is already set up to accept codes for a second Receiver/Tuner, Amplifier or other audio component. If you would like to set up the **AUX** key for an audio component, follow the instructions listed below. If you would like the **AUX** key to control a second TV, VCR, Cable Converter or other component, follow the instructions in the "Re-assigning Device Keys" section to re-assign the **AUX** key to accept codes for other components.

For example, if you are setting up an Amplifier: Locate the brand name of your Amplifier and then write it in the space below.

Amplifier Brand: _____

Locate the brand name of your Amplifier in the "Setup Codes For Amplifiers" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 7* to operate your Amplifier.

To program the *Cinema 7* to operate your Amplifier:

- Turn on your Amplifier.
- Press **AUX** and release. Press and hold **MAGIC** until the *Cinema 7*'s red light blinks twice, then release **MAGIC**.
- Enter the first four-digit Amplifier code listed for your brand in the "Setup Codes For Amplifiers" section. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.
- Aim the *Cinema 7* at your Amplifier and press **POWER**. Your Amplifier should turn off. If your

Amplifier does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your Amplifier.

- Your *Cinema 7* is now programmed to operate your Amplifier. Write your Amplifier code in the boxes to the left for future reference.

Remember, if you want to use your *Cinema 7* to operate your Amplifier, press the **AUX** key first.

SEARCHING FOR YOUR CODE

If your TV, VCR or Cable Converter does not respond to the *Cinema 7* after trying all of the codes listed for your brand, or if your brand is not listed at all, try searching for your code. For example, after trying all of the codes for your TV, you still cannot get the *Cinema 7* to operate your TV, then:

- Turn on your TV.
- Press **TV** and release. Press and hold **MAGIC** until the *Cinema 7*'s red light blinks twice, then release **MAGIC**.
- 9 - 9 - 1** Press **9 - 9 - 1**.
- Slowly alternate between pressing **POWER*** and **TV** until your TV turns OFF. Make sure that the *Cinema 7* is aimed at your TV during the search. You may have to press this sequence of buttons (**POWER*** then **TV**) up to 100 times to search the entire library of codes.
- When your TV turns OFF, press and release **MAGIC** to lock in the code for your TV. Your *Cinema 7* is now programmed to operate your TV.

*If you are searching for your VCR, CD, LD or DVD Player code, you may want to use the **PL** (Play) key instead of the **POWER** key to search for your code. When your VCR starts to play, press **MAGIC** to lock in your code.
NOTE: To search for the codes of your other components, repeat Steps 1 through 4, only substitute the appropriate device key (**VCR**, **DVD/LD**, **RCVR**, **AUX**, **CD** or **CABLE/SAT**) for the component you are searching for.

LEARNING THE CODES PROGRAMMED INTO THE CINEMA 7

If you have set up the *Cinema 7* using the "SEARCHING FOR YOUR CODE" procedure, you may want to figure out which three-digit code is operating your equipment. Use this procedure after you have set up your components to find out which four-digit code is operating your equipment. For example, to find out which code is operating your TV after setting up your TV using the "SEARCHING FOR YOUR CODE" procedure:

- Press **TV** and release. Press and hold **MAGIC** until the *Cinema 7*'s red light blinks twice, then release **MAGIC**.
- 9 - 9 - 0** Press **9 - 9 - 0**.
- 1** For the first digit of your four-digit code, press 1 and count the number of times the red light (LED) blinks on the *Cinema 7*. If the light does not blink when you press the number 1, the digit is zero.
- 2** For the second digit, press 2 and count the number of times the red light (LED) blinks on the *Cinema 7*. If the light does not blink when you press the number 2, the digit is zero.
- 3** For the third digit, press 3 and count the number of times the red light (LED) blinks on the *Cinema 7*. If the light does not blink when you press the number 3, the digit is zero.
- 4** For the fourth and final digit, press 4 and count the number of times the red light (LED) blinks on the *Cinema 7*. If the light does not blink when you press the number 4, the digit is zero. Now you have your four-digit code.

NOTE: To find out the code for your other components, repeat Steps 1 through 6, only substitute the appropriate device key (**VCR**, **DVD/LD**, **RCVR**, **AUX**, **CD** or **CABLE/SAT**) for the component code you wish to learn.

SETTING UP OTHER COMPONENTS

In addition to the components labeled on the device keys (**TV**, **VCR**, **DVD/LD**, **CBL/SAT**, etc.), the *Cinema 7* can also operate the following components: Cassette Decks, Infrared Home Automation, Video Accessories and Miscellaneous Audio Components (Graphic Equalizers and Digital Music Service Boxes).

The Setup Codes for these components can be accessed under the following device keys:

- | | |
|----------------------|---------------------------------------|
| Cassette Decks: | Use the VCR Key |
| IR Home Automation: | Use the CD Key |
| Video Accessories: | Use the CBL/SAT Key |
| Miscellaneous Audio: | Use the AUX or RCVR Key |
- For example, to set up a Cassette Player on the VCR key:
- Turn on your Cassette Player and insert a tape.
 - Press **VCR** and release. Press and hold **MAGIC** until the *Cinema 7*'s red light blinks twice, then release **MAGIC**.

3. Enter the first four-digit Cassette Player code listed for your brand in the "Setup Codes For Audio Cassettes" section. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.

4. Aim the *Cinema 7* at your Cassette Player and press **PL** (Play). Your Cassette Player should play your tape. If your Cassette Player does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your Cassette Player.

5. Your *Cinema 7* is now programmed to operate your Cassette Player. Remember, if you want to use your *Cinema 7* to operate your Cassette Player, press the **VCR** key first.

RE-ASSIGNING DEVICE KEYS

You can use the *Cinema 7* to operate a second TV or a second VCR or any combination of seven home entertainment components. For example, you may want your *Cinema 7* to control 1 TV, 1 Cable Converter, 1 Receiver, 1 CD Player, 1 DVD Player and 2 VCRs. To accomplish this, you must re-assign one of the device keys to operate the desired component, in this case, a second VCR. The chart below shows you how to re-assign a particular device key and then set up your new component.

TV to VCR	MAGIC* + 992 + VCR + TV + TV + MAGIC* + VCR code
TV to DVD/LD	MAGIC* + 992 + DVD/LD + TV + TV + MAGIC* + DVD or LD Player code
TV to RCVR	MAGIC* + 992 + RCVR + TV + TV + MAGIC* + Audio code
TV to AUX	MAGIC* + 992 + AUX + TV + TV + MAGIC* + Audio code
TV to CD	MAGIC* + 992 + CD + TV + TV + MAGIC* + CD Player code
TV to CBL/SAT	MAGIC* + 992 + CBL/SAT + TV + TV + MAGIC* + Cable/DBS code
VCR to TV	MAGIC* + 992 + TV + VCR + VCR + MAGIC* + TV code
VCR to DVD/LD	MAGIC* + 992 + DVD/LD + VCR + VCR + MAGIC* + DVD or LD Player code
VCR to RCVR	MAGIC* + 992 + RCVR + VCR + VCR + MAGIC* + Audio code
VCR to AUX	MAGIC* + 992 + AUX + VCR + VCR + MAGIC* + Audio code
VCR to CD	MAGIC* + 992 + CD + VCR + VCR + MAGIC* + CD Player code
VCR to CBL/SAT	MAGIC* + 992 + CBL/SAT + VCR + VCR + MAGIC* + Cable/DBS code
DVD/LD to TV	MAGIC* + 992 + TV + DVD/LD + DVD/LD + MAGIC* + TV code
DVD/LD to VCR	MAGIC* + 992 + VCR + DVD/LD + DVD/LD + MAGIC* + VCR code
DVD/LD to RCVR	MAGIC* + 992 + RCVR + DVD/LD + DVD/LD + MAGIC* + Audio code
DVD/LD to AUX	MAGIC* + 992 + AUX + DVD/LD + DVD/LD + MAGIC* + Audio code
DVD/LD to CD	MAGIC* + 992 + CD + DVD/LD + DVD/LD + MAGIC* + CD Player code
DVD/LD to CBL/SAT	MAGIC* + 992 + CBL/SAT + DVD/LD + DVD/LD + MAGIC* + Cable/DBS code
RCVR to TV	MAGIC* + 992 + TV + RCVR + RCVR + MAGIC* + TV code
RCVR to VCR	MAGIC* + 992 + VCR + RCVR + RCVR + MAGIC* + VCR code
RCVR to DVD/LD	MAGIC* + 992 + DVD/LD + RCVR + RCVR + MAGIC* + DVD or LD Player code
RCVR to CD	MAGIC* + 992 + CD + RCVR + RCVR + MAGIC* + CD Player code
RCVR to CBL/SAT	MAGIC* + 992 + CBL/SAT + RCVR + RCVR + MAGIC* + Cable/DBS code
AUX to TV	MAGIC* + 992 + TV + AUX + AUX + MAGIC* + TV

