

HIFONICS®
C A R A U D I O
POWER FROM THE GODS

GLADIATOR

AMPLIFIERS

GLX60.4 / GLX100.4

GLX1000.1D / GLX1400.1D

GLX1800.1D / GLX2200.1D

HIFONICS GLADIATOR HIGH PERFORMANCE AMPLIFIERS

The Gladiator Series products have been designed to a very high level of performance, with features unavailable in any other product. All of the amplifiers have variable crossovers built in, with added touches such as subsonic filter, bass equalization and an HFR-3 remote control module for the monoblocks that allows overall Level control from reach of the drivers seat.

To insure years of listening pleasure, all amplifiers have a built in diagnostic mode that will detect shorted speaker leads, low impedance, dangerous high temperatures, DC shorts and will shut down the amp to help prevent damage.

INDEX	PAGE
General Installation Procedure.....	1
AMPLIFIER FEATURE DESCRIPTIONS.....	2
GLX60.4 / GLX100.4 / GLX1000.1D / GLX1400.1D / GLX1800.1D / GLX2200.1D	
GLX60.4 / GLX100.4 Applications.....	3-4
GLX1000.1D / GLX1400.1D Applications.....	5
GLX1800.1D Applications.....	6
GLX2200.1D Applications.....	7
Setting up systems after installation for best performance.....	8
Trouble Shooting and Diagnostics.....	9
Features and Specifications.....	10
Product Warranty.....	11

**Check out our videos of new products,
events and technical tutorials at
www.youtube.com/maxxsonicsusainc**

GENERAL INSTALLATION PROCEDURE


System Design

The success of any car stereo system relies on several factors, such as the system design, execution of the installation, and system setup. Please remember that any system is only as good as its weakest link.


Please remember that higher power systems are not necessarily useful purely for high sound pressure levels, but also to establish a headroom capability, to reproduce musical peaks cleanly without distortion. Lower power amplifiers will clip earlier than their more powerful cousins, and cause loudspeaker failure when overdriven, due to the harmonics generated by a clipped signal, thus overheating voice coils.

Amplifiers should be mounted with the fins running horizontally for best convection cooling, to minimize overheating. Purchase the best quality RCA cables you can afford, for reliability and less engine noise interference in the audio system.

Installation

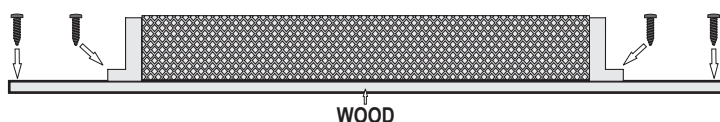

It is highly recommended that the amplifier be mounted to a board of MDF or other solid structure using the 4 mounting screws provided. Avoid mounting the amplifier to metal as this can introduce noise and other unwanted issues. When mounting the amplifier, ensure that it is mounted HORIZONTALLY, as shown in the diagram above, for optimal heat dissipation. Mounting amplifiers to speaker enclosures is not recommended as this can cause damage to the amplifier components. When choosing a location for mounting the amplifier, ensure that you check for clearance from wires, gas tank, electrical devices and brake lines etc.

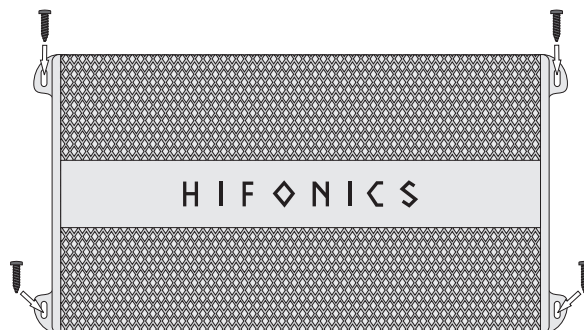

General:

Run the wiring so that RCA cables are at least 18" away from power and speaker cables. Keep RCA cables away from electrical devices in the vehicle that can cause electrical noise, such as electric fuel pumps, emission control modules and other on-board electronic modules.

Power and ground connections(see the features matrix on page 10 for proper gauge cables per amplifier):

Use a sufficient gauge power cable and ground cable using the chart below as reference to what size wire you require. Gladiator series amplifiers require at least 4 gauge power wire. In a multi amplifier system, add the total value of the manufacture recommended fusing to get your total system amperage. Some applications may require multiple runs of power wire to meet the system requirements. In multi amplifier systems it is advisable to mount a large enough fuse right at the battery, and run one or multiple +12 volt power cables to a fused distribution block near the amplifiers. It is then a simple matter to connect the +12 volt terminal of each amplifier to the distribution block. During this process, please ensure that the main power fuse is removed to avoid shorting the electrical system. The main fuse must be within 12" of the vehicles battery.

Ground each amplifier with as short a ground lead as possible directly to the vehicle chassis using at least 4 gauge wire or equivalent to the size of the amplifiers' power wire. Use a ground distribution block, if you wish, but it is extremely important to keep the main ground lead from this distribution block to the chassis as short as possible, not more than 12". The ground connection integrity to the chassis is very important, and the best way to achieve a good, solid electrical and mechanical contact is to use a large round crimp lug, crimped and soldered to the ground cable. The next step is to scrape the paint off the vehicle chassis, slightly larger than the ground lug, at the connection point. Drill a clearance hole in the chassis, the same size as the lug hole, and use a bolt, spring washer and nut to securely fasten the ground lug. Use petroleum jelly to coat the bolt/lug connection, to prevent oxidization with time.

TIP: Use the same approach when installing head units, equalizers or any audio equipment for that matter - run short individual grounds from each piece directly to the vehicle chassis, to minimize ground loops and system noise. All power, ground and speaker connections should be crimped and soldered for reliability. Make sure that none of the cable insulation can chafe against exposed metal in the vehicle, causing short circuits to the chassis.

WIRE LENGTH

SYSTEM AMPERAGE	7-10 ft.	10-13 ft.	13-16 ft.	16-19 ft.	19-22 ft.	22-28 ft.
35-50	8	6	4	4	4	4
50-65	6	4	4	4	4	2
68-85	4	4	2	2	2	0
85-105	4	2	2	2	2	0
105-125	4	2	0	0	0	0
125-150	2	0	0	0	0	0

WIRE GAUGE

NOTE: This Matrix is a general rule of thumb. Please refer to the manufacturers specific requirements. Gladiator specifications can be found on page 10.

Safe connection sequence:

After all cables are run, connect speaker wires to the speakers and amplifiers, then run and plug in RCA cables. Next, connect all power, ground, and remote turn on leads. Now connect all +12 volt cables to the amplifier/s and distribution blocks and fuse holders. Finally, connect the main +12 volt cable to the battery, with the main fuse removed, and we are almost ready to power up the system.

Power up the system:

The following procedure may seem like overkill, but there is nothing more frustrating when turning on a system for the first time, and it does not work properly immediately.

First, make sure the head unit is off, and turn all level controls to minimum (counterclockwise), including the head unit volume control. Set all equalizers to 0 dB (no boost), and all crossover frequency controls at approximate frequencies, as recommended by the loudspeaker manufacturer. Set all input selector and crossover switches as required for the application. Remove all amplifier fuses, and insert the main fuse at the battery. If the fuse does not blow, you can insert the fuse in one of the amplifiers, and we are ready to turn on the system. Turn the head unit on, insert a CD, or select a radio station, and increase the head unit volume control. If the system sounds fine, turn off the head unit, and install fuses in the remaining amplifiers, one by one, till the complete system is powered up and functioning properly.

AMPLIFIER FEATURE DESCRIPTIONS

GLADIATOR AMPLIFIERS:

Each model is capable of 4 & 2-Ohms stereo per channel, or 4-Ohms mono bridged operation except the mono amps which are capable of 4, 2 and 1-Ohm loads.

Tri-Mode operation with any stereo pair of amplifier channels is possible, as with all bridgeable amplifiers.

The input sensitivities for rated output powers are variable from 0.2V to 6V for the multi channel amplifiers and 0.2V to 9V for the mono models.

All crossovers are fully variable in their respective ranges.

Crossover filters are 12dB/Octave.

A **POWER** LED indicates the powered up and turned on condition.

All Hifonics amplifiers feature a comprehensive diagnostic system, with speaker lead short circuit, and amplifier DC faults indicated by the red **'PROTECT'** LED.

CAUTION: DO NOT OPERATE ANY AMPLIFIER BELOW THE INTENDED IMPEDANCE. YOU WILL CAUSE DAMAGE TO THE AMPLIFIER THAT WILL NOT BE COVERED UNDER THE WARRANTY PRINTED IN THE BACK OF THE MANUAL. 2 & 4 Channel amps are capable of 4 and 2-Ohms wired stereo and 4-Ohms wired mono bridged. The mono amps are capable of 4, 2 and 1-Ohm.

The 4 channel amps have the same features as the 2 channel models accept that there are 2 sets of controls.

1 set for channels 1 & 2 and 1 set for channels 3 & 4.

In addition, the 4 channel models have a **Mode** switch which allows you to select 2 or 4 channel operation. Switch to 2 channel if you only have 1 set of RCA's in CH 1/2 and the unit will automatically supply signal to channels 3/4. Select 4 channel if you are providing RCA's to channels 1/2 and 3/4.

The **X-OVER** slide switch selects the internal crossover functions:

-The input signal is routed directly to the **LINE OUT** RCA jacks, regardless of the **X-OVER** setting simplifying daisy chaining of amplifiers.

-**HI**: Selects the built in **HI PASS** filter.

-**FULL**: Bypasses all crossovers for full frequency range operation.

-**LP/BP**: Selects the built in **LOW PASS** filter.

HI PASS: Variable low frequency cut off from 10Hz to 15kHz.

LOW PASS: Variable high frequency cut off from 30Hz to 150Hz.


BASS EQ: 45Hz bass boost variable from 0dB to 10dB.

LEVEL: Variable **LEVEL** (GAIN) control from 6.0V to 0.2V.

LINE INPUT: The line input accepts unbalanced (RCA) inputs from 0.2V to 6V.

LINE OUTPUT: The line output passes through signal from the line inputs which allows you to daisy chain multiple amplifiers from one signal.

GLX60.4 / GLX100.4 4-CHANNEL AMPLIFIERS

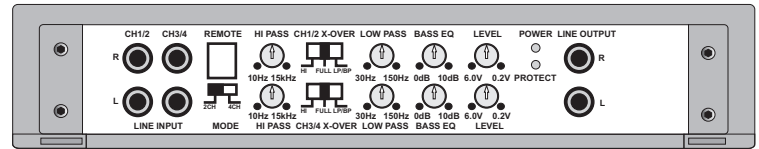


Note that the **LOW PASS** signal is **MONO**.

-In the **LP/BP** position, the **HI PASS** filter acts as a subsonic filter.

-When the **LP/BP** mode is selected, a 0 to +10dB, at 45Hz, **BASS EQ** is also switched in.

GLX1000.1D / GLX1400.1D / GLX1800.1D MONO BLOCK AMPLIFIERS

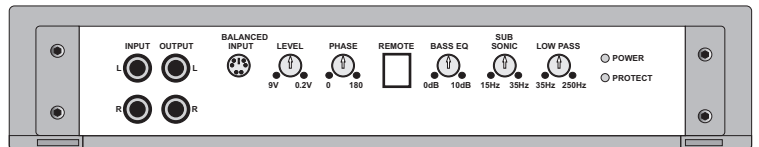

The mono amps are capable of 4, 2 & 1-Ohm loads.

Operating the amp below 1-Ohm can cause damage to the amp not covered in the warranty.

SUBSONIC: Crossover filter from 15Hz to 35Hz.

LOW PASS: Crossover filter from 30Hz to 250Hz.

LEVEL: Adjusts the input sensitivity from 0.2 volts to 9 volts.

BASS EQ: Adjustable bass boost from 0dB to 10dB.

PHASE: The Phase Shift is fully adjustable from 0 to 180 degrees and this allows you to control time alignment.

REMOTE: This is the input jack for the remote Level control.


BALANCED INPUT: Accepts line level balanced input from 0.4v to 18v.

LINE INPUT: The line input accepts unbalanced (RCA) inputs from 0.2V to 9V.

LINE OUTPUT: The line output passes through signal from the line inputs which allows you to daisy chain multiple amplifiers from one signal.

-The **LINE INPUT** signal is routed directly to the **LINE OUT** RCA jacks, and not affected by the settings on the amplifier simplifying daisy chaining of amplifiers.

GLX2200.1D MONO BLOCK AMPLIFIERS

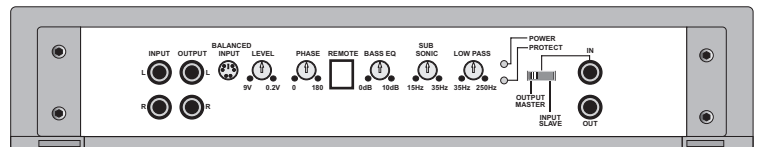

The mono amps are capable of 4, 2 & 1-Ohm loads.

Operating the amp below 1-Ohm can cause damage to the amp not covered in the warranty.

SUBSONIC: Crossover filter from 15Hz to 35Hz.

LOW PASS: Crossover filter from 30Hz to 250Hz.

LEVEL: Adjusts the input sensitivity from 0.2 volts to 9 volts.

BASS EQ: Adjustable bass boost from 0dB to 10dB.

PHASE: The Phase Shift is fully adjustable from 0 to 180 degrees and this allows you to control time alignment.

REMOTE: This is the input jack for the remote Level control.

BALANCED INPUT: Accepts line level balanced input from 0.4v to 18v.

LINE INPUT: The line input accepts unbalanced (RCA) inputs from 0.2V to 9V.

LINE OUTPUT: The line output passes through signal from the line inputs which allows you to daisy chain multiple amplifiers from one signal.

-The **LINE INPUT** signal is routed directly to the **LINE OUT** RCA jacks, and not affected by the settings on the amplifier simplifying daisy chaining of amplifiers.

The **BRE2500.1D** is a linkable amplifier and features a **MASTER / SLAVE** selection switch and **IN / OUT** RCA connection.

GLX60.4 / GLX100.4 4-CHANNEL AMPLIFIER APPLICATIONS

4 CHANNEL FULL RANGE SYSTEM

Here we show how to use the 4 channel amplifiers as straight forward discrete 4 channel full range units.

Interconnect cable checklist:

- Connect the four inputs of the amplifier to a Radio/CD with quality RCA cables.

Switch setting checklist:

- 1/2CH X-OVER: FULL
- 3/4CH X-OVER: FULL

Crossover frequency control checklist:

Channels 1/2:

- HI PASS: N/A
- LOW PASS: N/A

Channels 3/4:


- HI PASS: N/A
- LOW PASS: N/A

Level control checklist:

- Refer to the section "Setting up systems after installation for best performance"

Minimum final loudspeaker impedances:

- 2 ohm per channel.

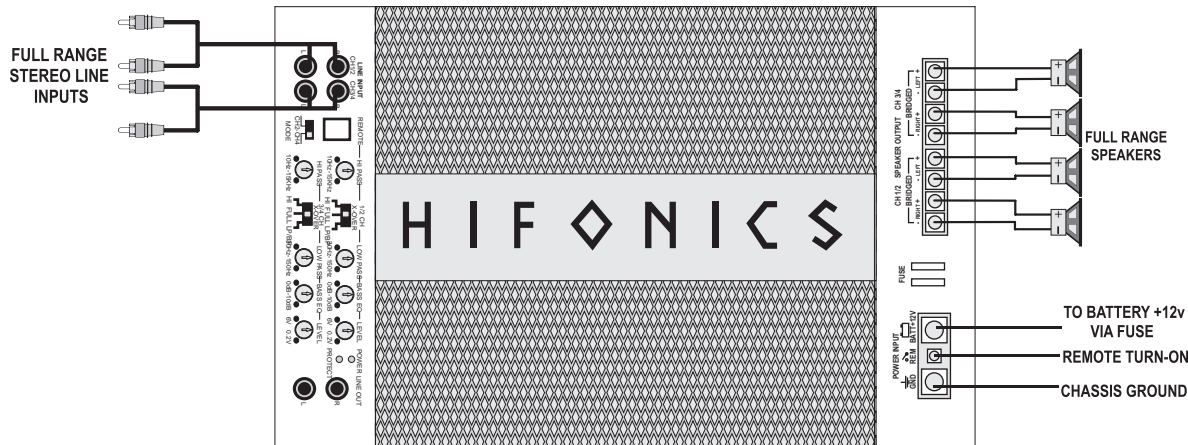

2 or 3 CHANNEL SYSTEM

Here we show how to use the 4 channel amplifiers as a 3 channel unit by taking advantage of the mono bridging capability of all Hifonics amplifiers.

The following example shows how to create a 3 channel system by mono bridging channel pair 3 / 4. In order to create a 2 channel system, simply follow the example to also mono bridge channel pair 1 / 2.

Interconnect cable checklist:

- Connect the inputs of channel pair 1/2 to a suitable stereo source, e.g. a head unit with good quality RCA cables.
- A MONO signal source is required to bridge channel pair 3/4, such as would be available from the mono sub bass output of an active crossover, whether standalone, or built into a head unit or equalizer. If you only have 1 set of RCA outputs from your headunit, you can simply connect those to the inputs for ch 1/2 and switch the **MODE** to 2ch. The amplifier will auto sum the signal and provide mono output for bridged channels 3/4 once the X-OVER is switched to LP/BP.

Important: Do not be tempted to connect the hot, or positive outputs, from any source together to obtain a mono signal, as this could very well damage the output stage of that source.

- It is necessary to feed the SAME signal to both left and right inputs via a Y-adaptor RCA cable.
- Connect the mono speaker positive terminal to the LEFT +, and its negative terminal to RIGHT - as shown.

Switch setting checklist:

- 1/2CH X-OVER: FULL
- 3/4CH X-OVER: LP/BP

Crossover frequency control checklist:

Channels 1/2:

- HI PASS: N/A
- LOW PASS: N/A

Channels 3/4:

- HI PASS: N/A
- LPF: 11 o'clock


TIP: If you are using the mono sub bass output of an active crossover, there is nothing wrong with switching in the low pass filter in these amplifiers for a steeper low pass rolloff.

Level control checklist:

- Refer to the section "Setting up systems after installation for best performance"

Minimum final loudspeaker impedances:

- 2 ohm per channel in stereo mode.
- 4 ohm mono bridged.

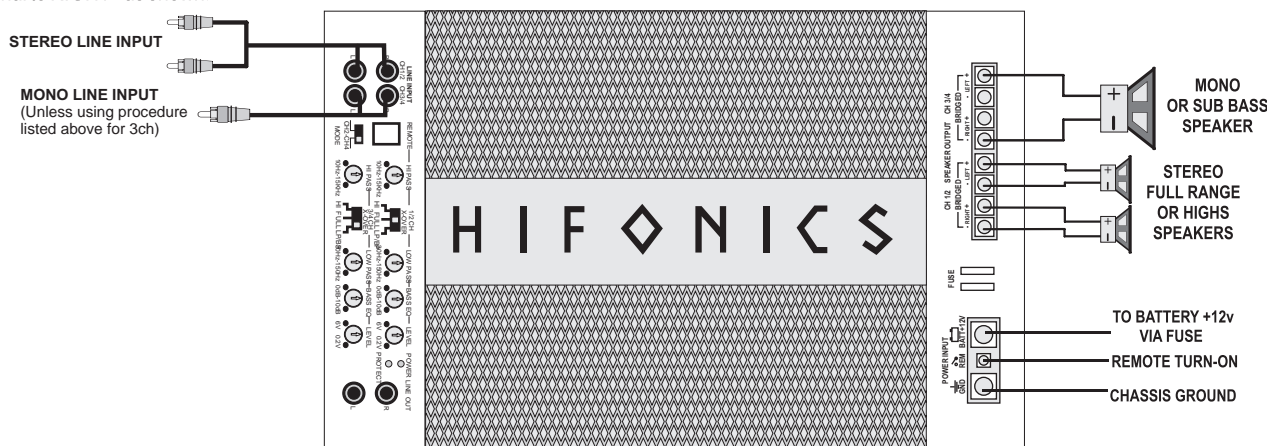

GLX60.4 / GLX100.4 4-CHANNEL AMPLIFIER APPLICATIONS

Front/Rear high pass, using a 1 channel amplifier for mono sub bass

The combination of a 1 and a 4 channel amplifier, utilizing their built in crossovers, makes it a snap to put together a full system with front and rear highs, with mono sub bass.

Interconnect cable checklist:

- Using good quality RCA cables, feed the front and rear outputs of a head unit to the inputs of the 4 channel amplifier as shown.
- Also connect the **LINE OUT** of the 4 channel amplifier to the **LINE INPUT** of the 1 channel amplifier as shown.

Mono bass woofer wiring:

Connect the mono speaker positive terminal to the **LEFT +**, and its negative terminal to **RIGHT -**.

Switch setting checklist:

4 channel highs amplifier:

- **1/2CH X-OVER:** HI
- **3/4CH X-OVER:** HI

Crossover frequency control checklist:

- **4 channel highs amplifier:**

Channels 1/2:

- **HI PASS:** 100 Hz
- **LOW PASS:** N/A

Channels 3/4:

- **HI PASS:** 100 Hz
- **LOW PASS:** N/A

1 channel bass amplifier:

- **Subsonic filter:** 10 Hz to 40 Hz
- **LOW PASS:** 80 Hz

Please note that these frequency points are suggestions only. Refer to the loudspeaker manufacturer specifications and the section *"Setting up systems after installation for best performance"*

Level control checklist:

- Refer to the section *"Setting up systems after installation for best performance"*


Minimum final loudspeaker impedances:

4 Channel Amplifier:

- **2 ohm per channel in stereo mode.**
- **4 ohm mono bridged.**

1 Channel Amplifier:

- **1-Ohm to 4-Ohms**

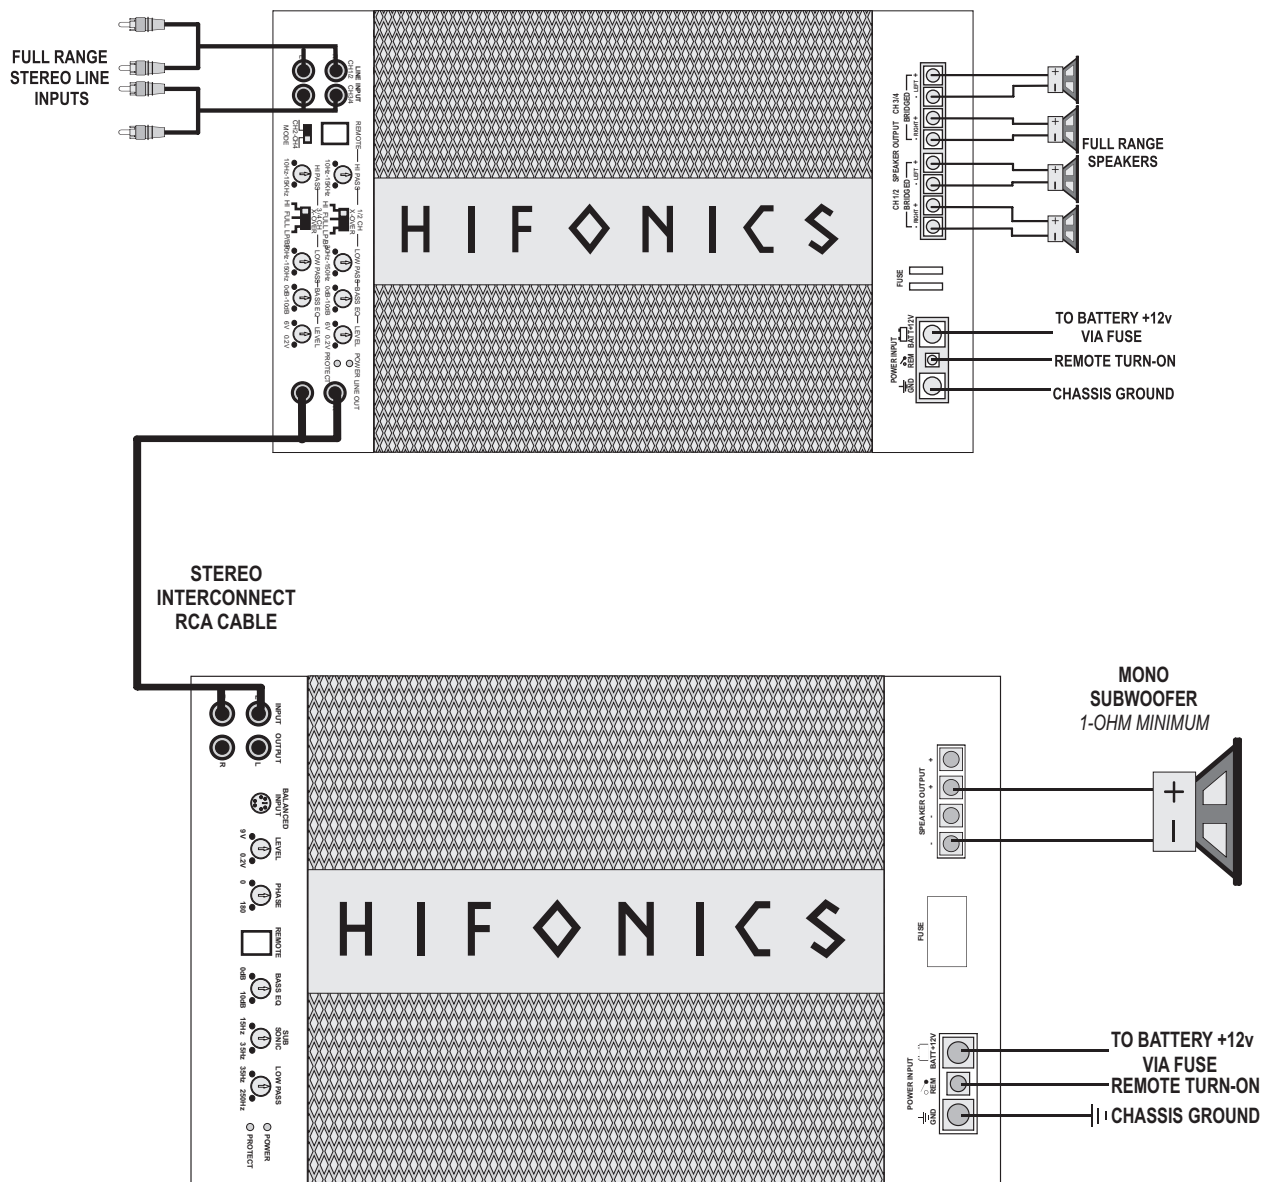

GLX1000.1D / GLX1400.1D / GLX1800.1D MONO AMPLIFIER APPLICATIONS

Basic application

Interconnect cable checklist:

- Connect the line inputs to a Radio/CD RCA outputs or line output of the full range primary amplifier with good quality RCA cables. A "Y" adapter may be needed as shown in the diagram.


- Use at least 16 gauge speaker wiring. These amplifiers have dual speaker terminals, simplifying the hookup of multiple speakers. **The 2 positives are one block and the 2 negatives are one block. It does not matter which positive or negative you select since the amplifier sees the sum of the load.**

Crossover frequency control checklist:

- LOW PASS: 35Hz to 250Hz
- SUBSONIC: 15 Hz to 35 Hz
- BASS EQ: 0 to 10dB
- PHASE: 0 to 180 degrees

Level control checklist:


- Refer to the section "Setting up systems after installation for best performance"

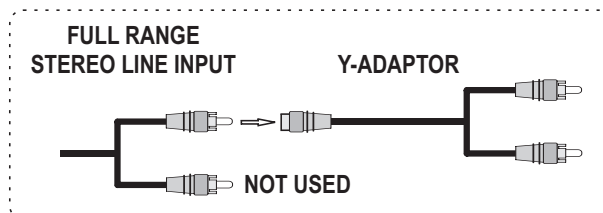


*Note: You can use the Radio/CD designated mono line output or a full range stereo line output. For full range stereo line output, you will need an optional "Y-Adaptor" as shown

Minimum final loudspeaker impedance:

- 1 ohm.

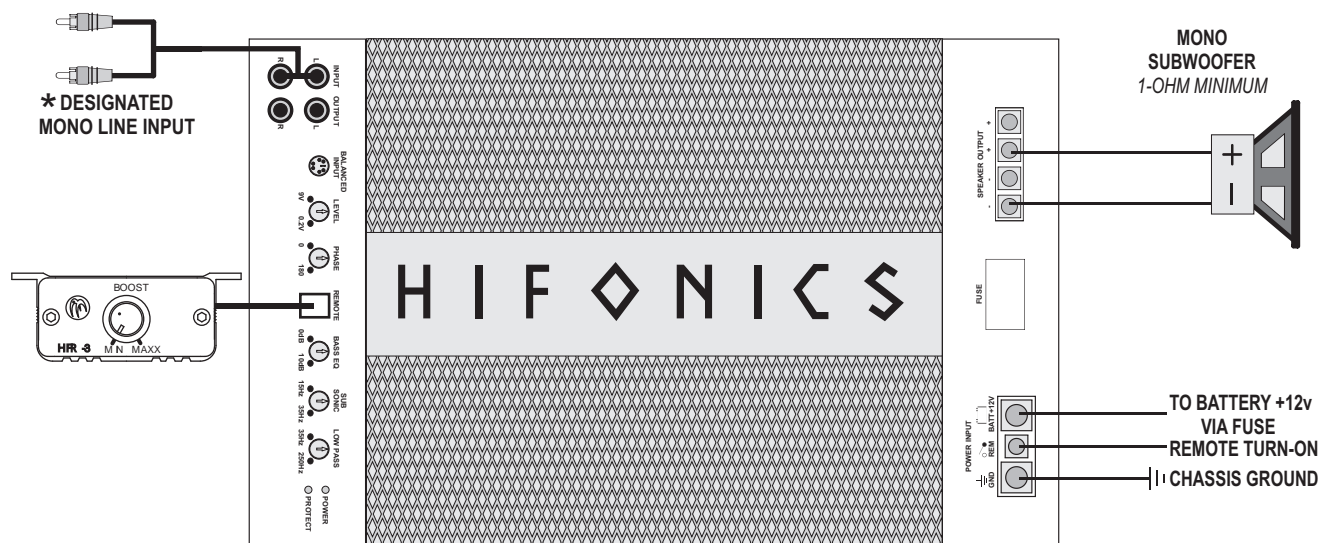

Dual Subwoofer Application

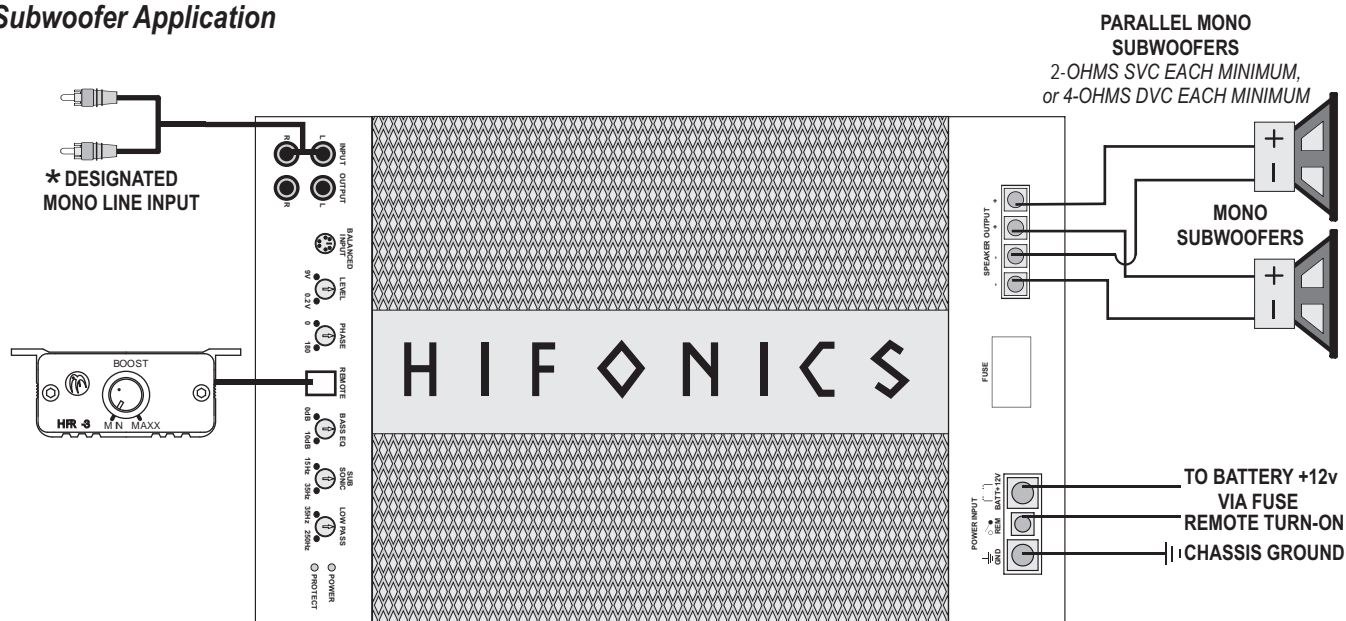

GLX1800.1D MONO AMPLIFIER APPLICATIONS

Basic application

Interconnect cable checklist:

- Connect the line inputs to a Radio/CD RCA outputs or line output of the full range primary amplifier with good quality RCA cables. A "Y" adaptor may be needed as shown in the diagram.

- Use at least 16 gauge speaker wiring. These amplifiers have dual speaker terminals, simplifying the hookup of multiple speakers. The 2 positives are the same and the 2 negatives are the same.


Crossover frequency control checklist:

- LOW PASS: 35Hz to 250Hz
- SUBSONIC: 15 Hz to 35 Hz
- BASS EQ: 0 to 10dB
- PHASE: 0 to 180 degrees


Level control checklist:

- Refer to the section "Setting up systems after installation for best performance"


Minimum final loudspeaker impedance:
- 1 ohm.

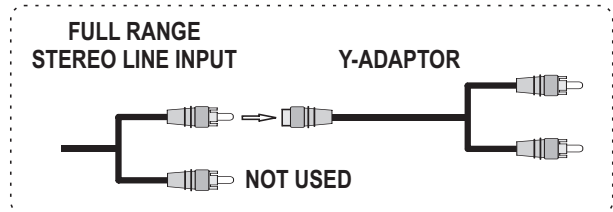

*Note: You can use the Radio/CD designated mono line output or a full range stereo line output. For full range stereo line output, you will need an optional "Y-Adaptor" as shown

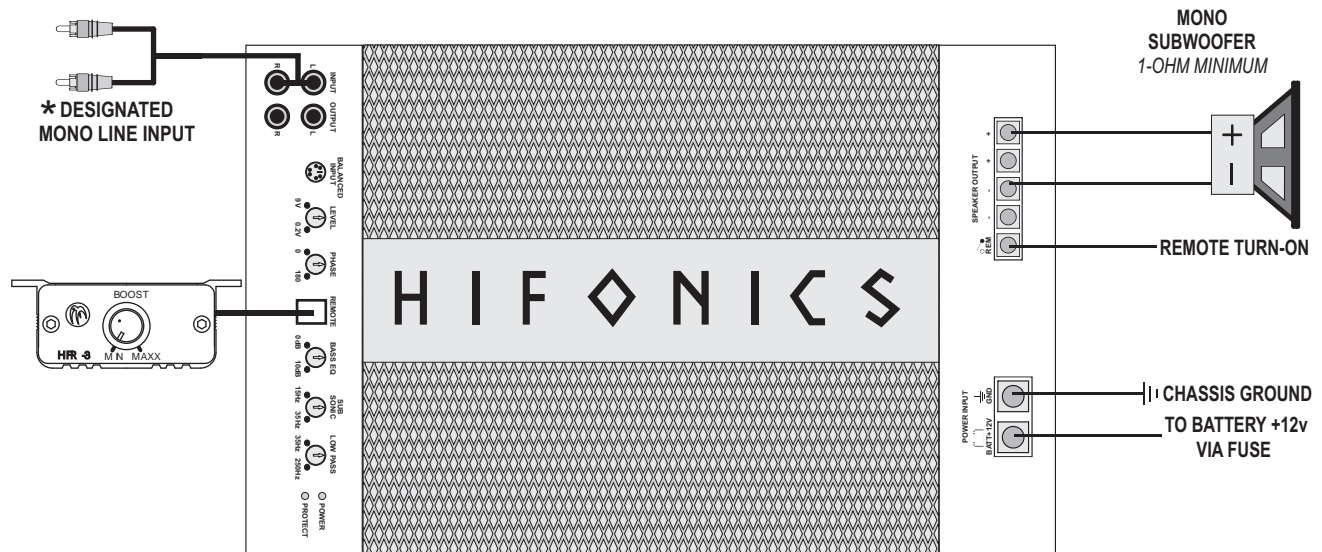

Dual Subwoofer Application

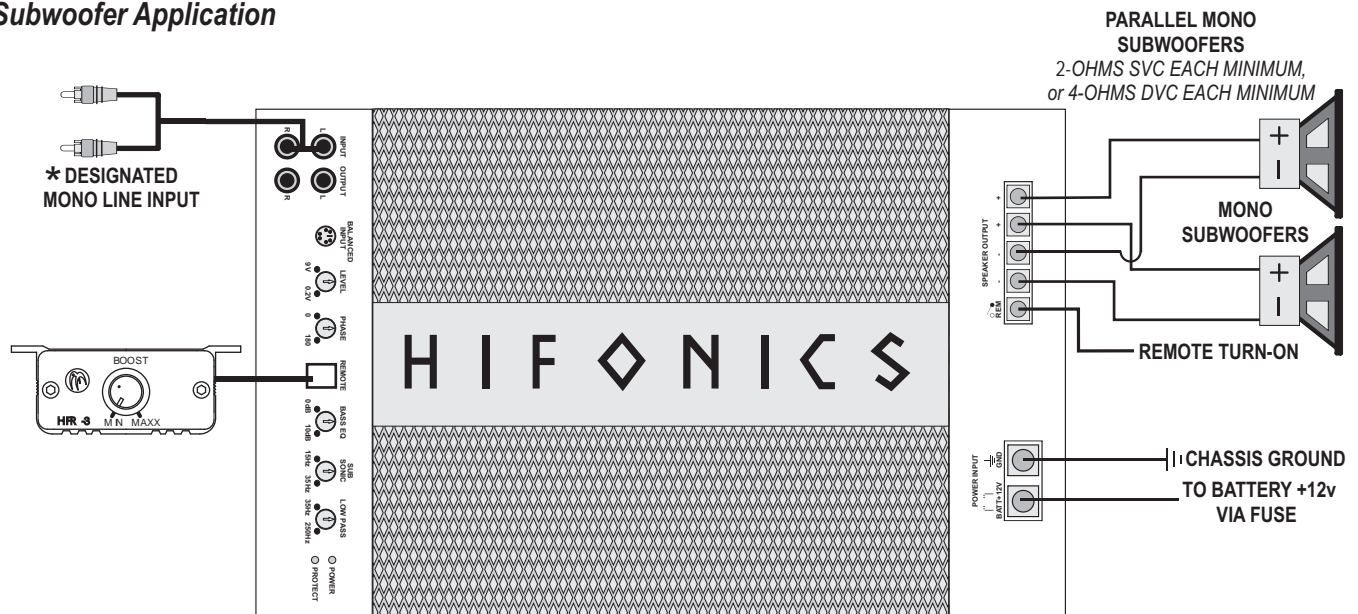


GLX2200.1D MONO AMPLIFIER APPLICATIONS

Basic application


SINGLE AMP INSTALLATION PROCEDURE:

1. Connect the amp LINE INPUTS to the Radio/CD player full range or mono line out puts with good quality RCA interconnect cables.
2. Plug in the HFR-3 remote module into the amp REMOTE INPUT jack.
3. Route a 0 gauge power cables directly to the vehicle battery with an in-line fuse.
4. Connect a 0 gauge ground cables directly to chassis ground with in 36" of the amp.
 - Be sure to remove any paint or primer from the ground point.
 - Use a nut, bolt and lock washer to secure the ground cable to the chassis ground.
5. Connect the subwoofer(s) in accordance to the diagrams below.
6. Make sure the MASTER/SLAVE switch is in the MASTER position.

Note: The amplifier will not work if the MASTER/SLAVE switch is in the Slave position

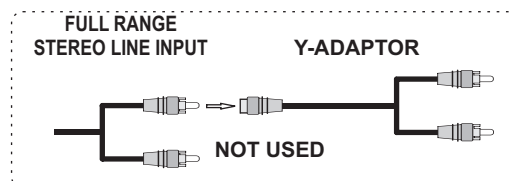

Note: You can use the Radio/CD designated mono line output or a full range stereo line output. For full range stereo line output, you will need an optional "Y-Adaptor" as shown.

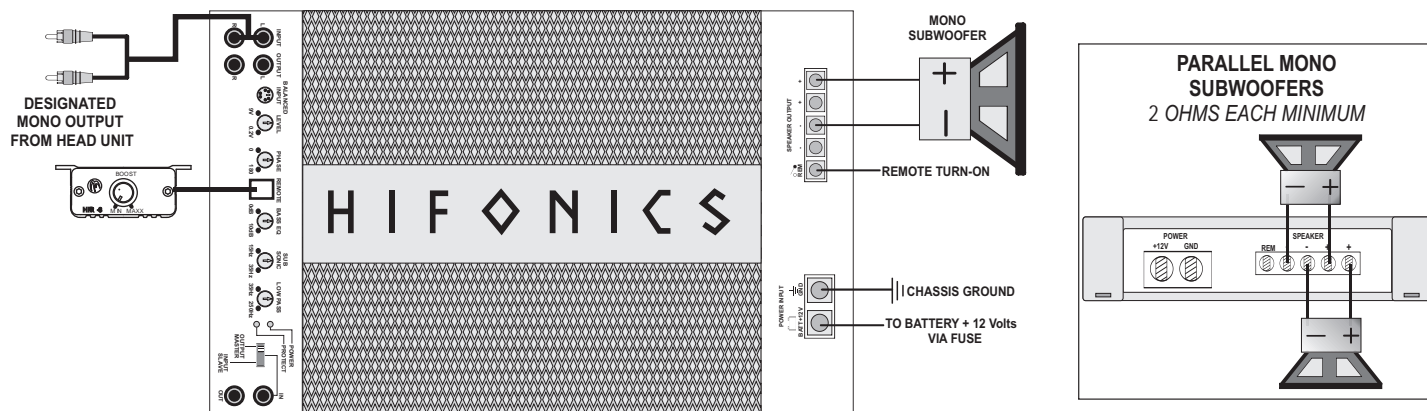


DUAL AMP INSTALLATION PROCEDURE:

1. Connect the amp LINE INPUTS to the Radio/CD player full range or mono line out puts with good quality RCA interconnect cables.
2. Plug in the HFR-3 bass remote module into the amp REMOTE INPUT jack on the Master amp. This will allow the Master amp to control both Master and Slave amps with just one Bass Remote.
3. Connect an RCA jumper cable from the Master amp MASTER OUTPUT to the Slave amp SLAVE INPUT. Note: This will "link" the amps so that the Master amp crossover switches will control both the Master and Slave amps. The Slave amp crossover switches will be bypassed.

4. Route two 0 gauge power cables directly to the vehicle battery with an in-line fuse.
5. Connect two 0 gauge ground cables directly to the chassis with in 36" of the amp.
 - Be sure to remove any paint or primer from the ground point.
 - Use a nut, bolt and lock washer to secure the ground cable to the chassis ground.
6. Make sure the Master amp MASTER/SLAVE switch is in the MASTER position. Make sure the Slave amp MASTER/SLAVE switch is in the SLAVE position.
7. Connect the subwoofer(s) in accordance to the diagrams below.
8. Connect a 12 gauge jumper from Master amp speaker - to Slave amp speaker - as shown below.

Linking two amps for single or dual subwoofer application

Amplifiers are stable to 2-Ohms linked

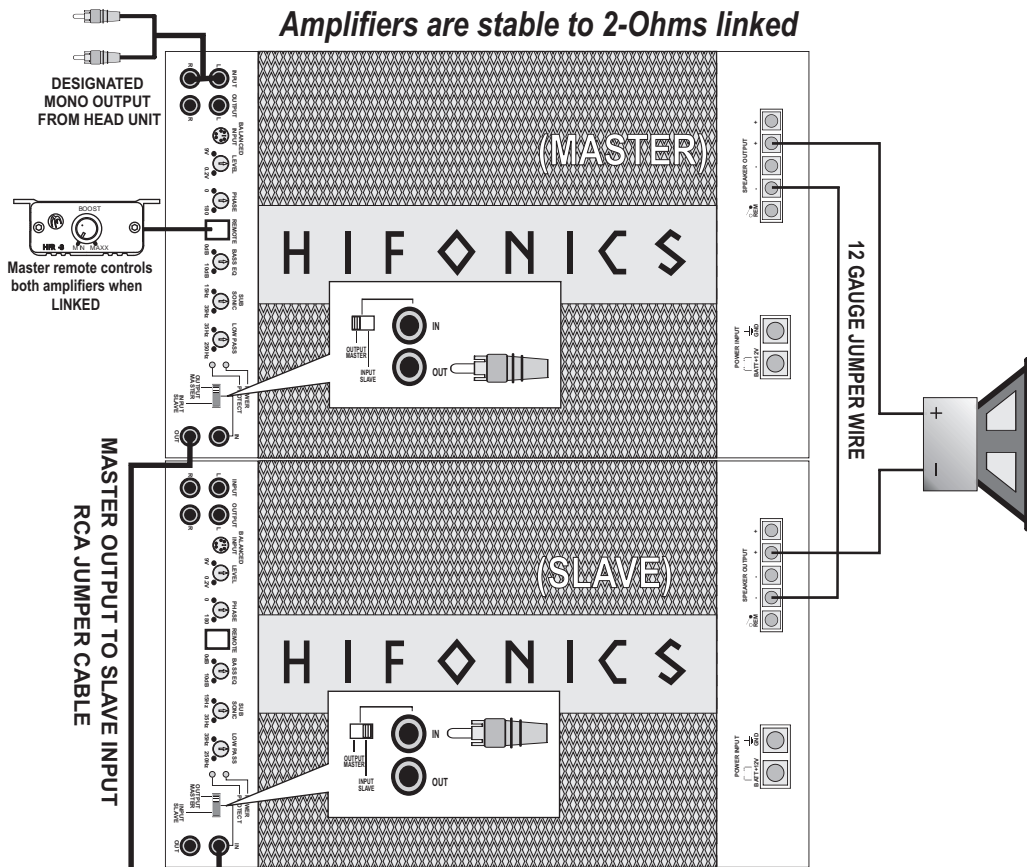

SETTING UP SYSTEMS AFTER INSTALLATION FOR BEST PERFORMANCE

GLX60.4 / GLX100.4

General:

At this point you are ready to get more specific on the settings for your amplifier.

High Pass:

-When in Hi Pass operation, this setting acts as a low frequency cut off for your system reproduction. The point that you set it at cuts off any frequencies from reproduction beyond this point. The 12 o'clock position is a great starting point. EXAMPLE: If you adjust the High Pass to 100Hz, the amplifier will not play frequencies below 100Hz but will play frequencies from 100Hz to the highest frequency the amplifier is capable of reproducing.

-When in Low Pass/Bandpass operation, this setting acts as a low frequency cut off for your system reproduction aka Subsonic Filter. The point that you set it at cuts off any frequencies from reproduction beyond this point. The 12 o'clock position is a great starting point. EXAMPLE: If you adjust the High Pass to 60Hz, the amplifier will not play frequencies below 60Hz but will play frequencies from 60Hz to the chosen Low Pass frequency.

-When in Flat/Full operation, the Low Pass crossover is bypassed.

Bass EQ:

This setting is a fixed bass boost at 45Hz that is variable from 0-12dB. This feature provides impact to your bass, but if not adjusted correctly, it can be over used and cause damage to your speakers and amplifiers. It is best to slowly turn this setting clockwise until the desired punch is felt. It is not recommended to exceed the 12 o'clock position unless listening at a low volume or a low recording quality as this can result in high distortion and possibly clipping.

Low Pass:

The Low Pass control acts as a ceiling and doesn't allow frequencies to the right of the desired setting to be reproduced. Turning the potentiometer all the way to the right is a great starting point. EXAMPLE: If you adjust the Low Pass to 120Hz, the amplifier will not play frequencies above 120Hz but will play frequencies from 120Hz to the chosen Hi Pass or Subsonic frequency.

-When in Hi Pass operation, this setting is bypassed.

Level Control Setup:

Ensure that the Level is turned completely to the left prior to turning the system on. Next you should insert a CD or cassette that you are familiar with to use as a reference, and turn the head unit volume control to about 80% of its full setting. The system sound level will of course be very low, and the following procedures will help you to match the amplifier input sensitivities properly to the head unit output signal level.

It is important to match the amplifier **LEVEL** input sensitivity to the Radio/CD output sensitivity. This can be located in the Radio/CD manual.

If the Radio/CD output sensitivity is 2 volts, then adjust the amplifier **LEVEL** input to 2 volts.

If you are not sure what the Radio output sensitivity is, follow these general guide lines:

Turn the level control up slowly, till you hear distortion, then back off a few degrees on the control. If at any point your amplifier goes into protection, you will need to turn the Level to the left a bit and then try again. If you reach a point where the output does not increase, stop turning the Level control to the right as the amplifier/speaker combo has reached its max output in this application.

2 or 3 way active systems (all):

Always start with the bass, or low frequency amplifier as a reference, by turning its control up to the point where distortion is audible, and back it off some.

Now adjust the level control for the highs or tweeter channels in a 2 way active system, to balance the highs to lows.

In a 3 way active system, match the midrange level to the bass, and then the highs to the midrange and bass. It may be necessary to perform a few iterations of the midrange and highs level control settings to achieve a satisfactory sound balance.

GLX1000.1D / GLX1400.1D / GLX1800.1D / GLX2200.1D

General:

At this point you are ready to get more specific on the settings for your amplifier.

Subsonic:

This setting acts as a low frequency cut off for your system bass reproduction. The point that you set it at cuts off any frequencies from reproduction beyond this point. The 12 o'clock position is a great starting point. EXAMPLE: If you adjust the Subsonic to 25Hz, the amplifier will not play frequencies below 25Hz but will play frequencies from 25Hz to the chosen Low Pass frequency.

Bass EQ:

This setting is a fixed bass boost at 45Hz that is variable from 0-10dB. This feature provides impact to your bass, but if not adjusted correctly, it can be over used and cause damage to your subwoofers and amplifiers. It is best to slowly turn this setting clockwise until the desired punch is felt. It is not recommended to exceed the 12 o'clock position unless listening at a low volume or a low recording quality as this can result in high distortion and possibly clipping.

Low Pass:

The Low Pass control acts as a ceiling and doesn't allow frequencies to the right of the desired setting to be reproduced. The 12 o'clock position is a great starting point. EXAMPLE: If you adjust the Low Pass to 80Hz, the amplifier will not play frequencies above 80Hz but will play frequencies from 80Hz to the chosen Subsonic frequency.

Level Control Setup:

Ensure that the Level is turned completely to the left prior to turning the system on. Next you should insert a CD or cassette that you are familiar with to use as a reference, and turn the head unit volume control to about 80% of its full setting. The system sound level will of course be very low, and the following procedures will help you to match the amplifier input sensitivities properly to the head unit output signal level.

It is important to match the amplifier **LEVEL** input sensitivity to the Radio/CD output sensitivity. This can be located in the Radio/CD manual.

If the Radio/CD output sensitivity is 2 volts, then adjust the amplifier **LEVEL** input to 2 volts.

If you are not sure what the Radio output sensitivity is, follow these general guide lines:

Turn the level control up slowly, till you hear distortion, then back off a few degrees on the control. If at any point your amplifier goes into protection, you will need to turn the Level to the left a bit and then try again. If you reach a point where the output does not increase, stop turning the Level control to the right as the amplifier/subwoofer combo has reached its max output in this application.

Sit back and enjoy the music!

TROUBLESHOOTING A SYSTEM

The key to finding the problem in a misbehaving sound system is to isolate parts of that system in a logical fashion to track down the fault.

Description of the Diagnostic system built into all HIFONICS amplifiers

The diagnostic system will shut down the amplifier, until reset by turning the head unit off, and back on. This state of affairs will be indicated by the front panel PROTECT LED lighting up under the following conditions:

- 1 - A short circuit on the loudspeaker leads.
- 2 - An internal amplifier fault that causes a DC offset on the loudspeaker output.

Should the amplifier go into diagnostic mode, simply disconnect all RCA and speaker leads, while keeping +12 volt, power ground and remote leads connected.

1. Now turn the amplifier back on, and if the diagnostic LED lights, the amplifier has an internal fault.
2. If not, plug the RCA cables back, and reset the amplifier. If it goes into diagnostic now, the fault lies in the input, either with bad cables or source unit.
3. If the amplifier seems ok with RCA cables plugged in, connect the speakers, one at a time, and if one of speaker or its wiring is faulty, it will activate the diagnostic system.
4. If the amplifier is still in Protection mode after the above steps, remove all RCA's and wires from the amplifier. Take a 12" length of speaker wire, trim the plastic off of each end exposing the wire. Now connect one end of the wire to the 12V+ on the amplifier and connect the other to the Ground on the amplifier. You will have a brief spark indicating that the Capacitors have been discharged and the driver card has been reset. Remove the jumper wire and reconnect your Power, Ground and Remote wires. Attempt to power the amplifier up like normal. In some cases this can Reset the amplifier if permanent damage has not previously been done.

Amplifier heatsink overheating

The amplifiers will shut down when the heatsink temperature reaches 80 degrees centigrade, and turn back on once the unit has cooled down below that point.

Causes of overheating:

- 1 - Inadequate cooling - relocate or remount to provide better natural airflow over the fins.
- 2 - Driving high power levels into low impedances - back off on the volume control, and/or make sure you are not loading the amplifier with less than the recommended loudspeaker impedance.
- 3 - Excessive voltage drop can also cause overheating.

Low output power

- 1 - Check that level controls have been set up properly.
- 2 - Make sure that the battery voltage, as measured at the amplifier's +12 volt and ground terminals, is 11 volts or more.
- 3 - Check all +12 volt and ground connections.

Fuses blowing

- 1 - The use of loudspeaker impedances below the recommended minimums will draw more current - check.
- 2 - A short on the main +12 volt cable from the battery to the vehicle chassis will cause the main fuse to blow.
- 3 - If an amplifier fuse blows continually, with only +12 volt, ground and remote leads connected, the amplifier may be faulty.

System does not turn on

- 1 - Check all fuses.
- 2 - Check all connections.
- 3 - Measure the +12 volt and remote turn on voltages at the amplifier terminals. If these are non existent or low, take voltage measurements at fuse holders, distribution blocks, the head unit's +12 volt and remote leads to localize the problem.
- 4 - If the HIFONICS lettering is illuminated but you do not have Power or Protection illuminated, simply remove your remote wire and use a jumper wire from 12V+ on the amplifier to the Remote connection on the amplifier. If the amplifier powers on like normal then you do not have adequate voltage/amperage from your Remote source to turn your amplifier on. You will need to seek out a certified installer to install a relay for your amplifier. If the jumper does not power your amplifier on, you may have internal damage and should contact Hifonics Customer Service to locate an Authorized Repair Center.

Noise problems

System noise can be divided into two categories, hiss, and electrical interference.

Hiss, or white noise:

- 1 - High levels of white noise usually occurs when amplifier level controls are turned up too high - readjust according to the procedures in section *"Setting up systems after installation for best performance"*
- 2 - Another major problem that can cause excessive hiss, is a noisy head unit - unplug the amplifier input RCA cables, and if the hiss level reduces, the source unit is at fault.

Electrical interference:

The inside of an automobile is a very hostile electrical environment. The multitude of electrical systems, such as the ignition system, alternator, fuel pumps, air conditioners, to mention just a few, create radiated electrical fields, as well as noise on the +12 volt supply and ground. Remember to isolate the problem - first unplug amplifier input RCA cables, if the noise is still present, check the speaker leads, if not, plug the RCA's back, and investigate the source driving the amplifier, one component at a time.

A ticking or whine that changes with engine RPM:

- 1 - This problem could be caused by radiation pickup of RCA cables too near to a fuel pump or a distributor, for instance, - relocate cables.
- 2 - Check that the head unit ground is connected straight to the vehicle chassis, and does not use factory wiring for ground.
- 3 - Try to supply the head unit with a clean +12 volt supply directly from the battery +, instead of using a supply from the in dash wiring/fusebox.

A constant whine:

This type of noise can be more difficult to pinpoint, but is usually caused by some kind of instability, causing oscillations in the system.

- 1 - Check all connections, especially for good grounds.
- 2 - Make sure that no speaker leads are shorting to exposed metal on the vehicle chassis.
- 3 - RCA cables are notorious for their problematic nature, so check that these are good, in particular the shield connections.

FEATURES		4-CHANNEL		1-CHANNEL MONO D CLASS			
		GLX60.4	GLX100.4	GLX1000.1D	GLX1400.1D	GLX1800.1D	GLX2200.1D
Output Power Rating (rms)							
4-Ohms		60 X 4	100 X 4	475 X 1	500 X 1	650 X 1	800 X 1
2-Ohms		120 X 4	200 X 4	750 X 1	1000 X 1	1200 X 1	1600 X 1
1-Ohm		N/A	N/A	1000 X 1	1400 X 1	1800 X 1	2200 X 1
Mono Bridge at 4-Ohms		240 X 2	400 X 2	N/A	N/A	N/A	N/A
Power Supply		PWM	PWM	PWM	PWM	PWM	PWM
Output Power Circuit Configuration		Mosfet	Mosfet	Mosfet	Mosfet	Mosfet	Mosfet
Miscellaneous Specifications							
Soft Start Sound		Yes	Yes	Yes	Yes	Yes	Yes
Frequency Response-3dB		10Hz - 45kHz	10Hz - 45kHz	15Hz - 250Hz	15Hz - 250Hz	15Hz - 250Hz	15Hz - 250Hz
Damping Factor		>180	>180	>200	>200	>200	>200
SN Ratio(A-Weight)		>90dB	>90dB	>95dB	>95dB	>95dB	>95dB
THD & Noise		0.05%	0.05%	0.10%	0.10%	0.10%	0.10%
Channel Separation		>80dB	>80dB				
Variable Input Level Control		0.2V-6.0V	0.2V-6.0V	0.2V-9.0V	0.2V-9.0V	0.2V-9.0V	0.2V-9.0V
Input Impedance		47kΩ	47kΩ	47kΩ	47kΩ	47kΩ	47kΩ
Diagnostic Indicator(power: green / protect: red)		Power/Protect	Power/Protect	Power/Protect	Power/Protect	Power/Protect	Power/Protect
Protection(DC, Short, Thermal, Overload)		Yes	Yes	Yes	Yes	Yes	Yes
Crossover Operation							
<i>Crossover Switch for 1+2 channels</i>		HI / FULL / LP-BP	HI / FULL / LP-BP	N/A	N/A	N/A	N/A
Variable HPF (High Pass Filter)		10Hz - 15KHz	10Hz - 15KHz	N/A	N/A	N/A	N/A
Variable LPF (Low Pass Filter)		30Hz - 150Hz	30Hz - 150Hz	35Hz - 250Hz	35Hz - 250Hz	35Hz - 250Hz	35Hz - 250Hz
Variable Subsonic Filter		N/A	N/A	15Hz - 35Hz	15Hz - 35Hz	15Hz - 35Hz	15Hz - 35Hz
Bass EQ (Bass Boost at 45Hz)		0dB - 10dB	0dB - 10dB	0dB - 10dB	0dB - 10dB	0dB - 10dB	0dB - 10dB
<i>Crossover Switch for 3+4 channel</i>		HI / FULL / LP-BP	FULL / LPF / HPF	N/A	N/A	N/A	N/A
Variable HI PASS FILTER		10Hz - 15KHz	10Hz - 15KHz	N/A	N/A	N/A	N/A
Variable Low Pass Filter		30Hz - 150Hz	30Hz - 150Hz	N/A	N/A	N/A	N/A
Bass EQ (Bass Boost at 45Hz)		0dB - 10dB	0dB - 10dB	N/A	N/A	N/A	N/A
<i>Line Output</i>		Full Range	Full Range	Full Range	Full Range	Full Range	Full Range
<i>Unbalanced Input(RCA Jack)</i>		Yes	Yes	Yes	Yes	Yes	Yes
<i>Phone Jack for Remote Control</i>		Yes	Yes	Yes	Yes	Yes	Yes
<i>Remote Level Control Module (HFR-3)</i>		No	No	Yes	Yes	Yes	Yes
Others							
Power Terminal		4-GA	4-GA	4-GA	2-GA	2-GA	0-GA
Speaker Terminal		14-GA	12-GA	12-GA	12-GA	10-GA	10-GA
Fuse Size		25AMPS X 2	30AMPS X 2	60AMPS X 2	70AMPS X 2	EXTERNAL 200AMP	EXTERNAL 250AMP
Dimensions Length x Width x Height (inches)		13.64 X 8.6 X 2.48	14.82 X 8.6 X 2.48	14.04 X 8.6 X 2.48	15.61 X 8.6 X 2.48	17.19 X 8.6 X 2.48	19.15 X 8.6 X 2.48
Note: Features subject to change with out notice							

H I F N I C S GLADIATOR

Maxxsonics Limited Warranty

As the manufacturer of Maxxsonics, MB Quart, Autotek, Crunch and Hifonics car audio products, Maxxsonics USA Inc. Warrants to the original consumer purchaser the amplifier to be free from defects in material and workmanship for one (1) Year from date of purchase.

All other parts and accessories of the system are warrantied to be free from defects in material and workmanship for one (1) year from date of purchase. Maxxsonics will repair or replace at it's option and free of charge during the warranty period, any system component that proves defective in materials and workmanship under normal installation, use and service provided that the product is returned to the authorized Maxxsonics dealer from where it was purchased. A photo copy of the original receipt must accompany the product being returned.

Valid purchase receipts will contain the name and address of the authorized reseller.

Any damage to the product as a result of misuse, abuse, accident, incorrect wiring, improper installation, alteration of date code or bar code labels, revolution, natural disaster, or any sneaky stuff because someone messed up, repair or alteration out side of our factory or authorized service centers and any thing else you have done that you should not have done is not covered.

This warranty is limited to defective parts and specifically excludes any incidental or consequential damages connected therewith. This warranty is not to be construed as an insurance policy.

Warranty on installation labor, removal, re-installation and freight charges are not the responsibility of Maxxsonics USA Inc.

Warranty products damaged as a result of insufficient or improper packing materials are not covered by this limited warranty and such damaged product will be returned "as is" at the expense of the owner.

**FOR EXTENDED WARRANTY INFORMATION, PLEASE VISIT
WWW.MAXXWARRANTY.COM**



MAXXSONICS™



Designed and Engineered in the USA
www.maxxsonics.com

MAXXSONICS®

Accessories

MAXX-LINK

MLX-100

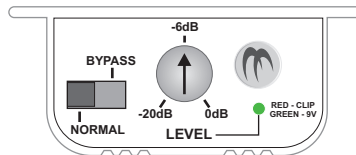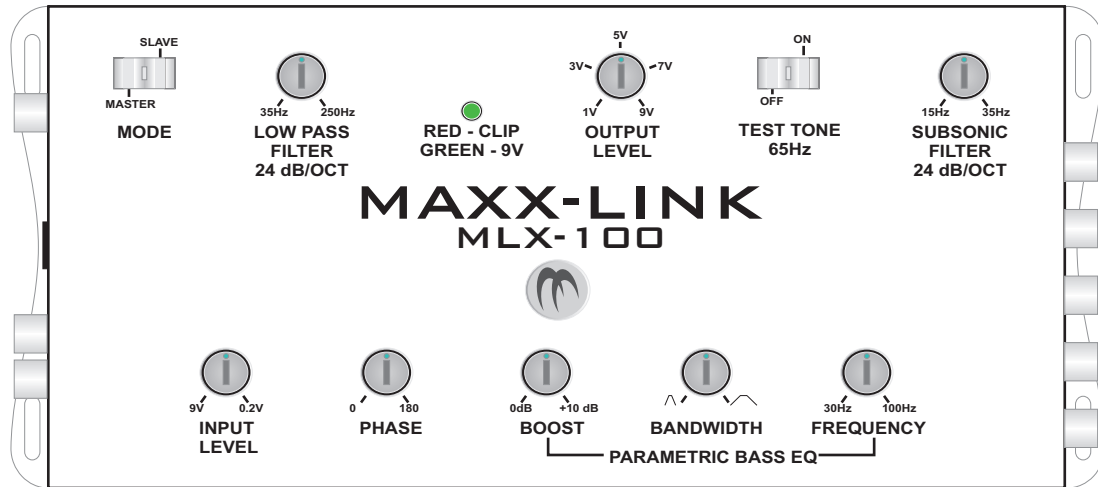

The Maxx-Link allows you to Link or Strap two matching mono amps that do not already have the “Master / Slave” feature built in.

This allows you to use two amps on one subwoofer, use two amps to power multiple subwoofers or connect as many amplifiers as you want to power as many subwoofers as you want and have only one Pre-Amp to control all of the amplifiers.


The benefits are that you do not have to try to get all of the amps pre-amp features such as Low Pass, Subsonic Filter, Bass EQ and phase level control matched identical by ear.

- * Link up to five amplifier pairs (10 amps) on one Maxx-Link and more with Y-Adaptors
- * Clipping Indicators: Visual clipping indicators provide indication of damaging clipped signals to help protect the subwoofer(s) and amplifier. Includes pre-clip, soft-clip and full-clip indications.
- * Bass Remote: Included bass Remote features built-in clipping indicators allows direct bass control from in-dash or under-dash.
- * Tone Generator: Built-in 65Hz test tone for gain matching
- * Low Pass: 24db Low Pass variable from 35Hz to 250Hz
- * Subsonic Filter: 24dB Subsonic filter variable from 15Hz to 35Hz
- * Parametric Bass Eq:
- * Variable Wide and Narrow Bandwidth control
- * Line Driver: Variable output from 1 volt to 9 volts
- * Phase Shift: variable from 1 to 180 degrees
- * 2 channel pass through

MAXXSONICS®


OEM Integration Accessories

MX-1 Premium High To Low Level Converter

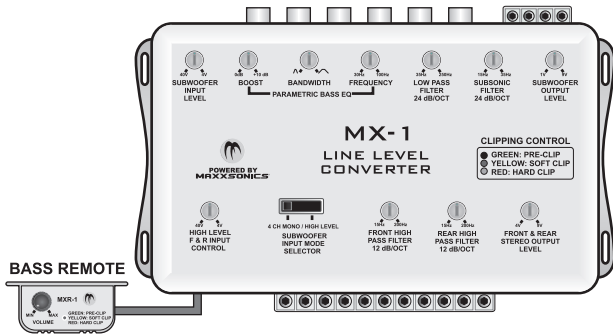


- * Converts High Level OEM speaker wires to Ultra Clean RCA Low Level Outputs
- * High Level Inputs: Accepts all types of High level Inputs including floating ground and high voltages up to 30 volts.
- * Audio Signal Sense / Hardwire Turn-On: Audio sense detects music signals from the OEM wires and activates the MX-1. As an option, the module also offers a remote turn-on wire.
- * Parametric Bass EQ: Features Bass Boost, adjustable Band Width (wide & narrow), Low Pass and Subsonic Filter.
- * Clipping Indicators: Visually indicates audio signals Pre-Clip, Soft Clip and Hard Clip
- * Balanced Line Output: Ultra clean DIN variable high voltage output for driving mono amps.
- * Remote Output: Driver circuit to turn on amplifier when module activates.
- * Bass Remote: Features for subwoofer Level control with built-in clipping indicators.
- * Input & Output Level Control: Allows for gain matching both radio and amplifier audio signals.

MX-3 Bass Controller

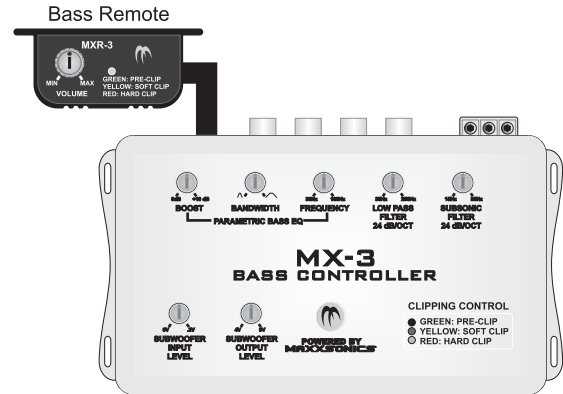


- * Parametric Bass EQ: Provides a wide array of subwoofer output signal shaping controls to enhance bass response and sound quality including Bass Boost, adjustable Bandwidth (wide and narrow), Low Pass and Subsonic Filter.
- * Accepts a wide range of incoming music signal levels while accommodating all types of head units and signal processors and controlling the output level to the amp to maximize a signal strength up to 9 volts.
- * Clipping Indicators: Visual clipping indicators provide indication of damaging clipped signals to help protect the subwoofer(s) and amplifier. Includes pre-clip, soft-clip and full-clip indications.
- * Music Shaping: Shapes the music signal to achieve deep bass notes as low as 15Hz.
- * Bass Remote: Included bass Remote features built-in clipping indicators allows direct bass control from in-dash or under-dash.

MX-2 Deluxe High To Low Level Converter

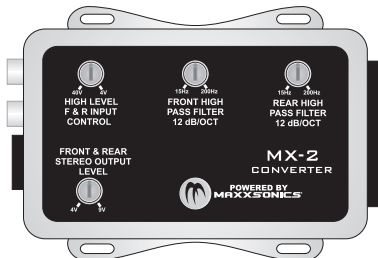

- * Converts High Level OEM speaker wires to Ultra Clean RCA Low Level Outputs
- * High Level Inputs: Accepts all types of High level Inputs including floating ground and high voltages up to 30 volts.
- * Audio Signal Sense / Hardwire Turn-On: Audio sense detects music signals from the OEM wires and activates the MX-2. As an option, the module also offers a remote turn-on wire.
- * Remote Output: Driver circuit to turn on amplifier when module activates.

MX-4 Add A Sub High To Low Level Converter

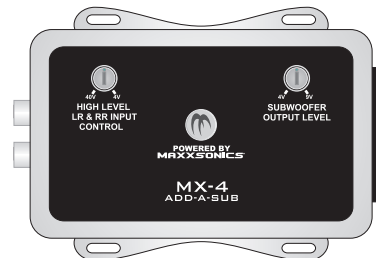

- * Converts High Level OEM speaker wires to Ultra Clean RCA Low Level Outputs
- * High Level Inputs: Accepts all types of High level Inputs including floating ground and high voltages up to 30 volts.
- * Audio Signal Sense / Hardwire Turn-On: Audio sense detects music signals from the OEM wires and activates the MX-4. As an option, the module also offers a remote turn-on wire.
- * Remote Output: Driver circuit to turn on amplifier when module activates.



MAXXSONICS®

MBQUARTI®

autOTEK®

HIFONDICS®

CRUNCH®

WWW.MAXXSONICS.COM

847.540.7700