



***VERTICAL 3 CD PLAYER WITH
DIGITAL TUNING AM/FM
STEREO RADIO***

OWNER'S MANUAL
SMV300

Visit our web site at www.emersonscott.com

Thank you

For purchasing the Multi CD audio system from Scott. This uniquely designed product has a built-in vertical 3-CD player with a 40 track programmable memory and repeat playback. It also features a clock and great sounding digital tuning AM/FM stereo radio with 20 memory presets.

We are sure that this unit will provide you with many years of exceptional performance with a minimum of care and maintenance. Please review the contents of this instruction manual completely and carefully before operating your unit, to make sure that you understand all functions and operations and get the maximum benefit out of all the great features included in this product.

The serial number of your unit can be found on a label on the back of the cabinet. We suggest that you record the serial number in the space provided below in case this information is ever needed at a future date.

Model Number: SMV300

Serial Number _____

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		

LASER SAFETY: This unit employs a laser. Only qualified service personnel should attempt to service this device due to possible eye injury.

 
CAUTION: USE OF CONTROLS, ADJUSTMENTS OR PERFORMANCE PROCEDURE HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.



DANGEROUS VOLTAGE
The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



ATTENTION
The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



DANGER:
Invisible and hazardous laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.



RISK OF FIRE - REPLACE FUSE AS MARKED

FCC WARNING:
This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

FCC INFORMATION
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

PREPARATION FOR USE

Unpacking and Setup

- Carefully remove the unit from the display carton and remove all packing material from the unit itself.
- Remove any descriptive labels that may be found on either the front or top cabinet of the unit. Do not remove any labels located on either the back or bottom cabinet of the unit.

Speaker Connection (See figure 1)

1. Place the speakers in convenient locations on either side of the unit. Usually a distance of three to five feet between speakers provides the best stereo effect, but this may vary depending on the size and acoustics of the room.
2. Locate the Speaker Terminals on the rear of the unit and connect the red and black wires to the red and black terminals, coordinating the color.
3. To connect the speakers, press the terminal down, insert the speaker wire and release the terminal.
4. Pull lightly on the connection to make sure it is secure.

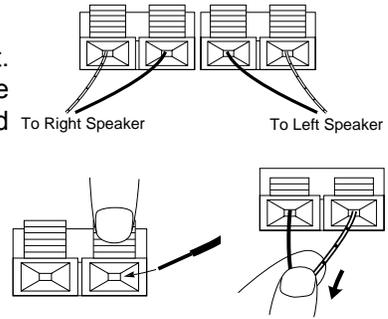


Figure 1

CAUTION: Only connect the speakers which are supplied with the unit.

The use of any other or additional speakers may cause damage to the unit. Never operate the unit without the speakers connected.

Power Sources

This audio system is designed to operate on 120V AC, 60Hz house current. Attempting to operate this unit from any other power source may cause damage to the unit, which is not covered by your warranty.

AC Operation

Unwind the AC cord and extend it to its full length. Insert it into any convenient 120V, 60 Hz household outlet.

Please note that this unit is equipped with a polarized AC plug which has one blade wider than the other. This is a safety feature to reduce the likelihood of electric shock. This polarized AC plug will only fit in a polarized AC outlet. If you find that you cannot insert this plug into your outlet, you may have an obsolete non-polarized outlet. Please do not try to defeat this safety feature by using a non-polarized adapter or by filing the wider blade to make it fit into your outlet. If this plug does not fit into your outlet, you should contact a qualified licensed electrician to replace your obsolete outlet.

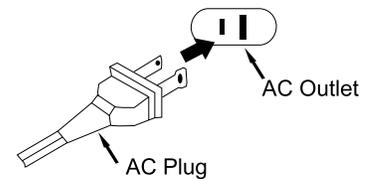


Figure 2

Ready To Switch On

Turn the power on and press the CD/SELECT Function button. Then, press the CD DOOR OPEN/CLOSE button to open the CD compartment doors.

NOTE: There is a card in each of the CD compartments which is intended to prevent the CD pickup from moving during shipment of the product. Remove these cards from the CD compartments before use.

Leave 3 inches on either side so doors can open without obstruction.

This unique system also will open the CD doors if you place your hand in front of the CD2 area as shown in figure 3. After the power is on, wait for a few seconds until the unit searches the discs. Move your hand slowly towards the CD2 area parallel to the front.

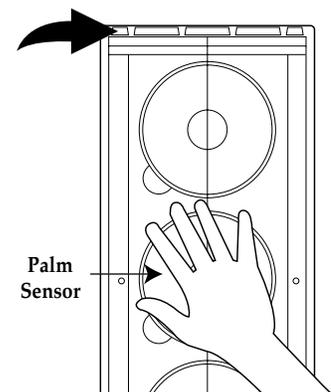


Figure 3

Remote Control Battery Installation

The remote control transmitter is designed to operate with two (2) "AA" size batteries (not included). To install the batteries, slide the battery compartment cover open on the back of the remote control (see figure 4) and insert two (2) "AA" size batteries observing the polarity indicated in the compartment. Replace the battery compartment cover.

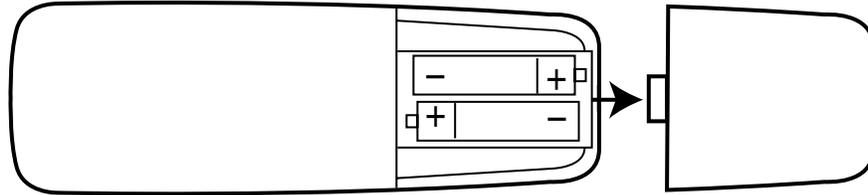


Figure 4

BATTERY PRECAUTIONS

Follow these precautions when using batteries in this device:

1. Use only the size and type of batteries specified.
2. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Reversed batteries may cause damage to the device.
3. Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.
4. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture.
(Follow battery manufacturer's directions.)

AUX IN

You can connect an external audio device, such as a cassette deck, TV, VCR, satellite, video game, etc., into these jacks. Simply connect the left and right cables of the external device into the Left and Right AUX IN jacks on the rear of the unit. When using the unit connected to the AUX IN jacks, press the AUX Function button on the main unit.

LINE OUT

You can connect an external recording device, such as a cassette recorder, into these jacks. Simply connect the left and right cables of the external recording device into the Left and Right LINE OUT jacks on the rear of the unit.

DIGITAL OUT

NOTE: Remove the plug from the DIGITAL OUT jack before using.


You can connect an external DIGITAL recording device, such as a minidisc or CD recorder, into this jack. Simply connect the optical cable (not included) of the external digital recording source into the DIGITAL OUT jack on the rear of the unit.

HEADPHONE JACK


Connect a pair of stereo headphones (not included) to this jack for private listening without disturbing others. The speakers are shut off when headphones are connected to the headphone jack.

LOCATION OF CONTROLS AND INDICATORS

FRONT

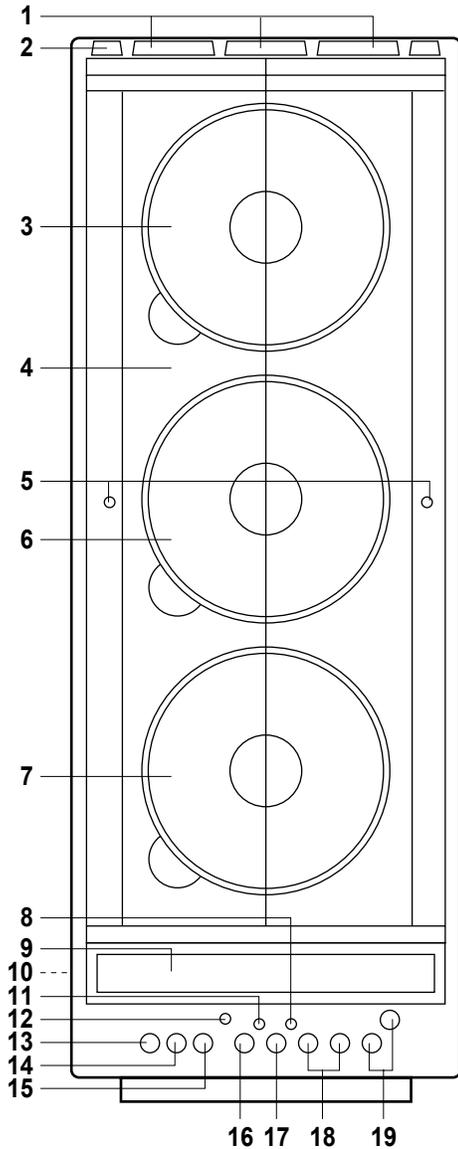


REAR

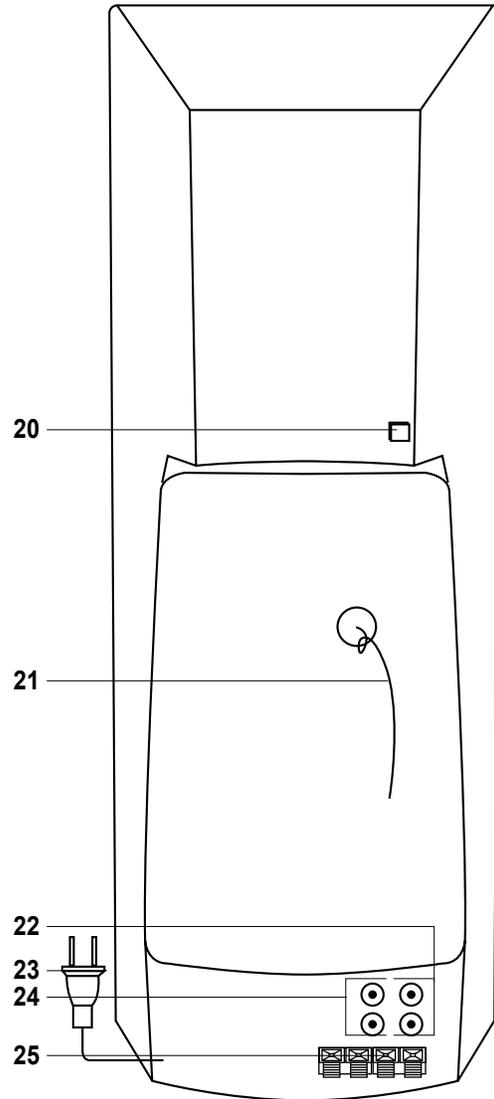

- 1. CD Buttons (1,2,3)
- 2. CD DOOR OPEN/CLOSE Button
- 3. CD Compartment 1
- 4. CD Doors
- 5. Palm Sensors
- 6. CD Compartment 2
- 7. CD Compartment 3
- 8. TIMER Button
- 9. Display
- 10. Headphone jack
- 11. SLEEP Button
- 12. FM STEREO Button
- 13. CD/SELECT Function Button






- 14. AM/FM Function Button
- 15. AUX Function Button
- 16. PLAY/PAUSE (▶||) Button
- 17. STOP (■) Button
- 18. TUNING/SKIP/SEARCH (▶▶)/(◀◀) Buttons
- 19. VOLUME ▲/▼ Buttons
- 20. DIGITAL OUT Jack
- 21. FM Wire Antenna
- 22. LINE OUT Jacks
- 23. AC Cord
- 24. AUX IN Jacks
- 25. Speaker Terminals

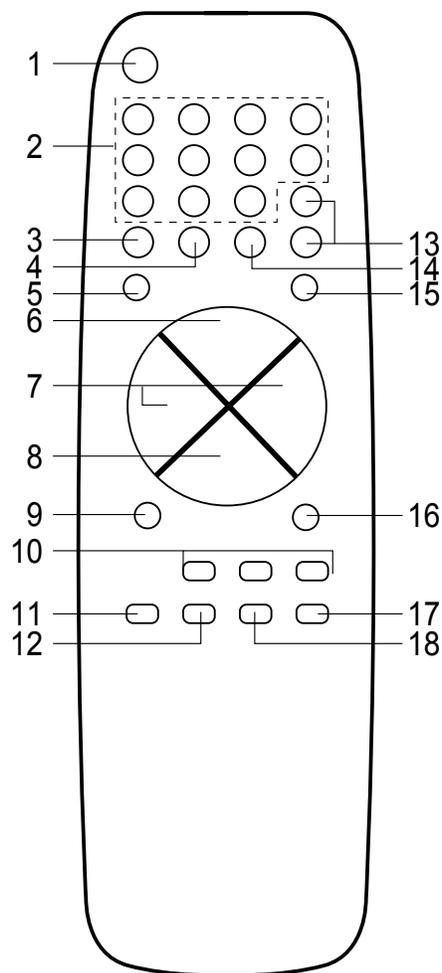REMOTE

1. POWER Button
2. Number Buttons (0-9, +10)
3. CD/SELECT Function Button
4. FM/AM Function Button
5. EQ (Equalizer) Button
6. PLAY/PAUSE (▶||) Button
7. TUNING/SKIP/SEARCH (▶▶)/(◀◀) Buttons
8. STOP (■) Button
9. CD DOOR OPEN/CLOSE Button
10. CD Buttons (1,2,3)
11. INTRO Button
12. RANDOM/MEM ▲ Button
13. VOLUME ▲/▼ Buttons
14. AUX Function Button
15. MUTE Button
16. PROG (Program)/MEMORY Button
17. REPEAT/MEM ▼ Button
18. REMAIN/MODE Button

SETTING THE CLOCK

When the unit is first plugged in, the time display will blink. Set the time as follows:
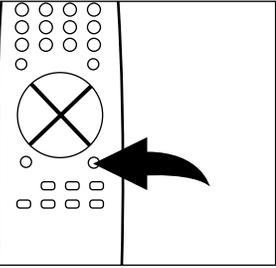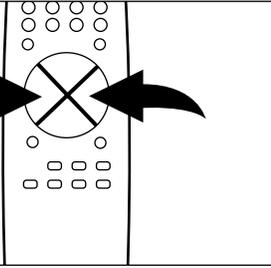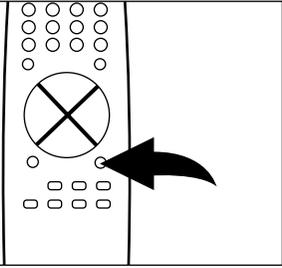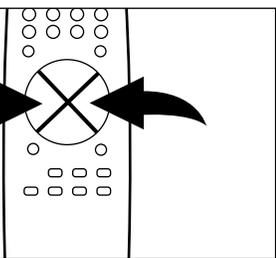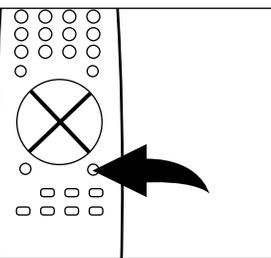
<p>1</p> 	<p>2</p> 	<p>3</p> 
<p>While the unit is OFF (POWER button will be red), press the PROG/MEMORY button on the remote and the hours will blink.</p>	<p>Set the correct hour (and AM/PM) using the TUNING/SKIP/SEARCH (▶▶) or (◀◀) button.</p>	<p>When finished setting the hour, press the PROG/MEMORY button on the remote again and the minutes will blink.</p>
<p>4</p> 	<p>5</p> 	
<p>Set the correct minute using the TUNING/SKIP/SEARCH (▶▶) or (◀◀) button.</p>	<p>When finished setting the hour, press the PROG/MEMORY and the clock will be set.</p>	


NOTE:

If the time display is blinking, then the clock needs to be set.

MUTE

EQ (PRESET EQUALIZER) Buttons:


This unit has 4 preset equalizer settings that automatically adjust the sound levels for the desired genre. Press the EQ button for your listening preference (FLAT, ROCK, CLASSIC and POP); the respective indicator will light in the display.

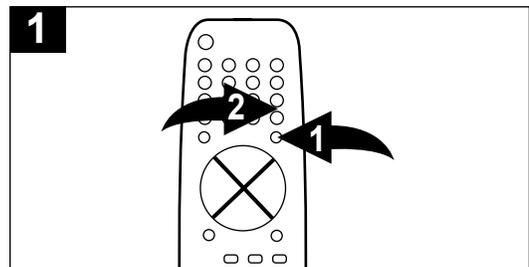


To temporarily mute the sound, press the MUTE button ❶; "MUTE" will appear in the display and the sound will be muted. Press the MUTE button ❶ again or one of the VOLUME buttons ❷ to restore the sound.

OPERATING INSTRUCTIONS


LISTENING TO THE RADIO

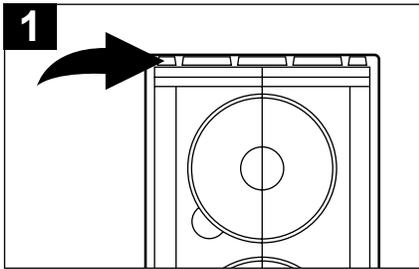


Press the **POWER** button; the button color will change from red to green which means the unit is on.

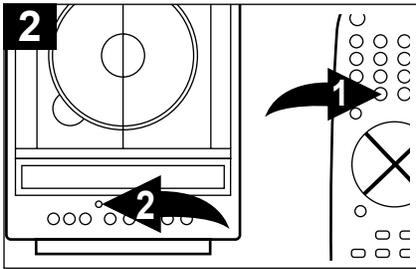


Press the **AM/FM Function** button ❶ to select the radio. Press the **AM/FM** button again to select AM or FM. If listening to FM, press the **FM STEREO** button ❷ to select MONO or STEREO. Noise present in FM can be reduced by setting this to MONO.

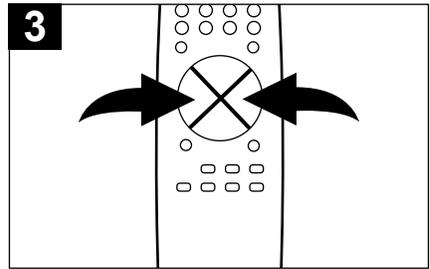

Select a station using the **TUNING/SKIP/SEARCH** (▶▶) or (◀◀) button. If you press and hold the **TUNING/SKIP/SEARCH** (▶▶) or (◀◀) button for 2 seconds, the unit will automatically scan to the next broadcasting station.

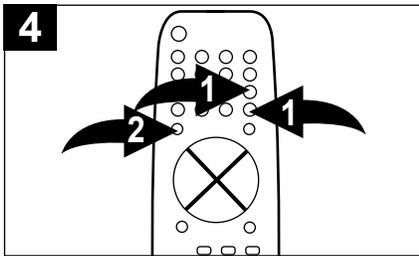

Adjust the **VOLUME** ❶ and **Preset Equalizer** ❷ buttons as desired.

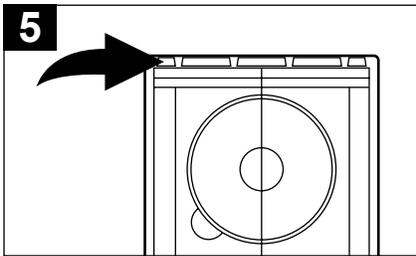

When you have finished listening, press the **POWER** button; the button color will change from green to red which means the unit is in the Standby mode.







Hints for Better Reception

FM - Make sure that the FM Antenna Wire is extended to its full length. You may have to vary the direction of the antenna to find the strongest signal for each FM station.




AM - The AM ferrite bar antenna is located inside the cabinet. It may be necessary to turn the unit slightly so that the internal antenna is pointing in the direction of the AM transmitter. You may have to experiment to find the position that provides the strongest reception for each of your favorite AM stations.

SETTING RADIO PRESETS

This unit can preset 20 AM and 20 FM radio stations for convenient recall.

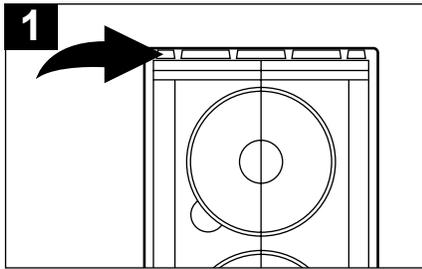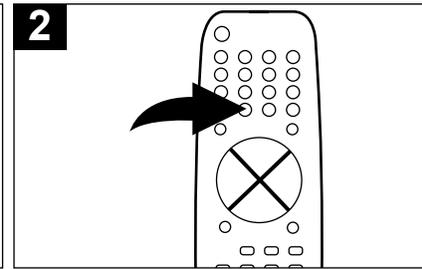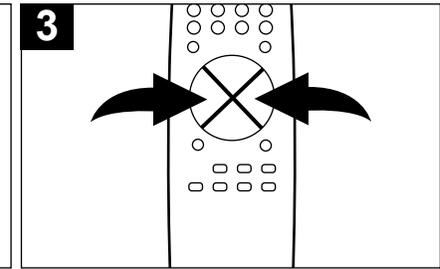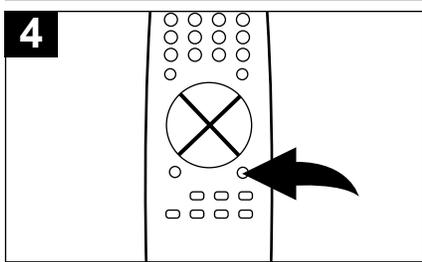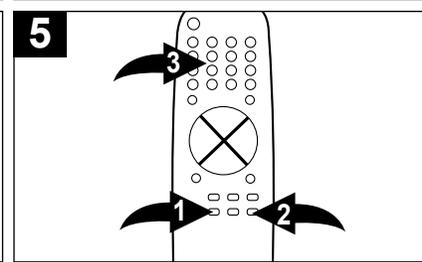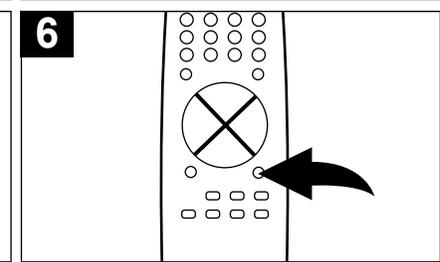
		
<p>Press the POWER button; the button color will change from red to green which means the unit is on.</p>	<p>Press the AM/FM Function button to select the radio. Press the AM/FM button again to select AM or FM.</p>	<p>Press the TUNING/SKIP/SEARCH (▶▶) or (◀◀) button to find the desired station.</p>
		
<p>Press the PROG/MEMORY button on the remote.</p>	<p>Within 5 seconds, press the RANDOM/MEM ▲①/ REPEAT/MEM ▼ button ② or the Number buttons ③ on the remote to select the desired preset number.</p>	<p>Within 5 seconds, press the PROG/MEMORY button again to set the station in the selected memory. Repeat steps 4-6 to preset more stations.</p>

RECALLING RADIO PRESETS

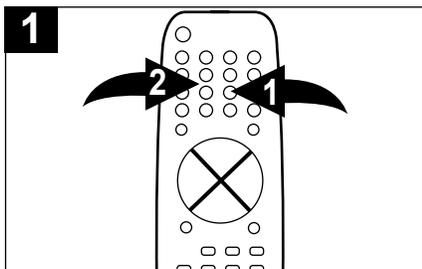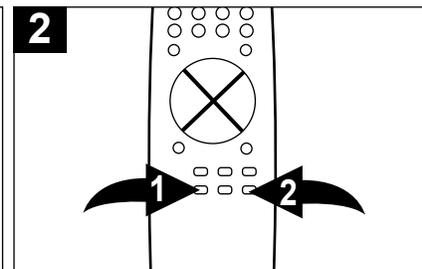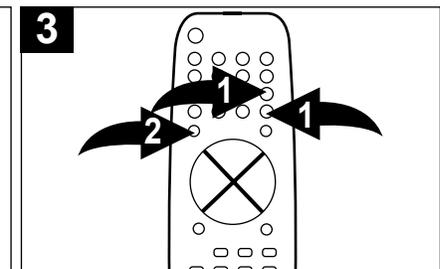
		
<p>Follow steps 1 and 2 above. Press the Number buttons ② on the remote to directly select a preset. For example, to select preset 15, press +10 button ①, followed by the 5 button ②.</p>	<p>You can also use the RANDOM/MEM ▲①/ REPEAT/MEM ▼ button ② on the remote to cycle through the presets; the station will automatically be tuned in.</p>	<p>Adjust the VOLUME ① and Preset Equalizer ② buttons as desired.</p>

PLAYING COMPACT DISCS (CD-R Compatible)


NORMAL PLAYBACK

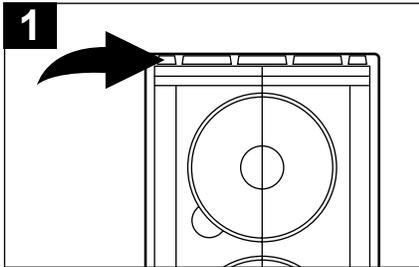

1 Press the POWER button; the button color will change from red to green which means the unit is on.

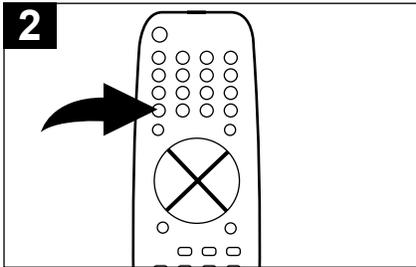


2 Press the CD/SELECT Function button.

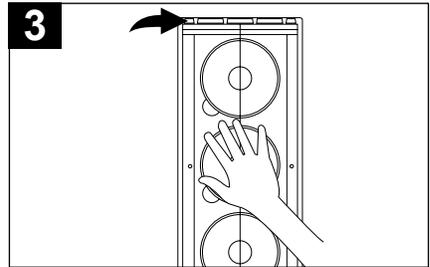


3 Press the CD DOOR OPEN /CLOSE button to open the CD compartment doors, or place your hand in front of CD 2 area (see page 2).


NOTE: If you have not already done so, remove the CD transit lock cards from the CD compartments now.

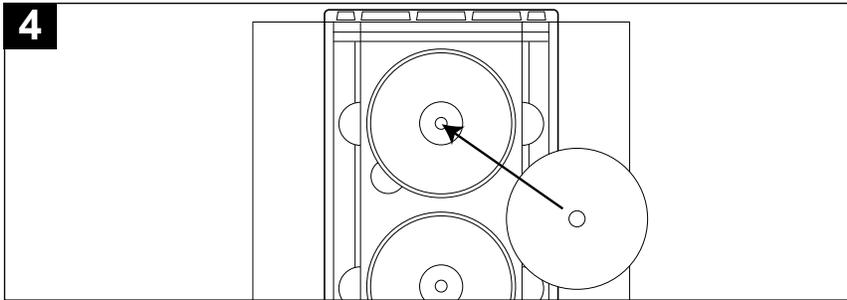


4 Insert a CD into one or all of the compartments by gently pressing a disc, label side up, onto the spindle until it locks in place. Close the CD doors and the total number of tracks and playing time on the disc will appear on the display.

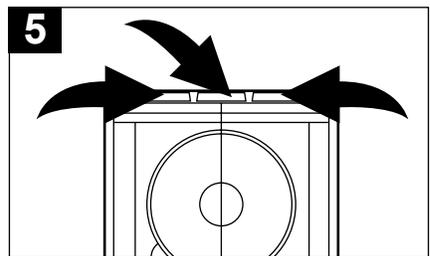


5 Press one of the CD buttons (1,2,3) to select the CD in the respective compartment. The selected button will turn green. Playback will automatically start.

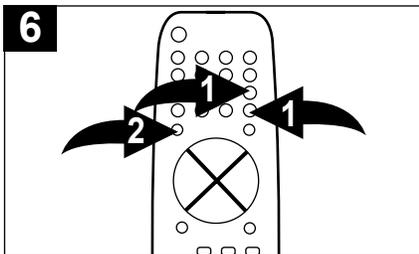


6 Playback will continue until all the tracks on the disc have been played. Adjust the VOLUME ❶ and Preset Equalizer ❷ buttons as desired.

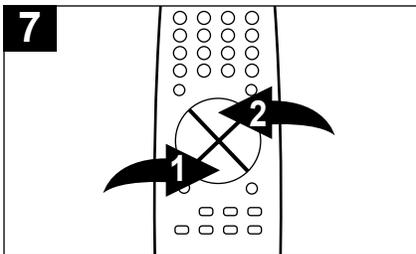


7 To stop playback before the disc ends, press the STOP (■) button ❶. Press the PLAY/PAUSE (▶||) button ❷ to begin playback again.

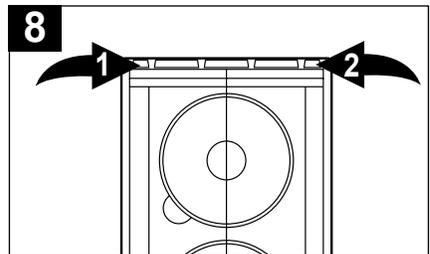

 
8 If you are finished listening, press the CD DOOR OPEN/CLOSE button ❶ to open the CD Compartment doors. Remove your disc(s), close the CD Compartment doors and turn the power off ❷.



CD PAUSE CONTROL

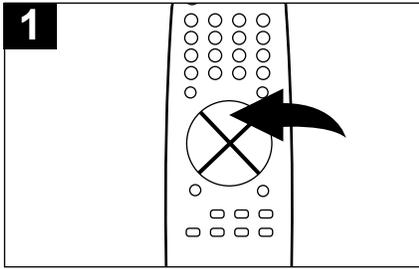


1 During CD playback, if you wish to pause the disc momentarily, press the PLAY/PAUSE (▶||) button again. Playback stops but the disc continues to spin and the elapsed time flashes in the CD Display.

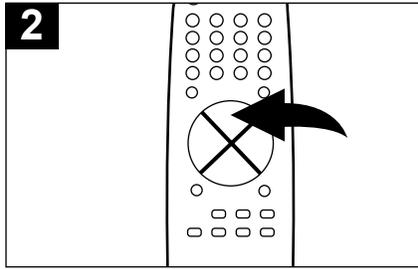


2 Press the PLAY/PAUSE (▶||) button again to release Pause and resume normal CD playback. The sound returns and the elapsed time stops flashing.


TO BEGIN PLAYBACK FROM A SPECIFIC TRACK

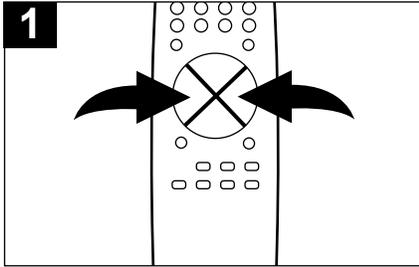

1 After you insert the disc into the CD player and the total number of tracks/elapsed time appear on the display, you may press either the TUNING/SKIP/SEARCH (▶▶) or (◀◀) button to select a specific track for playback.

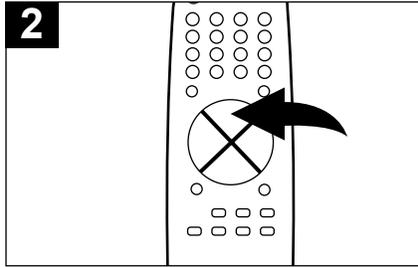


2 When the desired track number appears in the display, press the PLAY/PAUSE (▶||) button. Playback will begin on the track you selected.

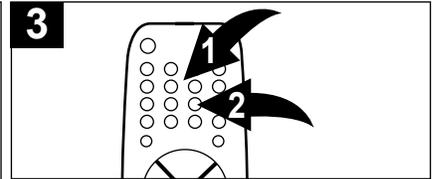


3 You can also directly select tracks by using the Number buttons ① on the remote control. Once selected, they will automatically play. If selecting a track over 9, press the +10 button ② repeatedly until the desired first digit appears. For example, to select track 22, press the +10 button ② twice, and the "2" Number button ①.


FORWARD/REVERSE SKIP TRACK AND HIGH-SPEED MUSIC SEARCH (▶▶/◀◀)

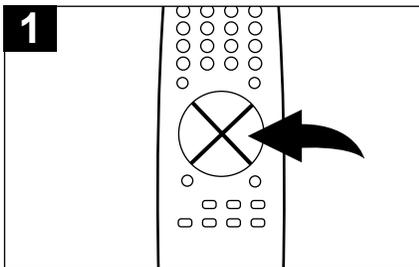


1 During playback, press the TUNING/SKIP/SEARCH (▶▶) button once to advance the player to the beginning of the next track. Press the TUNING/SKIP/SEARCH (▶▶) button repeatedly to advance the player to higher number tracks.

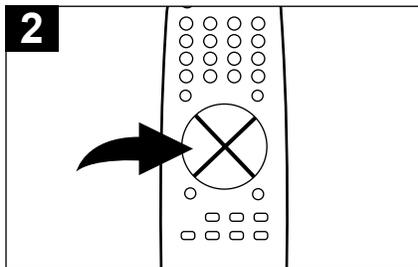




2 During playback, press the TUNING/SKIP/SEARCH (◀◀) button once to move the player back to the beginning of the previous track. Press the TUNING/SKIP/SEARCH (◀◀) button repeatedly to move the player back to lower-numbered tracks.

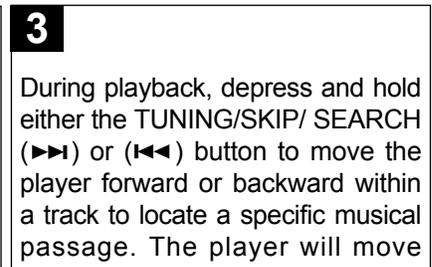

 3 During playback, depress and hold either the TUNING/SKIP/SEARCH (▶▶) or (◀◀) button to move the player forward or backward within a track to locate a specific musical passage. The player will move forward or backward at high speed as long as the buttons are depressed. When you release the TUNING/SKIP/SEARCH (▶▶) or (◀◀) button, normal playback will resume at that point.



REPEAT PLAYBACK

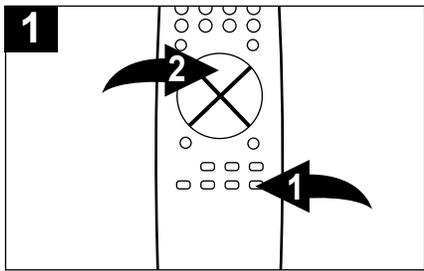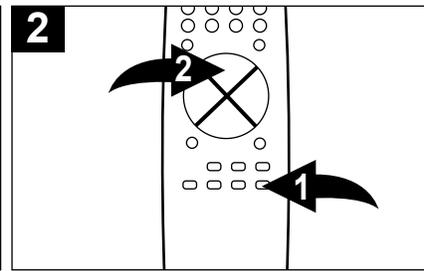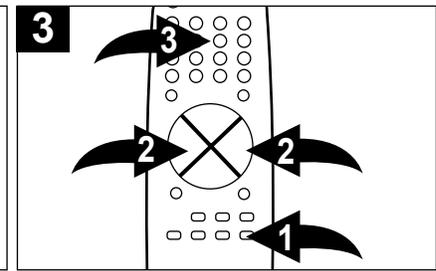		
<p>To repeat all of the inserted discs continuously, press the REPEAT button ❶ once. "ALL DISC" will appear in the display. Press the PLAY/PAUSE (▶) button ❷ to begin all discs repeat.</p>	<p>To repeat all of the tracks on a disc continuously, press the REPEAT button ❶ twice. "1 DISC" will appear in the display. Press the PLAY/PAUSE (▶) button ❷ to begin all tracks repeat.</p>	<p>To repeat a single track, press the REPEAT button ❶ a third time. "1" will appear in the display. Press the TUNING/SKIP/ SEARCH (▶▶) or (◀◀) button ❷ or the Number buttons ❸ on the remote to select the specific track that you wish to repeat. The specific track you selected will be automatically played and repeated continuously.</p>




NOTE:

To cancel Repeat Playback, press the REPEAT button repeatedly until the Repeat indicator disappears from the display.


PROGRAMMED PLAYBACK

The CD player in this unit has a 40-track programmable memory that allows you to program up to 40 tracks on any disc for playback in any desired order. You may program 40 different tracks or you may also program certain tracks to play more than once.


To perform programmed playback, proceed as follows:

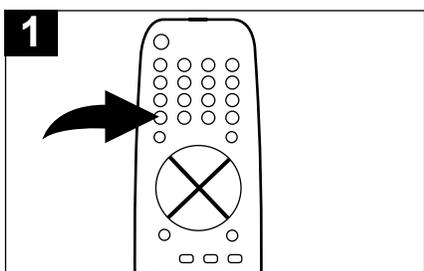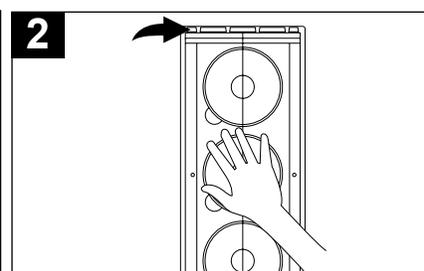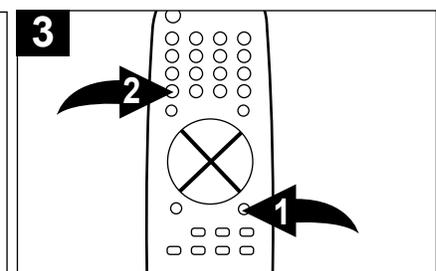		
<p>Press the CD/SELECT Function button.</p>	<p>Open the CD Compartment doors and insert your disc(s) in the compartments. Close the CD doors. Wait for the CD player to read the table of contents and display the total number of tracks on the disc.</p>	<p>Press the PROG/MEMORY button ❶; the display will show "00 P-01" and "MEMORY" will blink. Select a disc using the CD/SELECT button ❷; the disc number will appear in the display.</p>


PROGRAMMED PLAYBACK SECTION CONTINUED ON NEXT PAGE.

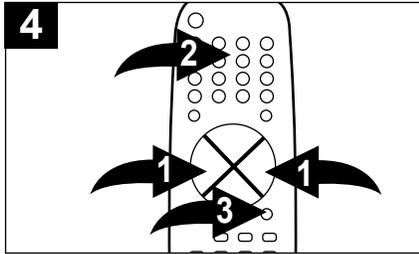


Press the TUNING/SKIP/SEARCH (▶▶) or (◀◀) button ❶ or the Number buttons ❷ on the remote to select the first track that you wish to program. Press the PROG/MEMORY button ❸ to set the memory.

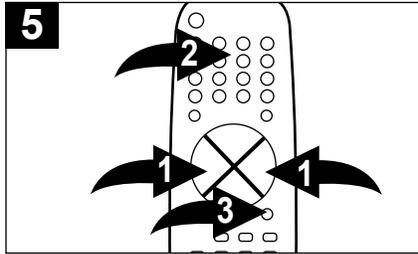

Press the TUNING/SKIP/SEARCH (▶▶) or (◀◀) button ❶ or the Number buttons ❷ to select the next track you wish to program. Press the PROG/MEMORY button ❸ to set the memory. Repeat this step to program up to 40 tracks.

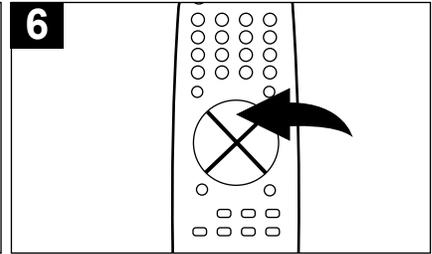


After programming up to 40 tracks in the CD Program Memory, press the PLAY/PAUSE (▶||) button to begin programmed playback; "MEMORY" will appear in the display and playback will begin on the first track that you programmed.

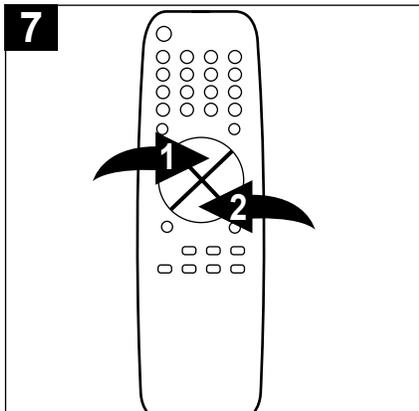


The player will continue to play all of the tracks that you programmed in the order in which you programmed them. When the last programmed track has been played, the player will stop but the program is still active. If you press the PLAY/PAUSE (▶||) button ❶ again, playback will start on the first track you programmed and will continue until all the programmed tracks have been played. To cancel the Programmed Playback mode, press the STOP (■) button ❷ while in the Stop mode.


CHANGING THE PROGRAM

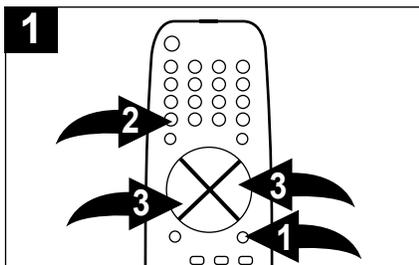


While in the Stop mode, press the PROG/MEMORY button ❶ repeatedly until the desired program number is displayed, then press the CD/SELECT ❷ button to change the disc, and/or the TUNING/SKIP/SEARCH (▶▶) or (◀◀) button ❸ to change the track.

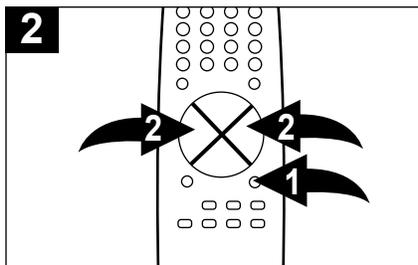


To delete a programmed track, press the TUNING/SKIP/SEARCH (▶▶) or (◀◀) button ❷ to change the track number to "00". Confirm by pressing the PROG/MEMORY button ❶.

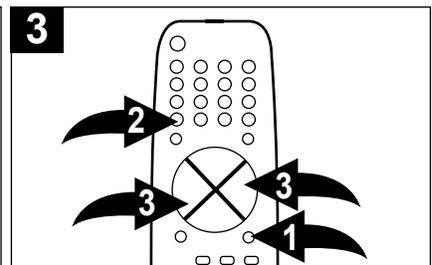

 
To add a programmed track, press the PROG/MEMORY button ❶ repeatedly until "00" blinks in the display, then press the CD/SELECT ❷ button to add a disc, and/or the TUNING/SKIP/SEARCH (▶▶) or (◀◀) button ❸ to add a track. Confirm by pressing the PROG/MEMORY button ❶.




PROGRAMMED REPEAT

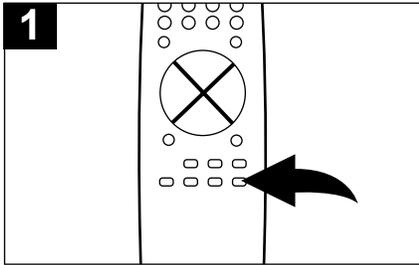

It is also possible to use the Program and Repeat functions together to repeat a specific program indefinitely. First, program the tracks you wish to hear in the order you wish to hear them, as described above. Then, press the REPEAT button once.

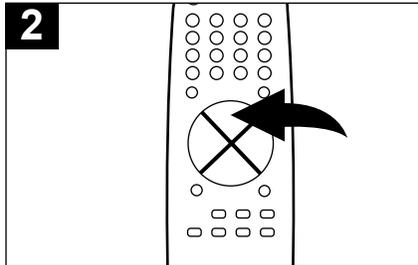


Press the PLAY/PAUSE (▶||) button to begin programmed repeat playback. The player will play the tracks you selected in the order in which you programmed them. When the last track in the program has been played, the entire program will begin again.

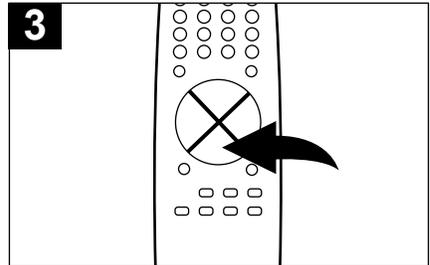


Program Repeat operation will continue indefinitely until you press the STOP (■) button, open the CD door or turn the power off.

INTRO PLAYBACK


Intro playback will play the first 10 seconds of each track.

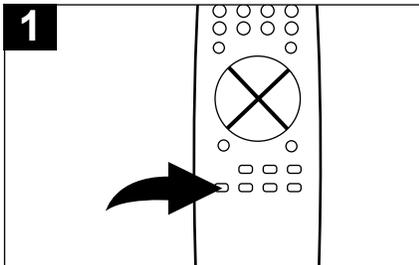

With a CD is inserted, press the INTRO button; "INTRO" will appear in the display. The unit will automatically play the first 10 seconds of each track.

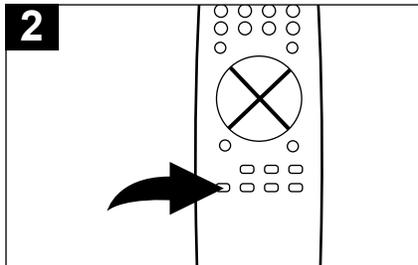


When you hear a song you would like to continue listening to, press the INTRO button again.

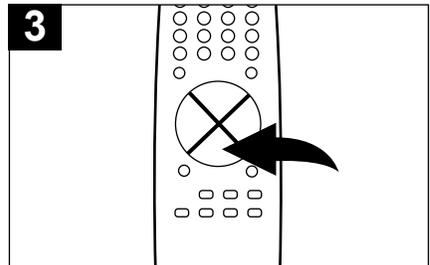


To stop Intro playback, press the STOP (■) button.


TO RANDOMLY PLAY BACK A CD

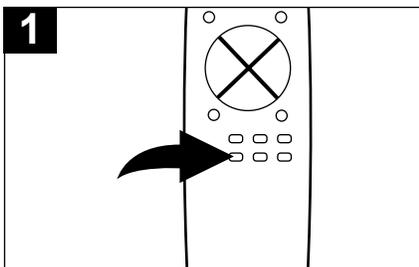


With a CD is inserted, press the RANDOM button once; "RANDOM" and "ALL DISC" will appear in the display. The unit will play all the tracks on all the CDs in random order.

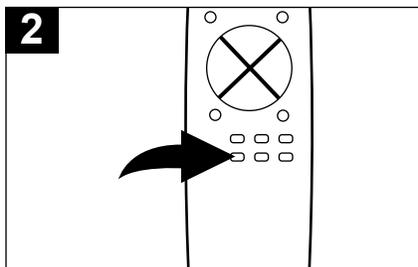

 With a CD is inserted, press the RANDOM button twice; "RANDOM" and "1 DISC" will appear in the display. The unit will play all the tracks on the selected CD in random order.




REMAIN/MODE BUTTON

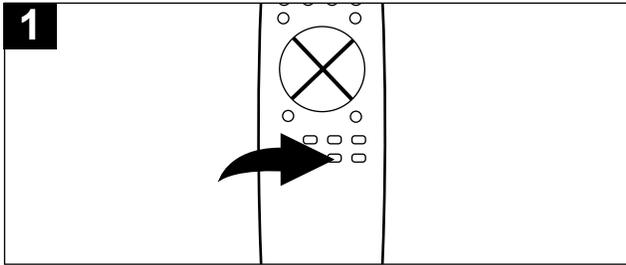

When a disc is playing, press the REMAIN/MODE button repeatedly to cycle as follows:

- 1 Remaining time of current track.
 - 2 Remaining time of current CD
 - 3 Normal display, elapsed time of current track.
- Additional presses will show you the time and the timer, explained on page 15.

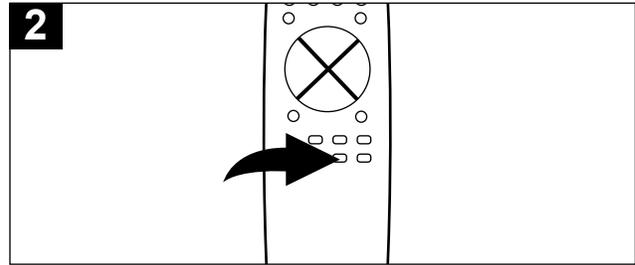

When in the Stop or a mode other than CD, press the REMAIN/MODE button repeatedly to cycle as follows:


- 1 Time Display (in Aux mode, time is displayed)
- Additional presses will show you the time and the timer, explained on page 15.

INSTANT PLAYBACK


If listening to the radio or auxiliary input, simply press one of the CD buttons (1,2,3) and the unit will automatically play the respective CD.

SLEEP TIMER


This feature will allow you to set the unit to automatically turn itself off after up 90 minutes in 10 minute steps.

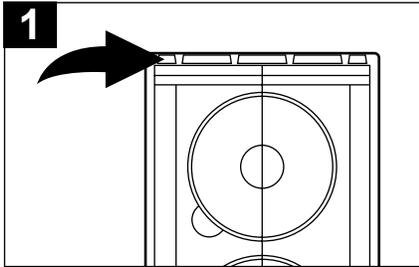

Press the POWER button; the button color will change from red to green which means the unit is on.

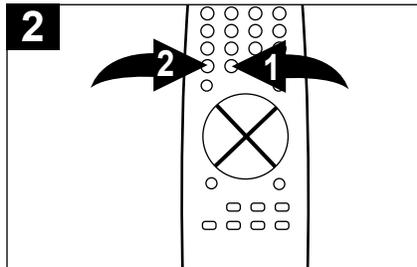

Select a radio station **1** or a CD **2** as desired.

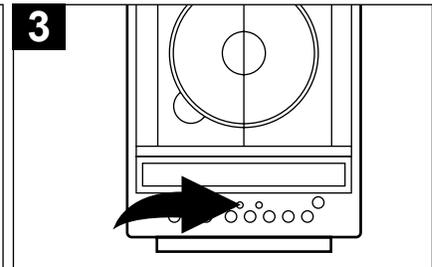


Press the SLEEP button on the main unit; "SLEEP" will appear in the display. The unit will continue to operate for 10 to 90 minutes (depending on the selection), and then turn off.

TO CANCEL SLEEP TIMER


To cancel, simply press the SLEEP button again until "SLEEP" disappears from the display.

ON/OFF TIMER


This feature will allow you to set the unit to turn on and off automatically at preset times.

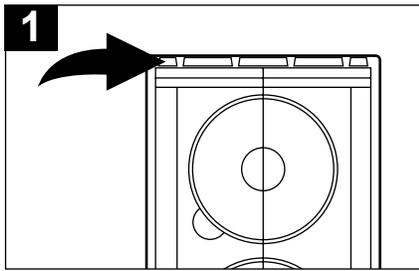


Press the **POWER** button; the button color will change from red to green which means the unit is on.

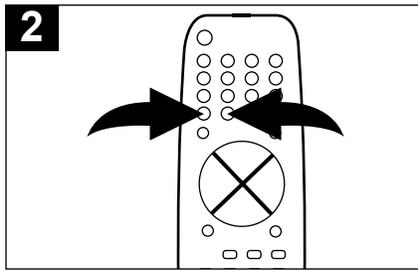


Select a radio station or a CD that you would like to be playing when the unit switches on.
If selecting CD, you can also program tracks into memory to be played.

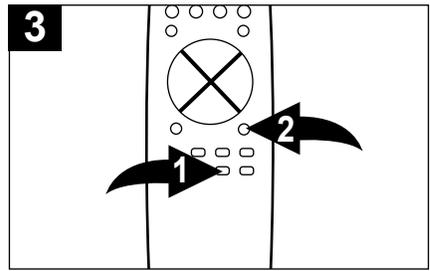


Press the **REMAIN/MODE** button ❶ repeatedly until, "TIMER ON" appears in the display, then immediately press the **PROG/MEMORY** button ❷ and the hours will blink.

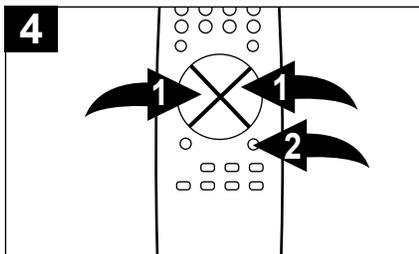


Set the correct hour (and AM/PM) using the **TUNING/SKIP/SEARCH (▶▶)** or **(◀◀)** button ❶. When finished setting the hour, press the **PROG/MEMORY** button ❷ on the remote again and the minutes will blink.

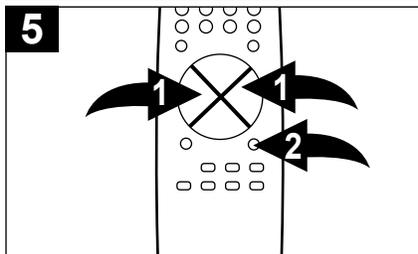


Set the correct minute using the **TUNING/SKIP/SEARCH (▶▶)** or **(◀◀)** button ❶. When finished setting the hour, press the **PROG/MEMORY** button ❷ and the clock will be set.

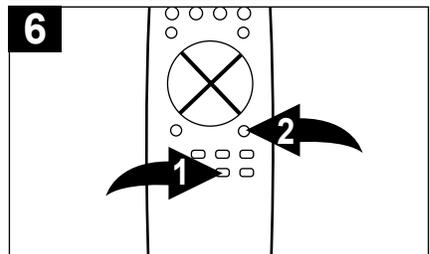


Press the **REMAIN/MODE** button ❶ again until, "TIMER OFF" appears in the display, then immediately press the **PROG/MEMORY** button ❷ and the hours will blink.

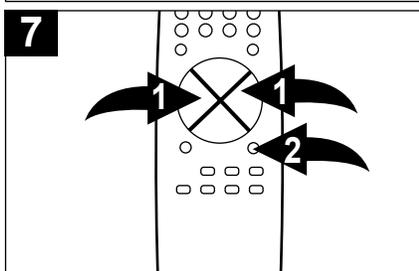

Set the hour and minute the same way as you did for the Timer On.

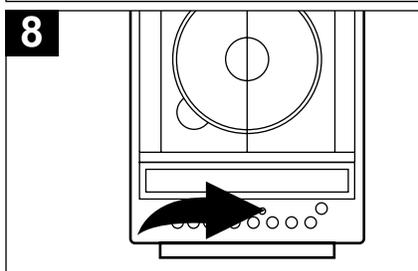

To activate the timer to turn on and off at the preset times, press the **TIMER** button on the main unit; "TIMER" will appear in the display.

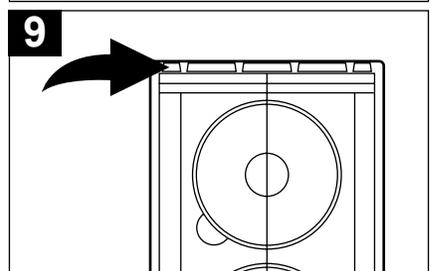

Press the **POWER** button to turn the unit off and into the Standby mode; the **POWER** button will light red. When the actual time reaches the Timer On time, the unit will turn on.



NOTES:

- While setting, carry out each step within 5 seconds, otherwise the operation will time out and you will have to start again.
- To cancel the timer, press the **TIMER** button until "TIMER" disappears from the display.

CARE AND MAINTENANCE

Caring for Compact Discs

- Treat the disc carefully. Handle the disc only by its edges. Never allow your fingers to come in contact with the shiny, unprinted side of the disc.
- Do not attach adhesive tape, stickers, etc. to the disc label.
- Clean the disc periodically with a soft, lint-free, dry cloth. Never use detergents or abrasive cleaners to clean the disc. If necessary, use a CD cleaning kit.
- If a disc skips or gets stuck on a section of the disc, it is probably dirty or damaged (scratched).
- When cleaning the disc, wipe in straight lines from the center of the disc to the outer edge of the disc. Never wipe in circular motions.

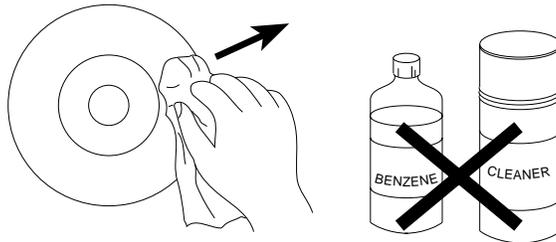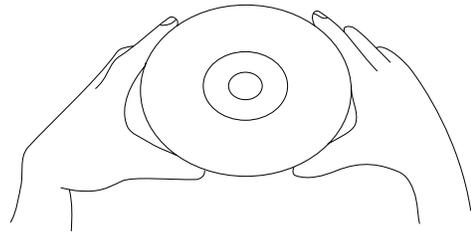

- This unit is designed to play only compact discs bearing the identification logo as shown here.
- Other discs may not conform to the CD standard and may not play properly.
- Compact Discs should be stored in their cases after each use to avoid damage.
- Do not expose compact discs to direct sunlight, high humidity, high temperatures, or dust, etc. Prolonged exposure or extreme temperatures can warp the disc.
- Do not stick or write anything on either side of the disc. Sharp writing instruments, or the ink may damage the surface.




Cleaning the unit

- To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning.
- The finish on your unit may be cleaned with a dust cloth and cared for as other furniture. Use caution when cleaning and wiping the plastic parts.
- Mild soap and a damp cloth may be used on the front panel.

TROUBLESHOOTING GUIDE

Should this unit exhibit a problem, check the following before seeking service.

Symptom	Possible Cause	Solution
Radio		
Noise or sound distorted on radio broadcasts.	Station not tuned properly for AM or FM.	Retune the AM or FM broadcast station.
	FM: The FM Antenna wire is not extended.	Extend FM Antenna wire.
	AM: Unit is not positioned correctly.	Rotate unit for best reception as this unit has an internal AM antenna.
FM STEREO indicator does not light.	Poor FM signal being received or switch is not set to FM STEREO.	Retune station, try another station or set FM STEREO switch to FM STEREO.
	Station is not broadcasting in stereo.	Change stations.
AM or FM, no sound.	The AM/FM Function button is not pressed.	Press the AM/FM Function button.
	Volume at minimum.	Increase Volume.
Compact Disc Player		
CD Player will not play.	The CD Function button is not pressed.	Press the CD Function button.
	CD is not installed or installed upside-down.	Insert CD with label side up.
CD skips while playing.	Disc is dirty or scratched.	Wipe disc with cloth or use another disc.
CD Doors will not open.	Power must be on, and the CD Function button must be pressed first.	Turn the power on, press the CD button, and then open the CD Door.
AUX		
No Sound.	The AUX button is not pressed.	Press the AUX Function button.
	External unit not on.	Turn external unit on.
	Cable not connect to AUX IN jacks.	Connect cable securely.
General		
No Sound.	Headphones connected.	Remove the Headphones.
	Speaker cable not connected.	Connect speaker cables.

 


TO FIND THE LOCATION AND
PHONE NUMBER OF YOUR
NEAREST AUTHORIZED
SERVICE CENTER...

CALL TOLL FREE: 1-888-837-8370

FOR ADDITIONAL SET-UP OR OPERATING ASSISTANCE
PLEASE CALL:
1-888-837-8370

 FOR CUSTOMER SERVICE, PLEASE WRITE TO:
H.H. Scott Inc.
Consumer Affairs Dept.
1901 Diplomat Drive
Farmers Branch, TX 75234



H.H. SCOTT, INC. LIMITED WARRANTY

What does this warranty cover?

Any manufacturing defects in original material, including original parts and workmanship, under normal use and conditions.

For how long?

For a period of one (1) year from the date of original purchase in the U.S.

What will we do?

If you need service under this Warranty, and you provide us with the dated proof of purchase, we will provide repair service at no charge for labor and parts at an authorized Depot Repair Facility, or replace the product in our discretion.

How do you make your warranty claim?

If it becomes necessary to repair your unit, you can obtain the name and mailing location of a Depot Repair Facility by dialing 1-888-837-8370. You should pack your unit in a well-padded heavy corrugated box, enclose your check or money order payable to the Depot Repair Facility in the amount of \$15.00 to cover the return shipping and handling costs, and enclose a copy of your proof of purchase (warranty service will not be provided without a dated proof of purchase). Finally, you should ship the unit prepaid via UPS or parcel post (insured).

What does your warranty not cover?

Your warranty does not cover the following :

- Damage from negligence, misuse, abuse, accident, or failure to follow operating instructions.
- Use of product in a commercial application or rentals.
- Changes or repairs by anyone other than an authorized Depot Repair Facility.
- Damage because your unit is improperly connected to the equipment of other manufacturers.
- Unit on which the serial number has been defaced, modified or removed.
- Damage to equipment not properly connected to the product.
- Cost incurred in shipping your unit to and from an authorized Depot Repair Facility.
- Ordinary adjustments which you can perform as outlined in the owner's manual.
- Signal reception problems caused by external antenna or cable systems.
- Products purchased, used, serviced, or damaged outside of the United States.

What other limitations apply to your warranty ?




THIS WARRANTY IS NON-TRANSFERABLE AND APPLIES ONLY TO THE ORIGINAL PURCHASER AND DOES NOT EXTEND TO SUBSEQUENT OWNERS OF THE PRODUCT. THIS WARRANTY IS VALID ONLY IN THE UNITED STATES OF AMERICA. ANY APPLICABLE IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD OF THE EXPRESSED WARRANTY AS PROVIDED ABOVE BEGINNING WITH THE DATE OF ORIGINAL PURCHASE AT RETAIL AND NO WARRANTIES, WHETHER EXPRESSED OR IMPLIED, SHALL APPLY TO THE PRODUCT THEREAFTER. WE MAKE NO WARRANTY AS TO THE FITNESS OF THE PRODUCT FOR ANY PARTICULAR PURPOSE OR USE.

THE EXTENT OF OUR LIABILITY UNDER THIS LIMITED WARRANTY IS THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND IN NO EVENT WILL OUR LIABILITY EXCEED THE PURCHASE PRICE PAID BY THE PURCHASER OF THE PRODUCT. UNDER NO CIRCUMSTANCES WILL WE BE LIABLE FOR ANY LOSS, DIRECT, INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGE ARISING OUT OF OR IN CONNECTION WITH THE USE OF THIS PRODUCT.

How does state law apply to your warranty ?

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, BUT YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE. SOME STATES DO NOT ALLOW LIMITATIONS ON IMPLIED WARRANTIES OR EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGE, SO THESE RESTRICTIONS MAY NOT APPLY TO YOU.

   HH111N



PART NO.: 100-5098
106-01

Printed in China

