

PRIMERGY RXI300

System configurator and order-information guide

February 2008

Contents

Instructions

Configuration diagram

Configurator

- 0 Software Configurator
- I Basic unit
- II Processor
- III Memory
- IV Hard disk drives
- V SCSI / Fibre Channel Controller
- VI Disk Array
- VII Communication / Network
- VIII System Management Products
- IX Country specific power cord

Change Report



PRIMERGY Server

Instructions


This document contains basic product and configuration information that will enable you to configure your system via PC-/RACK-Architect.

Only these tools will ensure a fast and proper configuration of your PRIMERGY server or your complete PRIMERGY Rack system.


You can configure your individual PRIMERGY server in order to adjust your specific requirements.

The Order-Information Guide has been split up in 11 chapters that are identical with the current price list and PC-Architect.

Please follow the lines. If there is a junction, you can choose which way or component you would like to take. Go through the configurator by following the lines from the top to the bottom.

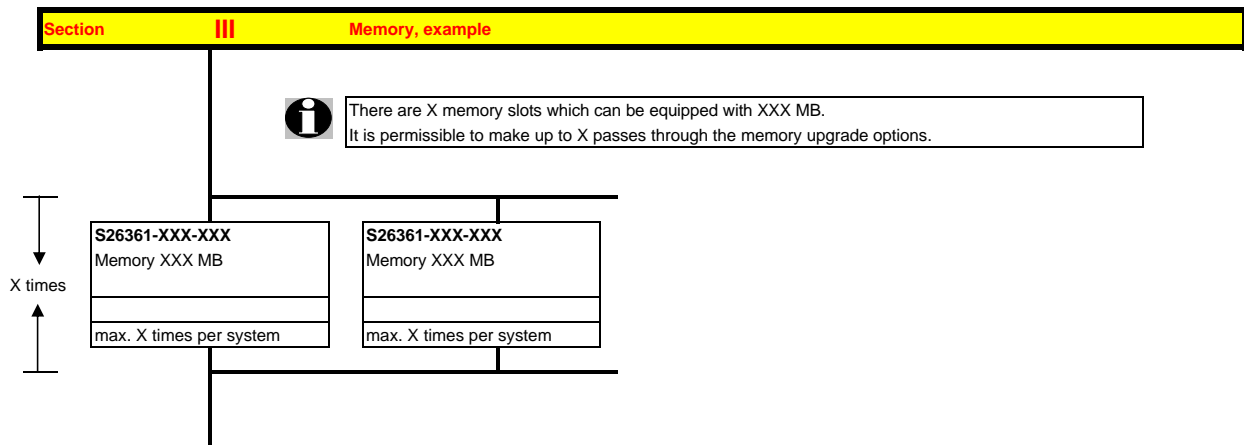

 In one chapter you can only select as many components (here 4x) as the arrow indicates.



Please note that there are information symbols which indicate necessary information.



Further information in the internet see:


<http://www.primergy.com> (internet)

<http://extranet.fujitsu-siemens.com/primergy> (extranet)

Prices and availability see price list and PC-/ System-Architect.
Subject to change and errors excepted.

Configuration diagram PRIMERGY RX1300

TOP View

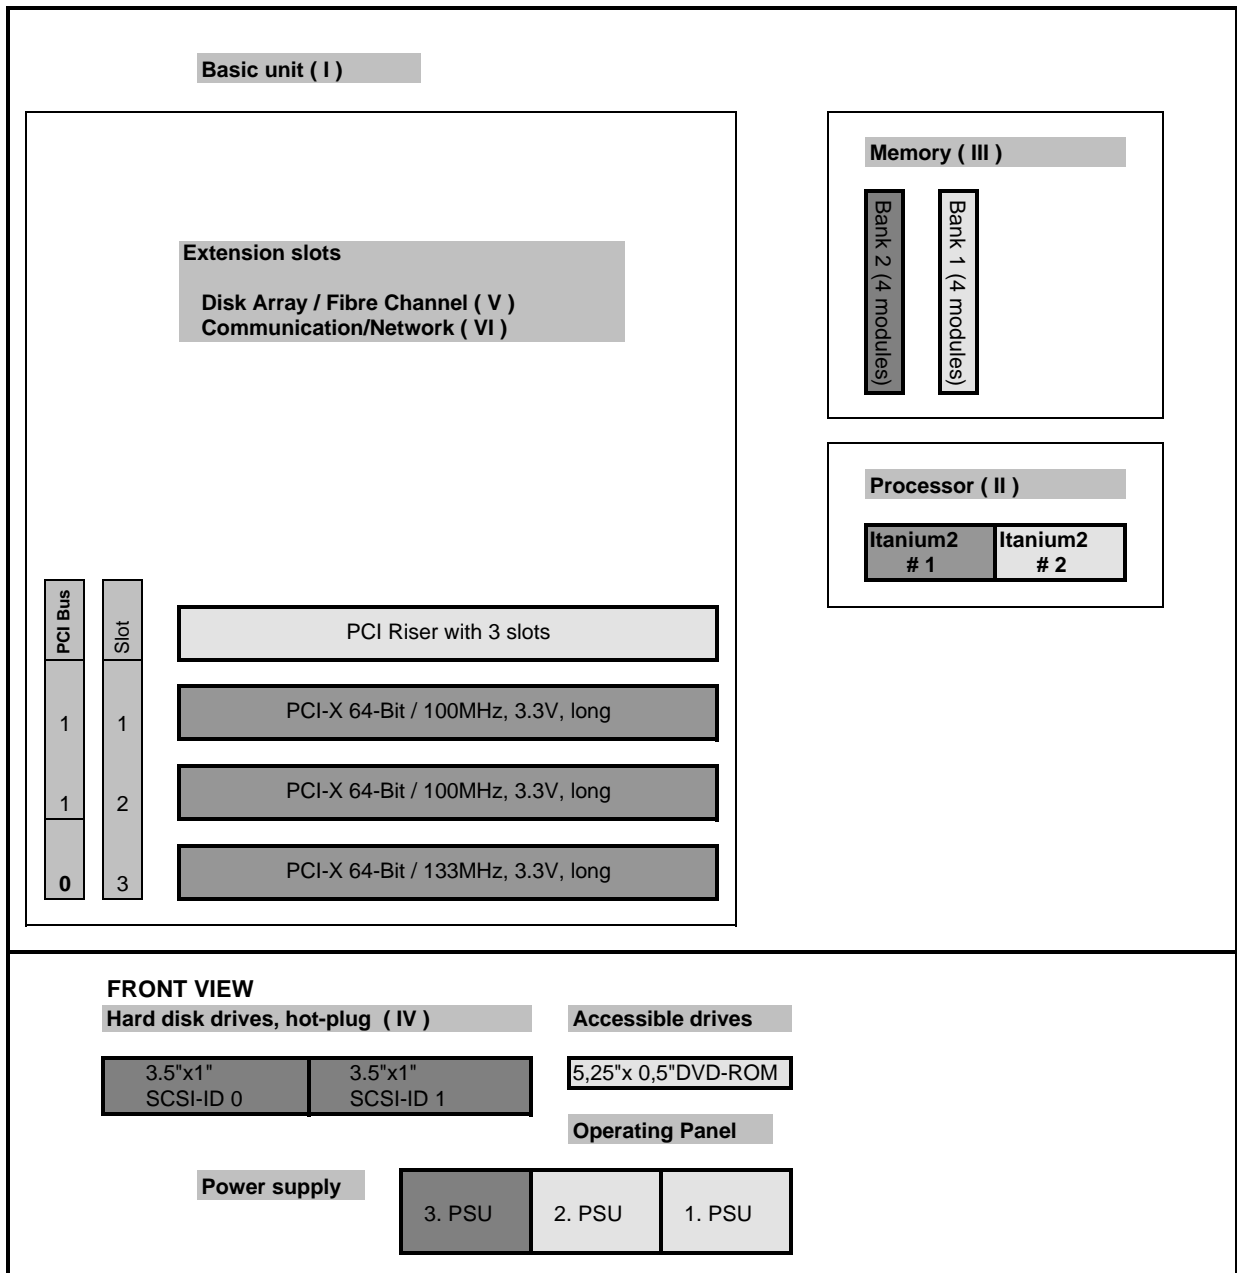

Key:

	Included in basic unit
	Option

Start "PRIMERGY RXI300"

SW Configurator

with OEM-Software
for PRIMERGY Server



For all SW products please refer to the corresponding software configurator accessible via the Extranet under Configuration & Tools, -All configurations, -Software, URL see below.

Microsoft - Software: W **)

- Windows Server 2003 R2, Enterprise x64 Edition
- Additional loose Client-Access-Lizenzen (CALs)

Linux - Software: **)

- SuSE Linux ES (OEM): LO
- SuSE Linux ES (Support): LS
- Red Hat EL (OEM): LO
- Red Hat EL (Support): LS




**) Pay attention to release and order information in PRINCE -> Operating System
http://vil.mch.fsc.net/vil/pc/vil/primergy/overview/prince/index_en.htm

You'll find single software configurators and release lists (OS-matrix / system management / security) under following addresses:

for internal users: http://vil.mch.fsc.net/vil/oc/special/primergy/index_en.htm
for partners: http://vilpart.fujitsu-siemens.de/vil/oc/special/primergy/index_en.htm

Continue with PRIMERGY
HW configurator

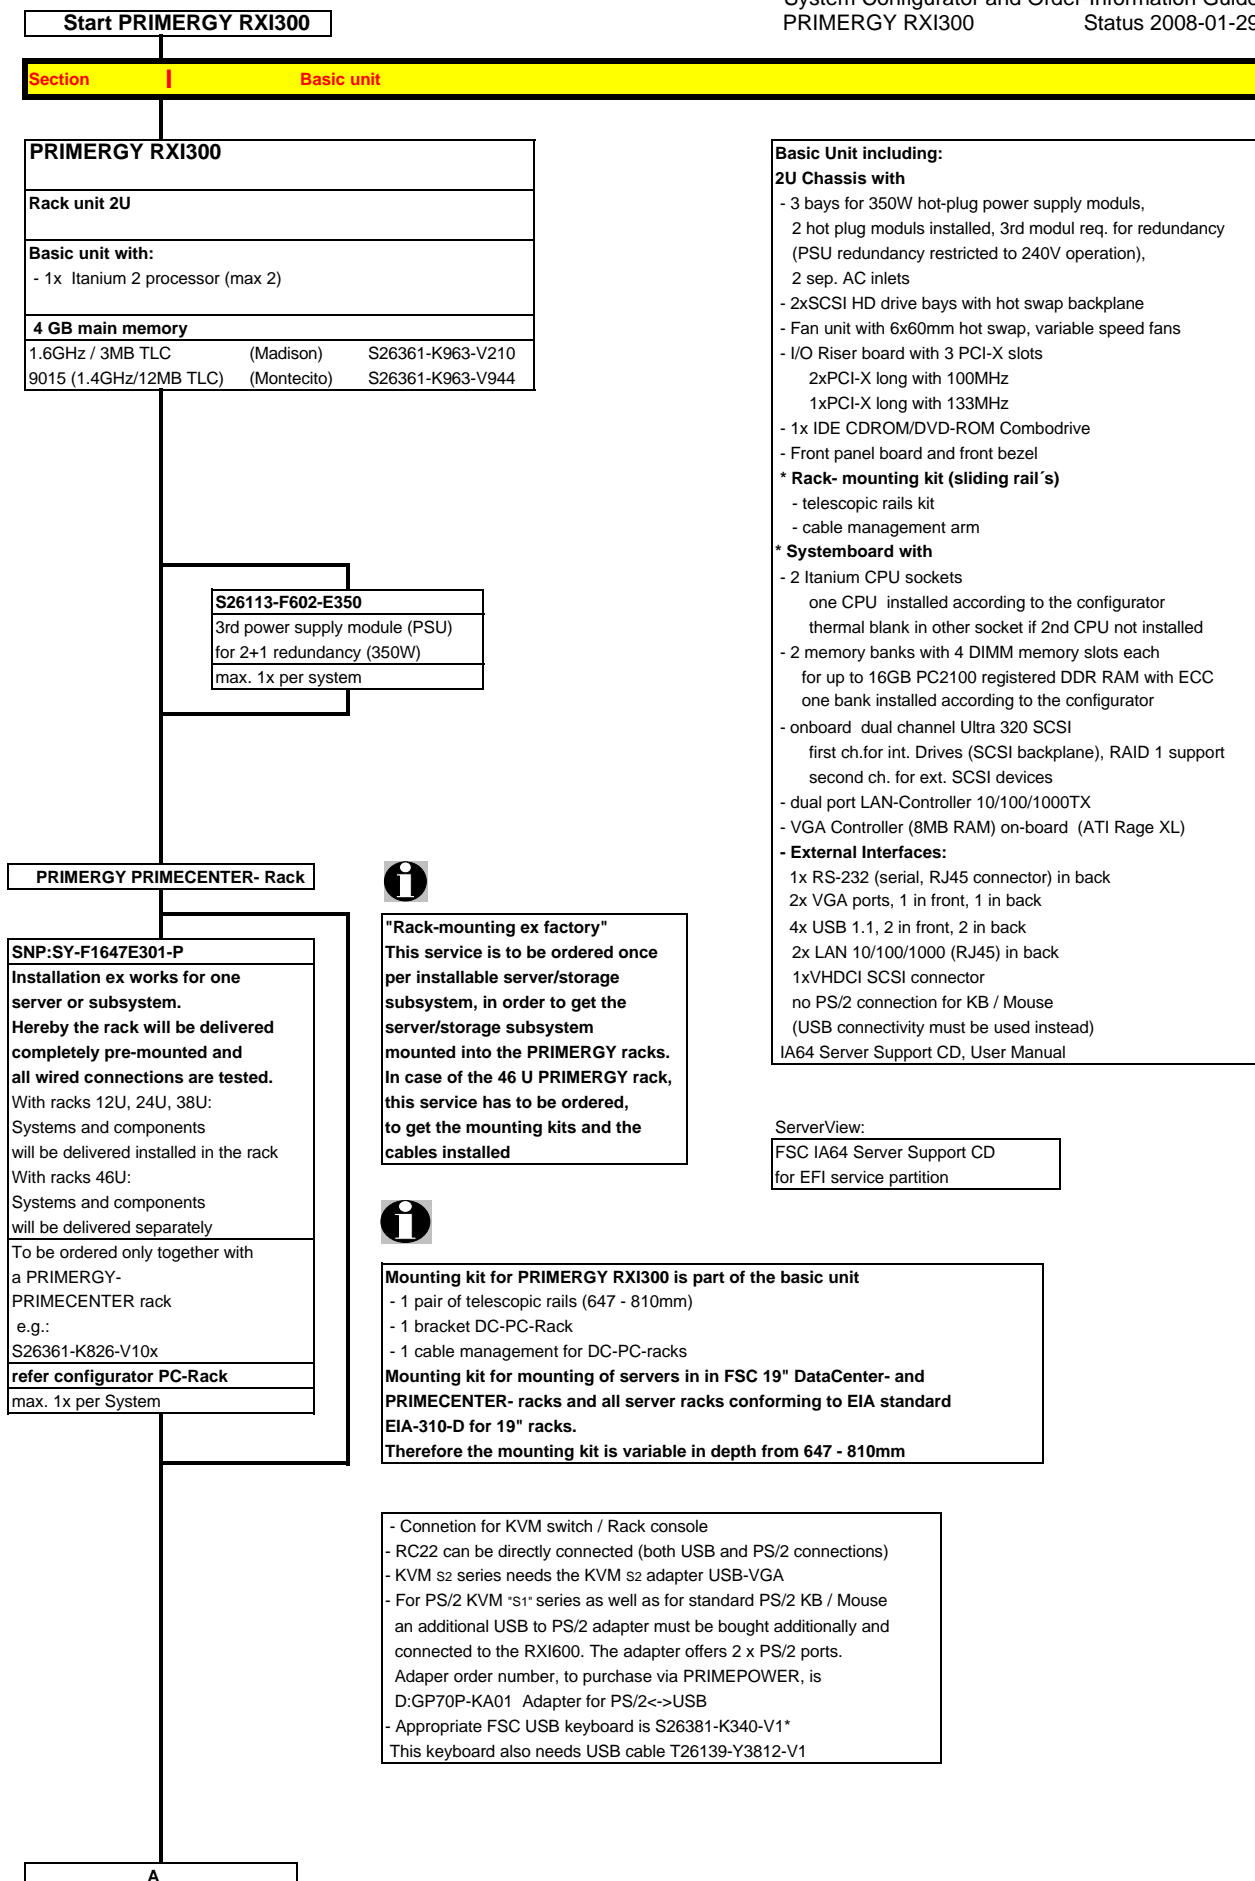

A

Section II Processor



A two-way-processor system requires a multi-processor operating system.
Later upgrading to a two-way-processor system is also possible.
For a CPU extension the further CPUs must be of identical TLC (third level cache) and clock rate.

up to
1x

S26361-F3071-E263

Itanium 2 1.6 GHz
with 3 MB TLC on Chip,
heat sink and "Easy retention"
(Intel Codename "Fanwood")
occupies 2nd CPU socket
max. 1x per system

S26361-F3071-E412

Itanium 2 9015 1.4GHz
with 12 MB TLC on Chip,
heat sink and "Easy retention"
occupies 2nd CPU socket
max. 1x per system

Section III Memory



There are 8 memory slots available (2 banks, 4 modules each).
They can optionally be equipped with 1GB or 2GB registered DDR-RAM modules (PC2100).
The maximal extension is 16GB with 2GB modules!
Any mix of modules within one memory bank is not allowed.
One memory bank is already occupied

up to
1x

S26361-F3070-E400

Main memory 4 GB
PC2100 registered DDR RAM
consisting of 4 modules
with 1 GB each
occupies one bank
max. 1x per system

S26361-F3070-E800

Main memory 8 GB
PC2100 registered DDR RAM
consisting of 4 modules
with 2 GB each
occupies one bank
max. 1x per system

Section IV Hard disk drives

up to
2x

S26361-F3066-E173

Hard disk 73GB / 10K
10000rpm, <5.5ms, min. 8MB Cache
Ultra 320 SCSI (320MB/s)
Interface: Wide SCA (80-pin)
hot plug/hot replace tray
occupies one 1" bay
onb. SCSI or RAID Controller
max. 2x per system

S26361-F3066-E114

Hard disk 146GB / 10K
10000rpm, <5.5ms, min. 8MB Cache
Ultra 320 SCSI (320MB/s)
Interface: Wide SCA (80-pin)
hot plug/hot replace tray
occupies one 1" bay
onb. SCSI or RAID Controller
max. 2x per system

S26361-F3066-E130

Hard disk 300GB / 10K
10000rpm, <5.5ms, min. 8MB Cache
Ultra 320 SCSI (320MB/s)
Interface: Wide SCA (80-pin)
hot plug/hot replace tray
occupies one 1" bay
onb. SCSI or RAID Controller
max. 2x per system

S26361-F3066-E573

Hard disk 73GB / 15K
15000rpm, <4ms, min. 8MB Cache
Ultra 320 SCSI (320MB/s)
Interface: Wide SCA (80-pin)
hot plug/hot replace tray
occupies one 1" bay
onb. SCSI or RAID Controller
max. 2x per system



Standard PRIMERGY harddisks must be ordered for upgrade.
To use these harddisks in the RXI300 a simple frame change must be carried out.
Upgrade harddisks are always delivered with standard PRIMERGY harddisk frames.
Unused harddisk positions in the PRIMERGY RXI300 are always equipped with fully functional empty harddisk frames. Therefore, after the standard frame is removed, the harddisk has to be mounted in the RXI300 specific empty frame.
The following harddisks are technically released for usage in the PRIMERGY RXI300:

S26361-F3121-L173	HDD U320 10k 73GB hot plug 1"
S26361-F3121-L114	HDD U320 10k 146GB hot plug 1"
S26361-F3121-L130	HDD U320 10k 300GB hot plug 1"
S26361-F3121-L573	HDD U320 15k 73GB hot plug 1"

B

B

Section V SCSI / Fibre Channel Controller

included in the basic unit
onboard 2 ch.SCSI Controller U320
connectivity
1) for int. Drives, RAID 1
2) ext. VHDCI



The system is equipped with a onboard dual channel Ultra 320 SCSI controller. one channel can be connected to internal devices via the SCSI blackplane. The two int. HDD's can be mirrored if they are connected to the on-board controller with hot swap support. The other SCSI channel can be used by external SCSI devices.

Fibre Channel controller for subsystems and SAN

S26361-F3141-E10
2GBit/s FC Controller
Emulex
LP1050, full height bracket
1 channel 2GBit/sec FC controller
LC Interface for 50um Fiber
PCI-X 64Bit / 133MHz, 170mm
3.3V / 5V tolerant signaling
max. 2x per system

Section VI Disk Array

Additional RAID Controllers for connection of external Disk Arrays in Subsystem SX31

S26361-F3006-E128
2-channel RAID Controller U320
LSI
320-2
128MB SDRAM ECC Cache
RAID 0, 1, 10, 5 & 50
default with TBBU
plug: internal 1x HD68;
external: 1x VHDCI
without cable
incl. SW and description (Ger/US)
64/66 PCI controller, 180mm
3.3V and 5V tolerant signaling
max. 2x per system



The cables of the connection from the subsystems (SX30) to the Raid Controllers, see configurator SX30



All Controllers for the connection of external storage systems are delivered without cables. For the configuration of external cabling see the configurator for external storage systems.

C

C

Section VII Communication / Network

on-board LAN Controller

dual Gb Ethernet Contr. on-board

ext: 2 x RJ 45 connector



Teaming: Failover, Load Balancing

All released Intel PCI LAN Controllers can be used with the on-board controller in Teaming Mode.

Single Port LAN Adapter

S26361-F3054-E1

Gigabit Ethernet Contr. 1000SX
Eth.Ctrl 1x1Gbit PCI-X Pro/1000MF LC
Intel PRO/1000 MF Server Adapter
Adapter Teaming Support
PCI-X (PCI64/133), min 165 mm
ext:LC-connector
SW: VLAN, Fast & Gbit Etherchannel
max. 2x per system

S26361-F3053-E1

Gigabit Ethernet Contr. 1000TX
Eth.Ctrl 1x1Gbit PCI-X Pro/1000MT Cu
Intel PRO/1000 MT Server Adapter
Adapter Teaming Support
PCI-X (PCI64/133), min 165 mm
ext: for RJ45-connector, Cat 5
connection with Cat 5 cabling
SW: VLAN, Fast & Gbit Etherchannel
max. 2x per system

Dual Port LAN Adapter

S26361-F3011-E1

Gigabit Ethernet Contr dual 1000TX
Eth.Ctrl 2x1Gbit PCI-X PRO/1000MT Cu
Intel Pro/1000MT dual Server Adapter
Adapter Teaming Support
PCI-X (PCI64/66), min 163 mm
ext: for RJ45-plug, Cat 5
connection with Cat 5 cabling
SW: VLAN, Fast & Gbit Etherchannel
max. 2x per system

3x

D

D

Section **VIII** System Management Products



FSC IA64 Server Support CD

The CD contains tools for installing of the system,
for update and for system diagnose.
The tools works in the EFI system partition.
Included in the basic unit.

Section **IX** Country specific power cord



Country specific power cords are not required for rack versions, except for USA&Canada.
Power cords are shipped in a rack version with inlet connector for non-heating apparatus.
Description in english. Both included in basic unit.



T26139-Y1742-L10 USA, Canada

For shipments to USA&Canada, you have to order
two power cords (1,8m, grey). For phase redundancy
2 Power Cords and 3 PSU's per system are needed.

End PRIMERGY RXI300

Change Report

[illegible]