

# Clarion®

Owner's manual  
Mode d'emploi  
Bedienungsanleitung  
Istruzioni per l'uso  
Gebruiksaanwijzing  
Manual de instrucciones  
Bruksanvisning  
Manual de instruções

## DXZ378RMP

## DXZ379RMP

CD/MP3/WMA RECEIVER WITH CeNET CONTROL  
AUTORADIO CD/MP3/WMA / AVEC COMMANDE CeNET  
CD/MP3/WMA-RECEIVER MIT CeNET-STEUERUNG  
SINTOLETTORE CD/MP3/WMA CON CONTROLLO CeNET  
CD/MP3/WMA-RADIO-COMBINATIE MET CeNET-BEDIENING  
RECEPTOR CD/MP3/WMA CON CONTROL CeNET  
CD/MP3/WMA-RADIO MED CeNET-KONTROLL  
RECEPTOR CD/MP3/WMA COM CONTROLO CeNET

CeNET

RDS

COMPACT  
DIGITAL AUDIO  
TEXT

MP3  
ID3 TAG

Plays  
Windows  
Media™

ISO  
CONNECTOR

### CAUTIONS:

This appliance contains a laser system and is classified as a "CLASS 1 LASER PRODUCT". To use this model properly, read this Owner's Manual carefully and keep this manual for your future reference. In case of any trouble with this player, please contact your nearest "AUTHORIZED service station". To prevent direct exposure to the laser beam, do not try to open the enclosure.

### !CAUTION

USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED IN THE OWNER'S MANUAL MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

### ADVARSEL.

Denne mærking er anbragt udvendigt på apparatet og indikerer, at apparatet arbejder med laserstråler af klasse 1, hvilket betyder, at der anvendes laserstråler af svageste klasse, og at man ikke på apparatets yderside kan blive udsat for utilladelig kraftig stråling.  
APPARATET BØR KUN ÅBNES AF FAGFOLK MED SÆRLIGT KENDSKAB TIL APPARATER MED LASERSTRÅLER!

Indvendigt i apparatet er anbragt den her gengivne advarselsmærkning, som advarer imod at foretage sådanne indgreb i apparatet, at man kan komme til at udsætte sig for laserstråling.


### OBS!

Apparaten innehåller laserkomponenten som avger laserstrålning överstigande gränsen för laserklass 1.

### VAROITUS

Suojakoteloja si saa avata. Laitte sisältää laserdiodin, joka lähettää näkymätöntä silmille vaarallista lasersäteilyä.

|   |             |   |
|---|-------------|---|
| MODEL   |             | Clarion                                 |
| 12V ⚡ GROUND  |             |   |
| LW  | 153-279kHz  | CE                                      |
| MW  | 531-1602kHz |   |
| FM(UKW)   | 87.5-108MHz |   |
|   |             | EMCTYPE 104XXXX                         |
| <b>CLASS 1 LASER PRODUCT</b>  |             |   |
| This product includes technology owned by Microsoft Corporation and cannot be used or distributed without a license from MSLGP. |             |   |
| SERIAL No.<br>PE  |             | LF 276-<br>Clarion Co., Ltd.<br>MADE IN |

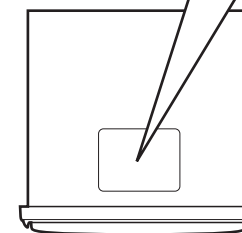


Be sure to unfold and read the next page. / Veuillez déplier et vous référer à la page suivante.  
Bitte ausbreiten und die nächste Seite lesen. / Assicurarsi di aprire e leggere la pagina successiva.  
Volgende pagina uitvouwen en doorlezen a.u.b. / Cerciórese de desplegar y de leer la página siguiente.  
Glöm inte att vika ut och läsa nästa sida. / Não deixe de abrir e ler a próxima página.


# CONTROLS/LAS COMMANDES/BEDIENELEMENTE/CONTROLLI BEDIENINGSORGANEN/CONTROLES/KONTROLLER/CONTROLOS

English

Main unit / Appareil principal / Hauptgerät / Apparechio principale  
Hoofdapparaat / Unidad principal / Huvudenhet / Unidade principal

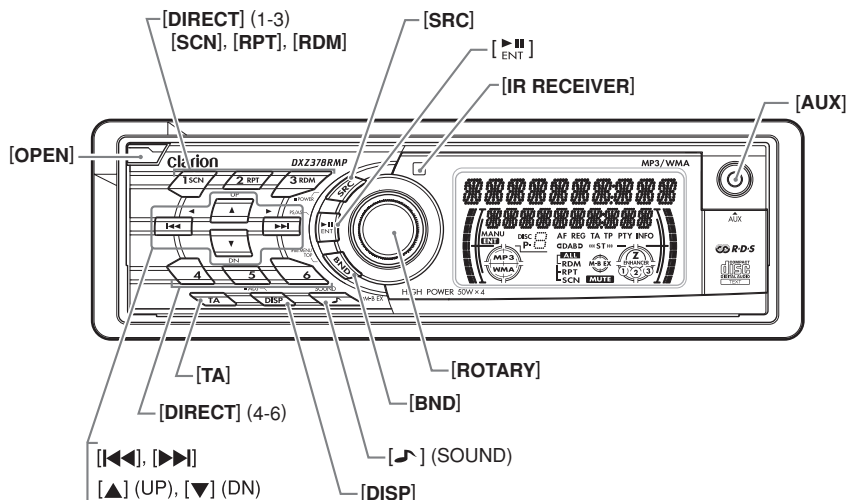

With the **FLIP DOWN PANEL** opened / Ouvrez le **PANNEAU INCLINABLE**  
Bei geöffnetem **KLAPPBILDSCHIRM** / A **CONSOLE APRIBILE** aperta  
Met het **KANTELEND BEDIENINGSPANEEL** geopend / Apertura del **PANEL ABATIBILE**  
Med den **NEDFÅLLBARA KONSOLEN** öppen / Com a **CONSOLA RECLINÁVEL** aberta

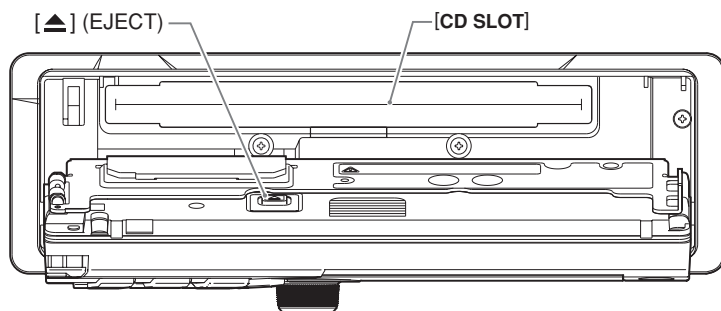

Note: Be sure to unfold this page and refer to the front diagrams as you read each chapter.  
Remarque: Veuillez déplier cette page et vous référer aux schémas quand vous lisez chaque chapitre.  
Hinweis: Bitte diese Seite ausfalten und beim Lesen der einzelnen Kapitel die Frontdiagramme beachten.  
Nota: Assicurarsi di aprire questa pagina e fare riferimento a questi diagrammi quando si legge ciascun capitolo.  
Opmerking: Vouw deze pagina uit en zie tevens de afbeeldingen van het voorpaneel tijdens het doorlezen van de volgende hoofdstukken.  
Nota: Cuando lea los capítulos, despliegue esta página y consulte los diagramas.  
Observera: Vik ut denna sida för att kunna se bilderna över bilstereons framsida, medan du läser de olika kapitlen.  
Nota: Certifique-se de abrir esta página e consulte os diagramas frontais conforme realiza a leitura de cada capítulo.

Thank you for purchasing this **Clarion** product.  
\* Please read this owner's manual in its entirety before operating this equipment.  
\* After reading this manual, be sure to keep it in a handy place (e.g., glove compartment).  
\* Check the contents of the enclosed warranty card and keep it carefully with this manual.  
\* This manual includes the operating procedures of the iPod® interface, CD/DVD changer, DAB and TV tuner connected via the CeNET cable. The iPod interface, CD/DVD changer and TV tuner have their own manuals, but no explanations for operating them are described.  
"iPod" is a trademark of Apple Computer, Inc., registered in the U.S. and other countries.

## Contents

|  |    |
|--|----|
| CONTROLS                                 | ii |
| 1. PRECAUTIONS                           | 3  |
| Flip Down Panel                          | 3  |
| Handling Compact Discs                   | 4  |
| 2. NOMENCLATURE                          | 5  |
| Names of the Buttons and Their Functions | 5  |
| Display Items                            | 6  |
| LCD Screen                               | 6  |
| 3. DCP                                   | 7  |
| 4. REMOTE CONTROL                        | 8  |
| Functions of Remote Control Unit Buttons | 8  |
| Inserting the Battery                    | 10 |
| 5. OPERATIONS                            | 11 |
| Basic Operations                         | 11 |
| Radio Operations                         | 14 |
| RDS Operations                           | 16 |
| CD/MP3/WMA Operations                    | 20 |
| Operations Common to Each Mode           | 24 |
| 6. OPERATIONS OF ACCESSORIES             | 27 |
| iPod BB Operations                       | 27 |
| CD Changer Operations                    | 29 |
| DVD Changer Operations                   | 30 |
| TV Operations                            | 31 |
| Digital Radio / DAB Operations           | 32 |
| 7. IN CASE OF DIFFICULTY                 | 35 |
| 8. ERROR DISPLAYS                        | 36 |
| 9. SPECIFICATIONS                        | 37 |

# 1. PRECAUTIONS

1. This unit is applicable for on-road 4 wheel vehicle purpose only. Use for tractor, fork truck, bulldozer, off road vehicle, 2 or 3 wheel motor bicycle, marine boat or other special purpose vehicle is not appropriate.
2. When the inside of the car is very cold and the player is used soon after switching on the heater moisture may form on the disc or the optical parts of the player and proper playback may not be possible. If moisture forms on the disc, wipe it off with a soft cloth. If moisture forms on the optical parts of the player, do not use the player for about one hour. The condensation will disappear naturally allowing normal operation.
3. Driving on extremely bumpy roads which cause severe vibration may cause the sound to skip.

## **INFORMATION FOR USERS:**

**CHANGES OR MODIFICATIONS TO THIS PRODUCT NOT APPROVED BY THE MANUFACTURER WILL VOID THE WARRANTY.**

## *Flip Down Panel*

This unit uses a flip-down structure that makes possible large-size displays.

### **⚠ CAUTION**

**When opening and closing the FLIP DOWN PANEL, be careful not to catch your fingers. They could be injured.**

1. Always use this unit with the FLIP DOWN PANEL closed.
2. Do not force operations or use this device abnormally when opening or closing the FLIP DOWN PANEL.
3. Do not use the FLIP DOWN PANEL as a tray to place objects on when it is open.
4. When closing the FLIP DOWN PANEL, do not press the [OPEN] button.
5. Strong impacts to the operating or display section can cause damage or deformation.
6. If the FLIP DOWN PANEL does not open fully, gently open it with your hand.

## Handling Compact Discs

Use only compact discs bearing the  or



mark.

Do not play heart-shaped, octagonal, or other specially shaped compact discs.


Some CDs recorded in CD-R/CD-RW mode may not be usable.

### Handling

- Compared to ordinary music CDs, CD-R and CD-RW discs are both easily affected by high temperature and humidity and some of CD-R and CD-RW discs may not be played.

Therefore, do not leave them for a long time in the car.

- New discs may have some roughness around the edges. If such discs are used, the player may not work or the sound may skip. Use a ball-point pen or the like to remove any roughness from the edge of the disc.

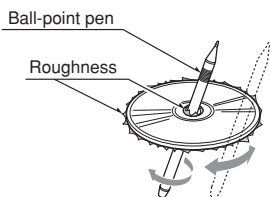

- Never stick labels on the surface of the compact disc or mark the surface with a pencil or pen.
- Never play a compact disc with any cellophane tape or other glue on it or with peeling off marks. If you try to play such a compact disc, you may not be able to get it back out of the CD player or it may damage the CD player.
- Do not use compact discs that have large scratches, are misshapen, cracked, etc. Use of such discs may cause misoperation or damage.
- To remove a compact disc from its storage case, press down on the center of the case and lift the disc out, holding it carefully by the edges.
- Do not use commercially available CD protection sheets or discs equipped with stabilizers, etc. These may damage the disc or cause breakdown of the internal mechanism.

### Storage

- Do not expose compact discs to direct sunlight or any heat source.
- Do not expose compact discs to excess humidity or dust.
- Do not expose compact discs to direct heat from heaters.

### Cleaning

- To remove fingermarks and dust, use a soft cloth and wipe in a straight line from the center of the compact disc to the circumference.
- Do not use any solvents, such as commercially available cleaners, anti-static spray, or thinner to clean compact discs.
- After using special compact disc cleaner, let the compact disc dry off well before playing it.

## 2. NOMENCLATURE

### Note:

• Be sure to read this chapter referring to the front diagrams of chapter "CONTROLS" on page ii (unfold).

## Names of the Buttons and Their Functions

### [OPEN] button

- Deeply push in [OPEN] button to unlock the flip down panel.

### [DIRECT] buttons

- Store a station into memory or recall it directly while in the radio mode.

### [SCN] button

- Perform scan play for 10 seconds of each track while in the CD/MP3/WMA mode.
- Press and hold the button for 1 second or longer to perform folder scan play while in the MP3/WMA mode.

### [RPT] button

- Perform repeat play while in the CD/MP3/WMA mode.
- Press and hold the button for 1 second or longer to perform folder repeat play while in the MP3/WMA mode.

### [RDM] button

- Perform random play while in the CD/MP3/WMA mode.
- Press and hold the button for 1 second or longer to perform folder random play while in the MP3/WMA mode.

### [SRC] button

- Press the button to turn on the power.
- Press and hold the button for 1 second or longer to turn off the power.
- Switch the operation mode among the radio mode, etc.

### [] button

- Perform preset scan while in the radio mode. When the button is pressed and held, auto store is performed.
- Play or pause a track while in the CD/MP3/WMA mode.
- Confirm various settings.

### [IR RECEIVER]

- Receiver for remote control unit. (Operating range: 30° in all directions)

### [AUX] input jack

- The input jack for connecting an external device.

### [ROTARY] knob

- Adjust the volume by turning the knob clockwise or counterclockwise.

### [BND] button

- Switch the band, or seek tuning or manual tuning while in the radio mode.
- Play a first track while in the CD/MP3/WMA mode.
- Press the button to change the character.

### [] (SOUND) button

- Use the button to switch to the sound adjust mode.
- Press and hold the button for 1 second or longer to turn on or off the MAGNA BASS EXTEND mode.

### [DISP] button

- Switch the display indication.
- Press and hold the button for 1 second or longer to enter the adjust mode.

### [TA] button

- Use the button to set the TA (Traffic Announcement) standby mode.

### [, ] buttons

- Select a station while in the radio mode or select a track while in the CD/MP3/WMA mode.  
This button is used to make various settings.
- Press and hold the button for 1 second or longer to enter the fast-forward or fast-backward mode.

### [] (UP), [] (DN) buttons

- Select the folder while in the MP3/WMA mode.
- Use the buttons to perform various settings.


### [] (EJECT) button

- Eject a disc when it is loaded into the unit.

### [CD SLOT]

- CD insertion slot.

# Display Items

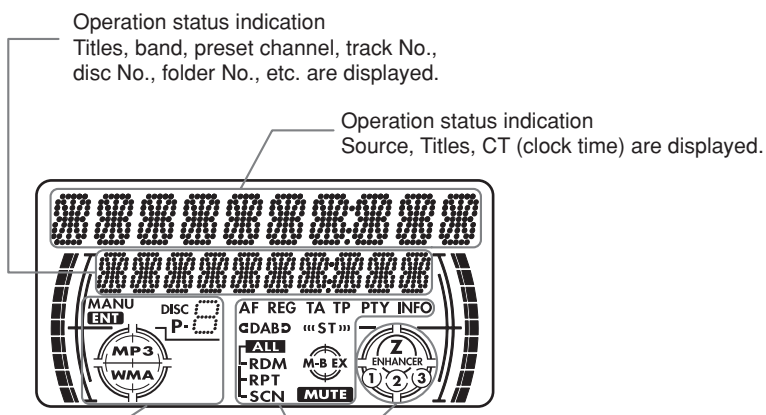

- MANU** : Manual indication
- ENT** : Enter indication
- DISC** : Disc No. indication
- P** : Preset channel indication (1 to 6)
- MP3** : MP3 indication
- WMA** : WMA indication

- Z** : Z-ENHANCER 1, 2, 3 indication
- AF** : Alternative frequency indication
- REG** : Regional indication
- TA** : Traffic announcement indication
- TP** : Traffic programme indication
- PTY** : Programme type indication
- INFO** : Information indication for DAB
- GDABD** : DAB indication
- "ST"** : Stereo indication for DAB
- ALL** : Disc or folder random/repeat/scan indication
- RDM** : Random indication
- RPT** : Repeat indication
- SCN** : Scan indication
- M-B EX** : MAGNA BASS EXTEND indication
- MUTE** : Mute indication

## LCD Screen

In extreme cold, the screen movement may slow down and the screen may darken, but this is normal. The screen will recover when it returns to normal temperature.


## 3. DCP

The control panel can be detached to prevent theft. When detaching the control panel, store it in the DCP (DETACHABLE CONTROL PANEL) case to prevent scratches.


We recommend taking the DCP with you when leaving the car.

### Removing the DCP


1. Press the [SRC] button for 1 second or longer to turn off the power.
2. Deeply push in [OPEN] button to unlock the flip down panel.
  - \* If the flip down panel does not open fully, gently open it with your hand.

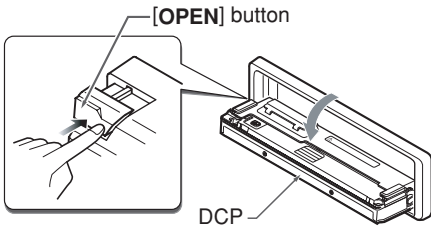

3. Pull the DCP toward you and remove it.

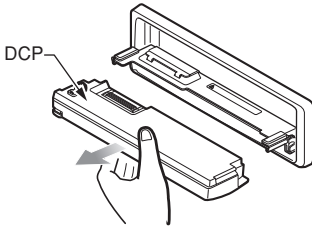

4. Close the HOLD FLAP.

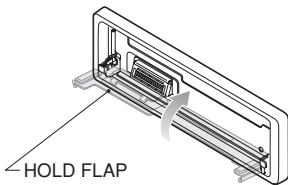


### ⚠ CAUTION

Be sure to close the HOLD FLAP for safety when removing the DCP.


### Attaching the DCP

1. Insert the right side of the DCP into the main unit.
2. Insert the left side of the DCP into the main unit.

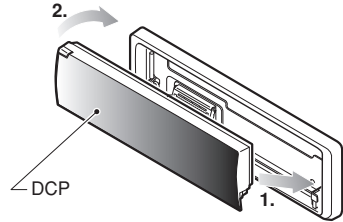

### Storing the DCP in the DCP Case

Hold the DCP, in the orientation as shown in the figure below, and put it into the supplied DCP case. (Ensure the DCP is in the correct orientation.)

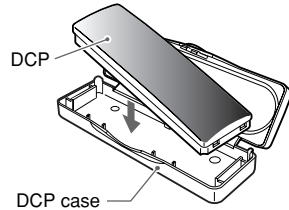

### ⚠ CAUTION

- The DCP can easily be damaged by shocks. After removing it, be careful not to drop it or subject it to strong shocks.
- If the FLIP DOWN PANEL is kept open, the DCP may drop due to vibration of the car. This results in damage to the DCP. So close the FLIP DOWN PANEL or remove the DCP to store into the case.
- The connector connecting the source unit and the DCP is an extremely important part. Be careful not to damage it by pressing on it with fingernails, screwdrivers, etc.


#### Note:

- If the DCP is dirty, wipe off the dirt with a soft, dry cloth only.

# 4. REMOTE CONTROL

## Functions of Remote Control Unit Buttons

\* Some buttons on the remote control unit have different functions from the corresponding buttons on the main unit.

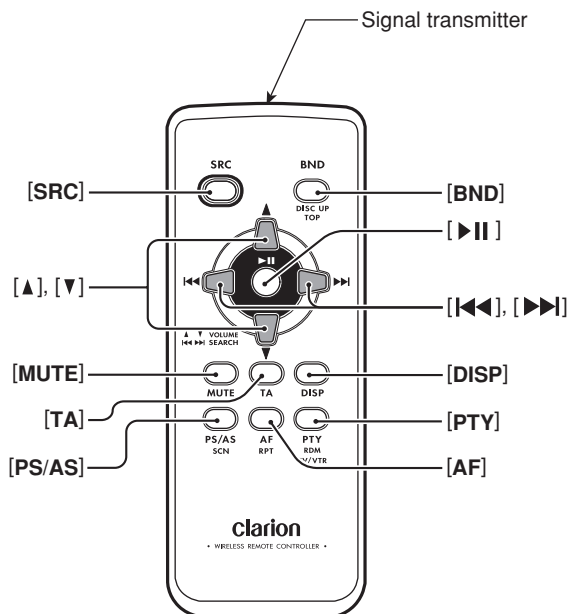

### ● Shared modes

#### [SRC] button

- Use to alternate operation mode among the various modes.
- Press to cancel a traffic announcement broadcast, an emergency broadcast, and a PTY broadcast during a TA, ALARM or PTY interrupt.

#### [▲], [▼] buttons

- Increases and decreases volume.

#### [MUTE] button

- Turns mute function on and off.

#### [TA] button

- TA on and off.
- Press to cancel a traffic announcement broadcast during a TA interrupt.

#### [AF] button

- Press to cancel an emergency broadcast during an ALARM interrupt.

#### [PTY] button

- Press to cancel a PTY broadcast during a PTY interrupt.

#### [DISP] button

- Press to alternate among main display, title display and CT (clock time) display.

### ● Radio (RDS) / DAB modes

#### [BND] button

- Switches reception band.

#### [◀◀], [▶▶] buttons

- Moves preset channels up and down.

#### [PS/AS] button

- Press to perform preset scan.
- Press and hold the button for 2 seconds or longer to perform auto store.



## Functions of Remote Control Unit Buttons

### [AF] button

- AF function on and off.
- Press and hold the button for 1 second or longer to perform REG function on and off.

### [PTY] button

- PTY mode on and off.

## ● CD/MP3/WMA modes

### [BND] button

- Press to play the first track.

### [◀◀], [▶▶] buttons

- Press to move the tracks up and down.
- Press and hold the button for 1 second or longer to perform fast-forward/fast-backward.

### [▶||] button

- Switches between playback and pause.

### [PS/AS] button

- Press to perform scan play.
- When in MP3/WMA mode, press and hold the button for 1 second or longer to perform folder scan play.

### [AF] button

- Press to perform repeat play.
- When in MP3/WMA mode, press and hold the button for 1 second or longer to perform folder repeat play.

### [PTY] button

- Press to perform random play.
- When in MP3/WMA mode, press and hold the button for 1 second or longer to perform folder random play.

## ● CD changer/DVD changer modes

### [BND] button

- Press to switch to next disc in ascending order.

### [◀◀], [▶▶] buttons

- Press to move the tracks up and down.
- Press and hold the button for 1 second or longer to perform fast-forward/fast-backward.

### [▶||] button

- Switches between playback and pause.

### [PS/AS] button

- Press to perform scan play.
- Press and hold the button for 1 second or longer to perform disc scan play.

### [AF] button

- Press to perform repeat play.

- Press and hold the button for 1 second or longer to perform disc repeat play.

### [PTY] button

- Press to perform random play.
- Press and hold the button for 1 second or longer to perform disc random play.

## ● iPod BB mode

### [◀◀], [▶▶] buttons

- Press to move the tracks up and down.
- Press and hold the button for 1 second or longer to perform fast-forward/fast-backward.

### [▶||] button

- Switches between playback and pause.

### [AF] button

- Press to perform repeat play.
- Press and hold the button for 1 second or longer to perform all repeat play.

### [PTY] button

- Press to perform random play.
- Press and hold the button for 1 second or longer to perform all random play.

## ● TV mode

### [BND] button

- Switches reception band.

### [◀◀], [▶▶] buttons

- Moves preset channels up and down.

### [PS/AS] button

- Press to perform preset scan.
- Press and hold the button for 2 seconds or longer to perform auto store.

### [PTY] button

- Press to alternate between TV and VTR.



## Inserting the Battery

- ① Turn over the remote control unit and slide the cover in the direction indicated by the arrow in the illustration.
- ② Insert the battery (CR2025) into the insertion guides, with the printed side (+) facing upwards.
- ③ Press the battery in the direction indicated by the arrow so that it slides into the compartment.
- ④ Replace the cover and slide in until it clicks into place.

### Notes:

*Misuse may result in rupture of the battery, producing leakage of fluid and resulting in personal injury or damage to surrounding materials. Always follow these safety precautions:*

- Use only the designated battery.
- When replacing the battery, insert properly, with +/- polarities oriented correctly.
- Do not subject battery to heat, or dispose of in fire or water. Do not attempt to disassemble the battery.
- Dispose of used batteries properly.

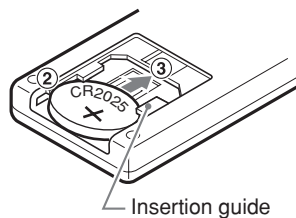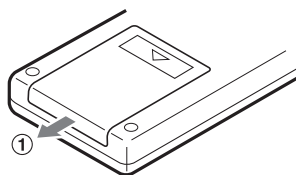

# 5. OPERATIONS

## Note:

- Be sure to read this chapter referring to the front diagrams of chapter "CONTROLS" on page ii (unfold).

## Basic Operations

### ⚠ CAUTION

Be sure to lower the volume before switching off the unit power or the ignition key. The unit remembers its last volume setting. If you switch the power off with the volume up, when you switch the power back on, the sudden loud volume may hurt your hearing and damage the unit.

### Turning on/off the power

#### Note:

- Be careful about using this unit for a long time without running the engine. If you drain the car's battery too far, you may not be able to start the engine and this can reduce the service life of the battery.

1. Press the [SRC] button.
2. The illumination and display on the unit light up. The unit automatically remembers its last operation mode and will automatically switch to display that mode.
3. Press and hold the [SRC] button for 1 second or longer to turn off the power for the unit.

#### Note:

- The first time this unit is turned on after the wire connections are completed, it must be checked what equipment is connected. When the power is turned on, the "SYSTEM CHECK" appears in the display. The system check starts within the unit. When the system check is complete, press the [SRC] button again.

### Selecting a mode

1. Press the [SRC] button to change the operation mode.
2. Each time you press the [SRC] button, the operation mode changes in the following order:

Radio → (DAB) → CD/MP3/WMA → (iPod BB) → (CD changer) → (DVD changer) → (TV) → AUX → Radio...

- \* External equipment not connected with CeNET is not displayed.

### Adjusting the volume

1. Turning the [ROTARY] knob clockwise increases the volume; turning it counterclockwise decreases the volume.
- \* The volume level is from 0 (minimum) to 33 (maximum).

### Switching the display

Press the [DISP] button to select the desired display.

- \* Once selected, the preferred display becomes the display default. When a function adjustment such as volume is made, the screen will momentarily switch to that function's display, then revert back to the preferred display several seconds after the adjustment.
- \* For information on how to enter a title, refer to the subsection "Entering titles" in section "Operations Common to Each Mode".
- \* When CT data is not received, "CT- --:--" appears in the display.

## Basic Operations

### Sound Adjustment

You can adjust a sound effect or tone quality to your preference.

#### To change sound setting

1. Press the [] button to switch to the sound adjustment selection display.
  - \* The factory default sound setting is "Z-EHCR".
2. Then press the [] or [] button to select the sound adjustment mode.
 

Each time you press the [] or [] button, the sound adjustment mode changes as following order:

"Z-EHCR" ↔ "BASS" ↔ "TREBLE" ↔ "BALANCE" ↔ "FADER"

  - \* In the case of display blinking "ENT", you can press the [] button to adjust the setting value.
3. Press the [] or [] button to adjust the selected audio mode.
4. After completing settings, press the [] button to return to the previous mode.

#### ● Setting the Z-Enhancer

This unit are provided with 3 types of sound tone effects stored in memory.

Select the one you prefer.

\* The factory default setting is "OFF".

- 2-1. Select "Z-EHCR".
- 3-1. Each time you press the [] or [] button, the tone effect changes in the following order:
 

"EXCITE" ↔ "IMPACT" ↔ "B-BOOST" ↔ "OFF"

**EXCITE** : bass and treble emphasized  
mid deemphasized

**IMPACT** : bass and treble emphasized

**B-BOOST** : bass emphasized

**OFF** : no sound effect

#### When "EXCITE" is set:

- 3-2. Press the [] button.
- 3-3. Press the [] or [] button to adjust the bass and treble in the range of +3 to -3.
  - \* The factory default setting is "0".
- 3-4. Press the [] button to return to previous mode.

#### When "IMPACT" is set:

- 3-2. Press the [] button.
- 3-3. Press the [] or [] button to adjust the bass and treble in the range of +3 to -3.
  - \* The factory default setting is "0".
- 3-4. Press the [] button to return to previous mode.

#### When "B-BOOST" is set:

- 3-2. Press the [] button.
- 3-3. Press the [] or [] button to adjust the bass in the range of +3 to -3.
  - \* The factory default setting is "0".
- 3-4. Press the [] button to return to previous mode.

#### ● Adjusting the bass

This adjustment can be performed only when the Z-Enhancer is set to "OFF".

- 2-1. Select "BASS".

- 3-1. Press the [] or [] button to adjust the bass.
  - \* The factory default setting is "0".  
(Adjustment range: +8 to -8)

#### ● Adjusting the treble

This adjustment can be performed only when the Z-Enhancer is set to "OFF".

- 2-1. Select "TREBLE".

- 3-1. Press the [] or [] button to adjust the treble.
  - \* The factory default setting is "0".  
(Adjustment range: +7 to -7)

#### ● Adjusting the balance

- 2-1. Select "BALANCE".
- 3-1. Press the [] or [] button to adjust the balance of the right and left speakers.
  - \* The factory default setting is "CENTER" (center). (Adjustment range: RIGHT12 to LEFT12 (right 12 to left 12))

#### ● Adjusting the fader

- 2-1. Select "FADER".
- 3-1. Press the [] or [] button to adjust the balance of the rear and front speakers.
  - \* The factory default setting is "CENTER" (center). (Adjustment range: FRONT12 to REAR12 (front 12 to rear 12))



#### Note:

- During SOUND adjustment mode, if no operation is performed for more than 10 seconds, this mode can be cancelled and return to previous mode.

### Setting the MAGNA BASS EXTEND

The MAGNA BASS EXTEND does not adjust the low frequencies like the normal sound adjustment function, but emphasizes the deep bass frequencies to provide you with a dynamic sound.

\* The factory default setting is "OFF" (off).

1. Press and hold the [  ] button for 1 second or longer to turn on the MAGNA BASS EXTEND effect. "M-B EX" lights in the display.
2. Press and hold the [  ] button for 1 second or longer to turn off the MAGNA BASS EXTEND effect. "M-B EX" goes off.

### CT (Clock Time) function

The CT function receives CT data sent from an RDS station and displays the time.

\* If a CT data is not being received, "CT- --:--" appears in the display.

**Note:**

- *CT data is not transmitted in some countries and by some broadcast stations. Also, in some areas, the CT may not display accurately.*

# Radio Operations

## Listening to the radio

1. Press the **[SRC]** button and select the radio mode. The frequency or PS and PTY appears in the display.
  - \* PS: Programme service name
  - \* PTY: Programme type
2. Press the **[BND]** button and select the radio band. Each time the button is pressed, the radio reception band changes in the following order:  
FM1 → FM2 → FM3 → AM (MW/LW) → FM1...
3. Press the **[◀◀]** or **[▶▶]** button to tune in the desired station.

## Tuning

There are 3 types of tuning mode available, seek tuning, manual tuning and preset tuning.

## Seek tuning

There are 2 types of seek tuning: DX SEEK and LOCAL SEEK.

DX SEEK can automatically tune in to receivable broadcast stations; LOCAL SEEK can tune in to only broadcast stations with a good reception sensitivity.

1. Press the **[BND]** button and select the desired band (FM or AM (MW/LW)).
2. Tune into a station.
  - \* If **"MANU"** is lit in the display, press and hold the **[BND]** button for 1 second or longer. **"MANU"** in the display goes off and seek tuning is now available.
  - \* If **"TA"** is lit in the display, TP stations are automatically sought.

### ● DX SEEK

Press the **[◀◀]** or **[▶▶]** button to automatically seek a station.

When the **[▶▶]** button is pressed, the station is sought in the direction of higher frequencies; if the **[◀◀]** button is pressed, the station is sought in the direction of lower frequencies.

\* When seek tuning starts, **"DX SEEK"** appears in the display.

### ● LOCAL SEEK

If the **[◀◀]** or **[▶▶]** button is pressed and held in position for 1 second or longer, local seek tuning will be enabled. Broadcast stations with good reception sensitivity are selected.

\* When local seeking starts, **"LO SEEK"** appears in the display.

## Manual tuning

There are 2 ways available: Quick tuning and step tuning.

When you are in the step tuning mode, the frequency changes one step at a time. In the quick tuning mode, you can quickly tune the desired frequency.

1. Press the **[BND]** button and select the desired band (FM or AM (MW/LW)).
  - \* If **"MANU"** is not lit in the display, press and hold the **[BND]** button for 1 second or longer. **"MANU"** is lit in the display and manual tuning is now available.
2. Tune into a station.

### ● Quick tuning

Press and hold the **[◀◀]** or **[▶▶]** button for 1 second or longer to tune in a station.

### ● Step tuning

Press the **[◀◀]** or **[▶▶]** button to manually tune in a station.

\* If no operation is performed for more than 7 seconds, manual tuning is cancelled and the display returns to the previous mode.

## Radio Operations

### Recalling a preset station

A total of 24 preset positions (6-FM1, 6-FM2, 6-FM3, 6-AM) exists to store individual radio stations in memory. Pressing the corresponding [DIRECT] button or the [▲] / [▼] button recalls the stored radio frequency automatically.

1. Press the [BND] button and select the desired band (FM or AM (MW/LW)).
2. Press the corresponding [DIRECT] button or the [▲] / [▼] button to recall the stored station.

#### Note:

- Press and hold one of the [DIRECT] buttons for 2 seconds or longer to store that station into preset memory.

### Manual memory

1. Select the desired station with seek tuning or manual tuning.
2. Press and hold one of the [DIRECT] buttons for 2 seconds or longer to store the current station into preset memory.

### Auto store

Auto store is a function for storing up to 6 stations that are automatically tuned in sequentially. If 6 receivable stations cannot be received, a previously stored station remains unoverwritten at the memory position.

1. Press the [BND] button and select the desired band (FM or AM (MW/LW)).
2. Press and hold the [P<sub>ENT</sub>] button for 2 seconds or longer. The stations with good reception are stored automatically to the preset channels.

### Preset scan

Preset scan receives the stations stored in preset memory in order. This function is useful when searching for a desired station in memory.

1. Press the [P<sub>ENT</sub>] button.
2. When a desired station is tuned in, press the [P<sub>ENT</sub>] button again to continue receiving that station.

#### Note:

- Be careful not to press and hold the [P<sub>ENT</sub>] button for 2 seconds or longer, otherwise the auto store function is engaged and the unit starts storing stations.

# RDS Operations

## RDS (Radio Data System)

This unit has a built-in RDS decoder system that supports broadcast stations transmitting RDS data.

This system can display the name of the broadcast station being received (PS) and can automatically switch to the broadcast station with the best reception as you move long distances (AF switching).

Also, if a traffic announcement or programme type is broadcast from an RDS station, no matter what mode you are in, this broadcast is received.

Additionally, if EON information is received, this information enables automatic switching of other preset stations on the same network and interruption of the station being received with traffic information from other stations (TP). This function is not available in some areas.

When using the RDS function, always set the radio to FM mode.

- AF : Alternative Frequency
- PS : Programme Service Name
- PTY : Programme Type
- EON : Enhanced Other Network
- TP : Traffic Programme

\* RDS interrupt does not function during AM radio reception or in TV mode.

\* When set receives RDS signal, and can read PS data, PS appears in the display.

## AF function

The AF function switches to a different frequency on the same network in order to maintain optimum reception.

\* The factory default setting is "ON".

1. Press and hold the **[DISP]** button for 1 second or longer to switch to the RDS adjustment selection display.
2. Press the **[◀◀]** or **[▶▶]** button to select "AF".
3. Press the **[▲]** or **[▼]** button to select "ON" or "OFF".
  - **ON:**  
"AF" in the display lights and AF function turns on.
  - **OFF:**  
"AF" in the display goes off and AF function turns off.

4. Press the **[DISP]** button to return to the previous mode.

\* If the reception of the current broadcast station deteriorates, "PI SEARCH" appears in the display and the radio searches for the same programme on another frequency.

## REG (Regional programme) function

When the REG function is ON, the optimum regional station can be received. When this function is OFF, if the regional station area switches as you drive, a regional station for that region is received.

\* The factory default setting is "OFF".

### Notes:

- This function is disabled when a national station such as BBC R2 is being received.
  - The REG function ON/OFF setting is valid when the AF function is ON.
1. Press and hold the **[DISP]** button for 1 second or longer to switch to the RDS adjustment selection display.
  2. Press the **[◀◀]** or **[▶▶]** button to select "REG".
  3. Press the **[▲]** or **[▼]** button to select "ON" or "OFF".
    - **ON:**  
"REG" in the display lights and REG function turns on.
    - **OFF:**  
"REG" in the display goes off and REG function turns off.
  4. Press the **[DISP]** button to return to the previous mode.



## Manually tuning a regional station in the same network

1. This function is valid when the AF function is ON and the REG function is OFF.

### Note:

- This function can be used when a regional broadcast of the same network is received.
2. Press any one of the [DIRECT] buttons to call out the regional station.
  3. If the reception condition of the called out station is bad, press the [DIRECT] button of the same number. The unit receives a local station on the same network.

## TA (Traffic Announcement)

In the TA standby mode, when a traffic announcement broadcast starts, the traffic announcement broadcast is received as top priority regardless of the function mode so you can listen to it. Traffic programme (TP) automatic tuning is also possible.

\* This function can only be used when "TP" is lit in the display. When "TP" is lit, this means that the RDS broadcast station being received has traffic announcement programmes.

### ● Setting the TA standby mode

If you press the [TA] button when only "TP" is lit in the display, "TP" and "TA" light in the display and the unit is set into the TA standby mode until a traffic announcement is broadcast. When a traffic announcement broadcast starts, "TRA INFO" appears in the display. If you press the [TA] button while a traffic announcement broadcast is being received, the traffic announcement broadcast reception is cancelled and the unit goes into the TA standby mode.

### ● Cancelling the TA standby mode

As "TP" and "TA" lit in the display, press the [TA] button. The "TA" in the display goes off and the TA standby mode is cancelled.

\* If "TP" is not lit, pressing the [TA] button searches for a TP station.

### ● Searching for a TP station

When "TP" is not lit, if you press the [TA] button, "TA" in the display lights and the unit automatically receives a TP station.

### Note:

- If a TP station is not received, the unit continues the search operation. Pressing [TA] button again goes off "TA" in the display and stops TP station searching.

## Auto store function for TP stations

You can automatically store up to 6 TP stations into preset memory. If the number of TP can be received less than 6, broadcast stations already stored in memory and left without being overwritten.

As "TA" lit in the display, press and hold the [ENT] button for 2 seconds or longer. The TP stations with the good reception sensitivity are stored into preset memory.

\* Even if you select FM1 or FM2, a TP station is stored into memory for FM3.

## PTY (Programme Type)

This function enables you to listen to a broadcast of the selected programme type even if the unit is on a function mode other than radio.

- \* Some countries do not yet have PTY broadcast.
- \* In the TA standby mode, a TP station has priority over a PTY broadcast station.
- \* The factory default setting is "OFF".

1. Press and hold the [DISP] button for 1 second or longer to switch to the RDS adjustment selection display.
2. Press the [◀◀] or [▶▶] button to select "PTY".
3. Press the [▲] or [▼] button to select "ON" or "OFF".

#### • ON:

"PTY" in the display lights and PTY standby mode is turned on. When the selected PTY broadcast starts, the PTY item name appears in the display.

#### • OFF:

"PTY" in the display goes off and PTY standby mode is cancelled.

4. Press the [DISP] button to return to the previous mode.

### ● Cancelling a PTY interrupt broadcast

Press the [TA] button during the PTY interrupt broadcast, the PTY interrupt is cancelled and the unit returns to PTY standby mode.

## RDS Operations

### Selecting PTY

1. Press and hold the **[DISP]** button for 1 second or longer to switch to the RDS adjustment selection display.
2. Press the **[◀◀]** or **[▶▶]** button to select **"PTY SELECT"**.
3. Press the **[ENT]** button.
4. Press any one of the **[DIRECT]** buttons. Alternatively, press the **[▲]** or **[▼]** button to select the desired PTY.
5. Press the **[DISP]** button to return to the previous mode.
  - \* Below are the factory default settings stored for the **[DIRECT]** buttons.

| Preset number | PTY item        |                         |
|---------------|-----------------|-------------------------|
|               | ENGLISH         | Contents                |
| 1             | <b>News</b>     | News                    |
| 2             | <b>Info</b>     | Information             |
| 3             | <b>Pop M</b>    | Pop Music               |
| 4             | <b>Sport</b>    | Sports                  |
| 5             | <b>Classics</b> | Serious Classical Music |
| 6             | <b>Easy M</b>   | Easy Listening Music    |

\* The PTY select mode is cancelled automatically 7 seconds after a PTY is selected.

### PTY seek

1. Press and hold the **[DISP]** button for 1 second or longer to switch to the RDS adjustment selection display.
2. Press the **[◀◀]** or **[▶▶]** button to select **"PTY SELECT"**.
3. Press the **[ENT]** button.
4. Press the **[▶▶]** button to search for a PTY broadcast in the direction of higher frequencies; press the **[◀◀]** button to search in the direction of lower frequencies.
  - \* If no station with the selected PTY broadcast can be received, the unit returns to the PTY select mode.

### PTY preset memory

1. Press and hold the **[DISP]** button for 1 second or longer to switch to the RDS adjustment selection display.
2. Press the **[◀◀]** or **[▶▶]** button to select **"PTY SELECT"**.
3. Press the **[ENT]** button.

4. Press the **[▲]** or **[▼]** button to select the desired PTY.
 

The 29 types of PTY below can be selected.
5. If you press and hold any one of the **[DIRECT]** buttons for 2 seconds or longer, the selected PTY is stored into that preset channel memory.

| PTY item        |                |
|-----------------|----------------|
| ENGLISH         | Contents       |
| <b>News</b>     | News           |
| <b>Affairs</b>  | Today's events |
| <b>Info</b>     | Information    |
| <b>Sport</b>    | Sports         |
| <b>Educate</b>  | Education      |
| <b>Drama</b>    | Drama          |
| <b>Culture</b>  | Culture        |
| <b>Science</b>  | Science        |
| <b>Varied</b>   | Variety        |
| <b>Pop M</b>    | Pop music      |
| <b>Rock M</b>   | Rock music     |
| <b>Easy M</b>   | Easy music     |
| <b>Light M</b>  | Light music    |
| <b>Classics</b> | Classics       |
| <b>Other M</b>  | Other music    |
| <b>Weather</b>  | Weather        |
| <b>Finance</b>  | Finance        |
| <b>Children</b> | For children   |
| <b>Social</b>   | Social         |
| <b>Religion</b> | Religion       |
| <b>Phone In</b> | Phone in       |
| <b>Travel</b>   | Travel         |
| <b>Leisure</b>  | Leisure        |
| <b>Jazz</b>     | Jazz           |
| <b>Country</b>  | Country        |
| <b>Nation M</b> | Nation music   |
| <b>Oldies</b>   | Oldies         |
| <b>Folk M</b>   | Folk music     |
| <b>Document</b> | Documentaries  |

### **Emergency broadcast**

If an emergency broadcast is received, all the function mode operations are stopped.

“**ALARM !**” appears in the display and the emergency broadcast can be heard.

#### ● **Cancelling an emergency broadcast**

If you press the **[TA]** button, emergency broadcast reception is cancelled.

### **Switching the PTY display language**

You can select one of 4 languages (English, German, Swedish or French) for the PTY displayed in the display.

\* The factory default setting is “**ENGLISH**”.

1. Press the **[DISP]** button to switch to the adjustment selection display.
2. Press the **[◀◀]** or **[▶▶]** button to select “**LANGUAGE**”.
3. Press the **[▲]** or **[▼]** button to select the desired language.
4. Press the **[DISP]** button to return to the previous mode.

### **Volume setting of TA, emergency broadcast (Alarm) and PTY**

The volume for TA, Alarm and PTY interrupts can be set during TA, Alarm or PTY interrupt.

\* The factory default setting is “**15**”.

During a TA, Alarm or PTY interrupt, turn the **[ROTARY]** knob to set the volume to the desired level (0 to 33).

\* When the TA, Alarm or PTY interrupt ends, the volume returns to the level it had before the interrupt.

# CD/MP3/WMA Operations

## MP3/WMA

### What is MP3?

MP3 is an audio compression method and classified into audio layer 3 of MPEG standards. This audio compression method has penetrated into PC users and become a standard format.

This MP3 features the original audio data compression to about 10 percent of its initial size with a high sound quality. This means that about 10 music CDs can be recorded on a CD-R disc or CD-RW disc to allow a long listening time without having to change CDs.

### What is WMA?

WMA is the abbreviation of Windows Media Audio, an audio file format developed by Microsoft Corporation.

#### Notes:

- If you play a file with DRM (Digital Rights Management) for WMA remaining ON, no audio is output (The WMA indicator blinks).
- Windows Media™, and the Windows © logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.

#### ● To disable DRM (Digital Rights Management)

1. When using Windows Media Player 8, click on TOOLS → OPTIONS → COPY MUSIC tab, then under COPY SETTINGS, unclick the check box for PROTECT CONTENT. Then, reconstruct files.
2. When using Windows Media Player 9, click on TOOL → OPTIONS → MUSIC RECORD tab, then under Recording settings, unclick the Check box for RECORD PROTECTED MUSIC. Then, reconstruct files.

Personally constructed WMA files are used at your own responsibility.

### Precautions when creating MP3/WMA disc

#### ● Usable sampling rates and bit rates

1. MP3: Sampling rate 8 kHz-48 kHz,  
Bit rate 8 kbps-320 kbps / VBR
2. WMA: Bit rate 48 kbps-192 kbps

#### ● File extensions

1. Always add a file extension “.MP3” or “.WMA” to MP3 or WMA file by using single byte letters. If you add a file extension other than specified or forget to add the file extension, the file cannot be played.
2. Files without MP3/WMA data will not play. The indication “- -: -” appears in the play time display if you attempt to play files without MP3/WMA data.

#### ● Logical format (File system)

1. When writing MP3/WMA file on a CD-R disc or CD-RW disc, please select “ISO9660 level 1, 2 or JOLIET or Romeo” as the writing software format. Normal play may not be possible if the disc is recorded on another format.
2. The folder name and file name can be displayed as the title during MP3/WMA play but the title must be within 64 single byte alphabetical letters and numerals (including an extension).
3. Do not affix a name to a file inside a folder having the same name.

#### ● Folder structure

1. A disc with a folder having more than 8 hierarchical levels will be impossible.

#### ● Number of files or folders

1. Up to 255 files can be recognized per folder. Up to 510 files can be played.
2. Tracks are played in the order that they were recorded onto a disc. (Tracks might not always be played in the order displayed on the PC.)
3. Some noise may occur depending on the type of encoder software used while recording.

## CD/MP3/WMA Operations

### Set the type of file to be played (multi-session function)

When a single disc holds both normal CD type tracks and MP3/WMA type tracks, use this command to select which type of track to play.

\* Default setting is "MULTI-SESS CD".

- When only one type of track (either music CD or MP3/WMA) is recorded on a disc, selecting either type will allow playback of the disc.
- When playing CCCD (copy-control CDs), set to CD type.

1. Press and hold the [BND] button for 1 second or longer.

Each time the button is held pressed in this way, the playback type alternates between CD type and MP3/WMA type.

- **MULTI-SESS CD**

When playing music CD only.

- **MULTI-SESS MP3**

When playing music MP3/WMA only.

2. When setting is completed, remove the disc and reinsert it.

### Backup Eject function

Just pressing the [▲] button, ejects the disc even if the power to the unit was not turned on.

1. Press the [OPEN] button to open the FLIP DOWN PANEL.

**Note:**

- If the FLIP DOWN PANEL will not open far enough, open it gently with your hand.
2. Press the [▲] button. Remove the disc after it is ejected.
  3. Close the FLIP DOWN PANEL.

**Notes:**

- Always close the FLIP DOWN PANEL once you take out the disc.
- If you force a CD into before auto reloading, this can damage the CD.
- If a CD (12 cm) is left in the ejected position for 15 seconds, the CD is automatically reloaded (Auto reload).

### Listening to a disc already loaded in the unit

Press the [SRC] button to select the CD/MP3/WMA mode.

When the unit enters the CD/MP3/WMA mode, play starts automatically.

If there is no disc loaded, the indication "NO DISC" appears in the title display.



The mode changes each time the [SRC] button is pressed. (Modes are not displayed for equipment that is not connected.)

**Radio → (DAB) → CD/MP3/WMA → (iPod BB) → (CD changer) → (DVD changer) → (TV) → AUX → Radio ...**

### Loading a CD

1. Press the [OPEN] button to access the CD SLOT behind the FLIP DOWN PANEL.
2. Insert a CD into the center of the CD SLOT with the labeled side facing up. The CD plays automatically after loading.

**Notes:**

- Never insert foreign objects into the CD SLOT.
  - If the CD is not inserted easily, there may be another CD in the mechanism or the unit may require service.
  - Discs not bearing the  or  mark and CD-ROMs cannot be played by this unit.
  - Some CDs recorded in CD-R/CD-RW mode may not be usable.
3. Close the FLIP DOWN PANEL.

## ⚠ CAUTION

**Be careful not to catch your hand or fingers while closing the FLIP DOWN PANEL.**

**Notes:**

- If the FLIP DOWN PANEL does not open fully, gently open with your hand.
- After loading a CD, always close the FLIP DOWN PANEL.

## CD/MP3/WMA Operations

### Pausing play

1. Press the [▶||] button to pause play. "PAUSE" appears in the display.
2. To resume CD play, press the [▶||] button again.

### Displaying CD titles

This unit can display title data for CD-text/MP3/WMA disc and user titles input with this unit.

1. Each time you press the [DISP] button to change the title display.

#### ● CD-TEXT disc

User → Track → Disc (Artist) → User ...

#### ● MP3/WMA disc

Track → Folder → Title (Album) → Artist → Track ...

#### Notes:

- If the CD playing is not a CD-text CD or no user title has been input, "NO TITLE" appears in the display.
- If MP3/WMA disc is not input TAG, "NO TAG" appears in the display.
- For MP3, supports ID3 Tags V2.3 / 2.2 / 1.1 / 1.0.
- Tag displays give priority to V2.3 / 2.2.
- In the case of album Tags for WMA, the information written into the extension header is displayed.
- Only ASCII characters can be displayed in Tags.

### Selecting a track

#### ● Track-up

1. Press the [▶▶] button to move ahead to the beginning of the next track.
2. Each time you press the [▶▶] button, the track advances ahead to the beginning of the next track.

#### ● Track-down

1. Press the [◀◀] button to move back to the beginning of the current track.
2. Press the [◀◀] button twice to move back to the beginning of the previous track.

### Fast-forward/fast-backward

#### ● Fast-forward

1. Press and hold the [▶▶] button for 1 second or longer.

#### ● Fast-backward

1. Press and hold the [◀◀] button for 1 second or longer.

\* For MP3/WMA discs, it takes some time until the start of searching and between tracks. In addition, the playing time may have a margin of error.

### Folder Select

This function allows you to select a folder containing MP3/WMA files and start playing from the first track in the folder.

1. Press the [▼] or [▲] button.  
Press the [▲] button to move the next folder. Press the [▼] button to move the previous folder.
2. To select a track, press the [◀◀] or [▶▶] button.

### Top function

The top function resets the CD player to the first track of the disc. Press the [BND] button to play the first track (track No. 1) on the disc.

\* In case of MP3/WMA, the first track of a folder being played will be returned.

### Other various play functions

#### ● Scan play

This function allows you to locate and play the first 10 seconds of all the tracks recorded on a disc.

1. Press the **[SCN]** button to perform scan play. "TRACK SCN" appears in the display.

\* Scan play starts from the next track after the track currently being played.

#### ● Folder scan play

This function allows you to locate and play the first 10 seconds of the first track of all the folders on an MP3/WMA disc.

1. Press and hold the **[SCN]** button for 1 second or longer to perform folder scan play. "ALL SCN" appears in the display.

\* Folder scan play starts from the next folder after the folder currently being played.

#### ● Repeat play

This function allows you to play the current track repeatedly.

1. Press the **[RPT]** button to perform repeat play. "TRACK RPT" appears in the display.

#### ● Folder repeat play

This function allows you to play a track currently being played in the MP3/WMA folder repeatedly.

1. Press and hold the **[RPT]** button for 1 second or longer to perform folder repeat play. "ALL RPT" appears in the display.

#### ● Random play

This function allows you to play all tracks recorded on a disc in a random order.

1. Press the **[RDM]** button to perform random play. "TRACK RDM" appears in the display.

#### ● Folder random play

This function allows you to play all the tracks of all the folders recorded on an MP3/WMA disc in a random order.

1. Press and hold the **[RDM]** button for 1 second or longer to perform folder random play. "ALL RDM" appears in the display.

#### ● To cancel play

1. Press the operating button previously selected.

## Operations Common to Each Mode

### To change adjustment setting

1. Press and hold the [DISP] button for 1 second or longer to switch to the adjustment selection display.
2. Press the [◀◀] or [▶▶] button to select the "item name".  
 "CONTRAST" ↔ "ILLUMI" ↔ "SCRN SVR" ↔ "MESSAGE INPUT" ↔ "SCROLL" ↔ "DIMMER" ↔ "BLINK LED" ↔ "A-CANCEL" ↔ "TEL-SEL" ↔ "TEL-SP" ↔ "TEL-SW" ↔ "SYSTEM CHECK"
3. Press the [▲] or [▼] button to select the "desired setting value".  
 \* In the case of display blinking "ENT", you can press the [▶▶] button to adjust the setting value.  
 \* After completing settings, press the [DISP] button to return to the previous mode.

### ● Setting the contrast

You can adjust the display contrast to match the angle of installation of the unit.

\* The factory default setting is "10". (Adjustment level: 1 to 16)

- 2-1. Select "CONTRAST".
- 3-1. Press the [▲] or [▼] button to adjust the contrast.

### ● Setting the button and the display illumination (DXZ379RMP only)

\* The factory default setting is "AMBER".

- 2-1. Select "ILLUMI".
- 3-1. Press the [▲] or [▼] button to select "GREEN" or "AMBER".

### ● Turning the screen saver function on or off

This unit is provided with the screen saver function which allows you to show various kinds of patterns and characters in the operation status indication area of the display in a random order. You can turn on or off this function. If the button operation is performed with the screen saver function on, the operation display corresponding to the button operation is shown for about 30 seconds and the display returns to the screen saver display.

\* The factory default setting is "ON".

- 2-1. Select "SCRN SVR".
- 3-1. Press the [▲] or [▼] button to select the setting.

Each time you press the [▲] or [▼] button, the setting changes in the following order:

"MESSAGE" ↔ "ON" ↔ "OFF"

### ● Entering message information

Message up to 30 characters long can be stored in memory and displayed as a type of screen saver setting.

\* The factory default setting is "WELCOME TO CLARION".

- 2-1. Select "MESSAGE INPUT".
- 3-1. Press the [▶▶] button.
- 3-2. Press and hold the [BND] button for 1 second or longer to clear the old message.
- 3-3. Press the [◀◀] or [▶▶] button to move the cursor.
- 3-4. Press the [BND] button to select a character type. Each time you press the [BND] button, the character type changes in the following order:

Capital letters → Numbers → Symbols → Umlaut → Capital letters...

- 3-5. Press the [▲] or [▼] button to select the desired character.
- 3-6. Repeat step 3-3 to 3-5 to enter up to 30 characters for message.
- 3-7. Press and hold the [▶▶] button for 2 seconds or longer to store the message in memory.

\* Press and hold the [BND] button for 1 second or longer to cancel the input message. Then press and hold the [▶▶] button for 2 seconds or longer to store the message and the message return to default setting.

### ● Setting the method for title scroll

Set how to scroll in CD-TEXT, MP3/WMA title.

\* The factory default setting is "ON".

- 2-1. Select "SCROLL".
- 3-1. Press the [▲] or [▼] button to select "ON" or "OFF".
  - ON:  
To scroll automatically.
  - OFF:  
To scroll just 1 time.



## Operations Common to Each Mode

### ● Setting the dimmer control

You can set the dimmer control "ON" or "OFF".

\* The factory default setting is "ON".

2-1. Select "DIMMER".

3-1. Press the [▲] or [▼] button to select "ON" or "OFF".

### ● Anti-theft indicator

The red Anti-theft indicator is a function for preventing theft. When the DCP is removed from the unit, this indicator blinks.

\* The factory default setting is "OFF".

2-1. Select "BLINK LED".

3-1. Press the [▲] or [▼] button to select "ON" or "OFF".

### ● Setting the external amplifier

\* The factory default setting is "OFF".

2-1. Select "A-CANCEL".

3-1. Press the [▲] or [▼] button to select "ON" or "OFF".

#### • ON:

Use with connected AMP.

#### • OFF:

Use with inside AMP.

### ● Set the cellular phone connection mode (AUX/CeNET)

You can listen to your telephone calls from the speakers connected to this unit.

\* The factory default setting is "AUX".

2-1. Select "TEL-SEL".

3-1. Press the [▲] or [▼] button to select "AUX" or "CENET".

#### • AUX:

AUX input jack in front panel is for cellular phone audio input, when the AUX input jack is used to connect an AUX BLUETOOTH BB (BLT373) (sold separately).

#### • CENET:

CENET input cable is for cellular phone audio input, when a CeNET cable is used to connect a cellular phone (BLT433 or TEL-002) (sold separately).

### ● Setting the car speaker output for the cellular phone

\* The factory default setting is "RIGHT".

\* To output the telephone calls, set the cellular phone interrupt to "ON".

2-1. Select "TEL-SP".

3-1. Press the [▲] or [▼] button to select "RIGHT" or "LEFT".

#### • RIGHT:

Telephone calls can be heard on the front right speaker connected to this unit.

#### • LEFT:

Telephone calls can be heard on the front left speaker connected to this unit.

### ● Cellular phone interrupt setting

If you connect this unit and your cellular phone with a separately sold cable, you can listen to your telephone calls on your car speakers.

\* The factory default setting is "OFF".

2-1. Select "TEL-SW".

3-1. Press the [▲] or [▼] button to select the setting. Each time you press the [▲] or [▼] button, the setting changes in the following order:

"ON" ↔ "OFF" ↔ "MUTE"

#### • ON:

You can listen to your telephone calls from the speakers connected to this unit.

\* When listening to your calls on your car speakers, you can adjust the volume by turning the [ROTARY] knob.

#### • OFF:

This unit continues normal operation even when the cellular phone is used.

#### • MUTE:

The sound from this unit is muted during telephone calls.

#### Note:

• If connecting a hands-free kit, please ensure the setting is ON to receive the telephone audio through the system.

## Operations Common to Each Mode

### ● Performing a system check

This function allows you to perform a system check from the adjust mode when required.

2-1. Select "SYSTEM CHECK".

3-1. Press and hold the **[ENT]** button for 1 second or longer.

"SYSTEM CHECK" appears in the display, then the unit returns to the previous operation mode.

### Entering titles

Titles up to 10 characters long can be stored in memory and displayed for CD, CD changer and TV stations. The number of titles that can be entered for each mode are as follows.

| Mode    | Number of titles |
|---------|------------------|
| CD mode | 50 titles        |
| TV mode | 20 titles        |

| CD changer mode  | Number of titles |
|------------------|------------------|
| DCZ628 connected | 100 titles       |

1. Press the **[SRC]** button to select the mode you want to enter a title (CD, CD changer or TV).
2. Select and play a CD in the CD changer or tune in to a TV station for which you want to enter the title.
3. Press and hold the **[DISP]** button for 1 second or longer.
4. Press the **[◀◀]** or **[▶▶]** button to select "TITLE INPUT".
5. Press the **[ENT]** button.  
The display switches to the title input display.
6. Press the **[◀◀]** or **[▶▶]** button to move the cursor.
7. Press the **[BND]** button to select a character type. Each time you press the **[BND]** button, the character type changes in the following order:  
Capital letters → Numbers → Symbols → Umlaut → Capital letters...
8. Press the **[▲]** or **[▼]** button to select the desired character.
9. Repeat steps 6 to 8 to enter up to 10 characters for the title.
10. Press and hold the **[ENT]** button for 2 seconds or longer to store the title into memory.

### Clearing titles

1. Select and play a CD in the CD changer or tune in to a TV station for which you want to clear the title.
2. Press and hold the **[DISP]** button for 1 second or longer.
3. Press the **[◀◀]** or **[▶▶]** button to select "TITLE INPUT".
4. Press the **[ENT]** button.  
The display switches to the title input display.
5. Press and hold the **[BND]** button for 1 second or longer.  
All characters in the title disappear.
6. Press and hold the **[ENT]** button for 2 seconds or longer to store the setting.

### AUX function

This system has an external input jack on the front panel so you can listen to sounds and music from external devices connected to this unit.

### ● Selecting AUX IN sensitivity

Make the following settings to select the sensitivity when sounds from external devices connected to this unit are difficult to hear even after adjusting the volume.

\* The factory default setting is "MID".

1. Press and hold the **[DISP]** button for 1 second or longer.
2. Select "AUX SENS".
3. Press the **[▲]** or **[▼]** button to select "LOW", "MID" or "HIGH".

# 6. OPERATIONS OF ACCESSORIES

## iPod BB Operations

### ● iPod BB

This section describes operations when connected to a CeNET iPod Interface (EA-1276E). (Hereinafter, “iPod Interface (EA-1276E)” is abbreviated as iPod BB.)

#### Note:

- See the iPod BB Owner's Manual for details regarding iPod BB connections and operation conditions.

### Connecting an iPod

When an iPod is connected to the iPod BB interface, the “Repeat” set on the iPod will become “All repeat play” instead. Likewise, “Shuffle” set on the iPod will become as follows:

- “Shuffle (Albums)” play → Random play
- “Shuffle (Songs)” play → All random play

The iPod BB interface has two modes, the “Play mode” and the “iPod menu mode” for selecting tracks. Switch between these modes by pressing the [BND] button.

### Select iPod BB Interface

1. Press the [SRC] button.

Playback will begin from the last file that was played on the iPod alone or through the iPod BB.

#### Note:

- The following operations in Play mode operate the same as in CD mode:

\* **Track selection:** [◀◀], [▶▶]

\* **Fast-forward/fast-backward:** [◀◀], [▶▶]


\* **Pause:** [⏸]

See “CD/MP3/WMA Operations” (page 20-23) for details.

### Other various play functions (in Play mode)

#### Notes:

- These functions are not supported when in the iPod menu mode.
- The Random function set on the iPod or when connected to iPod BB, remains the same after attachment/ detachment of the iPod.
- The iPod BB can be set simultaneously for All repeat and All random. The display will appear as follows:

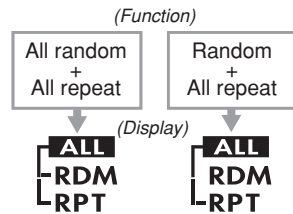

### ● Repeat play

Play back one track repeatedly.

1. Press the [RPT] button.

### ● All repeat play

Repeatedly play all tracks within a selected category.

1. Press and hold the [RPT] button for 1 second or longer.

### ● Random play

Play all albums within a selected category, in random order. (Corresponds to “Shuffle (Albums)” command on iPod.)

1. Press the [RDM] button.

### ● All random play

Play all tracks within a selected category, in random order. (Corresponds to “Shuffle (Songs)” command on iPod.)

1. Press and hold the [RDM] button for 1 second or longer.

### ● To cancel play

1. Press the same play button once again.

#### Note:

- When the all repeat play mode is canceled, playback will stop when all tracks have been played.

## iPod BB Operations

### Selecting category from the iPod menu

1. Press the [BND] button to select the iPod menu mode.  
The iPod menu categories will be displayed.

**Note:**

- Repeat and Random mode operations are not supported when in the iPod menu mode.

2. Press the [▲] or [▼] button to switch between categories.

The iPod menu categories alternate in the following order:

“PLAY LISTS” ↔ “COMPOSERS” ↔  
“GENRES” ↔ “SONGS” ↔ “ALBUMS” ↔  
“ARTISTS” ↔ ...

**Note:**

The iPod menu mode can be canceled by performing one of the following operations:

- Press the [BND] button.
  - When the category select screen is displayed, press the [▶▶▶] button.
3. Press the [▶▶▶] button to select the category.
  4. When the track name display is showing, press the [▶▶▶] button.  
Playback will begin from the first track in the selected category, and the iPod menu mode will be canceled.  
\* Subfolders may be displayed, depending on the category.  
In this case, use the [▲] and [▼] buttons to switch between subfolders, then use the [▶▶▶] button to select the desired subfolder.  
\* When the track name display is showing, pressing the [◀◀◀] button will return to the currently playing folder name display.
  5. Use the [▲] and [▼] buttons to select a track within a category.

### Selecting category using preset memory

1. Press the [BND] button to select the iPod menu mode.

The category can be set as follows in the [DIRECT] (1-6) buttons.

[1] : PLAY LISTS

[2] : ARTISTS

[3] : ALBUMS

[4] : SONGS

[5] : GENRES

[6] : COMPOSERS

2. Press the desired [DIRECT] (1-6) button to select the category.

\* Subfolders may be displayed, depending on the category.

In this case, use the [▲] and [▼] buttons to switch between subfolders, then use the [▶▶▶] button to select the desired subfolder.

3. When the track name display is showing, press the [▶▶▶] button.

Playback will begin from the first track in the selected category, and the iPod menu mode will be canceled.

\* Use the [▲] and [▼] buttons to select a track within a category.

### About title display

This unit supports the display of title information transmitted from a connected iPod.

- Character code information is UTF-8; displayable characters include English alphanumerics, some symbols, and some unlaout characters.
- Unsupported characters will be replaced by asterisks (\*).

# CD Changer Operations

## Note:

- The following operations are the same as for CD mode:

- \* **Pause**
- \* **Track selection**
- \* **Fast-forward/fast-backward**
- \* **Scan play**
- \* **Repeat play**
- \* **Random play**

See “**CD/MP3/WMA Operations**” (page 20-23) for details.

## CD changer functions

When an optional CD changer is connected through the CeNET cable, this unit controls all CD changer functions. This unit can control a total of 2 changers.

Press the [SRC] button and select the CD changer mode to start play. If 2 CD changers are connected, press the [SRC] button to select the CD changer for play.

- \* If “**NO MAG**” appears in the display, insert the magazine into the CD changer. “**D-CHECK**” appears in the display while the player loads (checks) the magazine.
- \* If “**NO DISC**” appears in the display, eject the magazine and insert discs into each slot. Then, reinsert the magazine back into the CD changer.

## Note:

- Some CDs recorded in CD-R/CD-RW mode may not be usable.

## ⚠ CAUTION

**CD-ROM discs cannot be played from every CD changer, it's depended on the model.**

## Displaying CD titles

This unit can display title data for CD-text CDs and user titles input with this unit.

- \* Title data for CD-text CDs can be displayed with this unit only when it is connected to DCZ628.

1. Press the [DISP] button to change the title display.

## Notes:

- If the CD playing is not a CD-text CD or no user title has been input, “**NO TITLE**” appears in the display.
- If a CD-text CD is not input its disc title or a track title, “**NO TITLE**” appears in the display.

## Procedure to scroll a title

Set “**SCROLL**” to “**ON**” or “**OFF**”.

(The factory default setting is “**ON**”. Refer to the subsection “**Setting the method for title scroll**” in section “**Operations Common to Each Mode**”.)

### ● When set to “**ON**”

The title is automatically kept scrolling.

### ● When set to “**OFF**”

To scroll just 1 time.

## Selecting a CD

1. Press the [▲] or [▼] button to select the desired disc.
  - \* If a CD is not loaded in a slot of magazine, pressing the [▲] or [▼] button can not work.

## Other various play functions

### ● Disc scan play

Disc scan play locates and plays the first 10 seconds of the first track on each disc in the currently selected CD changer. This function continues automatically until it is cancelled.

- \* Disc scan play is useful when you want to select a desired CD.

1. Press and hold the [SCN] button for 1 second or longer. “**ALL SCN**” appears in the display and disc scan play starts.

### ● Disc repeat play

After all the tracks on the current disc have been played, disc repeat play automatically replays the current disc over from the first track. This function continues automatically until it is cancelled.

1. Press and hold the [RPT] button for 1 second or longer. “**ALL RPT**” appears in the display and disc repeat play starts.

### ● Disc random play

The disc random play selects and plays individual tracks or discs automatically in no particular order. This function continues automatically until it is cancelled.

1. Press and hold the [RDM] button for 1 second or longer. “**ALL RDM**” appears in the display and disc random play starts.

### ● To cancel play

1. Press the operating button previously selected.

## DVD Changer Operations

---

By connecting an optional DVD changer that supports CeNET wiring, this unit can be used to control the DVD changer. To view DVDs, an optional monitor is required.

- The DVD control and display functions supported by this unit are limited; the unit does not support all the functions possible on a DVD changer.

For fullest functionality, use the remote control unit provided with your DVD changer to control its operations. For details, consult the Owner's Manual provided with your DVD changer.

**Note:**

- *The following operations are the same as for CD and CD Changer modes:*

- \* **Pause**

- \* **Track selection**

- \* **Fast-forward/fast-backward**

- \* **Scan play**

- \* **Repeat play**

- \* **Random play**

*See "CD/MP3/WMA Operations" (page 20-23) and "CD Changer Operations" (page 29) for details.*

## Note:

- The following operations are performed the same as for radio mode:
    - \* **Channel selection**
    - \* **Storing channels in memory**
    - \* **Calling channels from memory**
    - \* **Auto store**
    - \* **Preset scan**
- See “Radio Operations” (page 14-15) for details.

## TV tuner functions

When an optional TV tuner is connected through the CeNET cable, this unit controls all TV tuner functions. To watch TV requires a TV tuner and monitor.

### Watching a TV

1. Press the **[SRC]** button and select the TV mode.
2. Press the **[BND]** button to select the desired TV band (TV1 or TV2). Each time the button is pressed, the input selection toggles between TV1 and TV2.
3. Press the **[◀◀]** or **[▶▶]** button to tune in the desired TV station.

### Watching a video

The TV tuner has a VTR input terminal to which 1 external device can be connected. Connect a 12 V video cassette player (VCP) or video cassette recorder (VCR) to the TV tuner input terminal.

\* The factory default setting is “TV”.

1. Press and hold the **[DISP]** button for 1 second or longer to switch to the adjustment selection display.
2. Press the **[◀◀]** or **[▶▶]** button to select “TV/VTR”.
3. Press and hold the **[▶|||]** button for 1 second or longer to set to “VTR”.
4. To return to the TV broadcast, press and hold the **[DISP]** button for 1 second or longer to switch to the adjustment selection display.
5. Press the **[◀◀]** or **[▶▶]** button to select “TV/VTR”.
6. Press and hold the **[▶|||]** button for 1 second or longer to set to “TV”.

### Setting the TV area

When you select the TV area (TV reception area), the TV tuner area setting changes.

1. Press and hold the **[DISP]** button for 1 second or longer to switch to the adjustment selection display.
2. Press the **[◀◀]** or **[▶▶]** button to select “TV AREA”.
3. Press the **[▲]** or **[▼]** button to select the reception area.
4. Press the **[DISP]** button to return to the previous mode.

### Setting the TV diver

You can change the reception setting for the TV antenna connected to the TV tuner.

\* The factory default setting is “ON”.

1. Press and hold the **[DISP]** button for 1 second or longer to switch to the adjustment selection display.
2. Press the **[◀◀]** or **[▶▶]** button to select “TV DIVER”.
3. Press the **[▲]** or **[▼]** button to set to “ON” or “OFF”.
  - **ON:**  
Sets the diver setting to ON.
  - **OFF:**  
Sets the diver setting to OFF.
4. Press the **[DISP]** button to return to the previous mode.

# Digital Radio / DAB Operations

## DAB control function

When a CeNET cable is used to connect a DAB (DAH923) (sold separately), all functions can be operated.

## Listening to the DAB station

1. Press the [SRC] button to select the DAB mode.
2. When the unit receives a DAB station, the display changes in the following order:  
Frequency channel → service label

## Switching displays

1. Press the [DISP] button to select the desired display.

### Notes:

- The number of programmes and broadcasting times depend on the DAB stations.
- When the strength of DAB signals is weak, audio output is muted.

## Seek tuning

1. Press the [SRC] button to select the DAB mode.
2. Press and hold the [◀◀] or [▶▶] button for 1 second or longer.  
“DAB” lights up in the display when the main unit receives a DAB station.  
\* The main unit stops the seek tuning when it cannot find a DAB station. The display returns to the previous mode.

## Manual tuning

1. Press the [SRC] button to select the DAB mode.
2. Press and hold the [BND] button for 1 second or longer. “MANU” lights up in the display.
3. Press the [◀◀] or [▶▶] button to select a station.  
\* If no operation is performed for more than 7 seconds, manual tuning is cancelled and the display returns to the previous mode.

## Switching programmes

1. Press the [SRC] button to receive a DAB station.
2. Press the [◀◀] or [▶▶] button to switch programmes in the DAB station.

### Note:

- The programme name may be the same depending on DAB programmes.

## Programme scan

This function scans through each receivable programme in a DAB station being received for 10 seconds sequentially. This is useful when you want to search for a desired programme.

1. Press the [SRC] button to receive a DAB station.
2. Perform the following operation depending on the connected model.  
Press the [▶ENT] button. “SRVC SCN” appears in the display and the unit starts scanning each programme for 10 seconds sequentially. Each time the main unit scans, the programme name is shown in the display.
3. To stop programme scan when a desired programme is tuned in.  
Press the [▶ENT] button.

## Manual memory

The main unit has a manual memory function for DAB programmes. Up to 18 programmes (6 programmes each) can be preset in the preset buttons.

[M1], [M2] and [M3]

1. Press the [SRC] button to select the DAB mode.
2. Press and hold the [BND] button for 1 second or longer to select any one shown above.
3. Press the [◀◀] or [▶▶] button to select a desired programme.
4. Press and hold one of the [DIRECT] buttons (1 to 6) for 2 seconds or longer to store the programme.

### Note:

- The interrupt programme (PTY or INFO) cannot be written into a manual memory.



## Recalling a preset programme

1. Press the [SRC] button to select the DAB mode.
2. Press the [BND] button. Each time you press the [BND] button, the display changes in the following order:  
[M1] → [M2] → [M3] → [M1]...
3. Press one of the [DIRECT] buttons or the [▲] / [▼] button to recall a preset programme.

### Note:

- Press and hold the [DIRECT] button for 2 seconds or longer to store the programme currently being received. (Manual memory)

## INFO (Announcement)

In the INFO standby mode, when the selected announcement programme starts, the main unit switches to the selected announcement programme automatically.

### ● Setting the INFO standby mode

If you press and hold the [TA] button for 1 second or longer, "INFO" lights in the display and the main unit is set into the INFO standby mode until the selected announcement is broadcast. When the selected announcement broadcast starts, the announcement item appears in the display. If you press and hold the [TA] button for 1 second or longer while the selected announcement broadcast is being received, the selected announcement broadcast reception is cancelled and the main unit goes into the INFO standby mode.

### ● Cancelling INFO standby mode

To cancel the INFO standby mode, press and hold the [TA] button for 1 second or longer.

### ● Information select

This is a function for selecting INFORMATION ON or OFF in the Information interrupt mode.

You can set ON up to 6 information items.

You can select any of the 6 items below:

| INFORMATION item |                    |
|------------------|--------------------|
| ENGLISH          | Contents           |
| Travel           | Transport flash    |
| Warning          | Warning / Service  |
| News             | News flash         |
| Weather          | Area weather flash |
| Event            | Event announcement |
| Special          | Special event      |

1. Perform the following operation depending on the connected model.  
Press and hold the [DISP] button for 1 second or longer to switch to the RDS adjustment selection display.
2. Press the [◀◀] or [▶▶] button to select "INFO SELECT", then press the [ENT] button to enter "INFO SELECT" mode.
3. Press the [◀◀] or [▶▶] button to select an information item. You can select any of 6 items:  
**Travel → Warning → News → Weather → Event → Special → Travel → ...**
4. Press the [▲] or [▼] button to set the information item for ON or OFF.
5. Press the [ENT] button to return to the previous mode.
6. Press the [DISP] button to return to the previous display.

- **AF function between RDS and DAB**

When the same programme is broadcasted by both RDS and DAB, and this function is ON, the unit switches to receive the broadcast with the better reception automatically.

\* This function only operates when the DAH923 DAB unit, sold separately, is connected.

\* The factory default setting is “ON”.

1. Press and hold the [DISP] button for 1 second or longer to switch to the RDS adjustment selection display.
2. Press the [◀◀] or [▶▶] button to select “LINK ACT”.
3. Press the [▲] or [▼] button to select “ON” or “OFF”.
  - **ON:**  
AF switching between DAB and RDS enabled.
  - **OFF:**  
AF switching between DAB and RDS disabled.
4. Press the [DISP] button to return to the previous mode.

For the following items, see “RDS Operations” on page 16.

- **AF function**

\* If the reception of the current broadcast station deteriorates, “SEARCHING” appears in the display and the radio searches for the same programme on another frequency.

- **TA (Traffic Announcement)**


- **PTY**

- **Emergency broadcast**

- **Switching the PTY and INFO display language**

- **Volume setting of TA, INFO emergency broadcast (ALARM) and PTY**

# 7. IN CASE OF DIFFICULTY
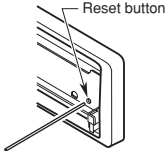
|            | Problem  | Cause   | Measure  |
|------------|--|---|--|
| General    | Power does not turn on.<br>(No sound is produced.)                                 | Fuse is blown.  | Replace with a fuse of the same amperage. If the fuse blows again, consult your store of purchase.   |
|            |  | Incorrect wiring.   | Consult your store of purchase.  |
|            | No sound output when operating the unit with amplifiers or power antenna attached. | Power antenna lead is shorted to ground or excessive current is required for remote-on the amplifiers or power antenna. | <ol style="list-style-type: none"> <li>1. Turn the unit off.</li> <li>2. Remove all wires attached to the power antenna lead. Check each wire for a possible short to ground using an ohm meter.</li> <li>3. Turn the unit back on.</li> <li>4. Reconnect each amplifier remote wire to the power antenna lead one by one. If the amplifiers turn off before all wires are attached, use an external relay to provide remote-on voltage (excessive current required).</li> </ol> |
|            | Nothing happens when buttons are pressed.<br><br>Display is not accurate.          | The microprocessor has malfunctioned due to noise, etc.   | Turn off the power, then press the <b>[OPEN]</b> button and remove the DCP.<br>Press the reset button for about 2 seconds with a thin rod.   |
|            |  | DCP or main unit connectors are dirty.  | Wipe the dirt off with a soft cloth moistened with cleaning alcohol.   |
|            |  |   |    |
|            | No sound heard   | The speaker protection circuit is operating.  | <ol style="list-style-type: none"> <li>1. Turn down sound volume. Function can also be restored by turning the power off and on again. (Speaker volume is reduced automatically when the speaker protection circuit operates).</li> <li>2. If the sound is muted again, consult our service department.</li> </ol>   |
| CD/MP3/WMA | No sound heard   | MP3/WMA files are absent in a disc.   | Write MP3/WMA files onto the disc properly.  |
|            |  | Files are not recognized as an MP3/WMA file.  | Use MP3/WMA files encoded properly.  |
|            |  | File system is not correct.   | Use ISO9660 level 1, 2 or JOLIET or Romeo file system.   |
|            | Sound skips or is noisy.   | Compact disc is dirty.  | Clean the compact disc with a soft cloth.  |
|            |  | Compact disc is heavily scratched or warped.  | Replace with a compact disc with no scratches.   |
|            | Sound is cut or skipped.<br>Noise is generated or noise is mixed with sound.       | MP3/WMA files are not encoded properly.   | Use MP3/WMA files encoded properly.  |
|            | Sound is bad directly after power is turned on.                                    | Water droplets may form on the internal lens when the car is parked in a humid place.                                   | Let dry for about 1 hour with the power on.  |
|            | Wrong filename   | File system is not correct.   | Use ISO9660 level 1, 2 or JOLIET or Romeo file system.   |

## 8. ERROR DISPLAYS

If an error occurs, one of the following displays is displayed.

Take the measures described below to eliminate the problem.

|             | Error Display  | Cause  | Measure   |
|-------------|----------------|--|---|
| CD/MP3/WMA  | <b>ERROR 2</b> | A CD is caught inside the CD deck and is not ejected.                            | This is a failure of CD deck's mechanism and consult your store of purchase.    |
|             | <b>ERROR 3</b> | A CD cannot be played due to scratches, etc.                                     | Replace with a non-scratched, non-warped-disc.                                  |
|             | <b>ERROR 6</b> | A CD is loaded upside-down inside the CD deck and does not play.                 | Eject the disc then reload it properly.   |
| CD changer  | <b>ERROR 2</b> | A CD inside the CD changer is not loaded.  | This is a failure of CD changer's mechanism and consult your store of purchase. |
|             | <b>ERROR 3</b> | A CD inside the CD changer cannot be played due to scratches, etc.               | Replace with a non-scratched, non-warped disc.                                  |
|             | <b>ERROR 6</b> | A CD inside the CD changer cannot be played because it is loaded upside-down.    | Eject the disc then reload it properly.   |
| DVD changer | <b>ERROR 2</b> | A DISC inside the DVD changer cannot be played.                                  | This is a failure of DVD mechanism and consult your store of purchase.          |
|             | <b>ERROR 3</b> | A DISC cannot be played due to scratches, etc.                                   | Retry or replace with a non-scratched, non-warped-disc.                         |
|             | <b>ERROR 6</b> | A DISC inside the DVD changer cannot be played because it is loaded upside-down. | Eject the disc then reload it properly.   |
|             | <b>ERROR P</b> | Parental level error   | Set the correct Parental level.   |
|             | <b>ERROR R</b> | Region code error  | Eject the disc and replace correct region code disc.                            |
| iPod        | <b>ERROR 1</b> | A communication error occurs between the iPod and the iPod CeNET Controller.     | Disconnect the iPod, then connect it again.                                     |
|             | <b>NO IPOD</b> | There is no iPod connected.  | Please connect the iPod.  |

If an error display other than the ones described above appears, press the reset button. If the problem persists, turn off the power and consult your store of purchase.

# 9. SPECIFICATIONS

## **Radio section**

Tuning System: PLL synthesizer tuner

Receiving Frequencies:

FM : 87.5 to 108 MHz (0.05 MHz steps)

MW : 531 to 1602 kHz (9 kHz steps)

LW : 153 to 279 kHz (3 kHz steps)

## **CD player section**

System: Compact disc digital audio system

Frequency Response: 5 Hz to 20 kHz ( $\pm 1$  dB)

Signal to Noise Ratio: 100 dB (1 kHz)

Dynamic Range: 95 dB (1 kHz)

Distortion: 0.01%

## **General**

Output Power: 4  $\times$  25 W (DIN 45324, +B=14.4V)

Power Supply Voltage:

14.4 V DC (10.8 to 15.6 V allowable),  
negative ground

Power Consumption: Less than 15 A

Speaker Impedance: 4  $\Omega$  (4 to 8  $\Omega$  allowable)

Weight:

Main unit: 1.25 kg

Remote control unit: 40 g (including battery)

Dimensions:

Main unit:

178 (W)  $\times$  50 (H)  $\times$  155 (D) mm

Remote control unit:

44 (W)  $\times$  113 (H)  $\times$  11 (D) mm

### **Note:**

- *Specifications and design are subject to change without notice for further improvement.*

# clarion

clarion ■

// High-Tech High-Touch //

» DICHIARAZIONE DI CONFORMITA' «  
(D.M. 28 agosto 1995, no548)

**Io, Fabbricante / Mandatario nell'UE**

**Clarion Europa GmbH  
Hessenring 19-21  
64546 Mörfelden-Walldorf**

**Dichiaro che il prodotto**

**Autoradio con CD  
DXZ379RMP,DXZ378RMP**

**è conforme alle disposizioni contenute nel suddetto  
decreto relativamente alla prevenzione e l'eliminazione  
dei disturbi radioelettrici provocati dai ricevitori di  
radiodiffusione sonora e televisiva.**

Io, Fabbricante / Mandatario nell'UE

Data 20 Novembre 2006

**Clarion Europa GmbH  
Hessenring 19-21  
64546 Mörfelden-Walldorf**

Firma *Susanne Yankeba*

PBL No 06IRNV001C

IDCFMTFWLH002C

clarion |

TEL :+49-6105-977-0  
FAX :+49-6105-977-399

# CE DECLARATION OF CONFORMITY

We Clarion Europa GmbH

(supplier's name)

Hessenring 19-21, 64546 Mörfelden-Walldorf, GERMANY

(address)

declare under our sole responsibility that the product

CAR RADIO with CD PLAYER

MODEL:DXZ379RMP, DXZ378RMP

Product code: PE2906

TYPE: 1043039

MODEL difference: ILLUMINATION COLOR

(name, type or model, possibly sources and numbers of items)

to which this declaration relates is in conformity with the following  
standard(s) or other normative document(s)

EN 55013:2001 + A1, EN 55020:2002 + A1

(title and/or number and date of issue of the standard(s) or  
other normative document(s))

(if applicable) following the provisions of 89/336/EEC Directive.

And following the provisions of 2004/104/EC Directive,  
according to paragraph 3.2.9 of Annex I,  
meets the limits defined in paragraph 6.5, 6.6, 6.8 and 6.9 of Annex I

(supplier's comment)



Mörfelden-Walldorf GERMANY

Susumu Yamakawa

20 NOV 2006

President

(Place and date of issue)

(name and signature or equivalent  
marking of authorized person)

RefNo 06RCNV0012 *D.F.DQC06A161*