



Triax C-HD 415 CX  
Digital Cable-TV set-top box  
P/N: 305041



**Start  
Use Now  
Day to Day Use**

02-2009-B

Look for a more detailed user guide at [www.triax.com](http://www.triax.com)

### Package content



Set-top box



Remote control



User guide




**TRIAX - your ultimate connection**

---

# Start

## Connection

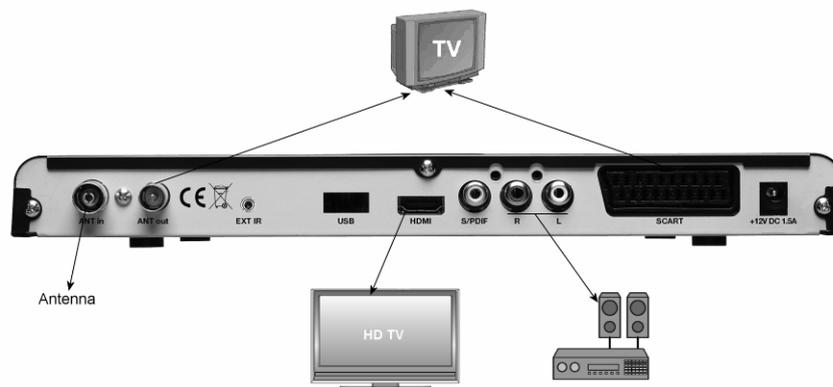

## Remote control



- Standby** : Power on/off
- 0-9** : Numeric buttons
- FAV** : Favourites list
- RECALL** : Go back
- R/Gr/Y/B** : Coloured multifunctional buttons
- CH+** : Next channel / cursor upwards
- CH-** : Previous channel / cursor downwards
- V-** : Reduces volume / cursor left
- V+** : Increases volume / cursor right
- OK** : OK / Confirm
- BACK** : Quits menu or menu item/ Stops an operating Timer
- EPG** : Electronic Programme Guide
- MENU** : Displays main menu
- INFO** : Channel's reception data
- 🔇** : Mute sound setting
- TEXT** : Switches to teletext
- TV/R** : Switches between TV and radio
- AUDIO** : Changes audio mode
- SUB** : Displays subtitles



---

# Use now

## 1 Switch on TV and the set-top box

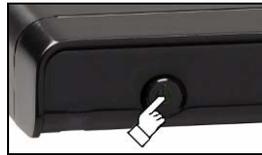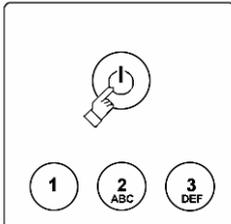


Switch on TV and set-top box using your remote control units.

## 2 Welcome




Follow the instructions displayed on the TV screen.

## 3 Select the language and country

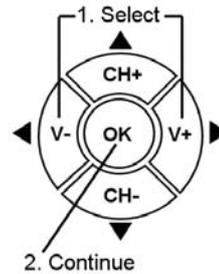

## 4 Data for channel searching

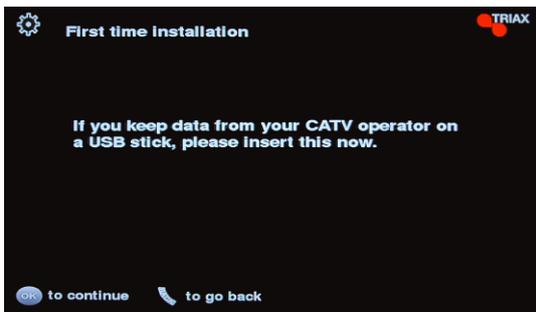


In case your CATV operator has provided you with a USB stick, place the stick in the USB socket at the rear of the set-top box. Press the **OK** key to start the channel search. The information that the USB stick contains is used in connection with the channel search.

**Note** Even if you do not use a USB stick you have to press the **OK** key to start the channel search. Without the USB stick the channel search uses the settings specified below the menu item **Advanced search**.

## 5 Searching for channels



This process may take several minutes.

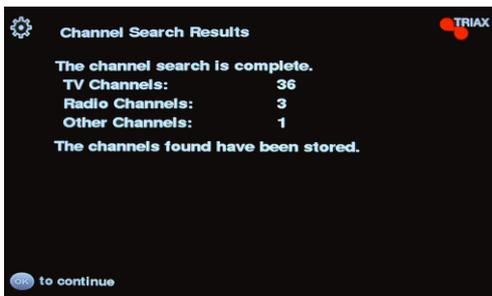

The result of the search is displayed. Press the **OK** key to continue.



## 6 Ready for use



Now the set-top box is ready for using.




Press **OK** to watch TV.


---

# Day to Day Use

## Switch the set-top box on or off

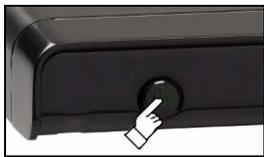


OR

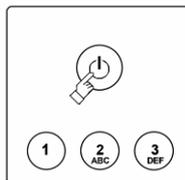

Press the **Standby** key on the set-top box or the remote control to switch the set-top box on or off.

## Select a channel

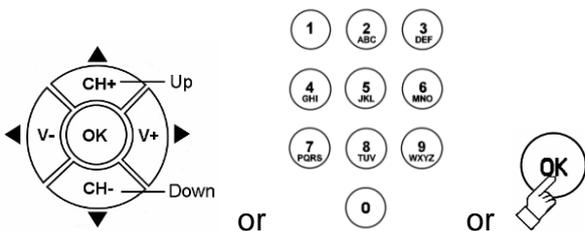


Use the **CH+ / CH-** keys or the numeric keys to select a channel.

Pressing the **OK** key displays the channel list. Use the **CH+ / CH-** keys to select a channel, press **OK** to select the channel.

You can use the **RECALL** key to change to the previously selected channel.


## Adjust the volume

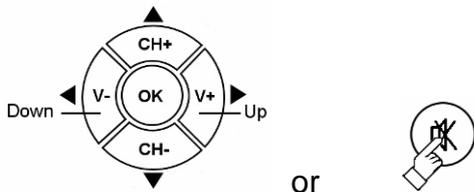

Use the **V+ / V-** keys to turn the volume up or down.


Use the **Mute** key to turn the sound off or on.

## Switch between TV and radio

 

Use the **TV/R** key to switch between TV and radio. Press **OK** to open the TV list or the radio list

## Show the information bar

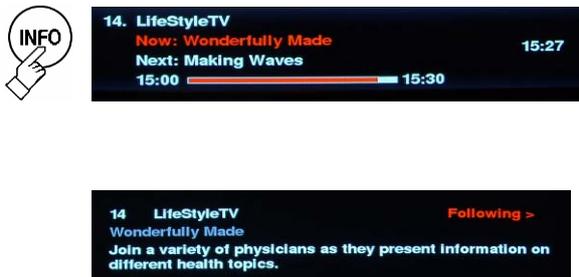


Use the **INFO** key to show the information bar. The information bar displays info about: channel name, number, current and following event and time.

Pressing the **INFO** key twice displays more detailed information about the event. Press the key again to remove the information.

**Note** Every time you change channel the information bar is displayed automatically.

## Display subtitles

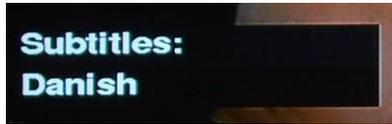

Use the **SUB** key to display the subtitles if the programme offers the possibility. Using the **SUB** key you can browse the subtitle languages that the channel offers.

**Note** You can only select language if a channel offers subtitles in more languages.


## View teletext

### 1 Switch to teletext



Use the **TEXT** key to display teletext.

### 2 Select the page

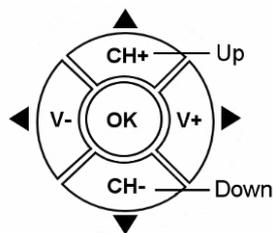

Use the numeric keys or the **CH+ / CH-** keys to select a page.

### 3 Return to TV



Use the **TEXT** key to switch off teletext.

# Using Electronic Programme Guide (EPG)

## 1 View EPG



Using the **EPG** key you get an on-screen listing of events currently broadcast and the future broadcasts over the next seven days, depending on the broadcasters. Not all broadcasters provide this listing.

## 2 Sorting the information



Each of the coloured keys has a specific function in the guide:


**Red:** Sort the channels according to channel number.

**Green:** Sort according to the time of events.

**Yellow:** Sort according to the names of events.

**Blue:** Transfer an event directly to the timer.


## 3 Scrolling the listing of events

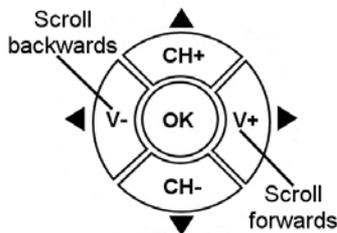

Use the **V-/V+** keys to scroll through the next seven days.

If you have sorted the list according to channels you scroll to a new channel every time you press the **V-/V+** keys.

## 4 Select an event

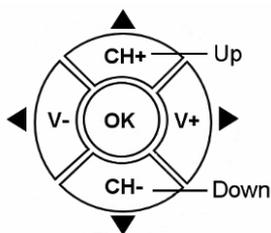

Use the **CH+/CH-** keys to select an event in the list.

**Note** If you press **OK** to the event you have selected you automatically start watching the event.

---

## 5 To view details of the event



Using the **INFO** key you can view the details of the event you selected in the list.

## 6 Return to TV



Use the **EPG** key to return to the event you were watching on TV.


## Favourite channel lists



Using the **FAV** key you get easy access to your lists of favourite channels. Pressing the **FAV** key once displays which of the lists you used last time. Pressing the **FAV** key you can browse your lists of favourite channels.




Press the **OK** key to open the list of favourite channels.

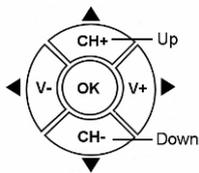

Use the **CH+/CH-** keys to select one of your favourite channels. Press **OK** to confirm your selection and return to TV.

**Note** If you use the **CH+/CH-** keys, having selected a list of favourite channels and next a channel, note that you can only switch between the channels in the list of favourites. Press the **TV/R** key to get the total list of TV or radio channels.

## Audio

 

Using the **AUDIO** key you get another audio language, depending on the broadcasters. Press the **AUDIO** key to scroll through the languages offered. Not all broadcasters provide this option.

