


JVC

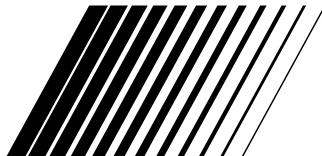

CASSETTE RECEIVER

KS-FX470

ENGLISH




RECEPTOR-REPRODUCTOR DE CASSETTE KS-FX470

ESPAÑOL

RADIOCASSETTE

KS-FX470

FRANÇAIS

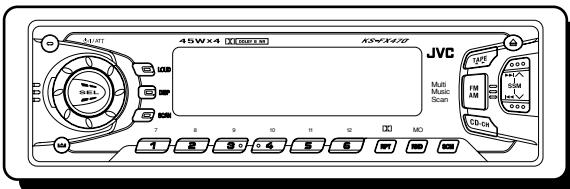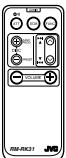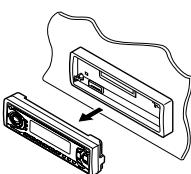

For installation and connections, refer to the separate manual.

Para la instalación y las conexiones, refiérase al manual separado.

Pour l'installation et les raccordements, se référer au manuel séparé.

For customer Use:

Enter below the Model No. and Serial No. which are located on the top or bottom of the cabinet. Retain this information for future reference.

Model No. _____

Serial No. _____

INSTRUCTIONS

MANUAL DE INSTRUCCIONES
MANUEL D'INSTRUCTIONS

CONTENTS

How to reset your unit 2

BASIC OPERATIONS 4

RADIO OPERATIONS 5

Listening to the radio 5

Storing stations in memory 6

FM station automatic preset: SSM 6

Manual preset 7

Tuning into a preset station 8

Other convenient tuner functions 9

Scanning broadcast stations 9

Selecting FM reception sound 9



TAPE OPERATIONS 10

Listening to a tape 10

Finding the beginning of a tune 12

Other convenient tape functions 13

Skipping the blank portions on the tape 13

Playing the current track repeatedly 13

Prohibiting cassette ejection 13



SOUND ADJUSTMENTS 14

Adjusting the sound 14

Turning on/off the loudness function 15

Using the Sound Control Memory 16

Selecting and storing the sound modes 16

Recalling the sound modes 17


Storing your own sound adjustments 18



How to reset your unit

After detaching the control panel, press reset button on the panel holder using a ball-point pen or similar tool.

This will reset the built-in microcomputer.

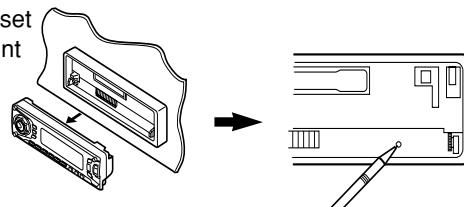

NOTE:

Your preset adjustments — such as preset channels or sound adjustments will also be erased.

OTHER MAIN FUNCTIONS 19

Setting the clock	19
Changing the general settings (PSM)	20
Basic Procedure	20
Canceling Advanced SCM	21
Selecting the level display	21
Selecting the dimmer mode	22
Selecting the external component to use	22
Detaching the control panel	23

**REMOTE OPERATIONS 24**

Installing the batteries	24
Using the remote controller	25

**CD CHANGER OPERATIONS 26**

Playing CDs	26
Selecting CD playback modes	28

**EXTERNAL COMPONENT OPERATIONS 29**

Playing an external component	29
-------------------------------------	----

**MAINTENANCE 30**

To extend the lifetime of the unit	30
--	----

**TROUBLESHOOTING 31****SPECIFICATIONS 32****BEFORE USE**

* *For safety....*


- *Do not raise the volume level too much, as this will block outside sounds, making driving dangerous.*
- *Stop the car before performing any complicated operations.*

* *Temperature inside the car....*


If you have parked the car for a long time in hot or cold weather, wait until the temperature in the car becomes normal before operating the unit.



BASIC OPERATIONS

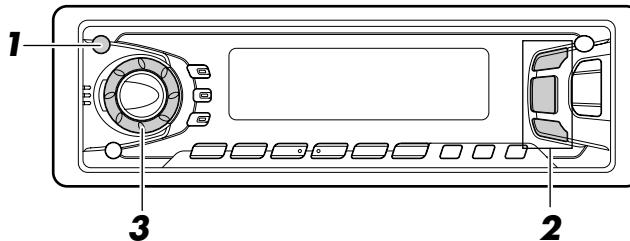**Note:**

When you use this unit for the first time, set the built-in clock correctly. (See page 19.)

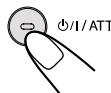
1

Turn on the power.

"HELLO" appears on the display.

Note on One-Touch Operation:

When you select a source in step 2 below, the power automatically comes on. You do not have to press this button to turn on the power.

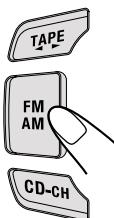2


Select the source.

To operate the tuner, see pages 5 – 9.

To operate the cassette deck, see pages 10 – 13.


To operate the CD changer, see pages 26 – 28.

To operate the external component, see page 29.

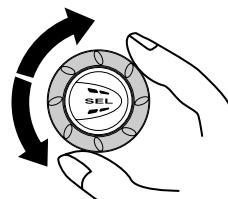3

Adjust the volume.

Volume level appears

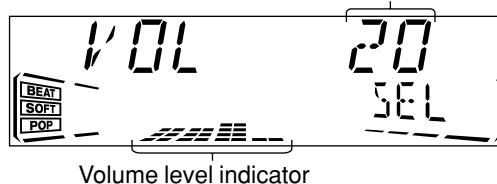

Volume level indicator

4

Adjust the sound as you want (see pages 14 – 18).

To drop the volume in a moment


Press P/I/ATT briefly while listening to any source. "ATT" starts flashing on the display, and the volume level will drop in a moment.

To resume the previous volume level, press the button briefly again.

To turn off the power

Press P/I/ATT for more than 1 second.


Listening to the radio

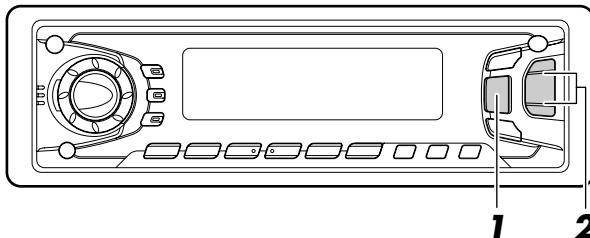**1**

Select the band (FM1, FM2, FM3 or AM).


You can select any one of FM1, FM2, and FM3 to listen to an FM station.

→ F1 → F2 → F3 → AM
(FM1) (FM2) (FM3)

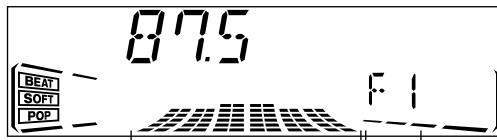

Audio (see page 21) or
volume level indicator

Selected band (or clock time:
see page 19) appears

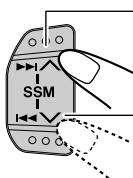2

To search stations of
higher frequencies

To search stations of
lower frequencies

Start searching a station.

While searching stations, "SEEK" appears
on the display.

When a station is received, searching stops.



To stop searching before a station is received, press the same button you have pressed
for searching.

To tune in a particular frequency without searching:

- 1 Press FM/AM repeatedly to select the band (FM or AM).
- 2 Press and hold $\blacktriangleright\blacktriangleleft\wedge$ or $\blacktriangleleft\blacktriangleright\vee$ until "MANU (Manual)" starts flashing on the display.
Now you can manually change the frequency while "MANU" is flashing.
- 3 Press $\blacktriangleright\blacktriangleleft\wedge$ or $\blacktriangleleft\blacktriangleright\vee$ repeatedly until the frequency you want is reached.
 - If you hold down the button, the frequency keeps changing until you release the button.




Storing stations in memory

You can use one of the following two methods to store broadcasting stations in memory.

- Automatic preset of FM stations: SSM (Strong-station Sequential Memory)
- Manual preset of both FM and AM stations


FM station automatic preset: SSM

You can preset 6 local FM stations in each FM band (FM1, FM2 and FM3).

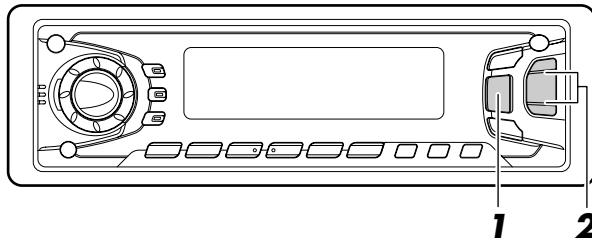
**1**

Select the FM band number (FM1, FM2 or FM3) you want to store FM stations into.

→ F1 → F2 → F3 → AM
(FM1) (FM2) (FM3)

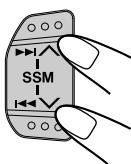2

Press and hold both buttons for more than 2 seconds.

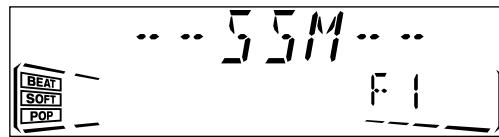

"SSM" appears, then disappears when automatic preset is over.


Local FM stations with the strongest signals are searched and stored automatically in the band number you have selected (FM1, FM2 or FM3). These stations are preset in the number buttons — No. 1 (lowest frequency) to No. 6 (highest frequency).

When automatic preset is over, the station stored in number button 1 will be automatically tuned in.

Manual preset

You can preset up to 6 stations in each band (FM1, FM2, FM3 and AM) manually.

EXAMPLE: Storing an FM station of 88.3 MHz into the preset channel number 1 of the FM1 band

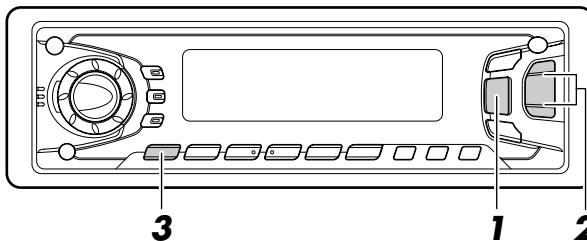


- 1** Select the FM1 band.




- 2** Tune into a station of 88.3 MHz.

See page 5 to tune into a station.

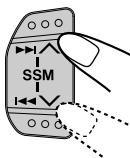

- 3** Press and hold the number button (in this example, 1) for more than 2 seconds.

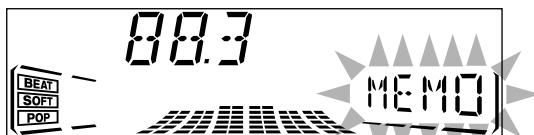

Selected band,preset number and "MEMO" flash alternately for a while.



- 4** Repeat the above procedure to store other stations into other preset channel numbers.

Notes:


- A previously preset station is erased when a new station is stored in the same preset channel number.
- Preset stations are erased when the power supply to the memory circuit is interrupted (for example, during battery replacement). If this occurs, preset the stations again.



Tuning into a preset station

You can easily tune into a preset station.

Remember that you must store stations first. If you have not stored them yet, see pages 6 and 7.

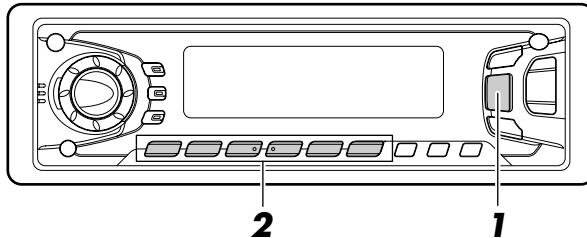


1



Select the band (FM1, FM2, FM3 or AM) you want.


→ F1 → F2 → F3 → AM
(FM1) (FM2) (FM3)

2

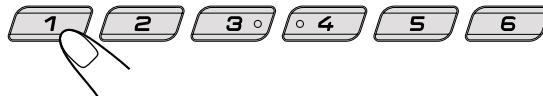

Select the number (1 – 6) for the preset station you want.

Other convenient tuner functions

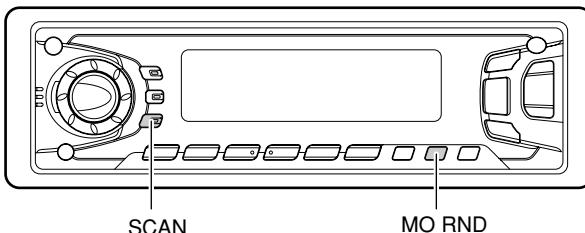

Scanning broadcast stations


When you press SCAN while listening to the radio, station scanning starts. Each time a broadcast is tuned in, scanning stops for about 5 seconds (tuned frequency number flashes on display), and you can check what program is now being broadcasted.

If you want to listen to that program, press the same button again to stop scanning.

Selecting FM reception sound

When an FM stereo broadcast is hard to receive:

Press MO RND (Monaural/Random) while listening to an FM stereo broadcast. The MONO indicator lights up on the display. The sound you hear becomes monaural but reception will be improved.

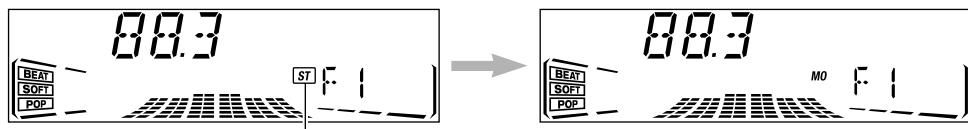



Lights up when receiving an FM broadcast in stereo.

To restore the stereo effect, press the same button again.




TAPE OPERATIONS

Listening to a tape

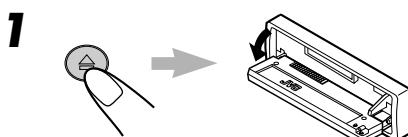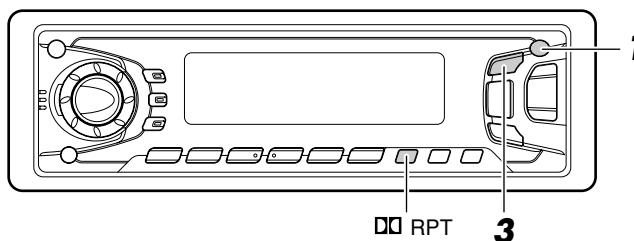

Open the control panel.

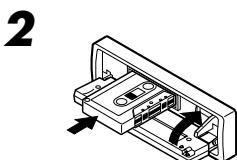

1. Insert a cassette into the cassette compartment.
The unit turns on and tape play starts automatically.
2. Close the control panel by hand.

- When one side of the tape reaches its end during play, the other side of the tape automatically starts playing. (Auto Reverse)

Note on One-Touch Operation:

When a cassette is already in the cassette compartment, pressing TAPE $\blacktriangle \triangleright$ turns on the unit and starts tape play automatically.



Select the tape direction.

Each time you press the button, the tape direction changes alternately – forward (FW \triangleright PLAY) and reverse (REV \blacktriangleleft PLAY).

To play back tapes recorded with the Dolby B NR

Press $\square\square$ RPT (Dolby NR/Repeat) for more than 2 seconds to set the Dolby B NR* system. The $\square\square$ indicator lights up, and “DOLBY B” appears on the display for several seconds. To cancel the Dolby B NR, press the same button again.

* Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation.

“DOLBY” and the double-D symbol $\square\square$ are trademarks of Dolby Laboratories Licensing Corporation.



To stop play and eject the cassette


Press ▲.

Tape play stops, the control panel opens, then the cassette automatically ejects from the cassette compartment.

If you change the source to FM, AM or CD changer, the tape play also stops (without ejecting the cassette this time).

- You can also eject the cassette with the unit turned off.

To fast-forward and rewind a tape

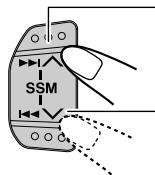


- Press ►►▲ for more than 1 second to fast-forward the tape.
When the tape reaches its end, the tape is reversed and playback starts from the beginning of the other side.
- Press ◀◀▼ for more than 1 second to rewind the tape.
When the tape reaches its end, playback of the same side starts.

To stop fast forward and rewind at any position on the tape, press TAPE ▲► .


Tape play starts from that position on the tape.

Finding the beginning of a tune

Multi Music Scan allows you to automatically start playback from the beginning of a specified tune. You can specify up to 9 tunes ahead of or before the current tune.

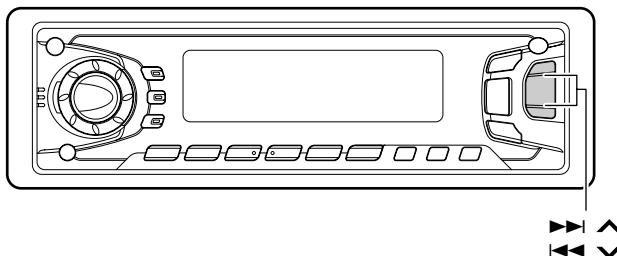


During playback

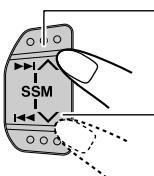

To locate a tune ahead of the current tune on the tape

To locate a tune before the current tune on the tape

Specify where (how many tunes ahead of or before the current tune) the tune you want is located.

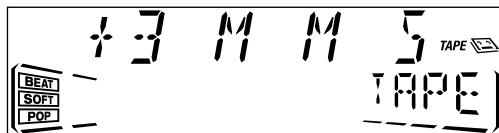

Each time you set the tune, the number changes up to ± 9 .

When the beginning of the specified tune is located, playback starts automatically.

Notes:

- While locating a specified tune:
 - If the tape is rewound to its beginning, playback starts from the beginning of that side.
 - If the tape is fast-forwarded to the end, it is reversed and played from the beginning of the other side.
- In the following cases, the Multi Music Scan function may not operate correctly:
 - Tapes with tunes having long pianissimo passages (very quiet parts) or non-recorded portions between tunes.
 - Tapes with short non-recorded sections.
 - Tapes with high level of noise or humming between tunes.
 - The Dolby NR setting does not match. For example, if Dolby B NR is on and the tape was recorded with no Dolby NR.



Other convenient tape functions

Skipping the blank portions on the tape

You can skip blank portions between the tunes. (Blank Skip)

When this function is on, the unit skips blank portions of 15 seconds or more, fast-forwards to the next tunes, then starts playing it.

- See also "Changing the general settings (PSM)" on page 20.

1. Press and hold SEL (Select) for more than 2 seconds so that one of the PSM items appears on the display.
2. Select "B SKIP (Blank Skip)" with $\blacktriangleright\blacktriangleleft$ \wedge or $\blacktriangleleft\blacktriangleright$ \vee .
3. Select the desired mode with the control dial.

The Blank Skip mode alternates between on and off.

ON \leftrightarrow OFF

Note:


When the tape reaches its end while fast-forwarding, the tape direction will be changed automatically.

Playing the current tune repeatedly

You can play the current tune repeatedly. (Repeat Play)



Each time you briefly press $\square\square$ RPT (Dolby NR/Repeat) while playing a tape, Repeat Play turns on and off alternately.

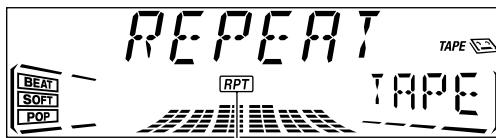

Lights up when Repeat Play is turned on.

Notes:

- In the following cases, Blank Skip and Repeat Play may not operate correctly:
 - Tapes with tunes having long pianissimo passages (very quiet parts) or non-recorded portions during tunes.
 - Tapes with short non-recorded sections.
 - Tapes with high level noise or humming between tunes.
 - The Dolby NR setting does not match. For example, if Dolby B NR is on and the tape was recorded with no Dolby NR.

Prohibiting cassette ejection

You can prohibit the cassette ejection and can "lock" a cassette in the cassette compartment. Press and hold TAPE $\blacktriangleright\blacktriangleleft$ and $\odot/\text{I}/\text{ATT}$ for more than 2 seconds. "NO EJECT" flashes on the display for about 5 seconds, and the cassette is "locked."


To cancel the prohibition and "unlock" the cassette, press and hold TAPE $\blacktriangleright\blacktriangleleft$ and $\odot/\text{I}/\text{ATT}$ for more than 2 seconds again. "EJECT OK" flashes for about 5 seconds, and this time the cassette is "unlocked."

SOUND ADJUSTMENTS

ENGLISH

Adjusting the sound

You can adjust the treble/bass sound and the speaker balance.

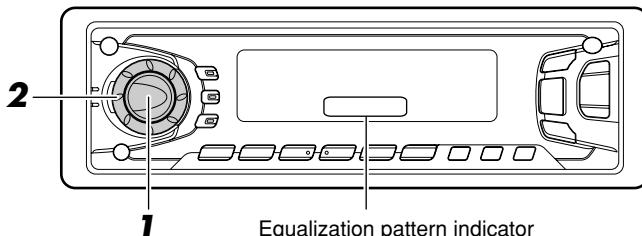

1



Select the item you want to adjust.


→ BAS → TRE → FAD → BAL → VOL →

Indication	To do:	Range
BAS (Bass)	Adjust the bass	-06 (min.) — +06 (max.)
TRE (Treble)	Adjust the treble	-06 (min.) — +06 (max.)
FAD (Fader)*	Adjust the front and rear speaker balance	R06 (rear only) — F06 (front only)
BAL (Balance)	Adjust the left and right speaker balance	L06 (left only) — R06 (right only)
VOL (Volume)	Adjust the volume	00 (min.) — 50 (max.)


Note:

* If you are using a two-speaker system, set the fader level to “00.”

2

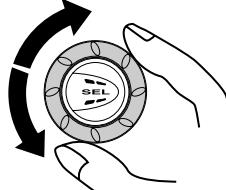

Adjust the level.

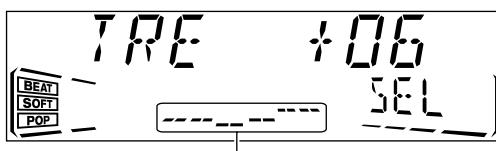

Equalization pattern changes as you adjust the bass or treble.

Note:


Normally the control dial works for volume adjustment. So you do not have to select “VOL” to adjust the volume level.




Turning on/off the loudness function

The human ear is less sensitive to low and high frequencies at low volumes.

The loudness function can boost these frequencies to produce well-balanced sound at low volume level.

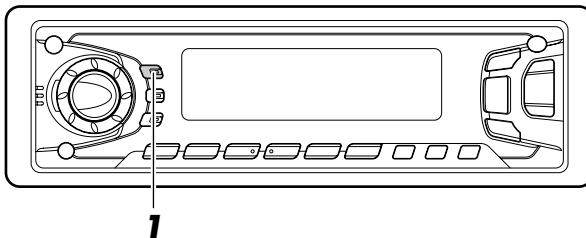


1

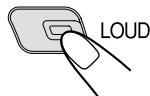

Turn on or off the loudness function.

Each time you press LOUD, the loudness function turns on and off alternately.

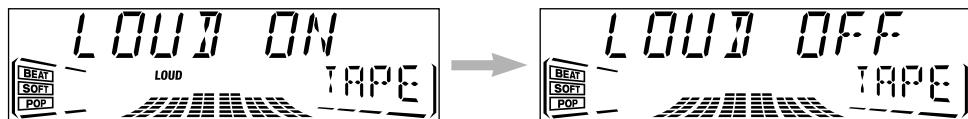




Using the Sound Control Memory

You can select and store a preset sound adjustment suitable to each playback source.
(Advanced SCM)

Selecting and storing the sound modes

Once you select a sound mode, it is stored in memory, and will be recalled every time you select the same source. A sound mode can be stored each of the following sources — FM1, FM2, FM3, AM, tape, CD-changer and external components.

- If you do not want to store the sound mode separately for each playback source, but want to use the same sound mode for all the sources, see “Canceling Advanced SCM” on page 21.

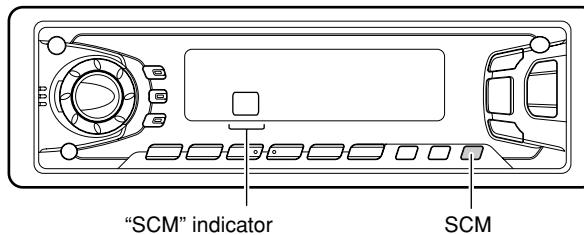

Select the sound mode you want.

Each time you press the button, the sound mode changes as follows:

→SCM OFF→BERT→SOFT→POP→


- When “SCM LINK” is set to “LINK ON”, the selected sound mode can be stored in memory for the current source and the effect applies only to the current source. Each time you change the playback source, the SCM indicator flashes on the display.
 - When “SCM LINK” is set to “LINK OFF”, the selected sound mode effect applies to any source.

Indication	For:	Preset values		
		Bass	Treble	Loudness
SCM OFF	(Flat sound)	00	00	On
BEAT	Rock or disco music	+02	00	On
SOFT	Quiet background music	+01	-03	Off
POP	Light music	+04	+01	Off




Recalling the sound modes

ENGLISH

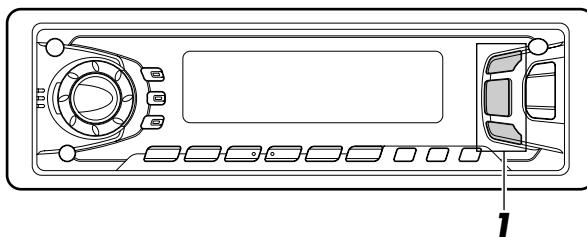


1

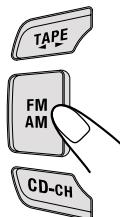

Select the source while the “SCM” indicator is lit on the display.

The “SCM” indicator starts flashing, and the sound mode stored in memory for the selected source is recalled.

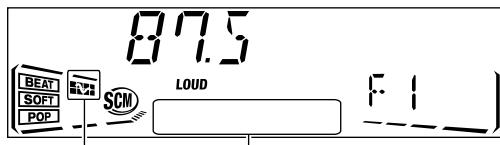


Notes:

- You can adjust each sound mode to your preference, and store it in memory.
If you want to adjust and store your original sound mode, see “Storing your own sound adjustments” on page 18.
- To adjust the bass and treble reinforcement levels or to turn on/off the loudness function temporarily, see pages 14 and 15. (Your adjustments will be canceled if another source is selected.)



Storing your own sound adjustments


You can adjust the sound modes (BEAT, SOFT, POP: see page 16) to your preference and store your own adjustments in memory.

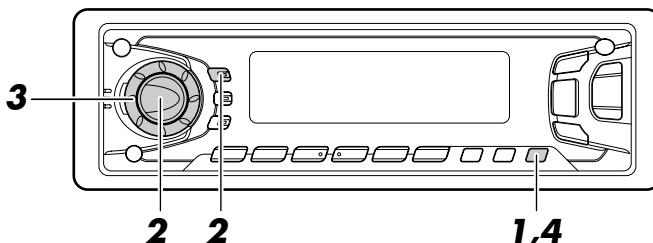**1**

Call up the sound mode you want to adjust.
See page 16 for details.

2

To adjust the bass or treble sound level
Select "BAS" or "TRE."

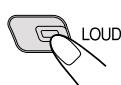

To turn on or off the loudness function
See page 15 for details.

3

Adjust the bass or treble level.
See page 14 for details.

4

Press and hold SCM (Sound Control Memory)
until the sound mode you have selected
flashes on the display.
Your setting is stored in memory.


5

Repeat the same procedure to store other settings.



To reset to the factory settings

18 Repeat the same procedure and reassign the preset values listed in the table on page 16.

Setting the clock


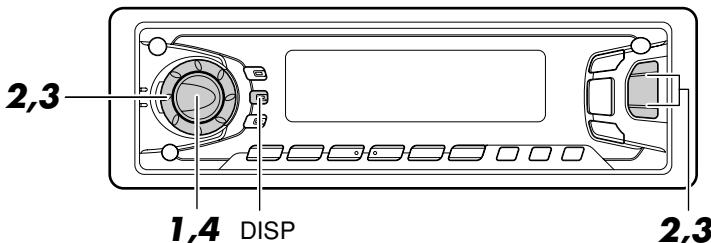


1 Press and hold SEL (Select) for more than 2 seconds so that one of the PSM items appears on the display.

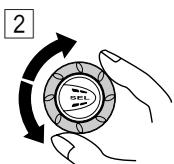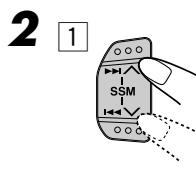


Set the hour.

- 1 Select "CLOCK H (Hour)" if not shown on the display.
- 2 Adjust the hour.

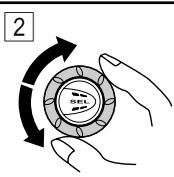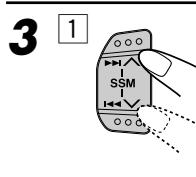

Set the minute.

- 1 Select "CLOCK M (Minute)."
- 2 Adjust the minute.

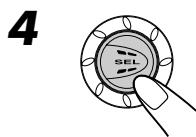

4 Finish the setting.

To check the current clock time (changing the display mode)

Press DISP repeatedly. Each time you press the button, the display mode changes as follows:


During tuner operation: Band ↔ Clock	During tape operation: TAPE ↔ Clock
During CD changer operation: Disc number ↔ Clock	During external component operation: Clock appears and disappears alternately.

- If the unit is not in use when you press DISP, the power turns on, the clock time is shown for 5 seconds, then the power turns off.

Changing the general settings (PSM)


You can change the items listed on the next page by using the PSM (Preferred Setting Mode) control.

Basic Procedure

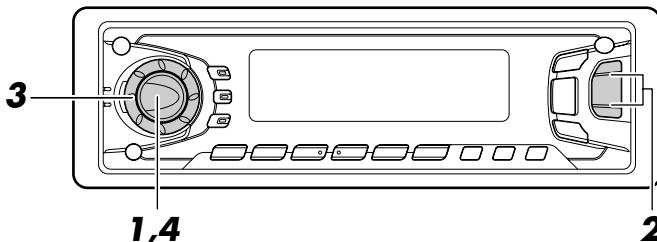


1

Press and hold SEL (Select) for more than 2 seconds so that one of the PSM items appears on the display.

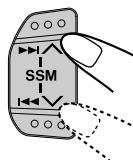2

Select the PSM item you want to adjust. (See page 21.)

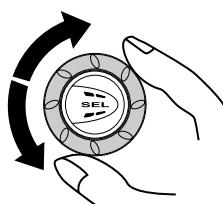3

Select or adjust the PSM item selected above.

4

Finish the setting.

1	2	3	Set.	Factory-preset settings	See page
CLOCK H	Hour adjustment	Back	Advance	1:00	19
CLOCK M	Minute adjustment	Back	Advance		
SCM LINK	Sound control memory linkage	LINK OFF	LINK ON	LINK ON	below
LEVEL	Level display	AUDIO 1 ↑ OFF ↓	AUDIO 2 ↑ OFF ↓	AUDIO 2	below
DIMMER	Dimmer	AUTO ↑ ON ↓	OFF ↑ OFF ↓	AUTO	22
B. SKIP	Blank skip	OFF	ON	OFF	13
EXT IN*	External component	CHANGER	LINE IN	CHANGER	22

* Displayed only when one of the following sources is selected — FM, AM and tape.

- Press SEL (select) when the setting is complete.

Cancelling Advanced SCM

You can cancel the Advanced SCM (Sound Control Memory), and unlink the sound modes and the playback sources.

When shipped from the factory, a different sound mode can be stored in memory for each source so that you can change the sound modes simply by changing the sources.

- **LINK ON:** Advanced SCM (different sound modes for different sources)
- **LINK OFF:** Conventional SCM (one sound mode for all sources)

1. Press and hold SEL (Select) for more than 2 seconds so that one of the PSM items appears on the display.
2. Select “SCM LINK” with **▶▶** **▲** or **◀◀** **▼**.
3. Select the desired mode with the control dial.

The SCM LINK mode changes as follows:

LINK ON **LINK OFF**

Selecting the level display

You can select the level display according to your preference.

When shipped from the factory, “AUDIO 2” is selected.

- **AUDIO 1:** Shows the audio level indicator and the equalization pattern indicator.
- **AUDIO 2:** Alternates “AUDIO 1” setting and illumination display.
- **OFF:** Erases the audio level indicator and the equalization pattern indicator.

1. Press and hold SEL (Select) for more than 2 seconds so that one of the PSM items appears on the display.
2. Select “LEVEL” with **▶▶** **▲** or **◀◀** **▼**.
3. Select the desired mode with the control dial.

The level display setting changes as follows:

▶ AUDIO 1 **AUDIO 2** **OFF**



Selecting the dimmer mode

When you turn on the car head lights, the display automatically dims (Auto Dimmer).

When shipped from the factory, Auto Dimmer mode is activated.

- AUTO: Activates Auto Dimmer.
- ON: Always dims the display.
- OFF: Cancels Auto Dimmer.

1. Press and hold SEL (Select) for more than 2 seconds so that one of the PSM items appears on the display.
2. Select "DIMMER" with $\blacktriangleright\blacktriangleleft$ \wedge or $\blacktriangleleft\blacktriangleright$ \vee .
3. Select the desired mode with the control dial.

The dimmer mode changes as follows:



Note on Auto Dimmer:

Auto Dimmer equipped with this unit may not work correctly on some vehicles, particularly on those having a control dial for dimming.

In this case, set the dimmer mode to "ON" or "OFF".

Selecting the external component to use


You can connect the external component to the CD changer jack on the rear using the Line Input Adaptor KS-U57 (not supplied).

To use the external component as the playback source through this unit, you need to select which component — CD changer or external component — to use. When shipped from the factory, CD changer is selected as the external component.

- LINE IN: To use the external component other than CD changer.
- CHANGER: To use the CD changer.

1. Change the source to FM, AM or tape with FM/AM or TAPE $\blacktriangleleft\blacktriangleright$.
2. Press and hold SEL (Select) for more than 2 seconds so that one of the PSM items appears on the display.
3. Select "EXT IN" with $\blacktriangleright\blacktriangleleft$ \wedge or $\blacktriangleleft\blacktriangleright$ \vee .
4. Select the desired mode with the control dial.

The external component selecting mode changes as follows:

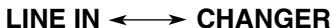

Note:

For connecting the Line Input Adaptor KS-U57 and the external component, refer to the Installation/Connection Manual (separate volume).

Detaching the control panel

You can detach the control panel when leaving the car.


When detaching or attaching the control panel, be careful not to damage the connectors on the back of the control panel and on the panel holder.

How to detach the control panel

Before detaching the control panel, be sure to turn off the power.


1

Unlock the control panel.

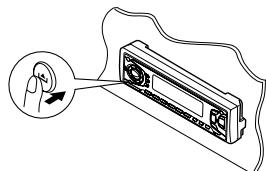


2

Pull the control panel out of the unit.

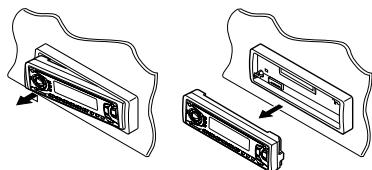

3


Put the detached control panel into the provided case.

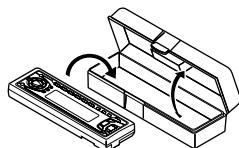

How to attach the control panel


1

Insert the right side of the control panel into the groove on the panel holder.

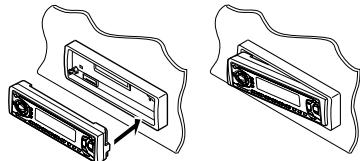

2


Press the left side of the control panel to fix it to the panel holder.

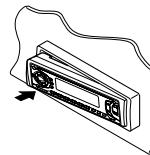

Note on cleaning the connectors:

If you frequently detach the control panel, the connectors will deteriorate.

To minimize this possibility, periodically wipe the connectors with a cotton swab or cloth moistened with alcohol, being careful not to damage the connectors.

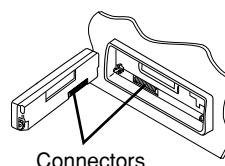


REMOTE OPERATIONS

Before using the remote controller:




- Aim the remote controller directly at the remote sensor on the main unit. Make sure there is no obstacle in between.
- Do not expose the remote sensor to strong light (direct sunlight or artificial lighting).

Remote sensor

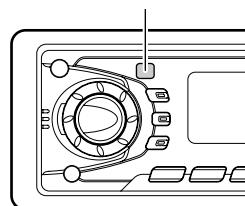

Installing the battery

When the controllable range or effectiveness of the remote controller decreases, replace the battery.

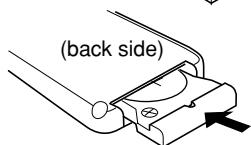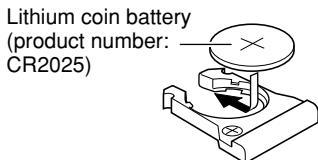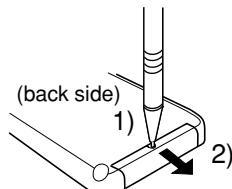

1. Remove the battery holder.

- 1) Push out in the direction indicated by the arrow using a ball point pen or a similar tool.
- 2) Remove the battery holder.

2. Place the battery.

Slide the battery into the holder with the + side facing upwards so that the battery is fixed in the holder.

3. Return the battery holder.


Insert again the battery holder pushing it until you hear a clicking sound.

WARNING:

- Store the batteries in a place which children cannot reach.
If a child accidentally swallows the battery, immediately consult a doctor.
- Do not recharge, short, disassemble or heat the batteries or dispose of in a fire.
Doing any of these things may cause the batteries to give off heat, crack or start a fire.
- Do not leave the batteries with other metallic materials.
Doing this may cause the batteries to give off heat, crack or start a fire.
- When throwing away or saving the batteries, wrap in tape and insulate; otherwise, , it may cause the batteries to give off heat, crack or start a fire.
- Do not poke the batteries with tweezers or similar tools.
Doing this may cause the batteries to give off heat, crack or start a fire.



Using the remote controller

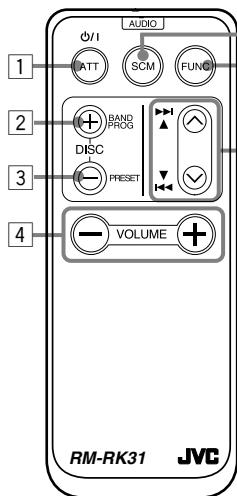

- 1 Functions the same as the $\Phi/I/ATT$ button on the main unit.
- 2
 - Functions as the BAND button while listening to the radio.
Each time you press the button, the band changes.
 - Functions as the DISC + button while listening to the CD changer.
Each time you press the button, the disc number increases, and the selected disc starts playing.
 - Functions as the PROG button while listening to a tape
Each time you press the button, the tape direction changes alternately.
- 3
 - Functions as the PRESET button while listening to the radio.
Each time you press the button, the preset station number increases, and the selected station is tuned in.
 - Functions as the DISC – button while listening to the CD changer.
Each time you press the button, the disc number decreases, and the selected disc starts playing.
- 4 Functions the same as the control dial on the main unit.
Note: *This button does not function for the preferred settings mode adjustment.*
- 5 Selects the sound mode.
Each time you press SCM (Sound Control Memory), the mode changes.
- 6 Selects the source.
Each time you press FUNC (Function), the source changes.
- 7
 - Searches stations while listening to the radio.
 - Fast forwards or reverses the track if pressed and held while listening to a CD.
 - Skips to the beginning of the next tracks or goes back to the beginning of the current (or previous tracks) if pressed briefly while listening to a CD.
 - Functions as the fast forward or rewind buttons or Multi Music Scan buttons while listening to a tape.



CD CHANGER OPERATIONS

ENGLISH

We recommend that you use one of the CH-X series with your unit.


If you have another CD automatic changer, consult your JVC car audio dealer for connections.

- For example, if your CD automatic changer is one of the KD-MK series, you need a cord (KS-U15K) for connecting it to this unit.

Before operating your CD automatic changer:

- Refer also to the Instructions supplied with your CD changer.
- If no discs are in the magazine of the CD changer or the discs are inserted upside down, "NO DISC" will appear on the display. If this happens, remove the magazine and set the discs correctly.
- If "RESET 1 - RESET 8" appears on the display, something is wrong with the connection between this unit and the CD changer. If this happens, check the connection, connect the connecting cord(s) firmly if necessary, then press the reset button of the CD changer.

Playing CDs

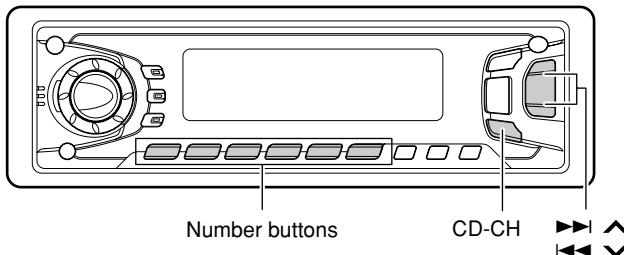

Select the CD automatic changer.

Playback starts from the first track of the first disc.
All tracks of all discs are played back.




Disc number (or clock time: see page 19) appears.

Note on One-Touch Operation:

When you press CD-CH, the power automatically comes on. You do not have to press **ON/OFF** to turn on the power.




To fast-forward or reverse the track

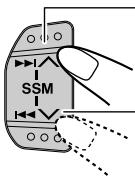

Press and hold **▶▶↑**, while playing a CD, to fast-forward the track.

Press and hold **◀◀↓**, while playing a CD, to reverse the track.

To go to the next tracks or the previous tracks

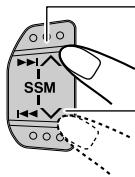


Press **▶▶↑** briefly, while playing a CD, to go ahead to the beginning of the next track.

Each time you press the button consecutively, the beginning of the next tracks is located and played back.

Press **◀◀↓** briefly, while playing a CD, to go back to the beginning of the current track.

Each time you press the button consecutively, the beginning of the previous tracks is located and played back.


To go to a particular disc directly

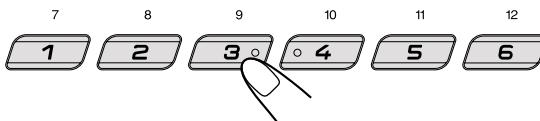

Press the number button corresponding to the disc number to start its playback (while the CD changer is playing).


- To select a disc number from 1 – 6:
Press 1 (7) – 6 (12) briefly.
- To select a disc number from 7 – 12:
Press and hold 1 (7) – 6 (12) for more than 1 second.

Ex. When disc number 3 is selected

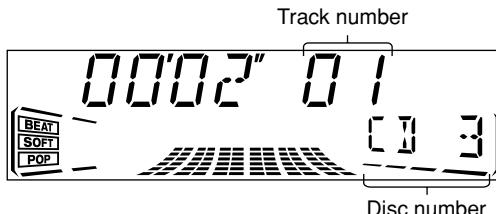




Selecting CD playback modes

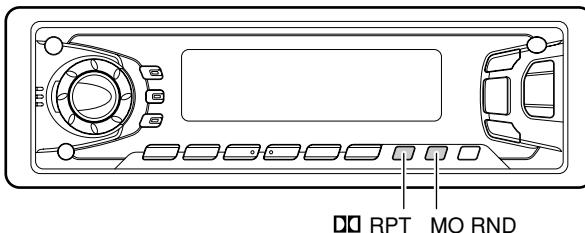

To play back tracks at random (Random Play)


Each time you press MO RND (Monaural/Random) while playing a CD, CD random play mode changes as follows:

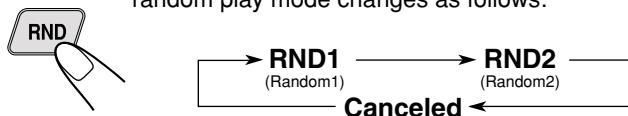

Mode	RND Indicator	Plays at random
RND1	Lights	All tracks of the current disc, then the tracks of the next disc, and so on.
RND2	Flashes	All tracks of all discs inserted in the magazine.

To play back tracks repeatedly (Repeat Play)

Each time you press MO RPT (Dolby NR/Repeat) while playing a CD, CD repeat play mode changes as follows:

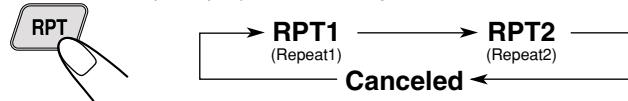


Mode	RPT Indicator	Plays repeatedly
RPT1	Lights	The current track (or specified track).
RPT2	Flashes	All tracks of the current disc (or specified disc).



Playing an external component

You can connect the external component to the CD changer jack on the rear using the Line Input Adaptor KS-U57 (not supplied).

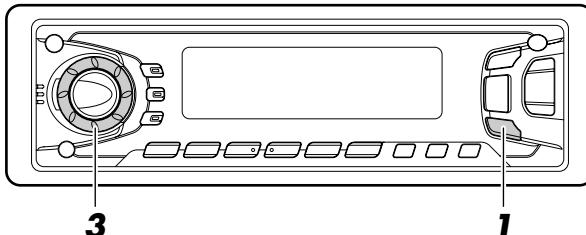

Preparations:

- For connecting the Line Input Adaptor KS-U57 and the external component, refer to the Installation/Connection Manual (separate volume).
- Before operating the external component using the following procedure, select the external input correctly. (See "Selecting the external component to use" on page 22.)

1



Select the external component.



- If "LINE IN"** does not appear on the display, see page 22 and select the external input ("EXT IN").

*Displayed only when one of the following sources is selected
—FM, AM and tape.


Note on One-Touch Operation:

When you press CD-CH, the power automatically comes on. You do not have to press $\odot/\text{I}|\text{ATT}$ to turn on the power.

2

Turn on the connected component and start playing the source.

3

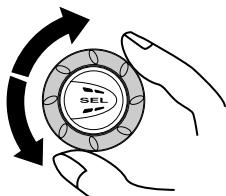


Adjust the volume.

?! MAINTENANCE

To extend the lifetime of the unit


This unit requires very little attention, but you will be able to extend the life of the unit if you follow the instructions below.

To clean the heads

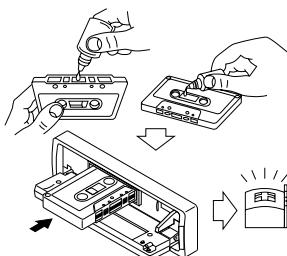

- Clean the heads after every 10 hours of use using a wet-type head cleaning tape (available at an audio store). When the head becomes dirty, you may realize the following symptoms:
 - Sound quality is reduced.
 - Sound level decreases.
 - Sound drops out.
- Do not play dirty or dusty tapes.
- Do not touch the highly-polished head with any metallic or magnetic tools.

To keep the tape clean

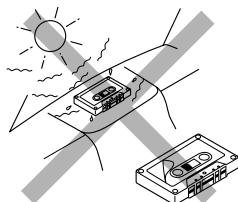

- Always store the tapes to their storage cases after use.
- Do not store tapes in the following places:
 - Subject to direct sunlight
 - With high humidity
 - At extremely hot temperatures

CAUTIONS:

- Do not play the tapes with peeling labels; otherwise, they can damage the unit.
- Tighten tapes to remove slack since loose tape may become entangled with the mechanism.
- Do not leave a cassette in the cassette compartment after use, as the tape may become slack.

The function below is also provided to ensure the longer life of this unit.

Ignition key-off Release/Ignition key-on play

- When you turn off the ignition key with a cassette in the compartment, the unit automatically releases the tape from its head.
- When you turn on the ignition key with a cassette in the compartment, playback automatically starts.

TROUBLESHOOTING ?!

What appears to be trouble is not always serious. Check the following points before calling a service center.

ENGLISH

Symptoms	Causes	Remedies
• A cassette tape cannot be inserted.	You have tried to insert a cassette in the wrong way.	Insert the cassette with the exposed tape facing right.
• Cassette tapes become hot.	This is not a malfunction.	_____
• Tape sound is at very low level and sound quality is degraded.	The tape head is dirty.	Clean it with a head cleaning tape.
• Sound is sometimes interrupted.	Connections are not good.	Check the cords and connections.
• Sound cannot be heard from the speakers.	The volume is turned to the minimum level.	Adjust it to the optimum level.
	Connections are incorrect.	Check the cords and connections.
• SSM (Strong-station Sequential Memory) automatic preset does not work.	Signals are too weak.	Store stations manually.
• Static noise while listening to the radio.	The antenna is not connected firmly.	Connect the antenna firmly.
• "NO DISC" appears on the display.	No CD is in the magazine.	Insert CDs into the magazine.
	CDs are inserted incorrectly.	Insert them correctly.
• "RESET 8" appears on the display.	This unit is not connected to a CD changer correctly.	Connect this unit and the CD changer correctly and press the reset button of the CD changer.
• "RESET 1 - RESET 7" appears on the display.	_____	Press the reset button of the CD changer.
• This unit does not work at all. • The CD changer does not work at all.	The built-in microcomputer may function incorrectly due to noise, etc.	Press the reset button on the panel (The clock setting and preset stations stored in memory are erased.) (See page 2.)

?! SPECIFICATIONS

ENGLISH

AUDIO AMPLIFIER SECTION

Maximum Power Output:

Front: 45 W per channel

Rear: 45 W per channel

Continuous Power Output (RMS):

Front: 17 W per channel into 4 Ω, 40Hz
to 20 000 Hz at no more than 0.8%
total harmonic distortion.

Rear: 17 W per channel into 4 Ω, 40Hz
to 20 000 Hz at no more than 0.8%
total harmonic distortion.

Load Impedance: 4 Ω (4 Ω to 8 Ω allowance)

Tone Control Range

Bass: ±10 dB at 100 Hz

Treble: ±10 dB at 10 kHz

Frequency Response: 40 Hz to 20 000 Hz

Signal-to-Noise Ratio: 70 dB

Line-Out Level/Impedance:

2.0 V/20 kΩ load (250 nWb/m)

TUNER SECTION

Frequency Range

FM: 87.5 MHz to 107.9 MHz

AM: 530 kHz to 1 710 kHz

[FM Tuner]

Usable Sensitivity: 11.3 dBf (1.0 µV/75 Ω)

50 dB Quieting Sensitivity:

16.3 dBf (1.8 µV/75 Ω)

Alternate Channel Selectivity (400 kHz):

65 dB

Frequency Response: 40 Hz to 15 000 Hz

Stereo Separation: 35 dB

Capture Ratio: 1.5 dB

[AM Tuner]

Sensitivity: 20 µV

Selectivity: 35 dB

CASSETTE DECK SECTION

Wow & Flutter: 0.11% (WRMS)

Fast-Wind Time: 100 sec. (C-60)

Frequency Response (Dolby NR-OFF):

30 Hz to 16 000 Hz (Normal tape)

Signal-to-Noise Ratio: (Normal tape)

(Dolby NR-ON): 65 dB

(Dolby NR-OFF): 56 dB

Stereo Separation: 40 dB

GENERAL

Power Requirement

Operating Voltage: DC 14.4 V (11 V to 16 V
allowance)

Allowable Working Temperature:

0°C to +40°C (32°F to 104°F)

Grounding System: Negative ground

Dimensions (W x H x D)

Installation Size:

182 mm x 52 mm x 150 mm
(7-3/16" x 2-1/16" x 5-15/16")

Panel Size: 188 mm x 58 mm x 14 mm
(7-7/16" x 2-5/16" x 5/8")

Mass: 1.3 kg (2.9 lbs) (excluding accessories)

*Design and specifications subject to change
without notice.*

If a kit is necessary for your car, consult
your telephone directory for the nearest
car audio speciality shop.



<http://www.jvcmobile.com>

*Visit us on-line for
Technical Support & Customer Satisfaction Survey.*

US RESIDENTS ONLY

**Having TROUBLE with operation?
Please reset your unit**

**Refer to page of How to Reset
Still having trouble??**

USA ONLY

Call 1-800-252-5722

<http://www.jvcservice.com>

We can help you!

JVC


VICTOR COMPANY OF JAPAN, LIMITED



EN, SP, FR



1000HISFLEJES

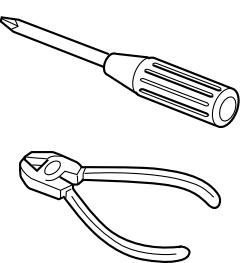

ENGLISH

- This unit is designed to operate on 12 volts DC, NEGATIVE ground electrical systems.

INSTALLATION (IN-DASH MOUNTING)

- The following illustration shows a typical installation. However, you should make adjustments corresponding to your specific car. If you have any questions or require information regarding installation kits, consult your JVC car audio dealer or a company supplying kits.

1 Before mounting: Press (Control Panel Release) to detach the control panel if already attached.

* When shipped from the factory, the control panel is packed in the hard case.

2 Remove the trim plate.

3 Remove the sleeve after disengaging the sleeve locks.

① Stand the unit.

Note: When you stand the unit, be careful not to damage the fuse on the rear.

② Insert the 2 handles between the unit and the sleeve, as illustrated, to disengage the sleeve locks.

③ Remove the sleeve.

Note: Be sure to keep the handles for future use after installing the unit.

4 Install the sleeve into the dashboard.

* After the sleeve is correctly installed in the dashboard, bend the appropriate tabs to hold the sleeve firmly in place, as illustrated.







5 Fix the mounting bolt to the rear of the unit's body and place the rubber cushion over the end of the bolt.

6 Do the required electrical connections explained on the back of this instructions.

7 Slide the unit into the sleeve until it is locked.

8 Attach the trim plate so that the projection on the trim plate is fixed to the left side of the unit.

9 Attach the control panel.

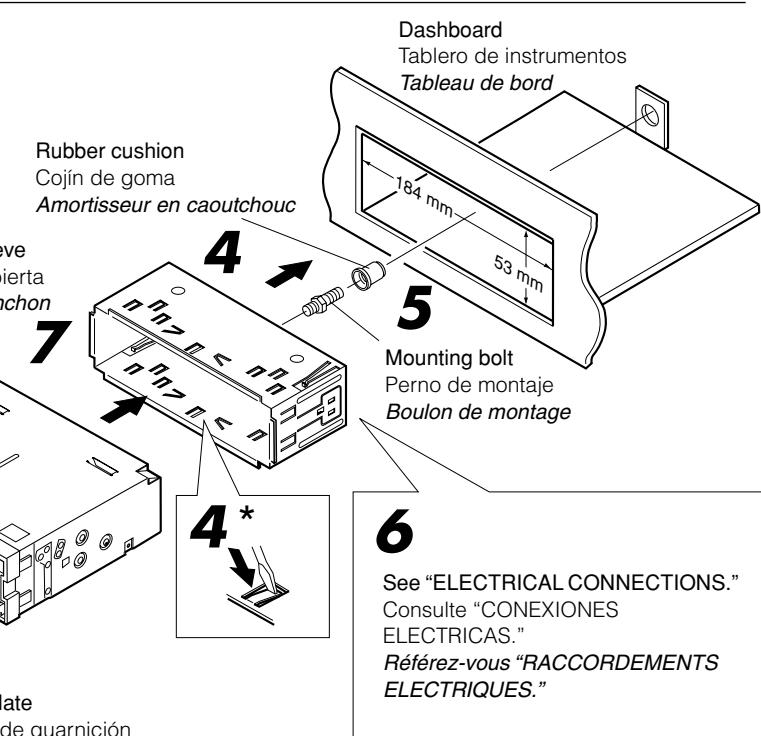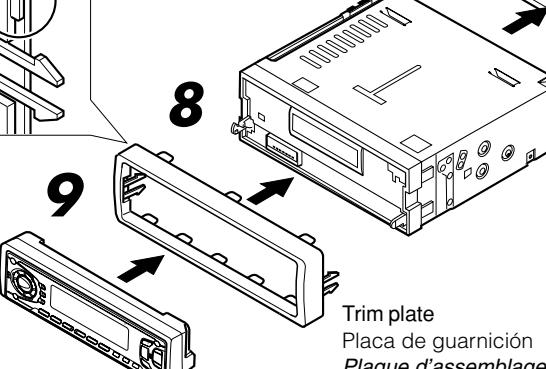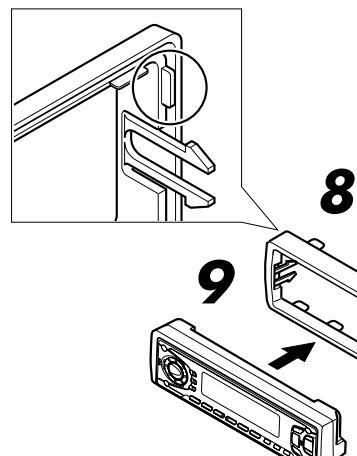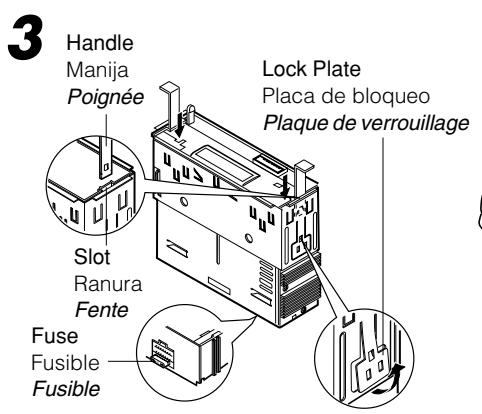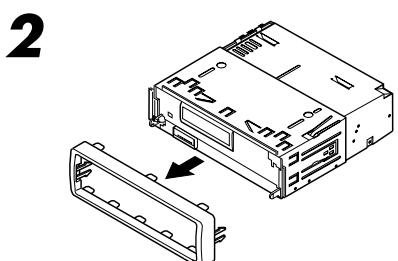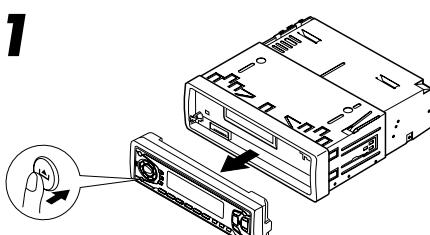

TROUBLESHOOTING

- The fuse blows.**
* Are the red and black leads connected correctly?
- Power cannot be turned on.**
* Is the yellow lead connected?
- No sound from the speakers.**
* Is the speaker output lead short-circuited?
- Sound is distorted.**
* Is the speaker output lead grounded?
* Are the “-” terminals of L and R speakers grounded in common?
- Unit becomes hot.**
* Is the speaker output lead grounded?
* Are the “-” terminals of L and R speakers grounded in common?


LOCALIZACION DE AVERIAS

- El fusible se quema.**
* ¿Están los conductores rojo y negro correctamente conectados?
- No es posible conectar la alimentación.**
* ¿Está el cable amarillo conectado?
- No sale sonido de los altavoces.**
* ¿Está el cable de salida del altavoz cortocircuitado?
- El sonido presenta distorsión.**
* ¿Está el cable de salida del altavoz conectado a masa?
* ¿Están los terminales “-” de los altavoces L y R conectados a una masa común?
- La unidad se calienta.**
* ¿Está el cable de salida del altavoz conectado a masa?
* ¿Están los terminales “-” de los altavoces L y R conectados a una masa común?

EN CAS DE DIFFICULTÉS

- Le fusible saute.**
* Les fils rouge et noir sont-ils raccordés correctement?
- L'appareil ne peut pas être mise sous tension.**
* Le fil jaune est-elle raccordée?
- Pas de son des haut-parleurs.**
* Le fil de sortie de haut-parleur est-il court-circuité?
- Le son est déformé.**
* Le fil de sortie de haut-parleur est-il à la masse?
* Les bornes “-” des haut-parleurs gauche et droit sont-elles mises ensemble à la masse?
- L'appareil devient chaud.**
* Le fil de sortie de haut-parleur est-il à la masse?
* Les bornes “-” des haut-parleurs gauche et droit sont-elles mises ensemble à la masse?

- When using the optional stay
- Cuando emplea un soporte opcional
- Lors de l'utilisation du hauban en option

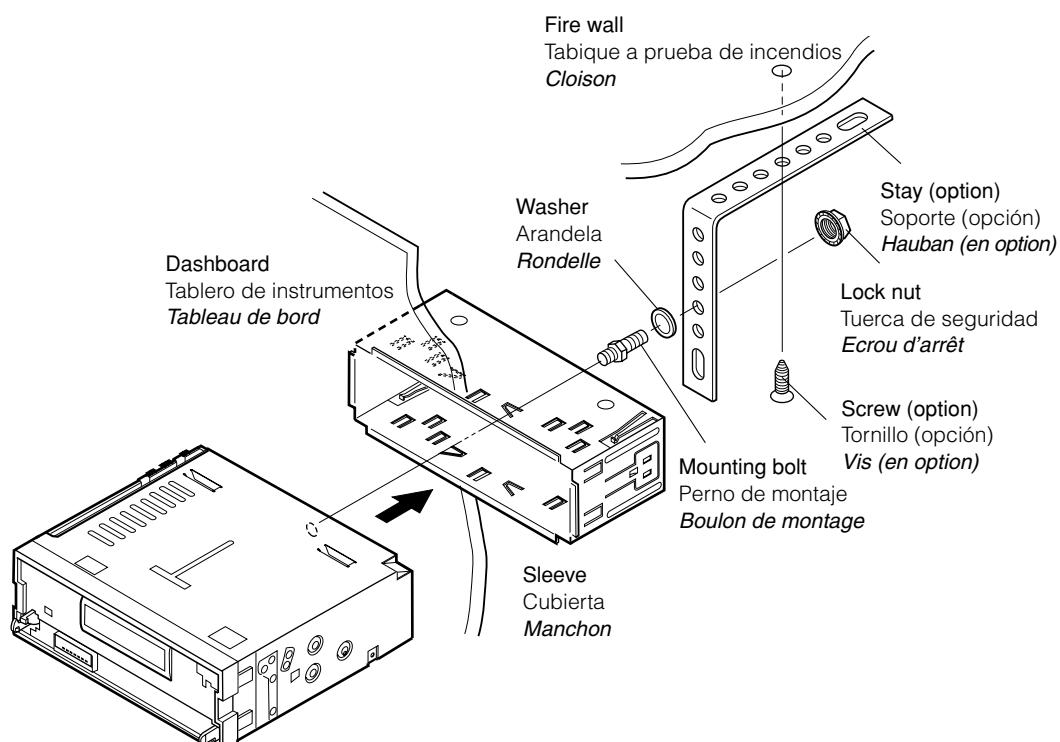

• When installing the unit without using the sleeve


- Instalación de la unidad sin utilizar la cubierta
- Lors de l'installation de l'appareil sans utiliser de manchon

In a Toyota for example, first remove the car radio and install the unit in its place. En un Toyota por ejemplo, primero extraiga la radio del automóvil y luego instale la unidad en su lugar.

Par exemple dans une Toyota, retirer d'abord l'autoradio et installer l'appareil à la place.

Flat type screws (M5 x 6 mm)*
Tornillos tipo plano (M5 x 6 mm)*
Vis à tête plate (M5 x 6 mm)*

* Not included with this unit.
* No suministrado con esta unidad.
* Non fourni avec cet appareil.

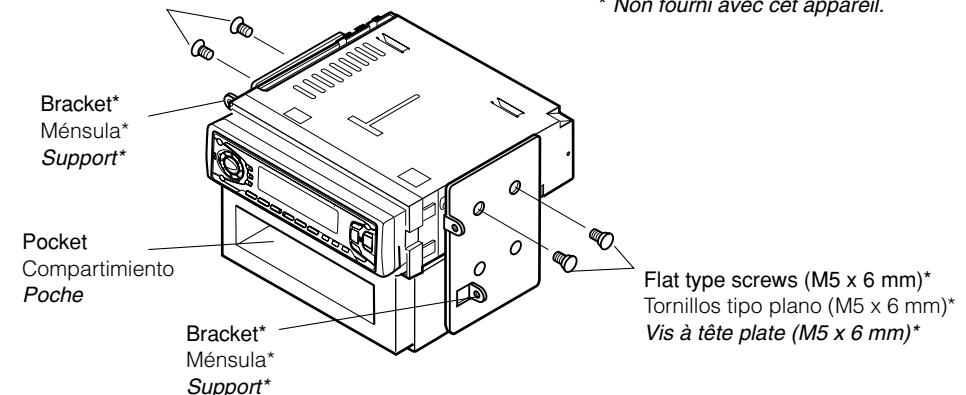

Note: When installing the unit on the mounting bracket, make sure to use the 6 mm-long screws. If longer screws are used, they could damage the unit.

Nota: Cuando instala la unidad en la ménsula de montaje, asegúrese de utilizar los tornillos de 6 mm de longitud. Si se utilizan tornillos más largos, éstos pueden dañar la unidad.

Remarque: Lors de l'installation de l'appareil sur le support de montage, s'assurer d'utiliser des vis d'une longueur de 6 mm. Si des vis plus longues sont utilisées, elles peuvent endommager l'appareil.

Removing the unit

• Before removing the unit, release the rear section.

1 Remove the control panel.

2 Remove the trim plate.

3 Insert the 2 handles into the slots, as shown. Then, while gently pulling the handles away from each other, slide out the unit. **(Be sure to keep the handles after installing it.)**

Extracción de la unidad

• Antes de extraer la unidad, libere la sección trasera.

1 Extraiga el panel de control.

2 Retire la placa de guarnición.

3 Inserte las 2 manijas entre las ranuras, como se muestra. Luego, separe gentilmente las manijas y extraiga la unidad. **(Asegúrese de conservar las manijas después de instalarlo.)**




Retrait de l'appareil

• Avant de retirer l'appareil, libérer la section arrière.

1 Retirer le panneau de commande.

2 Retirer la plaque d'assemblage.


3 Introduire les deux poignées dans les fentes, comme montré. Puis, tout en tirant doucement les poignées écartées, faire glisser l'appareil pour le sortir. **(S'assurer de conserver les poignées après l'installation de l'appareil.)**

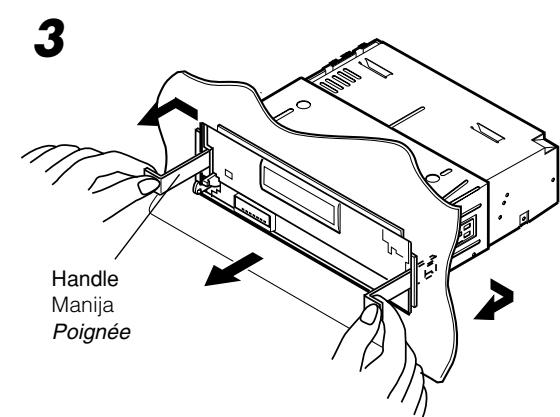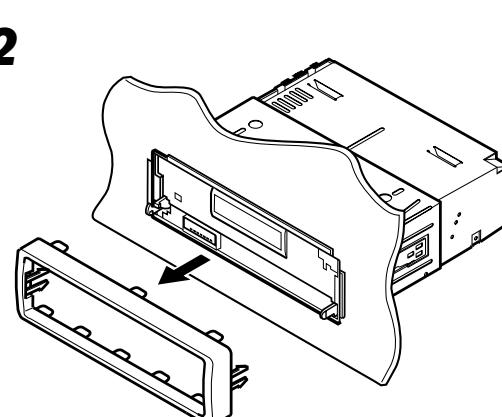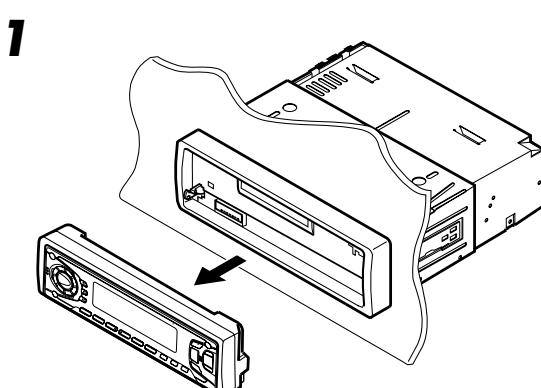


Parts list for installation and connection

The following parts are provided with this unit. After checking them, please set them correctly.


Hard case/Control Panel
Estuche duro/Panel de control
Etui de transport /Panneau de command

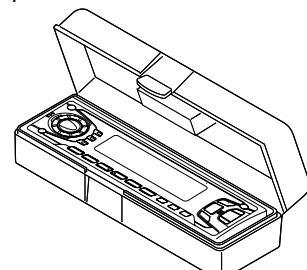

Power cord
Cordón de alimentación
Cordon d'alimentation

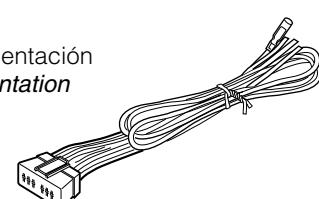

Handles
Manijas
Poignées

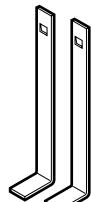


Washer (ø5)
Arandela (ø5)
Rondelle (ø5)

Lock nut (M5)
Tuerca de seguridad (M5)
Ecrou d'arrêt (M5)


Mounting bolt (M5 x 20 mm)
Perno de montaje (M5 x 20 mm)
Boulon de montage (M5 x 20 mm)

Rubber cushion
Cojín de goma
Amortisseur en caoutchouc


Trim plate
Placa de guarnición
Plaque d'assemblage

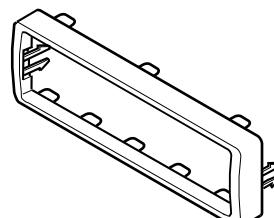

Remote controller
Mando a distancia
Télécommande

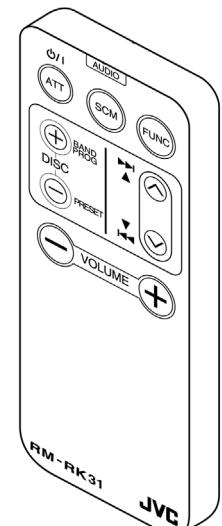



Batteries
Pilas
Piles

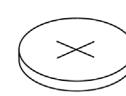

CR2025

Liste des pièces pour l'installation et raccordement

Les pièces suivantes sont fournies avec cet appareil. Après vérification, veuillez les placer correctement.

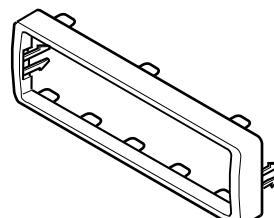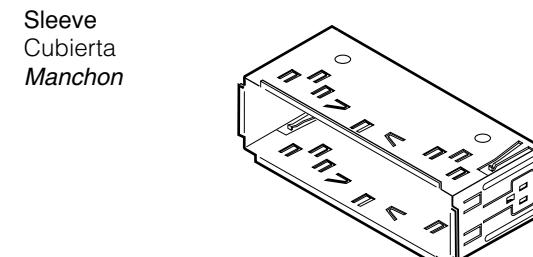

ENGLISH


ELECTRICAL CONNECTIONS

To prevent short circuits, we recommend that you disconnect the battery's negative terminal and make all electrical connections before installing the unit. If you are not sure how to install this unit correctly, have it installed by a qualified technician.

Note:

This unit is designed to operate only on **12 volts DC, NEGATIVE ground electrical systems**. If your vehicle does not have this system, a voltage inverter is required, which can be purchased at JVC car audio dealers.

- Replace the fuse with one of the specified rating. If the fuse blows frequently, consult your JVC car audio dealer.
- If noise is a problem...
This unit incorporates a noise filter in the power circuit. However, with some vehicles, clicking or other unwanted noise may occur. If this happens, connect the unit's **rear ground terminal** (see connection diagram below) to the car's chassis using shorter and thicker cords, such as copper braiding or gauge wire. If noise still persists, consult your JVC car audio dealer.
- Maximum input of the speakers should be more than 45 watts at the rear and 45 watts at the front, with an impedance of **4 to 8 ohms**.
- Be sure to ground this unit to the car's chassis.
- The heat sink becomes very hot after use. Be careful not to touch it when removing this unit.

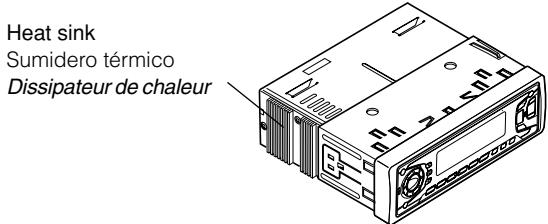

ESPAÑOL

CONEXIONES ELECTRICAS

Para evitar cortocircuitos, recomendamos que desconecte el terminal negativo de la batería y que efectúe todas las conexiones eléctricas antes de instalar la unidad. Si usted no está seguro de cómo instalar correctamente la unidad, hágala instalar por un técnico cualificado.

Nota:

Esta unidad está diseñada para funcionar con **12 voltios de CC, con sistemas eléctricos de masa NEGATIVA** solamente. Si su vehículo no posee este sistema, será necesario un inversor de tensión, que puede ser adquirido en los concesionarios de JVC de equipos de audio para automóviles.

- Reemplace el fusible por uno con la corriente especificada. Si el fusible se quemase frecuentemente consulte con su concesionario de JVC de equipos de audio para automóviles.
- Si el ruido fuese un problema...
Esta unidad tiene un filtro de ruido en el circuito de alimentación. Sin embargo, en algunos vehículos, pueden producirse chasquidos u otros ruidos indeseados. En tal caso conecte el **terminal de tierra posterior** (ver diagrama de conexión abajo) del receptor al chasis del automóvil, utilizando cordones más gruesos y cortos tales como alambre de cobre trenzado o de grueso calibre. Si el ruido persiste, consulte a su concesionario de JVC de equipos de audio para automóvil.
- La entrada máxima de los altavoces traseros debe ser mayor de 45 vatios y la de los delanteros de 45 vatios, con una impedancia de **4 a 8 ohmios**.
- **Asegúrese de conectar esta unidad a tierra en el chasis del automóvil.**
- El sumidero térmico estará muy caliente después del uso. Asegúrese de no tocarlo al desmontar esta unidad.

FRANÇAIS

RACCORDEMENTS ELECTRIQUES

Pour éviter tout court-circuit, nous vous recommandons de débrancher la borne négative de la batterie et d'effectuer tous les raccordements électriques avant d'installer l'appareil. Si l'on n'est pas sûr de pouvoir installer correctement cet appareil, le faire installer par un technicien qualifié.

Remarque:

Cet appareil est conçu pour fonctionner sur des sources de courant continu de **12 volts à masse NEGATIVE** seulement. Si votre véhicule n'offre pas ce type d'alimentation, il vous faut un convertisseur de tension, que vous pouvez acheter chez un revendeur d'autoradios JVC.

- Remplacer le fusible par un de la valeur précisée. Si le fusible saute souvent, consulter votre revendeur d'autoradios JVC.
- Si le bruit est un problème...
Cet appareil incorpore un filtre de bruit dans le circuit d'alimentation. Cependant, avec certains véhicules, quelques claquements ou autres bruits non désirés risquent de se produire. Si cela arrive, raccorder la **borne de masse arrière** de l'appareil au châssis de la voiture (voir le schéma de raccordement ci-dessous) en utilisant des cordons les plus gros et les plus courts possibles telle qu'une barre de cuivre ou une tresse. Si le bruit persiste, consulter votre revendeur d'autoradios JVC.
- La puissance admissible des haut-parleurs doit être supérieure à 45 watts à l'arrière et à 45 watts l'avant, avec une impédance de **4 à 8 ohms**.
- **S'assurer de raccorder la mise à la masse de cet appareil au châssis de la voiture.**
- Le radiateur devient très chaud après usage. Faire attention de ne pas le toucher en retirant cet appareil.

A Typical Connections / Conexiones típicas / Raccordements typiques

Before connecting: Check the wiring in the vehicle carefully not to fail in connecting this unit. Incorrect connection may cause a serious damage to this unit.

1 Connect the colored leads of the power cord to the car battery, speakers and automatic antenna (if any) in the following sequence.

- ① Black: ground
- ② Yellow: to car battery (constant 12V)
- ③ Red: to an accessory terminal
- ④ Blue with white stripe: to automatic antenna (200mA max.)
- ⑤ Orange with white stripe: to car light control switch
- ⑥ Others: to speakers

2 Connect the antenna cord.

3 Finally connect the wiring harness to the unit.

Antes de la conexión: Verifique atentamente el conexionado del vehículo para no cometer errores al conectar esta unidad. Una conexión incorrecta podría producir daños graves en la unidad.

1 Conecte los conductores de color del cable de alimentación a la batería del automóvil, altavoces y antena automática (si la hubiere) en la secuencia siguiente.

- ① Negro: a tierra.
- ② Amarillo: a la batería del automóvil (12V constantes)
- ③ Rojo: a un terminal de accesorio
- ④ Azul con rayas blancas: a la antena automática (máx. 200mA)
- ⑤ Naranja con rayas blancas: al interruptor de control de las luces del automóvil
- ⑥ Otros: a los altavoces

2 Conecte el cable de antena.

3 Por último, conecte a la unidad el cableado preformado.

Avant de commencer la connexion: vérifiez attentivement le câblage du véhicule pour ne pas connecter incorrectement cet appareil. Une connexion incorrecte peut endommager sérieusement l'appareil.

1 Connectez les fils de couleur du cordon d'alimentation à la batterie de la voiture, aux enceintes et à l'antenne automatique (s'il y en a une) dans l'ordre suivant.

- ① Noir: à la masse
- ② Jaune: à la batterie de la voiture (12V constant)
- ③ Rouge: à la prise accesseoire
- ④ Bleu à bandes blanches: à l'antenne automatique (200mA max.)
- ⑤ Orange avec bande blanche: à l'interrupteur d'éclairage de la voiture
- ⑥ Autres fils: aux enceintes

2 Connectez le cordon d'antenne.

3 Finalement, connectez le faisceau de fils à l'appareil.

Before connecting the CD changer, make sure that the unit is turned off.

Antes de conectar el cambiador de CD, asegúrese de que la unidad esté apagada.

Avant de connecter le changeur CD, s'assurer que l'unité est éteinte.

JVC CD changer jack

Jack del cambiador de CD de JVC

Prise de changeur CD JVC

Line outs

(see diagram B)

Salida de línea

(véase diagrama B)

Sortie de ligne

(voir le diagramme B)

Antenna terminal

Terminal de la antena

Borne de l'antenne

2

JVC CD changer or another external component
Cambiador de CD JVC u otro componente exterior
Changeur CD JVC ou autre appareil extérieur

15A fuse
Fusible de 15A
Fuseable 15A

Rear ground terminal
Terminal de tierra posterior
Borne arrière de masse

Black
Negro
Noir

Yellow*¹
Amarillo*¹
Jaune*¹

Red
Rojo
Rouge

Blue with white stripe
Azul con rayas blancas
Bleu avec bande blanche

To antenna
A la antena
A l'antenne

1

To metallic body or chassis of the car
A un cuerpo metálico o chasis del automóvil
Vers corps métallique ou châssis de la voiture

2

To a live terminal in the fuse block connecting to the car battery (bypassing the ignition switch).
A un terminal activo del bloque de fusibles conectado a la batería del automóvil (desviando el interruptor de encendido)
A une borne sous tension du porte-fusible connectée à la batterie de la voiture (en dérivant l'interrupteur d'allumage)

3

To an accessory terminal in the fuse block
A un terminal accesorio del bloque de fusibles
Vers borne accéssoire du porte-fusible

4

To automatic antenna if any
A la antena automática si la hubiere
Vers borne d'antenne automatique s'il y en a une

We recommend that you connect one of the CH-X series CD changers.

- If your CD changer is one of the KD-MK series, you need an optional cord (KS-U15K).
- You can also use an external component such as a portable MD player by connecting the Line Input Adaptor KS-U57 (not supplied). (See diagram B.)

Recomendamos conectar uno de los cambiadores de CD de la serie CH-X.

- Si su cambiador de CD es de la serie KD-MK, necesitará un cable opcional (KS-U15K).
- Conectando el adaptador de entrada de línea KS-U57 (no suministrado), también podrá usar un componente exterior, tal como un reproductor de MD. (Véase el diagrama B.)

Nous recommandons que vous connectiez un changeur de CD de la série CH-X.

- Si votre changeur de CD appartient à la série KD-MK, vous avez besoin d'un cordon optionnel (KS-U15K).

Vous pouvez aussi utiliser un appareil extérieur tel qu'un lecteur de MD en connectant l'adaptateur d'entrée de ligne KS-U57 (non fourni) (voir le diagramme B).

* Not supplied with this unit.
No suministrado con esta unidad.
Non fourni avec cet appareil.

*

Ignition switch
Interruptor de encendido
Interrupteur d'allumage

Fuse block
bloque de fusibles
porte-fusible

(ILLUMINATION) 5

To car light control switch
Al interruptor de control de las luces del automóvil
À l'interrupteur d'éclairage de la voiture

Orange with white stripe
Naranja con rayas blancas
Orange avec bande blanche

6

White with black stripe
Blanco con rayas negras (-) (+)
Blanc avec bande noire (-) (+)

Gray with black stripe
Gris con rayas negras (-) (+)
Gris avec bande noire (-) (+)

Green with black stripe
Verde con rayas negras (-) (+)
Vert avec bande noire (-) (+)

Left speaker (front)
Altavoz izquierdo (frontal)
Haut-parleur gauche (avant)

Right speaker (front)
Altavoz derecho (frontal)
Haut-parleur droit (avant)

White
Blanco
Blanc

Gray
Gris
Gris

Green
Verde
Vert

Purple with black stripe
Púrpura con rayas negras (-) (+)
Violet avec bande noire (-) (+)

Purple
Púrpura
Violet

Left speaker (rear)
Altavoz izquierdo (trasero)
Haut-parleur gauche (arrière)

Right speaker (rear)
Altavoz derecho (trasero)
Haut-parleur droit (arrière)

PRECAUTIONS on power supply and speaker connections:

- DO NOT connect the speaker leads of the power cord to the car battery; otherwise, the unit will be seriously damaged.
- Connect the black lead (ground), yellow lead (to car battery, constant 12V), and red lead (to an accessory terminal) correctly.
- BEFORE connecting the speaker leads of the power cord to the speakers, check the speaker wiring in your car.
- If the speaker wiring in your car is as illustrated in Fig. 1 and Fig. 2 below, DO NOT connect the unit using that original speaker wiring. If you do, the unit will be seriously damaged. Redo the speaker wiring so that you can connect the unit to the speakers as illustrated in Fig. 3.
- If the speaker wiring in your car is as illustrated in Fig. 3, you can connect the unit using the original speaker wiring in your car.
- If you are not sure of the speaker wiring of your car, consult your car dealer.

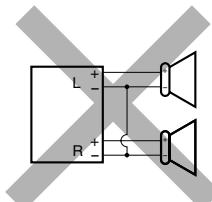


Fig. 1

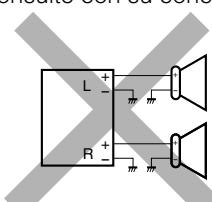


Fig. 2

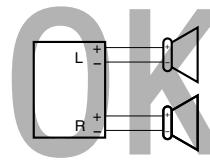


Fig. 3

PRECAUCIONES sobre las conexiones de la fuente de alimentación y de los altavoces:


- NO conecte los conductores de altavoz del cable de alimentación a la batería de automóvil, pues podrían producirse graves daños en la unidad.
- Conecte correctamente el conductor negro (a tierra), el conductor amarillo (a la batería del automóvil, 12V constantes), y el conductor rojo (a un terminal de accesorio).
- ANTES de conectar a los altavoces los conductores de altavoz del cable de alimentación, verifique el conexionado de altavoz de su automóvil.
- Si el conexionado de altavoz de su automóvil es como se indica en las Figs. 1 y 2 de abajo, NO conecte la unidad utilizando ese conexionado de altavoz original. Si lo hace, se producirán daños graves en la unidad. Vuelva a efectuar el conexionado de altavoz de manera que pueda conectar la unidad a los altavoces de la manera indicada en la Fig. 3.
- Si el conexionado de altavoz de su automóvil es como se indica en la Fig. 3, podrá conectar la unidad utilizando el conexionado de altavoz original de su automóvil.
- Si tiene dudas sobre el conexionado de altavoz de su automóvil, consulte con su concesionario.

PRECAUTIONS sur l'alimentation et la connexion des enceintes:

- NE CONNECTEZ PAS les fils d'enceintes du cordon d'alimentation à la batterie; sinon, l'appareil serait sérieusement endommagé.
- Connectez correctement le fil noir (à la masse), le fil jaune (à la batterie de la voiture, 12V constant) et le fil rouge (à la prise accessoire).
- AVANT de connecter les fils d'enceintes du cordon d'alimentation aux enceintes, vérifiez le câblage des enceintes de votre voiture.
- Si le câblage des enceintes de votre voiture est réalisé comme montré sur la Fig. 1 ou Fig. 2 ci-dessous, NE CONNECTEZ PAS l'appareil en utilisant ce câblage original d'enceintes. Si vous le faites, l'appareil sera sérieusement endommagé. Recommencez le câblage des enceintes de façon que vous puissiez connecter l'appareil aux enceintes comme montré sur la Fig. 3.
- Si le câblage des enceintes de votre voiture est comme montré sur la Fig. 3, vous pouvez connecter l'appareil en utilisant ce câblage original d'enceintes pour votre voiture.
- Si vous n'êtes pas sûrs du câblage d'enceintes de votre voiture, consulter le concessionnaire de votre voiture.

Connecting the leads / Conexión de los conductores / Raccordement des fils


Twist the core wires when connecting.
Retuerza los alambres de alma para conectarlos.
Torsader les âmes des fils en les raccordant.

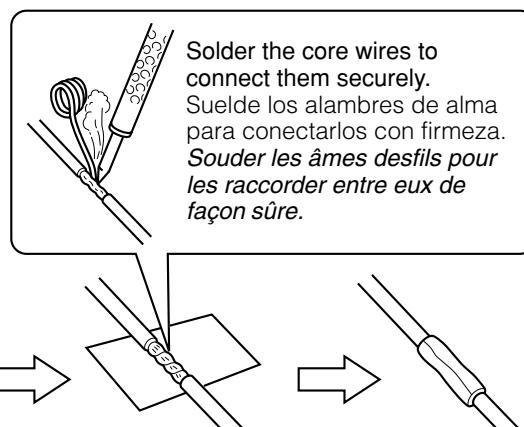

Solder the core wires to connect them securely.
Suelde los alambres de alma para conectarlos con firmeza.
Souder les âmes des fils pour les raccorder entre eux de façon sûre.

CAUTION / PRECAUCION / PRECAUTION:

- To prevent short-circuit, cover the terminals of the UNUSED leads with insulating tape.
- Para evitar cortocircuitos, cubra los cables NO UTILIZADOS con cinta aislante.
- Pour éviter les court-circuits, couvrir les bornes des fils qui ne sont PAS utilisés avec de la bande isolante

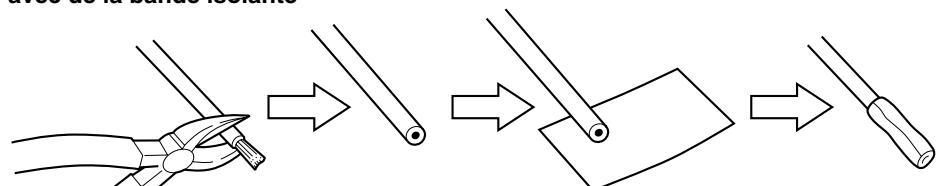

B Connections Adding Other Equipment / Conexiones para añadir otros equipos / Raccordement pour ajouter d'autres appareils

You can connect an amplifier and other equipment to upgrade your car stereo system.

- Connect the remote lead (blue with white stripe) to the remote lead of the other equipment so that it can be controlled through this unit.
- For amplifier only:
 - Connect this unit's line-out terminals to the amplifier's line-in terminals.
 - Disconnect the speakers from this unit, connect them to the amplifier. Leave the speaker leads of this unit unused. (Cover the terminals of the these unused leads with insulating tape, as illustrated above.)


Usted podrá conectar un amplificador y otros equipos para mejorar el sistema estéreo de su automóvil.

- Conecte el conductor remoto (azul con rayas blancas) al conductor remoto del otro equipo para poderlo controlar a través de esta unidad.
- Sólo para el amplificador:
 - Conecte los terminales de salida de línea de esta unidad con los terminales de entrada de línea del amplificador.
 - Desconecte los altavoces de esta unidad y conéctelos al amplificador. Los cables de los altavoces de esta unidad quedan sin usar. (Cubra los terminales de estos cables sin usar con cinta aislante, tal como se indica en la figura de arriba.)

Vous pouvez connecter un amplificateur ou autre appareil pour améliorer votre système autoradio.

- Connectez le fil de commande à distance (bleu avec bande blanche) au fil de commande à distance de l'autre appareil de façon qu'il puisse être commandé via cet appareil.
- Pour l'amplificateur seulement:
 - Raccorder les bornes de sortie ligne de cet appareil aux bornes d'entrée ligne de l'amplificateur.
 - Déconnectez les enceintes de cet appareil et connectez-les à l'amplificateur. Laissez les fils d'enceintes de cet appareil inutilisés. (Recouvrir les extrémités de ces fils inutilisés avec de la bande isolante comme montré ci-dessus.)

Amplifier / Amplificador / Amplificateur

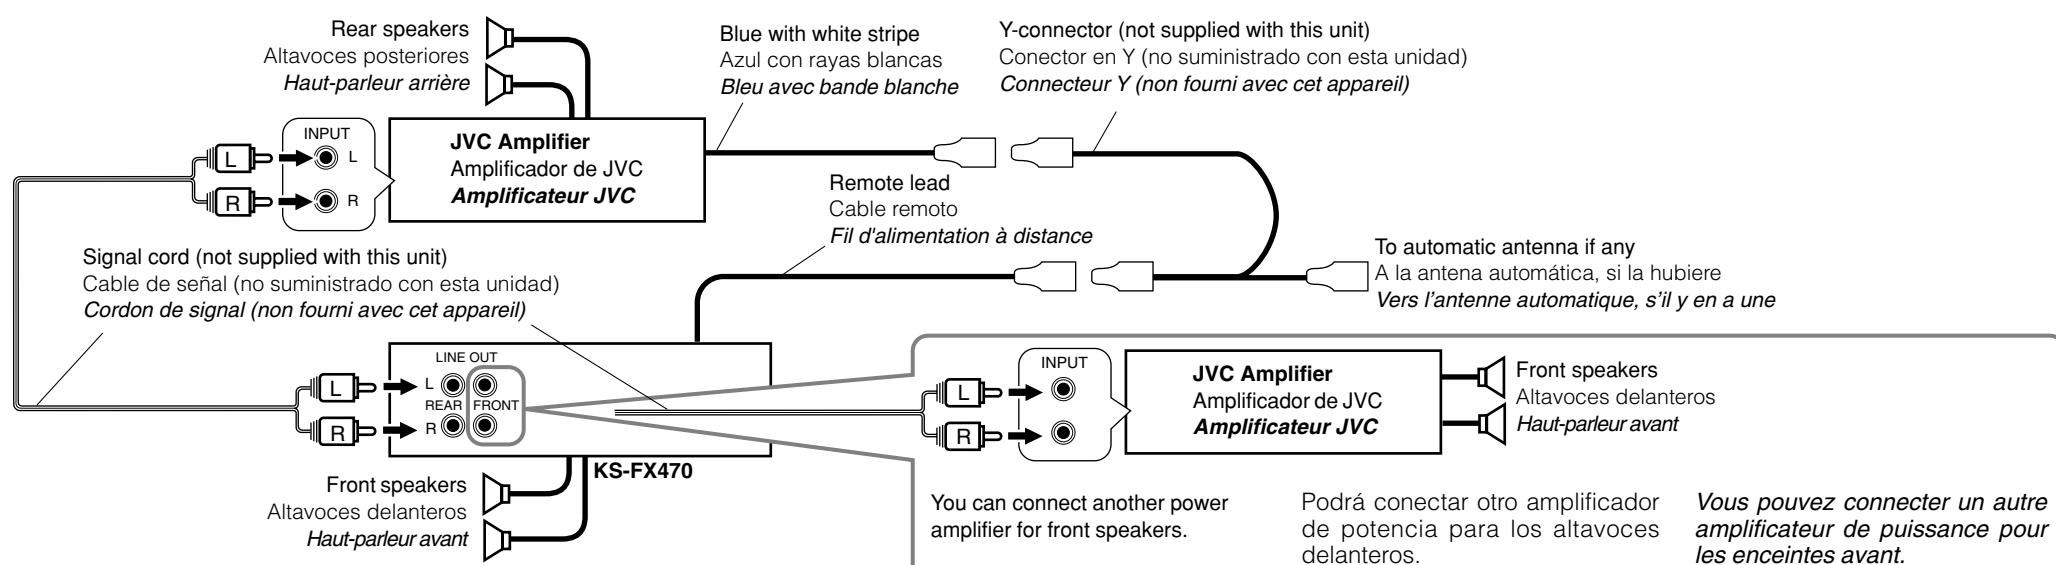

External component / Componente exterior / Appareil extérieur

Line Input Adaptor KS-U57 (not supplied with this unit)
Adaptador de entrada de línea KS-U57 (no suministrado con esta unidad)
Adaptateur d'entrée de ligne KS-U57 (non fourni avec cet appareil)

