

JVC

ENGLISH

CASSETTE RECEIVER

KS-FX321

中
文



卡座收音組合機

KS-FX321

法
文

วิทยุเครื่องเล่นเทป

KS-FX321

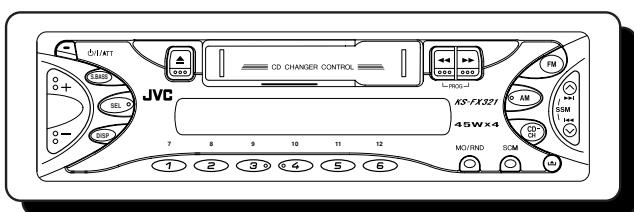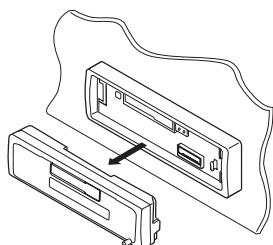

For installation and connections, refer to the separate manual.

有關安裝和連接方法，分別參見操作手冊。

กรุณาดูมือที่แยกต่างหาก ในการติดตั้งและการเชื่อมต่อ

INSTRUCTIONS 使用說明書 คำแนะนำ

Thank you for purchasing a JVC product. Please read all instructions carefully before operation, to ensure your complete understanding and to obtain the best possible performance from the unit.


CONTENTS

How to reset your unit	2	Selecting preset sound modes	9
LOCATION OF THE BUTTONS	3	Adjusting the sound	9
Control panel	3	Storing your own sound adjustments	10
BASIC OPERATIONS	4	OTHER MAIN FUNCTIONS	11
Turning on the power	4	Setting the clock	11
RADIO OPERATIONS	5	Detaching the control panel	12
Listening to the radio	5	CD CHANGER OPERATIONS	13
Storing stations in memory	6	Playing CDs	13
Tuning in to a preset station	7	Selecting CD playback modes	14
TAPE OPERATIONS	8	MAINTENANCE	15
Listening to a cassette	8	TROUBLESHOOTING	16
SOUND ADJUSTMENTS	9	SPECIFICATIONS	17
Turning on/off the super bass function	9		

How to reset your unit

Press and hold both the SEL (Select) and \textcircled{O} /I/ATT (Standby/On/Attenuator) buttons at the same time for several seconds.

This will reset the built-in microcomputer.

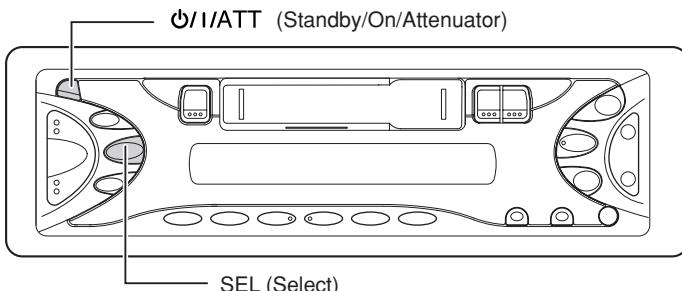

Note:

Your preset adjustments – such as preset channels or sound adjustments – will also be erased.

BEFORE USE

*For safety....

- Do not raise the volume level too much, as this will block outside sounds, making driving dangerous.
- Stop the car before performing any complicated operations.

*Temperature inside the car....


If you have parked the car for a long time in hot or cold weather, wait until the temperature in the car becomes normal before operating the unit.

LOCATION OF THE BUTTONS



Control panel

ENGLISH

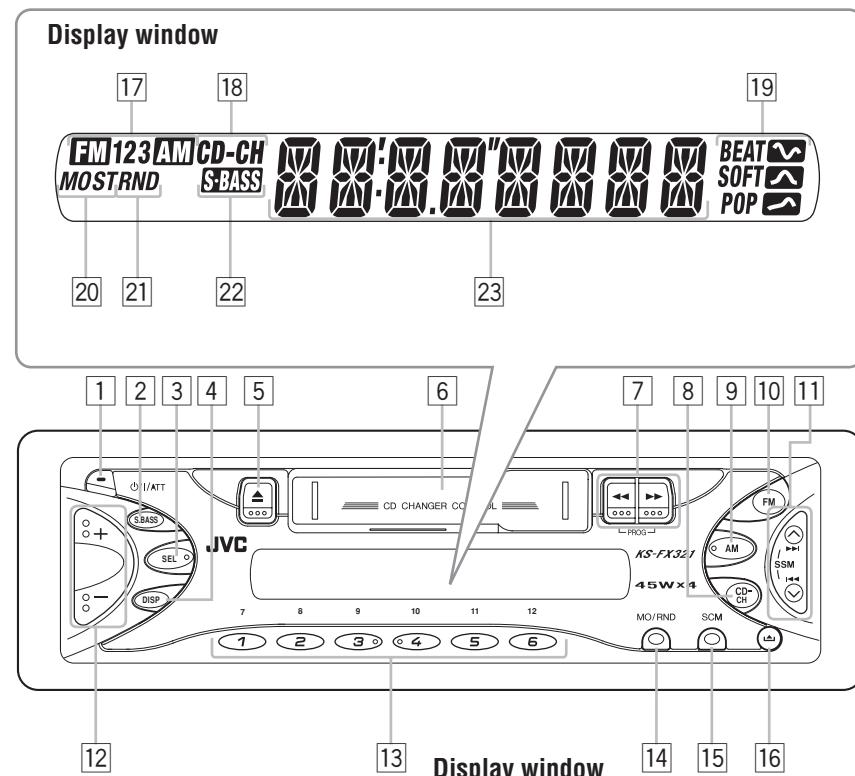


- ① ⏻/I/ATT (Standby/On/Attenuator) button
- ② S.BASS (Super Bass) button
- ③ SEL (Select) button
- ④ DISP (Display) button
- ⑤ ▲ (Eject) button
- ⑥ Cassette compartment
- ⑦ ⏪ / ⏩ (PROG: program) buttons
- ⑧ CD-CH button
- ⑨ AM button
- ⑩ FM button
- ⑪ ⏪/▼ / ▲/► buttons
 - Also functions as SSM buttons when pressed together.
- ⑫ +/- buttons
- ⑬ Number buttons
- ⑭ MO (Monaural) button
RND (Random) button
- ⑮ SCM (Sound Control Memory) button
- ⑯ 🔒 (Control panel release) button

Display window

- ⑰ Band indicators
FM1, FM2, FM3,
AM
- ⑱ CD-CH (CD Changer) indicator
- ⑲ Sound mode indicators
BEAT, SOFT, POP
- ⑳ MO(Monaural) indicator,
ST(Stereo) indicator
- ㉑ RND (Random) indicator
- ㉒ S.BASS (Super Bass) indicator
- ㉓ Main display




BASIC OPERATIONS

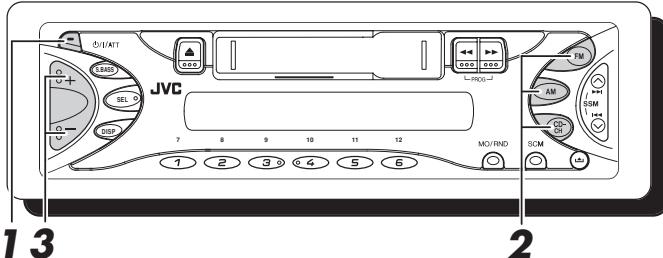

Turning on the power


1 Turn on the power.

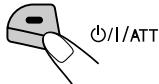

Note on One-Touch Operation:

- When you select a source in step 2 below, the power automatically comes on. You do not have to press this button to turn on the power.
- If the cassette is already in the cassette compartment, tape play starts automatically. However, it is not recommended to leave the cassette in the compartment when turning off the power or ignition key. It may damage the tape head and the cassette.

2 Select the source.

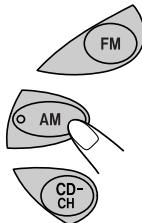


To operate the tuner (FM or AM),
see pages 5 – 7.

To operate the tape,
see page 8.

To operate the CD changer,
see pages 13 – 14.

3 Adjust the volume.

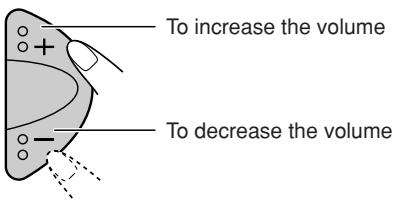

Volume level appears.

4 Adjust the sound as you want. (See pages 9 – 10.)

To drop the volume in a moment

Press ø/I/ATT briefly while listening to any source. "ATT" starts flashing on the display, and the volume level will drop in a moment.


To resume the previous volume level, press the button briefly again.

To turn off the power

Press and hold ø/I/ATT for more than 1 second.

Note:

When you use this unit for the first time, set the built-in clock correctly, see page 11.

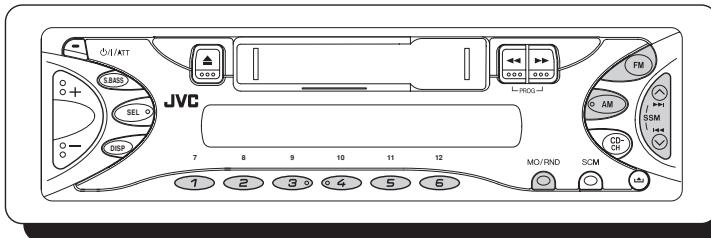

Listening to the radio


You can use either automatic searching or manual searching to tune in to a particular station.

Note:

When a cassette is in the cassette compartment, you cannot select the tuner. Be sure to eject the cassette from the cassette compartment to listen to the radio.

Searching a station automatically: Auto search

1 Select the band (FM1 – 3, AM).

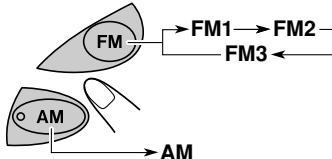


Selected band appears.



Note:

This receiver has three FM bands (FM1, FM2, FM3). You can use any one of them to listen to an FM broadcast.

2 Start searching a station.

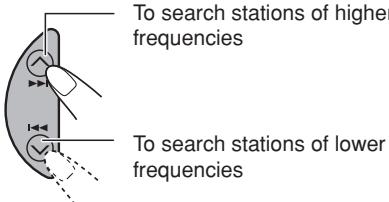


When a station is received, searching stops.

To stop searching before a station is received, press the same button you have pressed for searching.

Searching a station manually: Manual search

1 Select the band (FM1 – 3, AM).

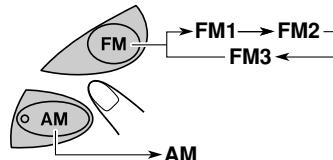

Note:

This receiver has three FM bands (FM1, FM2, FM3). You can use any one of them to listen to an FM broadcast.

2 Press and hold $\blacktriangleleft\triangleright$ or $\blacktriangleleft\blacktriangleright$ until "M" (manual) starts flashing on the display.



Selected band appears.



CONTINUED ON THE NEXT PAGE



3 Tune in to a station you want while "M" is flashing.



To tune in to stations of higher frequencies

To tune in to stations of lower frequencies

- If you release your finger from the button, the manual mode will automatically turn off after 5 seconds.
- If you hold down the button, the frequency keeps changing (in 50 kHz intervals for FM and 9 kHz intervals for AM) until you release the button.

When an FM stereo broadcast is hard to receive:

Press MO/RND (Monaural/Random) while listening to an FM stereo broadcast.

- Each time you press the button, the MO indicator lights up and goes off alternately.

Lights up when receiving an FM broadcast in stereo.



MO/RND



MONO



When the MO indicator is lit on the display, the sound you hear becomes monaural but the reception will be improved.

To restore the stereo effect, press the same button again.

Storing stations in memory

You can use one of the following two methods to store broadcasting stations in memory.


- Automatic preset of FM stations: SSM (Strong-station Sequential Memory)
- Manual preset of both FM and AM stations

FM station automatic preset: SSM

You can preset 6 local FM stations in each FM band (FM1, FM2 and FM3).

1 Select the FM band (FM1 – 3) you want to store FM stations into.

Each time you press the button, the FM band changes as follows:

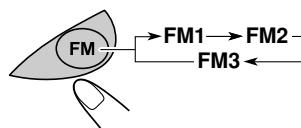

2 Press and hold both buttons for more than 2 seconds.



"SSM" appears, then disappears when automatic preset is over.

Local FM stations with the strongest signals are searched and stored automatically in the band number you have selected (FM1, FM2 or FM3). These stations are preset in the number buttons — No.1 (lowest frequency) to No.6 (highest frequency).

When automatic preset is over, the station stored in number button 1 will be automatically tuned into.


Manual preset

You can preset up to 6 stations in each band (FM1, FM2, FM3 and AM) manually.


Ex.: Storing an FM station of 88.3 MHz into the preset number 1 of the FM1 band.

1 Select the band (FM 1 – 3, AM) you want to store stations into (in this example, FM 1).

Each time you press the button, the FM band changes as follows:

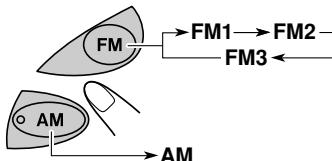

2 Tune in to a station of 88.3 MHz.

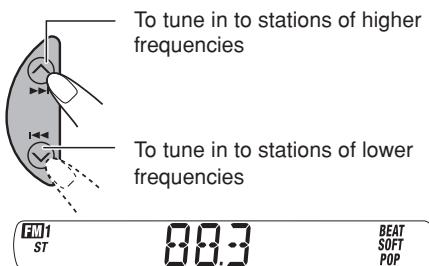

3 Press and hold the button (in this example, 1) for more than 2 seconds.



Preset number "P1" flashes for a while.

4 Repeat the above procedure to store other stations into other preset numbers.

Notes:


- A previously preset station is erased when a new station is stored in the same preset number.
- Preset stations are erased when the power supply to the memory circuit is interrupted (for example, during battery replacement). If this occurs, preset the stations again.

Tuning in to a preset station


You can easily tune in to a preset station.

Remember that you must store stations first. If you have not stored them yet, see "Storing stations in memory" on pages 6 – 7.


1 Select the band (FM1 – 3, AM).

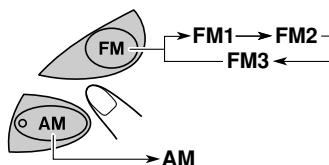

2 Select the number (1 – 6) for the preset station you want.

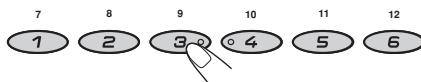


TAPE OPERATIONS

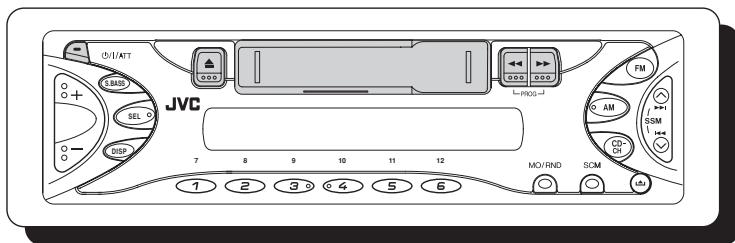

Listening to a cassette

You can playback type I (normal) tapes.


1 Turn on the power.

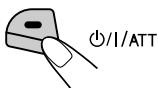

Note on One-Touch Operation:

If a cassette is already in the cassette compartment, tape play starts automatically. However, it is not recommended to leave the cassette in the compartment when turning off the power or ignition key. It may damage the tape head and the cassette.

2 Insert a cassette into the cassette compartment.

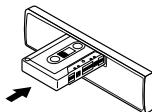


When one side of the tape reaches its end during play, the other side of the tape automatically starts playing. (Auto Reverse)

3 Select the tape direction.

Press the both buttons at the same time.

Each time you press the button, the tape direction changes alternatively – forward (TAPE ↗↗↗) and reverse (TAPE ↙↖↖).

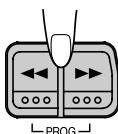


To stop play and eject the cassette

Press ▲.

Tape play stops and the cassette automatically ejects from the cassette compartment. The source changes to the previously selected one.

- You cannot change the source if the cassette is still in the cassette compartment. To change source, you must eject the cassette first.
- You can also eject the cassette by pressing ▲ while the unit is turned off.

To fast-wind a tape

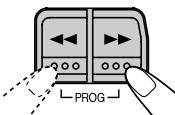

Press in ▶▶ or ◀◀.

The tape will be wound in the direction of the arrows (▶▶ or ◀◀).



Tape direction




To restart playback, lightly press the other button which is not pressed in (◀◀ or ▶▶).



Turning on/off the super bass function

The super bass function allows you to maintain the richness and fullness of the bass sound regardless of how low you set the volume.

Each time you press S.BASS, the function turns on and off alternately.

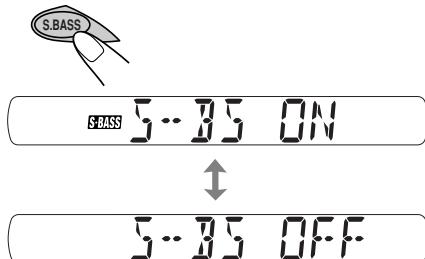

Selecting preset sound modes

You can select a preset sound adjustment suitable to the music genre.

Each time you press SCM, the sound mode changes as follows.



Indication	For:	Preset values		
		BAS	TRE	S.BASS
SCM OFF	(Flat sound)	00	00	OFF
BEAT	Rock or disco music	+2	00	ON
SOFT	Quiet background music	+1	-3	OFF
POP	Light music	+4	+1	OFF

Notes:

- You can adjust the preset sound mode to your preference, and store it in memory.
If you want to adjust and store your original sound mode, see "Storing your own sound adjustments" on page 10.
- To adjust the bass and treble reinforcement levels or to turn on/off the super bass function, see page 9.
- When one of the sound modes is selected, it is shown on the display as follows:



For example, when "POP" is selected.


Adjusting the sound

You can adjust the sound characteristics to your preference.

1 Select the item you want to adjust.




Each time you press the button, the adjustable items change as follows:

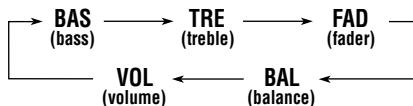

Indication	To do:	Range
BAS (Bass)	Adjust the bass.	-6 (min.) +6 (max.)
TRE (Treble)	Adjust the treble.	-6 (min.) +6 (max.)
FAD* (Fader)	Adjust the front and rear speaker balance.	R6 (Rear only) F6 (Front only)
BAL (Balance)	Adjust the left and right speaker balance.	L6 (Left only) R6 (Right only)
VOL (Volume)	Adjust the volume.	00 (min.) 50 (max.)

* If you are using a two-speaker system, set the fader level to "00."

2 Adjust the level.

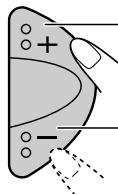

To increase the level



To decrease the level

Note:

Normally, the +/- buttons work as the volume control. So you do not have to select "VOL" to adjust the volume level.



Storing your own sound adjustments

You can adjust the sound modes (BEAT, SOFT, POP: see page 9) to your preference and store your own adjustments in memory.

- There is a time limit in doing the following procedure. If the setting is canceled before you finish, start from step 1 again.

1 Call up the sound mode you want to adjust.

See page 9 for details.

SCM




2 Select "BAS" (bass), "TRE" (treble)



3 Adjust the bass or treble level.

See page 9 for details.

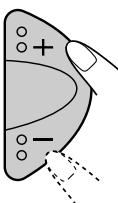

4 To turn on or off the super bass function

Each time you press S.BASS, the super bass function turns on and off alternately. See page 9 for details.



5 Repeat step 2 and 3 to adjust the other items.

6 Press and hold SCM until the sound mode you have selected in step 1 flashes on the display.

Your setting is stored in memory.

SCM



7 Repeat the same procedure to store other setting.

To reset to the factory settings

Repeat the same procedure and reassign the preset values listed in the table on page 9.

Setting the clock

- 1** Press and hold SEL (Select) for more than 2 seconds.

"CLOCK H" or "CLOCK M" appears on the display.




- 2** Set the hour.

- [1] Select "CLOCK H" if not shown on the display.




- [2] Adjust the hour.

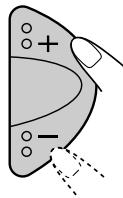


- 3** Set the minute.

- [1] Select "CLOCK M"

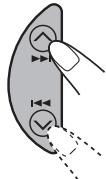

- [2] Adjust the minute.

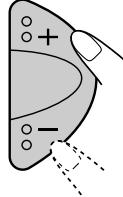

- 4** Please SEL (Select) to finish the setting.



To check the current clock time or change the display mode.



Press DISP repeatedly. Each time you press the button, the display mode changes as follows.


- During tuner operation:

Frequency \longleftrightarrow Clock

- During tape operation:

Play mode (tape direction) \longleftrightarrow Clock

- During CD changer operation:

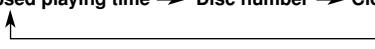Elapsed playing time \rightarrow Disc number \rightarrow Clock


Detaching the control panel


You can detach the control panel when leaving the car.

When detaching or attaching the control panel, be careful not to damage the connectors on the back of the control panel and on the panel holder.


How to detach the control panel

Before detaching the control panel, be sure to turn off the power.


- 1 Unlock the control panel.

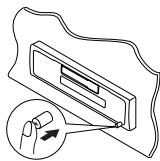

- 2 Lift and pull the control panel out of the unit.

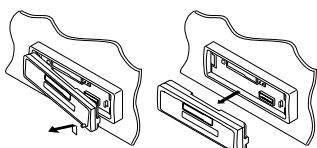


- 3 Put the detached control panel into the provided case.

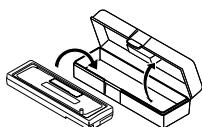


How to attach the control panel

- 1 Insert the left side of the control panel into the groove on the panel holder.

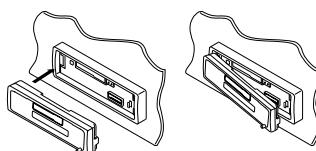


- 2 Press the right side of the control panel to fix it to the panel holder.

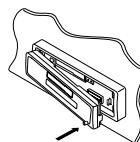

Note on cleaning the connectors:

If you frequently detach the control panel, the connectors will deteriorate.

To minimize this possibility, periodically wipe the connectors with a cotton swab or cloth moistened with alcohol, being careful not to damage the connectors.

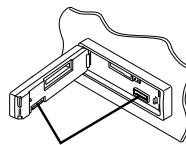


Connectors

CD CHANGER OPERATIONS



ENGLISH

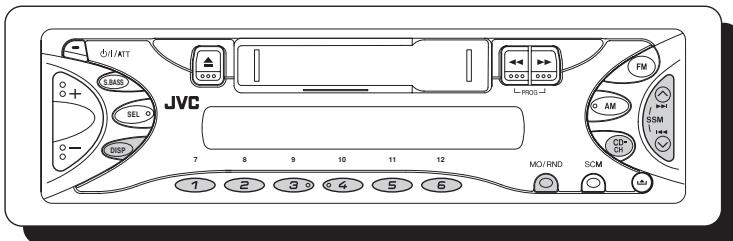

We recommend that you use one of the CH-X series with your unit.

If you have another CD automatic changer, consult your JVC car audio dealer for connections.


- For example, if your CD automatic changer is one of the KD-MK series, you need a cord (KS-U15K) for connecting it to this unit.

Before operating your CD automatic changer:

- Refer also to the Instructions supplied with your CD changer.
- If no discs are in the magazine of the CD changer or the discs are inserted upside down, "NO CD" or "NO DISC" will appear on the display. If this happens, remove the magazine and set the discs correctly.
- If "RESET 1 - RESET 8" appears on the display, something is wrong with the connection between this unit and the CD changer. If this happens, check the connection, connect the connecting cord(s) firmly if necessary, then press the reset button of the CD changer.

Playing CDs

1 Select the CD automatic changer (CD-CH).

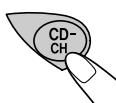

Playback starts from the first track of the first disc.
All tracks of all discs are played back.

Disc number



Track number

Note on One-Touch Operation:

When you press CD-CH, the power automatically comes on. You do not have to press **ON/ATT** to turn on the power.

To check the elapsed playing time.




Press DISP (display) repeatedly.

Each time you press the button, the display mode changes as follows.

Elapsed playing time → Disc number → Clock



To fast forward or reverse the track

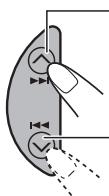


Press and hold **▲ ▶▶**, while playing a CD, to fast forward the track.




Press and hold **◀◀▼**, while playing a CD, to reverse the track.

To go to the next track or the previous track

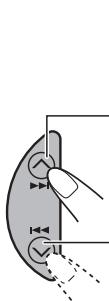

 
Press **▶▶** briefly, while playing a CD, to go ahead to the beginning of the next track. Each time you press the button consecutively, the beginning of the next track is located and played back.



Press **◀◀** briefly, while playing a CD, to go back to the beginning of the current track. Each time you press the button consecutively, the beginning of the previous track is located and played back.




To go to a particular disc directly

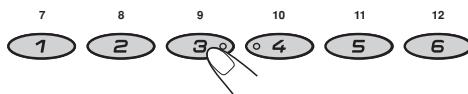

Press the number button corresponding to the disc number to start its playback.

- To select a disc number from 1 – 6:
Press 1 (7) – 6 (12) briefly.
- To select a disc number from 7 – 12:
Press and hold 1 (7) – 6 (12) for more than 1 second.

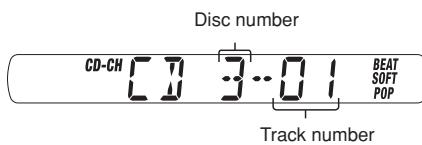


Ex. When disc number 3 is selected

Selecting CD playback modes

To playback tracks at random (Random Play)


Each time you press MO/RND (Mono/Random) while playing a CD, CD random play mode changes as follows:

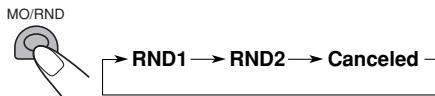

Mode	RND Indicator	Plays at random
RND1 (random1)	Lights	All tracks of the current disc, then the tracks of the next disc, and so on.
RND2 (random2)	Flashes	All tracks of all discs inserted in the magazine.


This unit requires very little attention, but you will be able to extend the life of the unit if you follow the instructions below.

To clean the heads

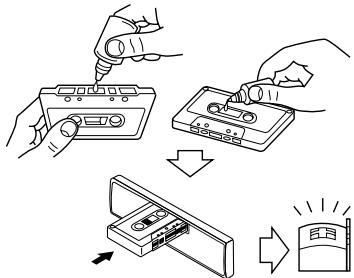

- Clean the heads after every 10 hours of use using a wet-type head cleaning tape (available at an audio store).
When the head becomes dirty, you may realize the following symptoms:
 - Sound quality is reduced.
 - Sound level decreases.
 - Sound drops out.
- Do not play dirty or dusty tapes.
- Do not touch the highly-polished head with any metallic or magnetic tools.

To keep the tape clean

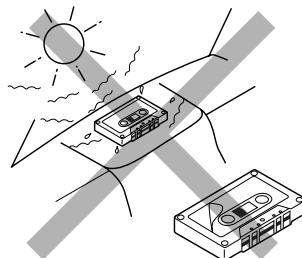

- Always store the tapes to their storage cases after use.
- Do not store tapes in the following places:
 - Subject to direct sunlight
 - With high humidity
 - At extremely hot temperatures

CAUTIONS:

- *Do not play the tapes with peeling labels; otherwise, they can damage the unit.*
- *Tighten tapes to remove slack since loose tape may become entangled with the mechanism.*
- *Do not leave a cassette in the cassette compartment after use, as the tape may become slack.*

?! TROUBLESHOOTING

What appears to be trouble is not always serious. Check the following points before calling a service center.

Symptoms	Causes	Remedies
• A cassette tape cannot be inserted.	You have tried to insert a cassette in the wrong way.	Insert the cassette with the exposed tape facing right.
• Cassette tapes become hot.	This is not a malfunction.	_____
• Tape sound is at very low level and sound quality is degraded.	The tape head is dirty.	Clean it with a head cleaning tape.
• Sound is sometimes interrupted.	Connections are not good.	Check the cords and connections.
• Sound cannot be heard from the speakers.	The volume level is set to the minimum level.	Adjust it to the optimum level.
	Connections are incorrect.	Check the cords and connections.
• Static noise while listening to the radio.	The antenna is not connected firmly.	Connect the antenna firmly.
• “NO CD” or “NO DISC” appears on the display.	No CD is in the magazine.	Insert CDs into the magazine.
	CDs are inserted incorrectly.	Insert them correctly.
• “RESET 8” appears on the display.	This unit is not connected to a CD changer correctly.	Connect this unit and the CD changer correctly and press the reset button of the CD changer.
• “RESET 1–RESET 7” appears on the display.	_____	Press the reset button of the CD changer.
• The unit does not work at all.	The built-in microcomputer may function incorrectly due to noise, etc.	While holding SEL, press Ø/I/ATT for more than 2 seconds to reset the unit. (The clock setting and preset stations stored in memory are erased.) (See page 2).
• The CD changer does not work at all.		
• SSM (Strong-station Sequential Memory) automatic preset does not work.	Signals are too weak.	Store stations manually.

AUDIO AMPLIFIER SECTION

Maximum Power Output:

Front: 45 watts per channel

Rear: 45 watts per channel

Continuous Power Output (RMS):

Front: 17 watts per channel into 4 Ω ,
40 Hz to 20 000 Hz at no more than
0.8% total harmonic distortion.

Rear: 17 watts per channel into 4 Ω ,
40 Hz to 20 000 Hz at no more than
0.8% total harmonic distortion.

Load Impedance: 4 Ω (4 Ω to 8 Ω allowance)

Tone Control Range

Bass: ± 10 dB at 100 Hz

Treble: ± 10 dB at 10 kHz

Frequency Response: 40 Hz to 20 000 Hz

Signal-to-Noise Ratio: 70 dB

Line-Out Level/Impedance: 2.0 V/20 k Ω load
(250 nWb/m)

TUNER SECTION

Frequency Range

FM: 87.5 MHz to 108.0 MHz

AM: 531 kHz to 1 602 kHz

[FM Tuner]

Usable Sensitivity: 11.3 dBf (1.0 μ V/75 Ω)

50 dB Quieting Sensitivity:

16.3 dBf (1.8 μ V/75 Ω)

Alternate Channel Selectivity (400 kHz):

65 dB

Frequency Response: 40 Hz to 15 000 Hz

Stereo Separation: 35 dB

Capture Ratio: 2.0 dB

[AM Tuner]

Sensitivity: 20 μ V

Selectivity: 35 dB

CASSETTE DECK SECTION

Wow & Flutter: 0.15% (WRMS)

Fast-Wind Time: 190 sec. (C-60)

Frequency Response:

50 Hz to 14 000 Hz (normal tape)

Signal-to-Noise Ratio: 52 dB

Stereo Separation: 40 dB

GENERAL

Power Requirement

Operating Voltage: DC 14.4 V (11 V to 16 V
allowance)

Grounding System: Negative ground

Allowable working temperature:

0°C to + 40°C

Dimensions (W x H x D)

Installation Size:

182 mm x 52 mm x 150 mm

Panel Size: 188 mm x 58 mm x 11 mm

Mass: 1.3 kg (excluding accessories)

Design and specifications are subject to change without notice.

**Having TROUBLE with operation?
Please reset your unit
Refer to page of How to reset your unit**




KS-FX321/KS-F171

Installation/Connection Manual

安裝/連接手冊

การติดตั้ง/คู่มือการติดตั้ง

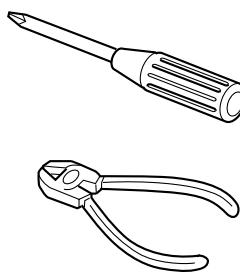كتيب تعليمات التركيب/
التوصيلGET0108-002A
[U]1102KKSFLEJEIN
EN, CH, TH, AR

ENGLISH

中文

ไทย

عربى

- This unit is designed to operate only on 12V DC, NEGATIVE ground electrical systems.

INSTALLATION (IN-DASH MOUNTING)

The following illustration shows a typical installation. However, you should make adjustments corresponding to your specific car. If you have any questions or require information regarding installation kits, consult your JVC car audio dealer or a company supplying kits.

安装 (裝設、 固定在儀表板內)

下面的圖解表示了典型的安裝程序。然而，您應當做些適當的調整，以便適應您自己的汽車。如果您有問題，或需要有關配套元件的資料，請向 JVC 汽車音響分銷商或配套元件供應公司詢問。

1 Before mounting: Press ▲ (Control Panel Release button) to detach the control panel if already attached.

* When shipped from the factory, the control panel is packed in the hard case.

2 Remove the trim plate.

3 Remove the sleeve after disengaging the sleeve locks.

① Stand the unit.

Note: When you stand the unit, be careful not to damage the fuse on the rear.

② Insert the 2 handles between the unit and the sleeve, as illustrated, to disengage the sleeve locks.

③ Remove the sleeve.

Note: Be sure to keep the handles for future use after installing the unit.

4 Install the sleeve into the dashboard.

* After the sleeve is correctly installed in the dashboard, bend the appropriate tabs to hold the sleeve firmly in place, as illustrated.

5 Fix the mounting bolt to the rear of the unit's body and place the rubber cushion over the end of the bolt.

6 Do the required electrical connections explained on the back of this instructions.

7 Slide the unit into the sleeve until it is locked.

8 Attach the trim plate.

9 Attach the control panel.

1 裝設之前：如果控制面板已經裝上，按下 ▲ (控制面板解脫按鈕)，拆脫控制面板。

* 當控制面板從工廠裝運時，它是包裝在硬盒中的。

2 取下裝飾框。

3 解開扣板，取下本機的外套機殼。

① 將本機豎起。

注意：您豎起本機時，小心不要損壞底部的保險絲。

② 按圖所示，在本機和外套機殼之間插入兩片板條型的把手，解開外套機殼扣板。

③ 取下外套機殼。

注意：安裝本機後，務必保存好兩片把手，以備將來使用。

4 將外套機殼裝入儀表板內。

* 在外套機殼準確地裝入儀表板之後，按圖所示，彎曲機殼的突舌，把外套機牢固在儀表板內。

5 將堅固螺栓旋緊在本機機體上，並將橡膠防震墊套在堅固螺栓的尾部。

6 按本說明書後面所述，進行所需要的電路連接。

7 將本機滑入外套機殼，直到扣板鎖住為止。

8 將裝飾板接上。

9 裝上控制面板。

- 本機僅可使用直流12V、負極接地的電源系統。

การติดตั้ง (การประกอบแผงหน้าปัดเบ้า)

• ภาพด้านข้างต่อไปนี้แสดงถึงการติดตั้งแบบที่ว่าไป อย่างไรก็ตาม คุณควรปรับแต่งให้เหมาะสมกับอุปกรณ์ทางคุณเอง หากคุณมีปัญหาหรือต้องการขอข้อมูลเพิ่มเติม กรุณาปรึกษา กับผู้ขายเครื่องเสียงรถยนต์ JVC ของท่านหรือบริษัทที่จำหน่ายชุดติดตั้งนี้

• لقدصمم هذا الجهاز ليعمل فقط بواسطة تيار كهربائي مباشر DC، 12 فولت، انظمة كهربائية تأريض سالب.

تركيب الجهاز (داخل-تابلو السيارة)

• يبيّن الرسم التوضيحي التالي طريقة التركيب المثالى. مع ذلك، يجب عليك عمل تعديلات تطابق نوع السيارة التي تمتلكها. إذا كان هناك استفسارات أو حاجة لمعلومات بخصوص أدوات التركيب، يرجى استشارة موزع الأجهزة الصوتية للسيارات ماركة JVC أو الشركة الموزعة لهذا الأدوات.

1 قبل بدء التركيب: اضغط الزر ▲ (زر تحرير لوحة التحكم) من أجل فصل لوحة التحكم.

* عند الشحن من المصانع، تم وضع لوحة التحكم داخل الصندوق.

انزع لوحة الزينة.

2 انزع الهيكل الواقي بعد فصل مثبتات الهيكل الواقي.

① اوقف الجهاز بشكل عمودي.

ملاحظة: عند تقويف الجهاز، تأكّد من عدم تضرر أو اتلاف الفيوز الموجود في الجهة الخلفية من الجهاز.

② ادخل المساكن بين بين الجهاز والهيكل الواقي، كما هو مبين في الشكل، لفصل مثبتات الهيكل الواقي.

انزع الهيكل الواقي.

ملاحظة: يرجى المحافظة على المسakan من أجل الاستعمال لاحقاً بعد تركيب الجهاز.

ركب الهيكل الواقي داخل تابلو السيارة.

* بعد تركيب الهيكل الواقي كلباً داخل تابلو السيارة بشكل صحيح، اثني الآلسة بشكل مناسب لتثبيت الهيكل الواقي بشكل محكم في المكان الصحيح، كما هو مبين في الشكل.





5 ثبت مسامر التركيب بالجهة الخلفية من هيكل الجهاز وبعد ذلك ضع الحشوة المطاطية فوق نهاية المسamar.

اعمل التوصيات الكهربائية المطلوبة كما هو مشروع خلف هذه التعليمات.

7 ادخل الجهاز داخل الهيكل الواقي حتى يثبت بشكل صحيح.

ركب لوحة الزينة.

ركب لوحة التحكم.

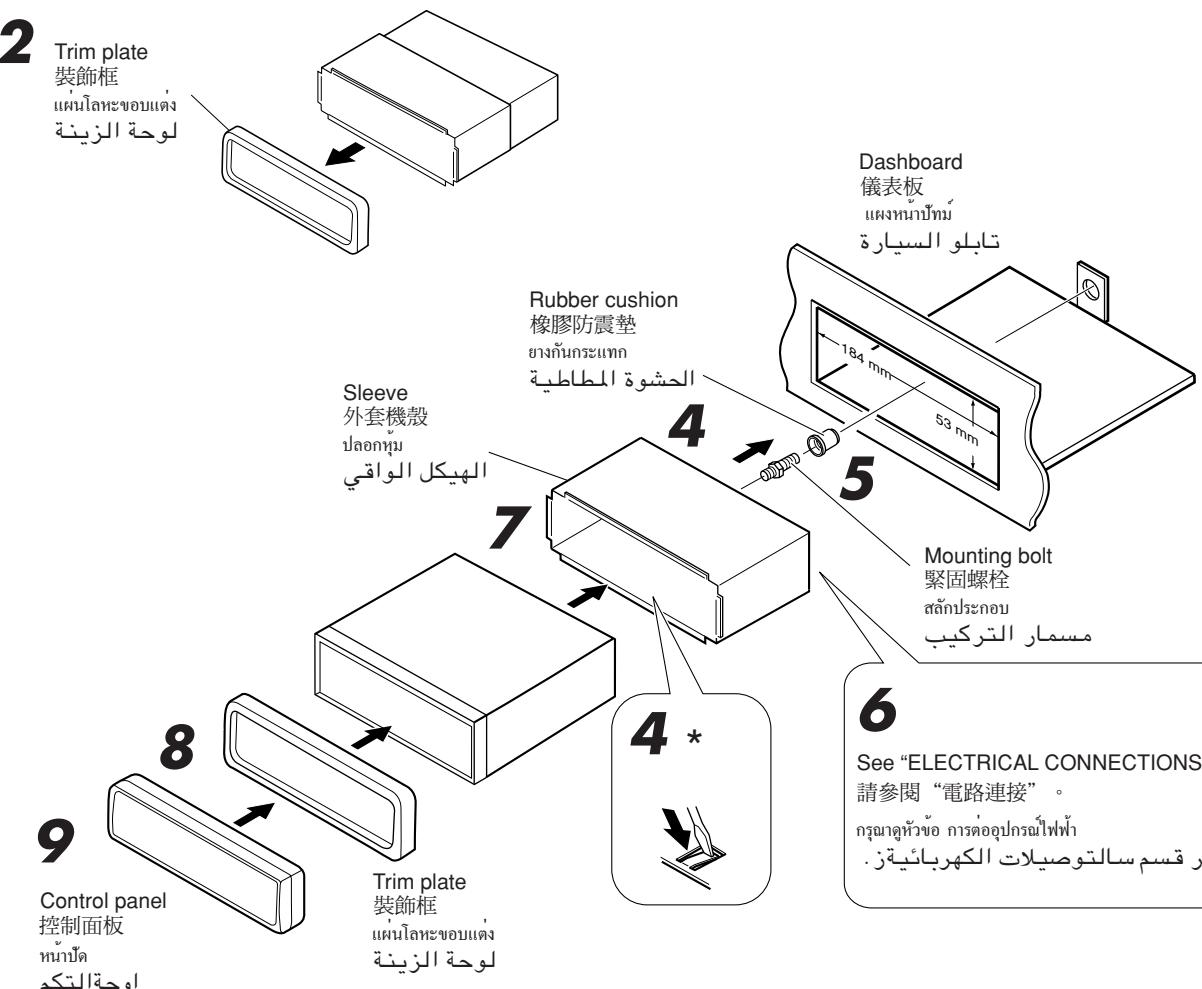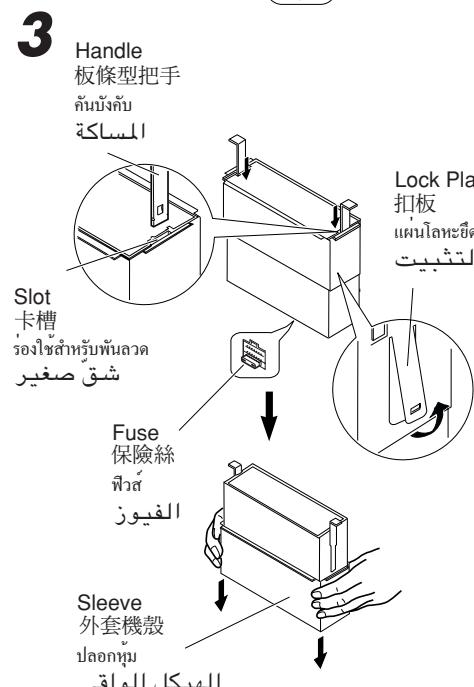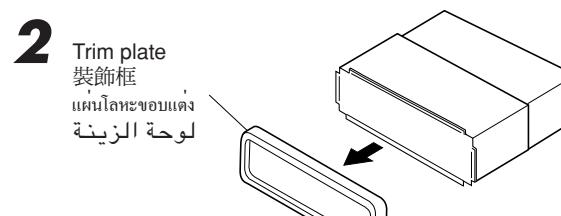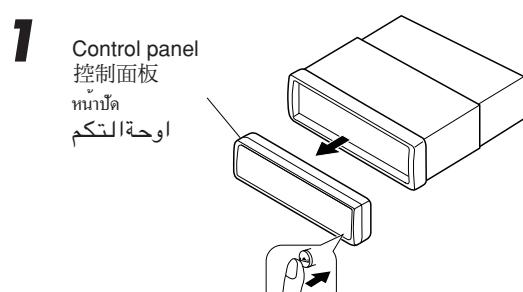

6
See "ELECTRICAL CONNECTIONS".
請參閱“電路連接”。
กรุณาอ่านข้อ “การต่ออุปกรณ์ไฟฟ้า”
انظر قسم سالتووصيات الكهربائية.

PRECAUTIONS on power supply and speaker connections:

- DO NOT connect the speaker leads of the power cord to the car battery; otherwise, the unit will be seriously damaged.**
- Connect the black lead (ground), yellow lead (to car battery, constant 12V), and red lead (to an accessory terminal) correctly.
- BEFORE connecting the speaker leads of the power cord to the speakers, check the speaker wiring in your car.
- If the speaker wiring in your car is as illustrated in Fig. 1 and Fig. 2 below, DO NOT connect the unit using that original speaker wiring. If you do, the unit will be seriously damaged. Redo the speaker wiring so that you can connect the unit to the speakers as illustrated in Fig. 3.
- If the speaker wiring in your car is as illustrated in Fig. 3, you can connect the unit using the original speaker wiring in your car.
- If you are not sure of the speaker wiring of your car, consult your car dealer.

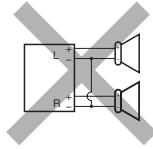


Fig. 1

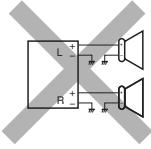


Fig. 2


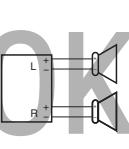


Fig. 3

Connecting the leads / 導線接頭的連接 / توصیل السلاک / توسييل الاسلاك

Twist the core wires when connecting.
連接時扭轉線芯。

بند سلاک دنگنه پهلوه از هم متصل
ابرم الاسلاك بشكل صحيح قبل التوصيل.

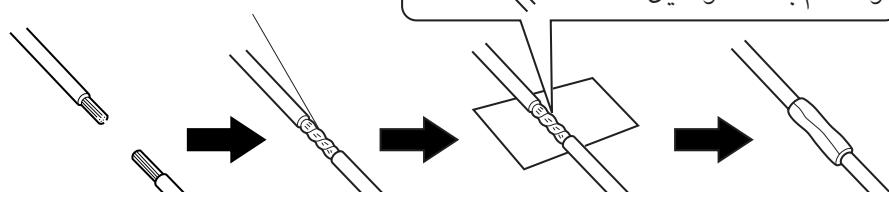


Solder the core wires to connect them securely.
將線芯牢固地焊接在一起。
اخونم بانگ که رسن سلاک دنگنه پهلوه از هم متصل
الحمد لله رب العالمين

الحمد لله رب العالمين

و محكم بعد التوصيل.

CAUTION / 小心 / نکواره وی / تنبیه /

- To prevent short-circuit, cover the terminals of the UNUSED leads with insulating tape.
- 為防止電源短路，請用絕緣帶包住未使用電線的端子。
- การห่อหันการล็อกวงจร จะต้องหันหัวสายตะกั่วที่ไม่ใช้แล้วหัวท่อพันสายไฟ (Insulating tape)
- من أجل منع التقصير في الدوائر - الكهربائية، ضع شريط عازل ولاصق على اطراف
الاسلاك غير المستعملة.

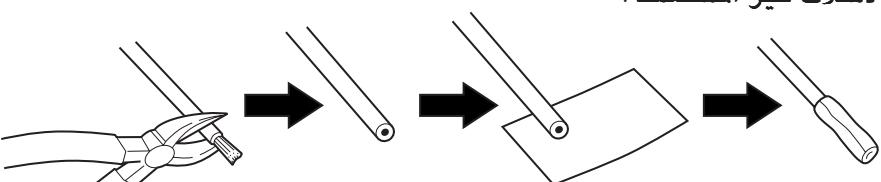

B Connections Adding Other Equipment / 連接附加的其他音響設備 / การต่อเพิ่มเติมเข้ากับอุปกรณ์อื่น ๆ / توصیل الاجهزه الایخري الاضافية /


Amplifier / 功率放大器 / کریوچنر / مضخم الصوت

You can connect an amplifier and other equipment to upgrade your car stereo system.

- Connect the remote lead (blue with white stripe) to the remote lead of the other equipment so that it can be controlled through this unit.
- For amplifier only:
 - Connect this unit's line-out terminals to the amplifier's line-in terminals.
 - Disconnect the speakers from this unit, connect them to the amplifier. Leave the speaker leads of this unit unused. (Cover the terminals of the these unused leads with insulating tape, as illustrated above.)

你可以連接放大器和其他裝置以加強你的汽車音響系統功能。

- 將遙控線(藍色帶有白色條紋)和其他裝置上的遙控線連接起來，以便可以通過本機進行遙控。
- 僅適用於放大器：
 - 將本機的輸出終端和放大器輸入終端連接起來。
 - 將揚聲器和本機斷開，再接上放大器。將本機的揚聲器接線放置不用。(按照上面所示的方式，用絕緣膠把不用的線端包起來。)

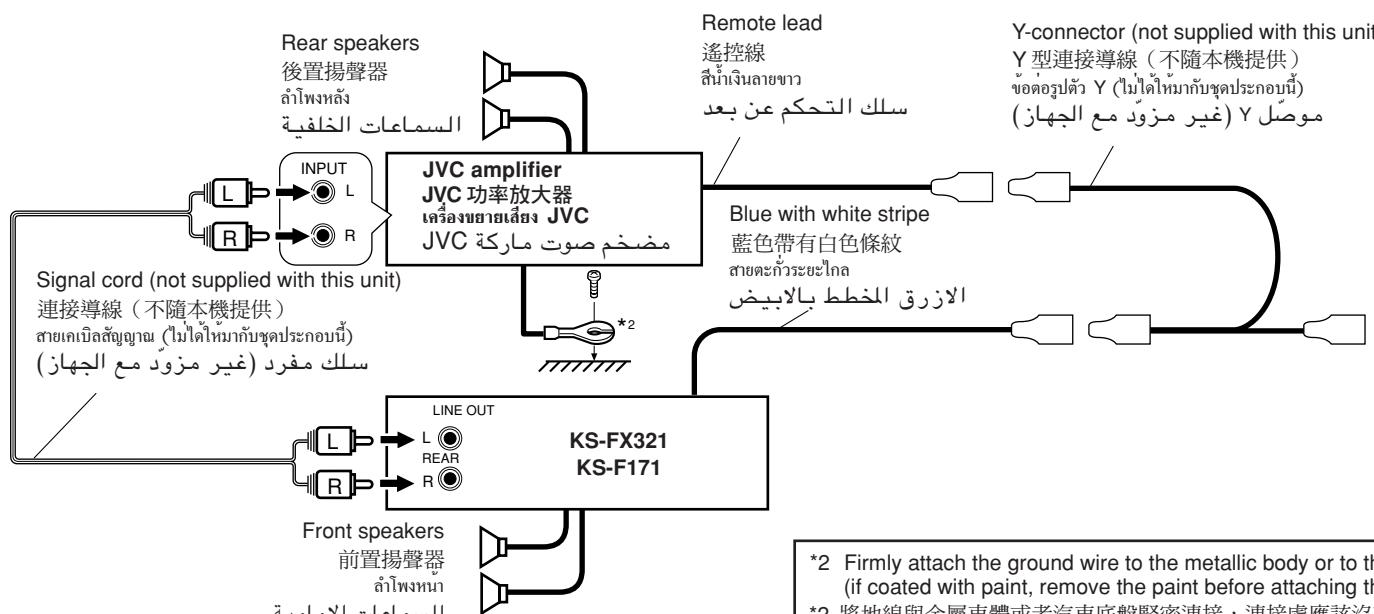

نبیهات حول تزوید الطاقة

الكهربائية وتوصيل السماعات:

لا توصل اسلك تزويد طاقة السماعات مع بطارية السيارة، لأن ذلك يؤدي الى حصول ضرر للسماعات.

اوصل السلك الاسود (الارضي)، والسلك

الاصلف (مع بطارية السيارة، ثابت ١٢ فولت)،

والسلك الاحمر (مع الطرف الاضافي) بشكل

صحيح.

قبل توصيل اسلك تزويد طاقة السماعات مع السماعات، افحص شبكة اسلك السماعات داخل سيارتك.

- اذا كانت شبكة اسلك السماعات داخل

سيارتك كما هي مبينة في الشكل ١ والشكل

٢ الموجودة في الاسفل، لا توصل الجهاز

بواسطة استخدام شبكة اسلك السماعات

الأصلية. إذا تم توصيل الجهاز بهذه الطريقة، سيؤدي ذلك إلى حصول ضرر. اعد عمل

شبكة اسلك السماعات مع السماعات كما هو مبين

في الشكل ٣.

- اذا كانت شبكة اسلك السماعات داخل

سيارتك كما هي مبينة في الشكل ٣ يمكن

توصيل الجهاز بواسطة استخدام شبكة

اسلاك السماعات الأصلية داخل سيارتك.

- في حالة عدم معرفتك بشبكة اسلك

السماعات داخل سيارتك، استشر الوكيل

او ذوي الخبرة بهذا الموضوع.

يمكنك توصيل مضخم صوت وجهاز اخر لتحسين اداء جهاز ستيريو السيارة.

اوصل سلك التحكم عن بعد (الازرق المخطط بالابيض) مع سلك التحكم عن بعد للجهاز الآخر بحيث يتم التحكم بالجهاز من خلال هذا الجهاز.

فقط لمضخم الصوت:

- اوصل اطراف خرج - الخط لهذا الجهاز مع اطراف دخل - الخط لمضخم الصوت.

افضل السماعات من هذا الجهاز، اوصلهم مع مضخم الصوت. اترك اسلاك سماعات هذه الجهاز بدون استعمال. (غطي اطراف هذه الاسلاك غير المستعملة بشريط عازل، كما هو موضح في الاعلى).

*2 Firmly attach the ground wire to the metallic body or to the chassis of the car—to the place not coated with paint (if coated with paint, remove the paint before attaching the wire). Failure to do so may cause damage to this unit.

*2 將地線與金屬車體或者汽車底盤緊密連接，連接處應該沒有被油漆覆蓋（如果已塗上油漆，在連接電線前，將油漆刮去）。如果不這樣做，可能會損壞本機。

*2 គែតាតតិន្នន័យបង្កើរក្រោមដោយកំណត់ទីតាំងលើក្រោមឡើង (ការកើតឡើងនៅក្នុងកំណត់ទីតាំងសាខាតិន្នន័យ) ហើយក្នុងកំណត់ទីតាំងដែលមិនមែនដំឡើងឡើង។

*2 اوصل السلك الارضي بشكل محكم مع هيكل او جسم السيارة المعدني - مع الموضع غير المطلي بالدهان (إذا كان الموضع

مطلي بالدهان، ازل الدهان قبل توصيل السلك). في حالة توصيل السلك مع الهيكل دون ازالة الدهان يمكن ان يسبب