



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for KENWOOD KDC-4590RV. You'll find the answers to all your questions on the KENWOOD KDC-4590RV in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual KENWOOD KDC-4590RV
User guide KENWOOD KDC-4590RV
Operating instructions KENWOOD KDC-4590RV
Instructions for use KENWOOD KDC-4590RV
Instruction manual KENWOOD KDC-4590RV

KENWOOD

KDC-4590R
KDC-4590RV
KDC-4090R
KDC-3090RG
KDC-3090RA
KDC-305RG
KDC-305RA

CD-RECEIVER
INSTRUCTION MANUAL

KENWOOD CORPORATION

B64-1835-00 (EN)



[Your user manual](#)
[KENWOOD KDC-4590RV](#)

Manual abstract:

If a model with no "O-N" switch is connected, some unavailable functions and information that cannot be displayed are generated, such as the DNPS, DNPP, Magazine random play, and CD Text display. Note that none of the KDC-C100, KDC-C302, C205, C705, and non-Kenwood CD changers can be connected.

2CAUTION You can damage both your unit and the CD changer if you connect them incorrectly. **2CAUTION** Do Not Load 8-cm (3-in.) CDs in the CD slot If you try to load an 8-cm CD with its adapter into the unit, the adapter might separate from the CD and damage the unit. --3-- Safety precautions English

NOTE · If you experience problems during installation, consult your Kenwood dealer. · If the unit does not seem to be working right, try pressing the reset button first. If that does not solve the problem, consult your Kenwood dealer. **Cleaning the Faceplate Terminals** If the terminals on the unit or faceplate get dirty, wipe them with a dry, soft cloth. **Cleaning the CD Slot** As dust can accumulate in the CD slot, clean it occasionally.

Your CDs can get scratched if you put them in a dusty CD slot. Cleaning the Unit If the faceplate of this unit is stained, wipe it with a dry soft cloth such as a silicon cloth. If the faceplate is stained badly, wipe the stain off with a cloth moistened with neutral cleaner, then wipe neutral detergent off. **2CAUTION** Applying spray cleaner directly to the unit may affect its mechanical parts. Wiping the faceplate with a hard cloth or using a volatile liquid such as thinner or alcohol may scratch the surface or erase characters.

Reset button · Characters in the LCD may become difficult to read in temperatures below 41 °F (5 °C). · The illustrations of the display and the panel appearing in this manual are examples used to explain more clearly how the controls are used. Therefore, what appears on the display in the illustrations may differ from what appears on the display on the actual equipment, and some of the illustrations on the display may represent something impossible in actual operation. · The functions that can be used and the information that can be displayed will differ depending on the external disc players being connected. **Lens**

Fogging Right after you turn on the car heater in cold weather, dew or condensation may form on the lens in the CD player of the unit.

Called lens fogging, CDs may be impossible to play. In such a situation, remove the disc and wait for the condensation to evaporate. If the unit still does not operate normally after a whilst, consult your Kenwood dealer. The marking of products using lasers (Except for some areas) CLASS 1 LASER PRODUCT The label is attached to the chassis/case and says that the component uses laser beams that have been classified as Class 1. It means that the unit is utilizing laser

beams that are of a weaker class. There is no danger of hazardous radiation outside the unit. --4-- **Handling Compact discs** Playing a CD that is dirty, scratched or warped can cause the sound to skip and the unit to operate incorrectly, resulting in worsened sound quality. Take the following precautions to prevent your CDs from getting scratched or damaged. **Handling CDs** · Do not touch the recorded side of the CD (i.e.

, the side opposite the label) when holding it. **Storing CDs** · Do not store CDs in areas exposed to direct sunlight such as a car seat or above the fascia panel (dashboard) or other hot places. A CD-R or CD-RW is more susceptible than a music CD to damage from high temperatures and humidity, and in some cases, may become unusable if left in the car for long periods of time. · Remove CDs from the unit when not listening to them for a whilst, and put them back in their cases. Do not stack CDs that have been removed from their cases or prop them against something. **Checking New CDs for Burrs** When playing a new CD for the first time, check that there are not any burrs stuck to the perimeter of the disc or in the central hole. CDs with burrs stuck on them may not load properly or may skip whilst playing. Remove burrs using a ballpoint pen or a similar utensil..



[Your user manual](#)
[KENWOOD KDC-4590RV](#)