



# myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for KENWOOD KDC-W3037. You'll find the answers to all your questions on the KENWOOD KDC-W3037 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual KENWOOD KDC-W3037**  
**User guide KENWOOD KDC-W3037**  
**Operating instructions KENWOOD KDC-W3037**  
**Instructions for use KENWOOD KDC-W3037**  
**Instruction manual KENWOOD KDC-W3037**

## KENWOOD

CD-RECEIVER

**KDC-W4037**  
**KDC-W3537**  
**KDC-W3037**  
**KDC-W311**  
**KDC-W237**

**INSTRUCTION MANUAL**

Kenwood Corporation



© B64-355 4-00/00 (E0/E20)



[Your user manual](#)  
[KENWOOD KDC-W3037](#)

### Manual abstract:

*Do Not Load 8 cm (3 in.) CDs in the CD slot* If you try to load a 8 cm (3 in.) CD with its adapter into the unit, the adapter might separate from the CD and damage the unit. English \ 3 Notes · If you experience problems during installation, consult your Kenwood dealer. · When you purchase optional accessories, check with your Kenwood dealer to make sure that they work with your model and in your area. · The characters which can be displayed by this unit are A-Z 0-9 @ " ` ` % & \* + = , . / \ [ ] [ ] ( ) ; ^ - { } | ~ . · The RDS feature won't work where the service is not supported by any broadcasting station. · The illustrations of the display and the panel appearing in this manual are examples used to explain more clearly how the controls are used. Therefore, what appears on the display in the illustrations may differ from what appears on the display on the actual equipment, and some of the illustrations on the display may be inapplicable.

*Cleaning the Unit* If the faceplate of this unit is stained, wipe it with a dry soft cloth such as a silicon cloth. If the faceplate is stained badly, wipe the stain off with a cloth moistened with neutral cleaner, then wipe it again with a clean soft dry cloth. ☒ · Applying spray cleaner directly to the unit may affect its mechanical parts. Wiping the faceplate with a hard cloth or using a volatile liquid such as thinner or alcohol may scratch the surface or erases characters.

*Cleaning the Faceplate Terminals* If the terminals on the unit or faceplate get dirty, wipe them with a clean soft dry cloth.

*Before using this unit for the first time* How to reset your unit · If the unit fails to operate properly, press the Reset button. The unit returns to factory settings when the Reset button is pressed. · Press the reset button if the disc auto changer fails to operate correctly. Normal operation should be restored. This unit is initially set on the Demonstration mode.

*When using this unit for the first time, cancel the [Demonstration mode Setting] (page 25). Reset button* 4| English About Audio file · Playable Audio file MP3 (.mp3), WMA (.wma) · Playable disc media CD-R/RW/ROM · Playable disc file format ISO 9660 Level 1/2, Joliet, Romeo, Long file name. Although the audio files are complied with the standards listed above, the play maybe impossible depending on the types or conditions of media or device. · Playing order of the Audio file In the example of folder/file tree shown below, the files are played in the order from to . CD ( Handling CDs · Do not touch the recording surface of the CD. · Do not stick tape etc. on the CD, or use a CD with tape stuck on it. · Do not use disc type accessories.

· Clean from the center of the disc and move outward. · When removing CDs from this unit, pull them out horizontally. · If the CD center hole or outside rim has burrs, use the CD only after removing the burrs with a ballpoint pen etc. CDs that cannot be used · CDs that are not round cannot be used. ) : Folder Folder : Audio file Audio fi An online manual about audio files is put on the site, [www.kenwood.com/audof/e/](http://www.kenwood.com/audof/e/) this online . On manual, detailed information and notes which are not written in this manual are provided. Make sure to read through the online manual as well. .

*This unit may not correctly play discs which do not have the mark. · You cannot play a CD-R or CD-RW that has not been finalized. (For the finalization process refer to your CD-R/CD-RW writing software, and your CD-R/CDRW recorder instruction manual.) · CDs with coloring on the recording surface or*

*CDs that are dirty cannot be used. · This unit can only play the CDs with English \ 5 Notes About DAB Tuner control (KDC-W4037/KDC-W3537) This Product is not installed by the manufacturer of a vehicle on the production line, nor by the professional importer of a vehicle into an EU Member State.*

*Refer to A group on the Instruction manual of DAB Tuner KTC-9090DAB (optional accessory) for the control method of DAB Tuner function. However, the following control methods of the function for this unit may be differed from the Instruction manual; therefore, refer to the following supplemental instruction.*

[Auto Ensemble Memory Entry] 1..



[Your user manual](#)  
[KENWOOD KDC-W3037](#)